 




RE 300R 2022

Exploded

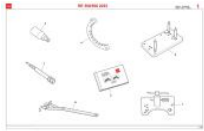

SERVICE TOOLS, MANUALS



 
FRAME, FOOT REST




FRONT FORK ASSEMBLY



REAR SUSPENSION

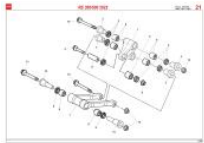

REAR SUSPENSION LINKAGE

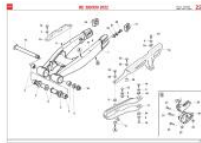 

REAR SWINGARM



HANDLEBAR / CONTROLS



 
REAR HYDRAULIC BRAKE



PLASTICS, SEAT




GAS TANK, SIDE PANELS

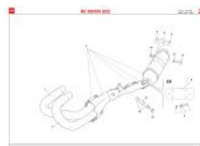


EXHAUST SYSTEM



 FRONT HYDRAULIC BRAKE

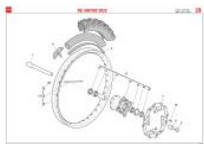

FRONT WHEEL

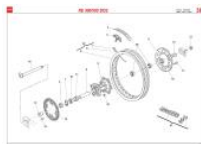 

REAR WHEEL

 
 
 
 
 
 
 
 
 
 
 
 


DIGITAL INSTRUMENTS




MAIN WIRING HARNESS

2022 SWM RE

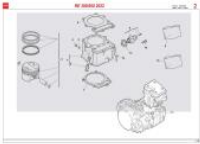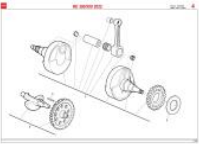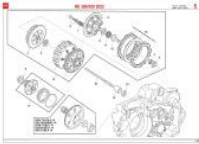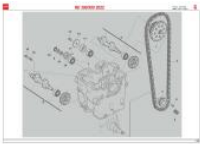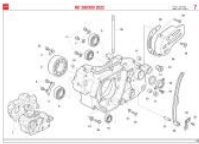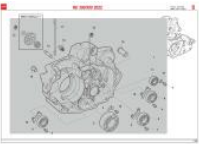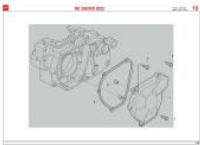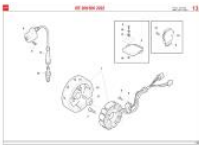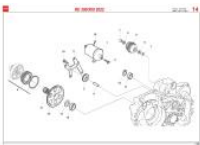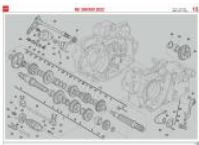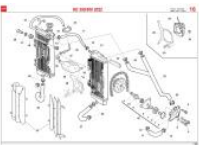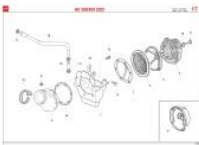
			
CYLINDER, PISTON	CYLINDER HEAD	CRANKSHAFT	PRIMARY DRIVE, CLUTCH
			
VALVE TIMING	LEFT HALF CRANKCASE	RIGHT HALF CRANKCASE	RIGHT HALF CRANKCASE COVER
			
LEFT HALF CRANKCASE COVER	LUBRICATION	THROTTLE BODY	IGNITION SYSTEM
			
STARTER	TRANSMISSION SHIFTER	COOLING SYSTEM	AIR FILTER

 SERVICE TOOLS, MANUALS

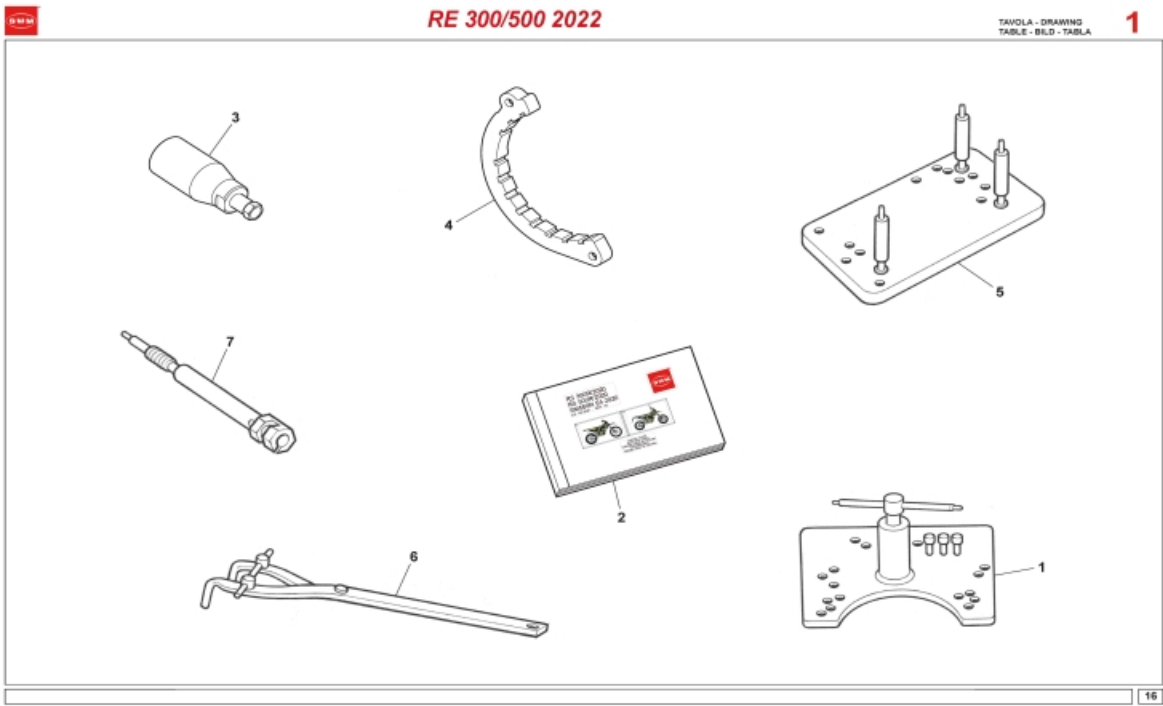

1	SWM-CRANK SHAFT REMOVING TOOL RS 151794702 (u. 1)
3	SWM-FLYWHEEL REMOVING TOOL RS M000P00835 (u. 1)
4	SWM-TOOL GENERATOR T.D.C. RS M000P00687 (u. 1)
5	SWM-ENGINE SUPPORT ASSEMBLY ASSY 8A0090662 (u. 1)
6	SWM-WRENCH FOR CLUTCH DISK HUB 800079015 (u. 1)
7	SWM-DIAL GAUGE HOLDING TOOL 8000A1625 (u. 1)

 
FRAME, FOOT REST

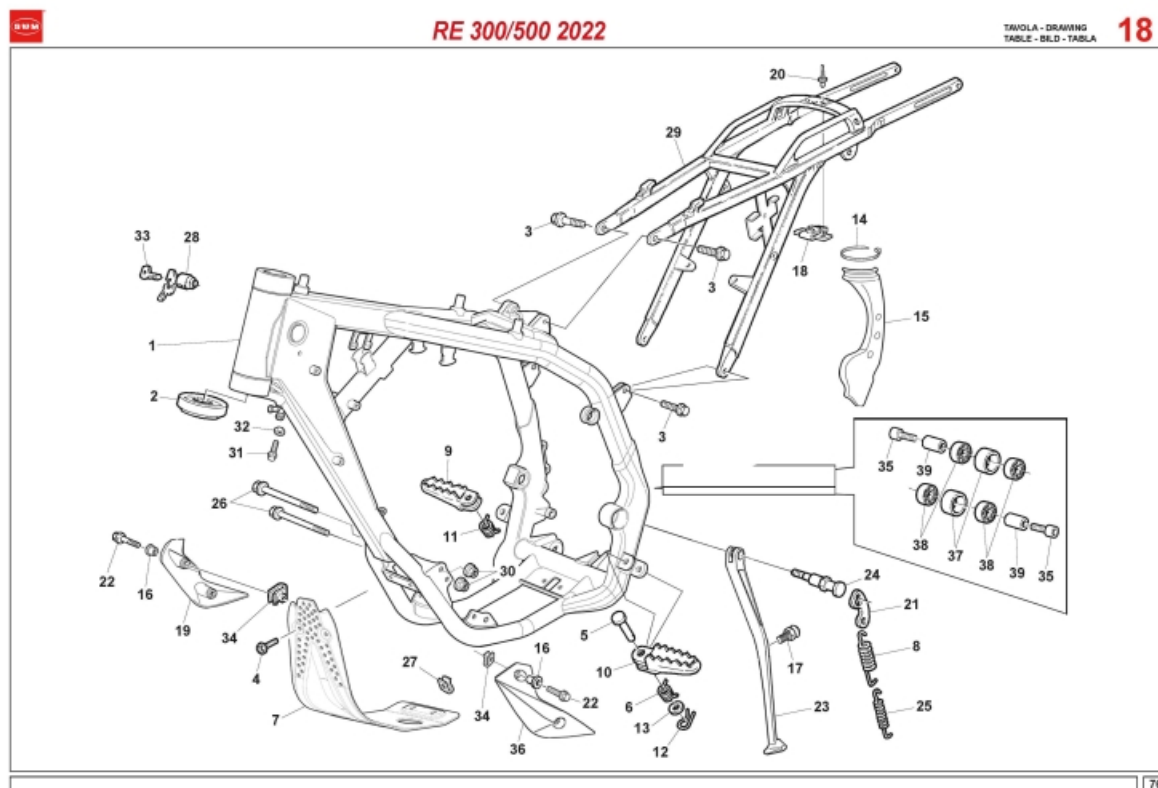

2	SWM-TAPERED ROLLER BEARING 800087243 (u. 2)
3	SWM-HEX FLANGE SCREW M8x1.25x20-CH12 Z00069056 (u. 4)
4	SWM-SCREW M6x1x15-CH5 Y00060898 (u. 4)
5	SWM-FOOTREST PIN Y00073140 (u. 2)
6	SWM-SPRING LH 800096907 (u. 1)
7	SWM-ENGINE GUARD RS 8000B0157 (u. 1)
8	SWM-EXTERNAL SIDE STAND SPRING 8000A0269 (u. 1)
9	SWM-RH FOOTREST SD 80A089953 (u. 1)
10	SWM-LH FOOTREST SD 80A089962 (u. 1)
11	SWM-SPRING RH 800096908 (u. 1)
12	SWM-SPLIT PIN L18x1.8 64ND20068 (u. 2)
13	SWM-WASHER 16x10.5x1 ZA0001815 (u. 2)
14	SWM-CABLE TIE L188 800056444 (u. 1)
15	SWM-FRAME PROTECTION LH 8000H3435 (u. 1)

16	SWM-HANDGUARD BUSHING 8000H0822 (u. 4)
17	SWM-SPRING PIN 8000H0235 (u. 1)
18	SWM-SEAT PLATE 800069150 (u. 1)
19	SWM-RH ENGINE GUARD 8000H0188 (u. 1)
20	SWM-RIVET D3.3-L14 800033373 (u. 2)
21	SWM-ANCHOR SPRINGS PLATE 8000A0267 (u. 1)
22	SCREW TEF M6X1X20 CH8 PR7 - SWM/AJP Z00062728 (u. 4)
23	SWM-SIDE STAND ASSY 8000H0233 (u. 1)
24	SWM-SIDE STAND SPIN SCREW M8x1.25x25 RS 800097976 (u. 1)
25	SWM-INTERNAL SIDE STAND SPRING 8000A0268 (u. 1)
26	SWM-SCREW M8x150 YG0073458 (u. 2)
27	SWM-CLIP NUT M6x1 U00046893 (u. 4)
28	SWM-KEY LOCK ASSY 800043391 (u. 1)
29	SWM-REAR FRAME ASSY RS F000A00271 (u. 1)
30	SWM-BRAKED FLANGED NUT M8x1.25x8.5-CH12 Y00043928 (u. 3)
31	SWM-SCREW M8x1.25x30-CH10 ZE0061121 (u. 2)
32	SWM-NUT M8x1.25x8-CH12 Z00017810 (u. 2)
33	SWM-ROUGH KEY 800035531 (u. 1)
34	SWM-CLIP NUT M6x1 U00046893 (u. 4)
35	SWM-SCREW TCEI M8x1.25x40 60ND02559 (u. 2)
36	SWM-LH ENGINE GUARD 8000H0187 (u. 1)
37	SWM-CHAIN ROLLER 8AA059433 (u. 2)
38	SWM-RADIAL BALL BEARING 22x8x7 800063312 (u. 4)
39	SWM-THREADED SPACER 8A0059434 (u. 2)

 
FRONT FORK ASSEMBLY

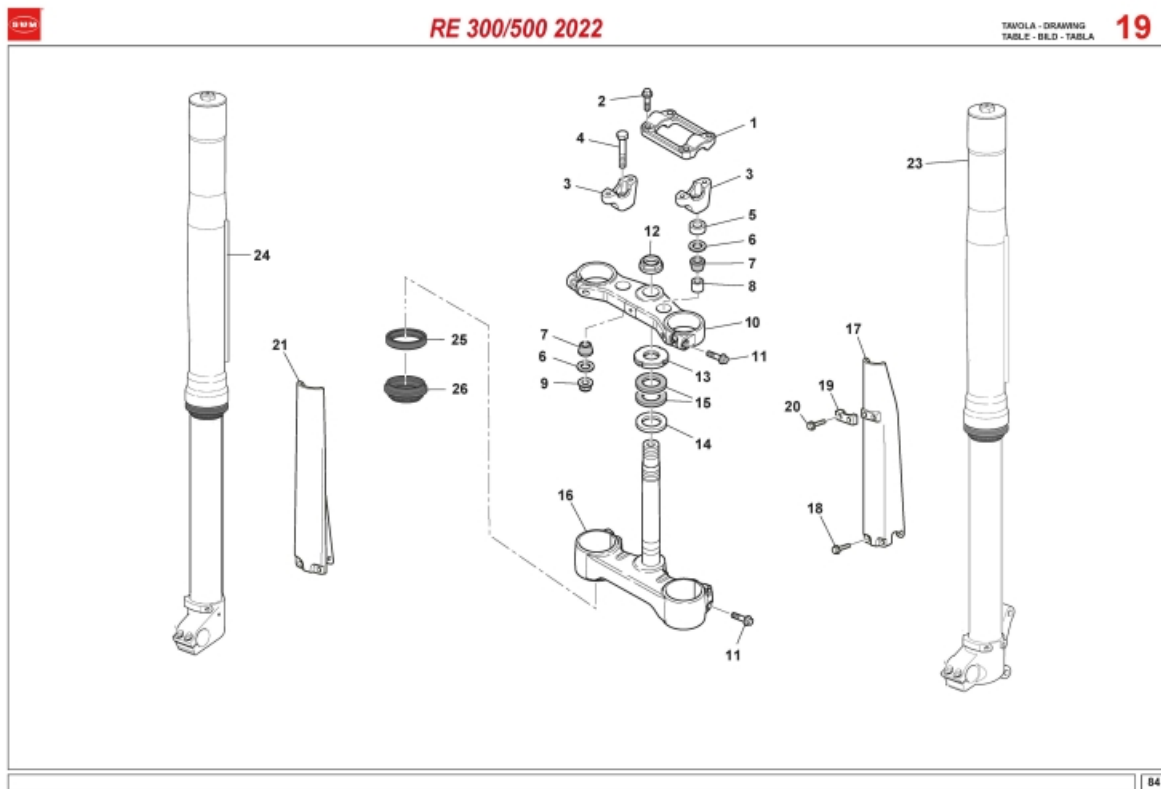

1	SWM-UPPER BAR CLAMP 8000B0522 (u. 1)
2	SWM-HEX FLANGE SCREW M8x1.25x30-CH10 8A00B1959 (u. 4)
3	SWM-LOWER BAR CLAMP 8000H2355 (u. 2)
4	SWM-SCREW M10x1.5x80 60ND01222 (u. 2)
5	SWM-SPACER 32x10x13.5 8A00A6683 (u. 2)
6	SWM-WASHER 28x22x10.5x2.5 800060234 (u. 4)
7	SWM-RUBBER SPACER 8000H1385 (u. 4)
8	SWM-SPACER 12x10mm 8000H1714 (u. 2)
9	SWM-NUT M10x1.5 Z00061314 (u. 2)
10	SWM-UPPER TRIPLE CLAMP F000P00164 (u. 1)
11	SWM-HEX FLANGE SCREW M8x1.25x40-CH10 8E00B1959 (u. 6)
12	SWM-NUT M26X1x10-CH30 8A0069315 (u. 1)
13	SWM-NUT FOR STEERING PIN 8A0087717 (u. 1)
14	SWM-WASHER 40.5x29.5x2 800087736 (u. 1)


15	SWM-TRIPLE CLAMP GASKET 800087745 (u. 2)
16	SWM-LOWER TRIPLE CLAMP WITH PIN F000P00166 (u. 1)
17	SWM-FORK LH PROTECTION 80F0A8481 (u. 1)
18	SWM-M5 SCREW WITH NECK M5x1x8-CH8 SD 8000A8423 (u. 6)
19	SWM-FORK GUARD HOSE CLAMP SD-SILVER/BLACK 80F0A0633 (u. 1)
20	SWM-SELF TAPPING SCREW ZA0084658 (u. 2)
21	SWM-FORK RH PROTECTION 80F0A8482 (u. 1)
23	SWM-RH FORK LEG ASSY 8000H1399 (u. 1)
24	SWM-LH FORK LEG ASSY 8000H1400 (u. 1)
25	SWM-PAIR SEAL OIL, FORK 8000H2662 (u. 1)
26	SWM-PAIR SEAL DUST FRONT FORK 8000H2664 (u. 1)

 REAR SUSPENSION

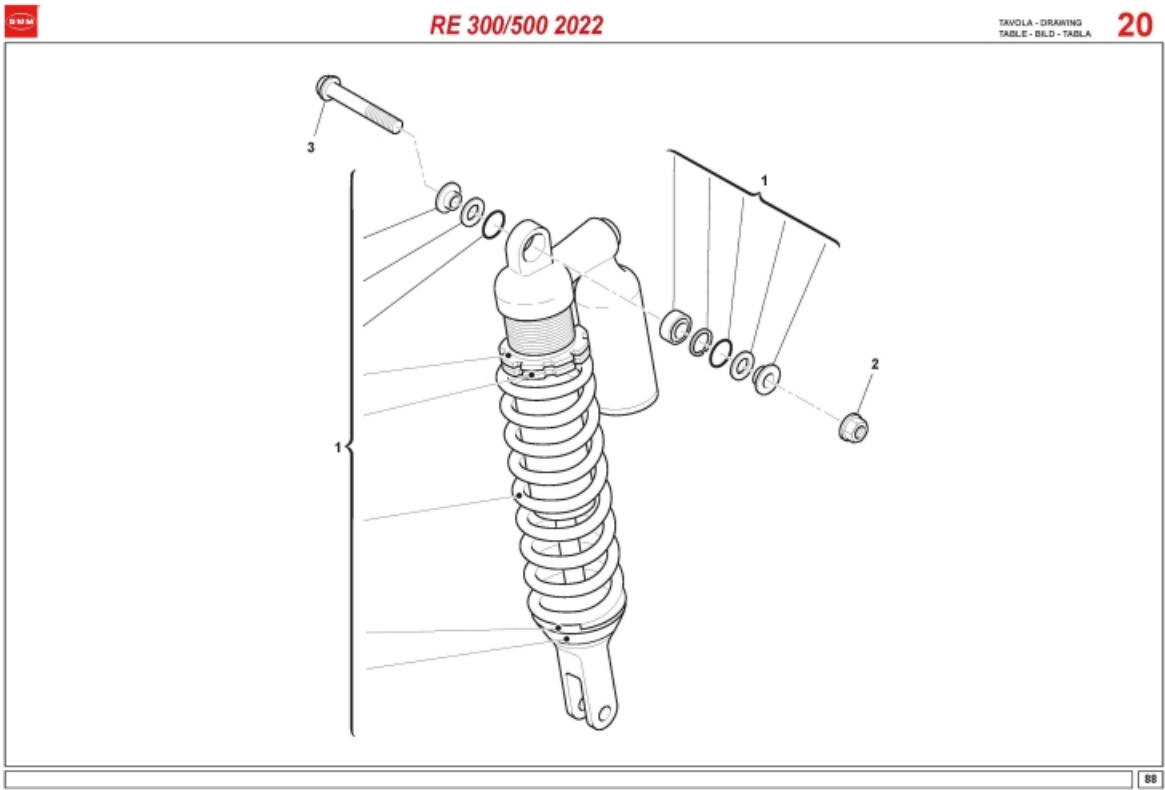


- | | |
|---|---|
| 1 | SWM-REAR SHOCK ABSORBER RS
8000H6169 (u. 1) |
| 2 | SWM-BRAKED FLANGED NUT WITH INSERT M10x1.25x10-CH14
Z00042022 (u. 1) |
| 3 | SWM-SCREW M10x1.25x40-CH14
Z00062573 (u. 1) |

 REAR SUSPENSION LINKAGE

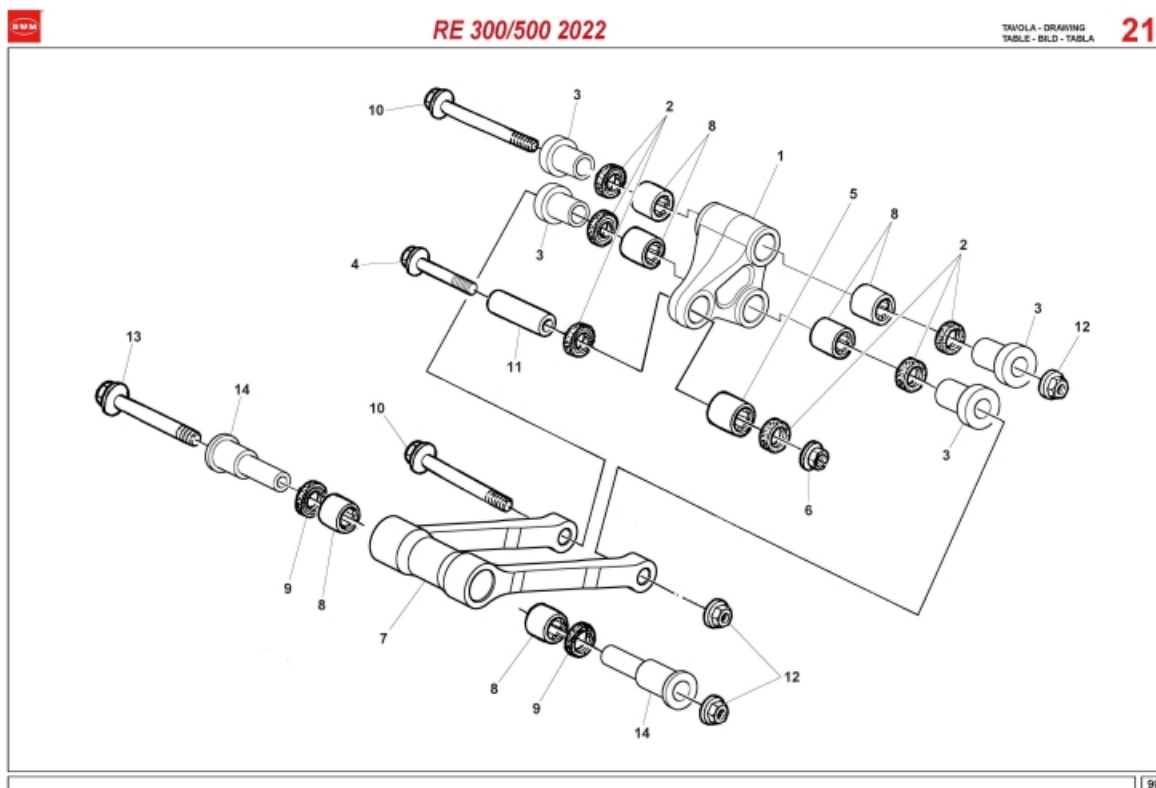

1	SWM-REAR SUSPENSION ROCKER ARM 8000B0238 (u. 1)
2	SWM-SEAL RING 26x20x4 800032065 (u. 6)
3	SWM-GUDGEON 20x12x30 8000B0288 (u. 4)
4	SWM-SCREW M10x1.25x47-CH14 ZD0062797 (u. 1)
5	SWM-ROLLER CAGE D20-D26-H16 800032064 (u. 1)
6	SWM-BRAKED FLANGED NUT WITH INSERT M10x1.25x10-CH14 Z00042022 (u. 1)
7	SWM-TIE-ROD 8000B0237 (u. 1)
8	SWM-ROLLER BEARING 26x20x20 800042781 (u. 6)
9	SWM-SEAL RING 26x20x4 800032065 (u. 2)
10	SWM-SCREW M12x1.25x12x103 YA00B0240 (u. 2)
11	SWM-PIN FOR SUSPENSION 20x10x25.2 8000A4431 (u. 1)
12	SWM-SELF LOCKING FLANGE NUT M12x1.25x12.5-CH17 Z00042023 (u. 3)
13	SWM-SCREW M12x1.25x122 Y000B0240 (u. 1)
14	OBSOLETE - SWM : 10000409 : GUDGEON 22x12x45 8000B0241 (u. 2)

 
OBSOLETE

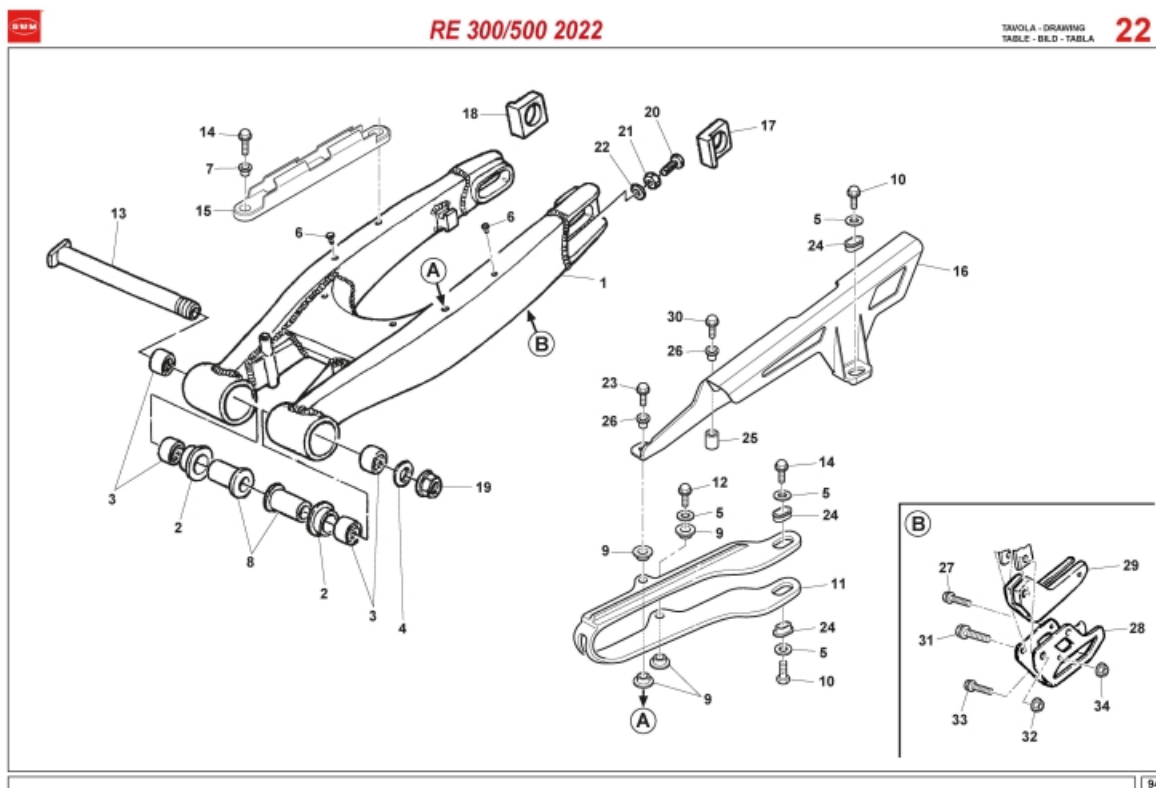REAR SWINGARM


1	SWM-REAR FORK ASSY 8000H2196 (u. 1)
2	SWM-BUSH D36-D28-D23-SP6 Z00071622 (u. 2)
3	SWM-NEEDLE BEARING 22x28x11 800076283 (u. 4)
4	SWM-WASHER 26x17.2x1.5 800032388 (u. 1)
5	SWM-WASHER 11x5.5x1.5 Z00036137 (u. 4)
6	SWM-SWINGARM RIVET "ITW" 800075160 (u. 5)
7	SWM-BUSHING 14x7x5.25 800069282 (u. 2)
8	SWM-BUSH 34-D27-D22-D17-L58.5 8A0071621 (u. 1) SWM-BUSH 34-D27-D22-D17-L49.5 800071621 (u. 1)
9	SWM-SPACER 12-D8.2-SP9 8000H3012 (u. 1)
10	SWM-HEX TAPPING SCREW WITH COLLAR 4.8x13-CH8 Z00020536 (u. 3)
11	SWM-BUFFER CHAINCASE DEFENCE 8000H1320 (u. 1)
12	SCREW TEF M5X0.8X12 CH8 PR7 - SWM/AJP Z00067997 (u. 2)
13	SWM-FORK PIN RS FA00P00173 (u. 1)

14	SWM-HEX TAPPING SCREW WITH COLLAR 4.8x13-CH8 Z00020536 (u. 2)
15	SWM-SWING ARM CABLE GUIDE 8000B1166 (u. 1)
16	SWM-CHAIN GUARD 8AB073909 (u. 1)
17	SWM-CHAIN TENSIONER LH 800096941 (u. 1)
18	SWM-CHAIN TENSIONER RH 800096944 (u. 1)
19	SWM-FLANGE NUT M16x1.5x15-CH22 BMW 770 Z00071623 (u. 1)
20	SWM-SCREW M8x1.25 ZC0061121 (u. 2)
21	SWM-NUT M8x1.25x8-CH12 Z00017810 (u. 2)
22	SWM-WASHER 13x8.4x2 Z00008536 (u. 2)
23	SWM-HEX FLANGE SCREW M5x0.8x16-CH8 ZA0067997 (u. 1)
24	SWM-CUP 8000H3033 (u. 3)
25	SWM-CHAIN GUARD SPACER 8000H2125 (u. 1)
26	SWM-SWINGARM BUSHING 14x7x5.25 8A0069282 (u. 2)
27	SWM-TEF SCREW M6x1x10-CH8 Z00062725 (u. 1)
28	SWM-CHAIN GUIDE BRACKET 800072869 (u. 1)
29	SWM-CHAIN GUIDE 800072868 (u. 1)
30	SWM-HEX FLANGE SCREW M5x0.8x20-CH8 ZC0067997 (u. 1)
31	SWM-HEX FLANGE SCREW M8x1.25x50-CH12 Z00062795 (u. 1)
32	SWM-BRAKED FLANGED NUT M8x1.25x8.5-CH12 Y00043928 (u. 1)
33	SWM-HEX FLANGE SCREW M6x1x45 Z00062731 (u. 1)
34	SWM-SELF LOCKING FLANGE NUT M6x1x7-CH10 Z00044240 (u. 1)
35	SWM-SPACER 12-D8.2-SP9 8000H3012 (u. 4)

 
HANDLEBAR / CONTROLS

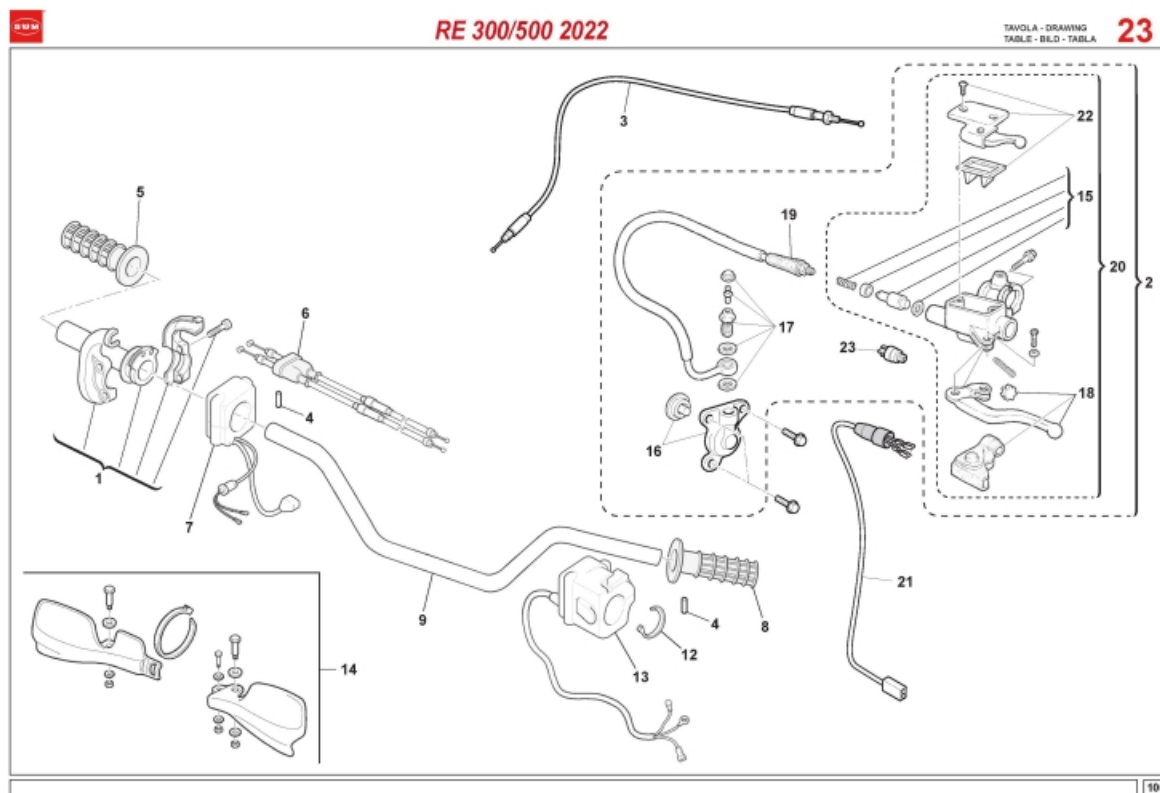

1	SWM-THOTTLE CONTROL ASSY 800098209 (u. 1)
2	SWM-HYDRAULIC CLUTCH CONTROL ASSY RS FA00A00036 (u. 1)
3	CONTROL CABLE SPR 310 /510 - SWM/AJP 8000A7777 (u. 1)
4	SWM-RUBBER PIN 8000A1074 (u. 2)
5	SWM-RIGHT GRIP RS 800076688 (u. 1)
6	SWM-THROTTLE CABLE RS 8000B1927 (u. 1)
7	SWM-RH HANDLE SWITCH RS 8000H1174 (u. 1)
8	SWM-LEFT GRIP RS 800076687 (u. 1)
9	SWM-HANDLEBAR RS 8000H6609 (u. 1)
12	SWM-CLAMP 78mm 800071578 (u. 1)
13	SWM-LH HANDLE SWITCH RS 8000H1173 (u. 1)
14	SWM-ENDURO HAND PROTECTORS KIT 8000H5050 (u. 1)
15	KIT PISTON PUMP CLUTCH (9.5MM) PR7 AND SPR 510 + 310 - SWM/AJP F000A00797 (u. 1)
16	AJP-CYLINDER. CLUTCH PRESSURE PR7 F000A00798 (u. 1)

17	RACORD KIT PR7 + SPR310/510CC - SWM/AJP F000A00799 (u. 1)
18	CLUTCH LEVER KIT PR7 - SWM/AJP F000A00800 (u. 1)
19	OIL TUBE FOR CONTROL SYSTEM PR7/ SPR310 E SPR510 - SWM/AJP 8000A2841 (u. 1)
20	SWM-PUMP CLUTCH F000A00802 (u. 1)
21	SWM-CABLES FOR FRONT STOP SWITCH 800075477 (u. 1)
22	SWM-PUMP CLUTCH F000A00802 (u. 1)
23	SWM-MICROSWITCH F000P00804 (u. 1)

 
REAR HYDRAULIC BRAKE

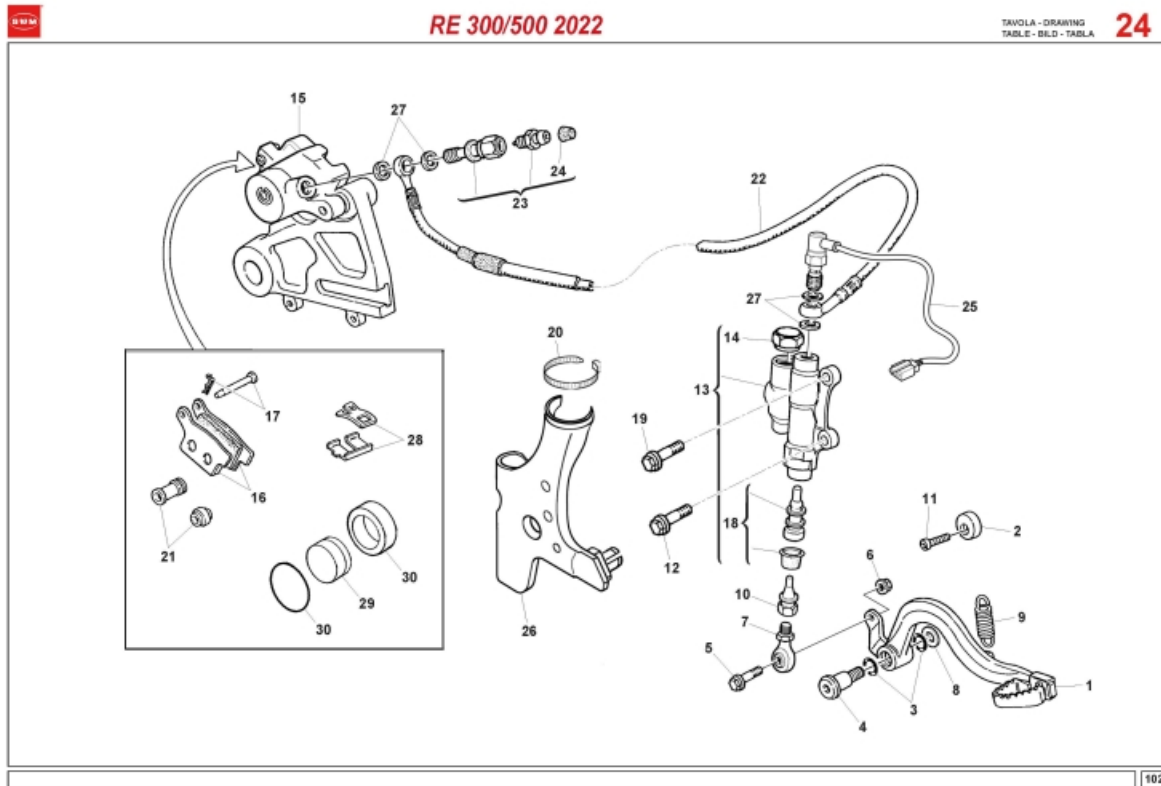

1	SWM-BRAKE CONTROL PEDAL RS 8000A7634 (u. 1)
2	SWM-CAM FOR BRAKING 8A0069125 (u. 1)
3	SWM-O-RING 2056 1.78x14 (NBR) 800022551 (u. 2)
4	SWM-SCREW M10x1.25x16+24.8 Y00055902 (u. 1)
5	SWM-HEX FLANGE SCREW M6x1x16-CH8 Z00062727 (u. 1)
6	SWM-NUT M6x1x4-CH10 61ND15062 (u. 1)
7	SWM-BALL JOINT 8A0076055 (u. 1)
8	SWM-WASHER 10.5x25x2 8000H1412 (u. 1)
9	SWM-BRAKE PEDAL SPRING 8000H5148 (u. 1)
10	SWM-BRAKE PUMP PUSH-ROD 8000A7635 (u. 1)
11	SWM-TSEI SCREW M6x1x14-CH5 Y00055241 (u. 1)
12	SWM-SCREW M6x1x14-CH8 Z00062726 (u. 1)
13	SWM-REAR BRAKE PUMP ASSY RS 8000A7633 (u. 1)
14	SWM-REAR MASTER CYLINDER CAP 8000A9447 (u. 1)

15	SWM-REAR CALIPER ASSY RS 8000A4291 (u. 1)
16	SWM-REAR BRAKE PAD SET RS 8000A2790 (u. 1)
17	SWM-PIN AND SPLIT PIN RS 8000A2791 (u. 1)
18	SWM-BRAKE CYLINDER ROD KIT 8000A9448 (u. 1)
19	SWM-SCREW M6x1x16-CH8 8B00A8423 (u. 1)
20	SWM-CABLE TIE L188 800056444 (u. 1)
21	SWM-CAPS OVERHAUL SET 800079066 (u. 1)
22	SWM-REAR BRAKE PIPE 8A00B1162 (u. 1)
23	SWM-BLEEDER VALVE SCREW ASSY 8000A3975 (u. 1)
24	SWM-BLEEDER VALVE CAP 800053259 (u. 1)
25	SWM-REAR STOP SWITCH 800094849 (u. 1)
26	SWM-FRAME PROTECTION RH 8000H3434 (u. 1)
27	SEALING WASHER PR7 - SWM/AJP 800021480 (u. 4)
28	SWM-BRAKE PAD SUPPORT RS 8000A2792 (u. 1)
29	SWM-CALIPER PISTON 8000A2793 (u. 1)
30	SWM-BRAKE PISTON GASKETS KIT 8000A2794 (u. 1)

 
PLASTICS, SEAT

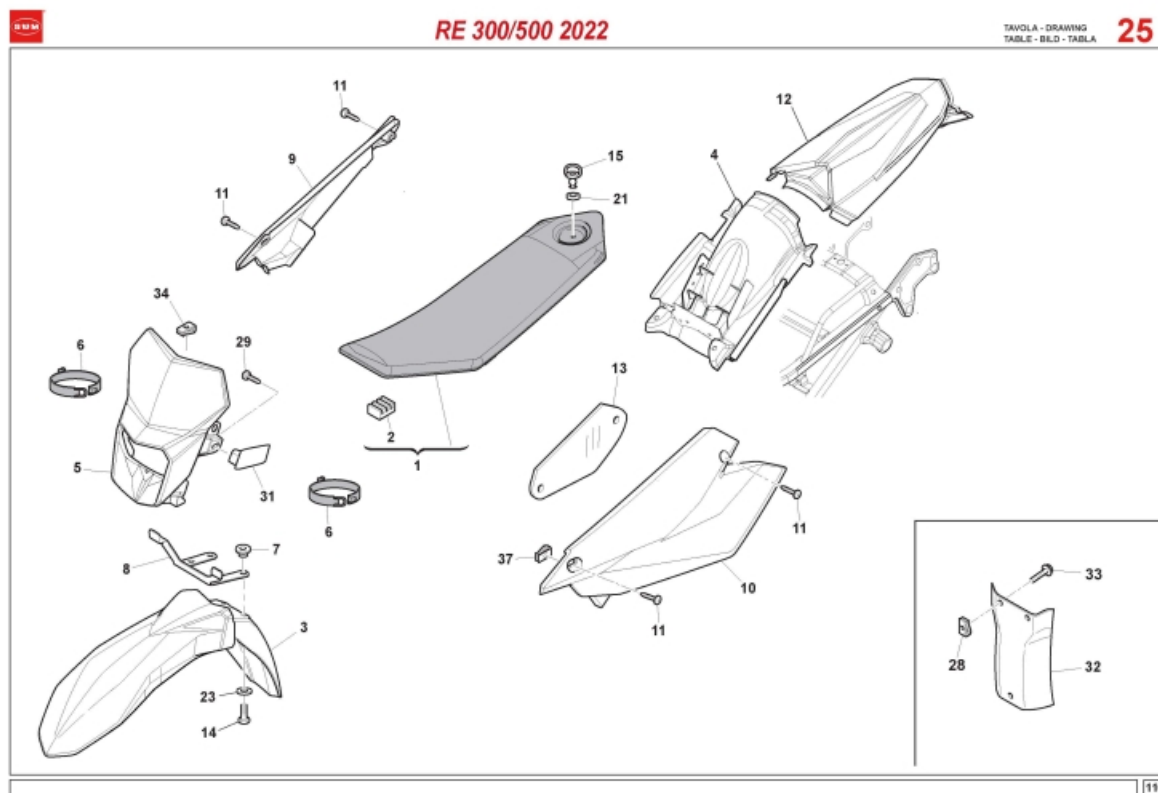

1	SWM-SEAT ASSY F000A03015 (u. 1)
2	SWM-RUBBER SEAT PAD 86610191A (u. 2)
3	SWM-FRONT BLACK FRONT FENDER RS/RE F0A0P02489 (u. 1)
4	SWM-REAR INSIDE MUDGUARD F000P02746 (u. 1)
5	SWM-HEADLIGHT FAIRING RS F000P02257 (u. 1)
6	SWM-ELASTIC FIXING 800088602 (u. 2)
7	SWM-SPACER WITH COLLAR 9x7x4.8 Z00069429 (u. 4)
8	SWM-NUMBERPLATE FIXING 8000A6644 (u. 1)
9	SWM-RH SIDE PANEL F000P02261 (u. 1)
10	SWM-LH SIDE PANEL F000P02265 (u. 1)
11	SWM-HEX FLANGE SCREW M5x1x12-CH8 8A00A8421 (u. 4)
12	SWM-REAR MUDGUARD F000P02490 (u. 1)
13	SWM-LH PANEL HEAT REFLECTIVE DECAL F000P02267 (u. 1)
14	SCREW TEF M6X1X20 CH8 PR7 - SWM/AJP Z00062728 (u. 4)

15	SWM-SEAT PIN 8000H1917 (u. 1)
16	SWM-SPACER WITH COLLAR 9x7x4.8 Z00069429 (u. 4)
17	SWM-SELF LOCKING FLANGE NUT M6x1x7-CH10 Z00044240 (u. 2)
18	SWM-SCREW M6x1x16-CH5 60ND07335 (u. 2)
19	SWM-TCEI SCREW M6x1x20-CH5 60ND02509 (u. 2)
21	SWM-WASHER 17x9x1 800069149 (u. 1)
22	SWM-HEX FLANGE SCREW M6x1x16-CH8 Z00062727 (u. 2)
23	SWM-WASHER 18x6.4x2 Z00048814 (u. 4)
28	SWM-CLIP NUT M5x0.8 U00055134 (u. 1)
29	SWM-SELF TAPPING SCREW 3.5x13 ZA0037283 (u. 2)
31	SWM-FRONT BRAKE CABLE GUIDE RS F000P02726 (u. 1)
32	SWM-SHOCK ABSORBER PROTECTION 800069551 (u. 1)
33	SWM-HEX FLANGE SCREW M5x1x12-CH8 8A00A8421 (u. 2)
34	SWM-CLIP NUT M6x1 U00046893 (u. 1)
37	SWM-CLIP NUT M5x0.8 U00055134 (u. 2)

 
GAS TANK, SIDE PANELS

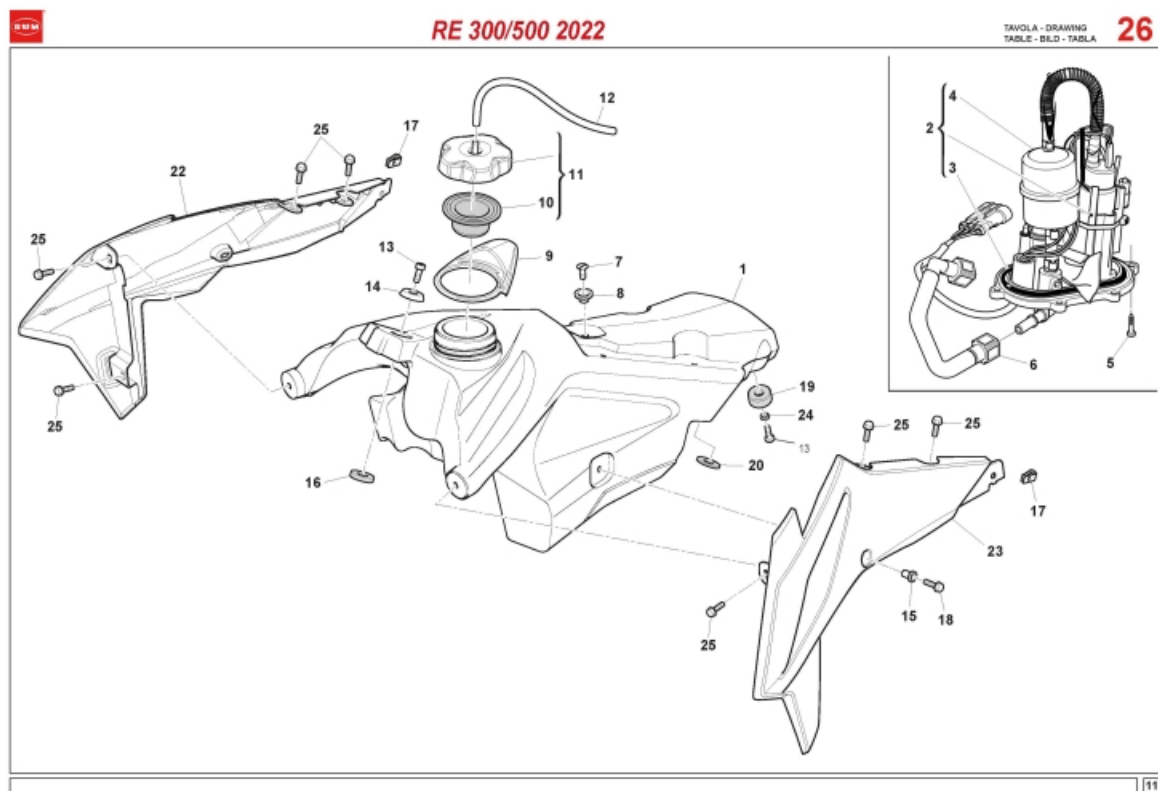

1	SWM-TANK 8000H1402 (u. 1)
	SAFARI - OVERSIZED FUEL TANK {SWM RS/RE 500} (CLEAR) 8000H1402-SAFARI (u. 1)
2	SWM-FUEL PUMP ASSEMBLY 8000H2930 (u. 1)
3	SWM-FUEL PUMP GASKET RS 8000H0184 (u. 1)
4	SWM-FUEL FILTER 8000H0183 (u. 1)
5	SWM-HEX FLANGE SCREW M5x0.8x16-CH8 ZA0067997 (u. 6)
6	SWM-PUMP- INJECTOR HOSE F000P03339 (u. 1)
7	SWM-TSCI SCREW M6x1x20 60ND04134 (u. 1)
8	SWM-SPACER D20-D10-D6.5-L12 800066238 (u. 1)
9	SWM-CAP PROFILE 8000B1390 (u. 1)
10	SWM-FUEL TANK GASKET 8000A4562 (u. 1)
11	SWM-FUEL TANK CAP CPL. F000A02664 (u. 1)
12	SWM-RUBBER HOSE 8T0068873 (u. 1)
13	SWM-SCREW M6x1x16-CH5 60ND07335 (u. 1)

14	SWM-SPACER 20x6.4x7.5 8000A5678 (u. 1)
15	SWM-SWINGARM BUSHING 14x7x5.25 8A0069282 (u. 2)
16	SWM-RUBBER WASHER 27x12x5 800061362 (u. 1)
17	SWM-CLIP NUT M5x0.8 U00055134 (u. 2)
18	SWM-HEX FLANGE SCREW M5x0.8x16-CH8 ZA0067997 (u. 2)
19	SWM-FUEL TANK SILENTBLOCK 8000B0647 (u. 2)
20	SWM-RUBBER WASHER 2.5 8A0061362 (u. 1)
21	SWM-SELF TAPPING SCREW 5.5x19 Z00037745 (u. 2)
22	SWM-RIGHT SIDE SCOOP F000P02272 (u. 1)
23	SWM-LEFT SIDE SCOOP F000P02269 (u. 1)
24	SWM-SPACER 10.5x6.5x3 8B00A0680 (u. 2)
25	SWM-M5 SCREW WITH NECK M5x1x8-CH8 RS 8000A8421 (u. 8)

 EXHAUST SYSTEM

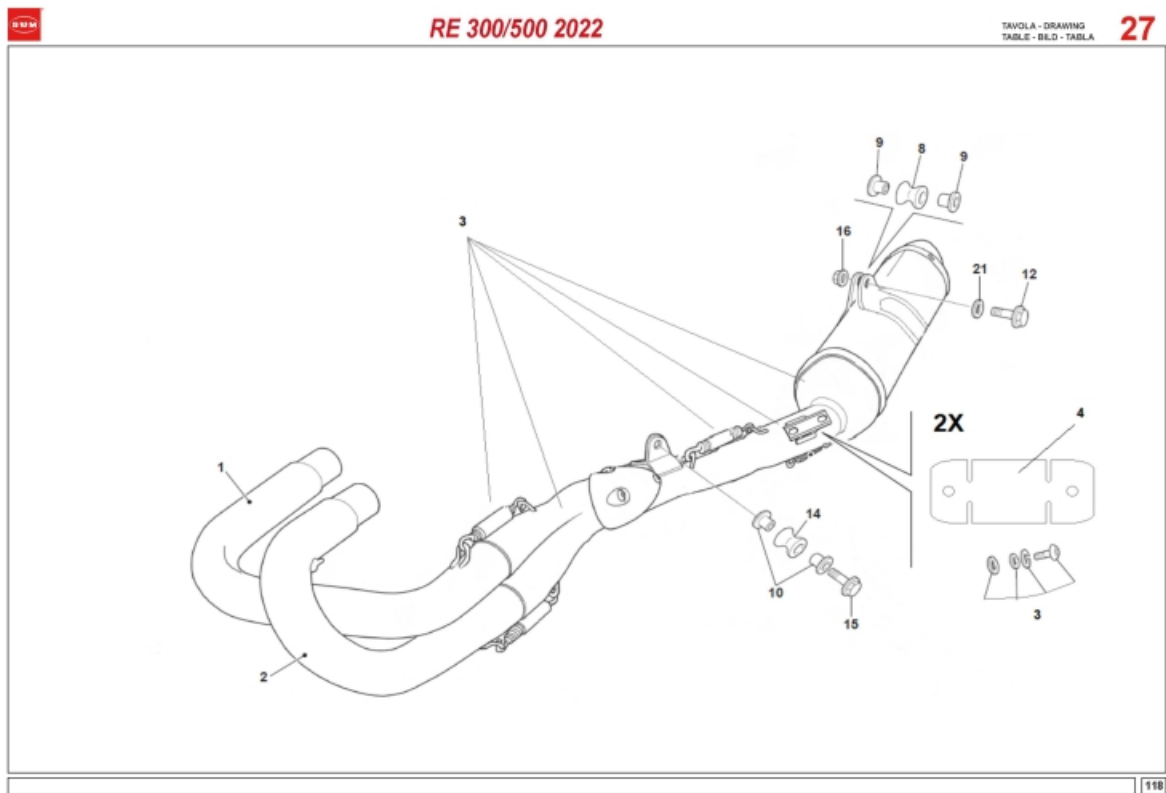

SWM-RH EXHAUST PIPE 500R
F000P00268 (u. 1) - RE 500

1

SWM-RH EXHAUST PIPE RS-300R
F000P00145 (u. 1) - RE 300

SWM-LH EXHAUST PIPE RS-500R
F000P00267 (u. 1) - RE 500

2

SWM-LH EXHAUST PIPE RS-300R
F000P00144 (u. 1) - RE 300

SWM-SILENTBLOCK D=30-22-12.L=3+10.5+3
800089302 (u. 2)

8

SWM-MUFFLER SPACER
8C00A7729 (u. 4)

9

SWM-EXHAUST BRACKET SPACER
8000B0263 (u. 2)

10

SWM-HEX FLANGE SCREW M6x1x40-CH8
ZE0067545 (u. 2)

12

SWM-SILENTBLOCK 22DIA
8000H0064 (u. 1)

14

SCREW TEF M6X1X45 PR7 - SWM/AJP
ZA0067545 (u. 1)

15

SWM-SELF LOCKING FLANGE NUT M6x1x7-CH10
Z00044240 (u. 2)

16

 
SWM-WASHER 20x6.4x1.5
800022271 (u. 2)

21

SWM-HEAT PROTECTION
F000P05024 (u. 2)

27


FRONT HYDRAULIC BRAKE

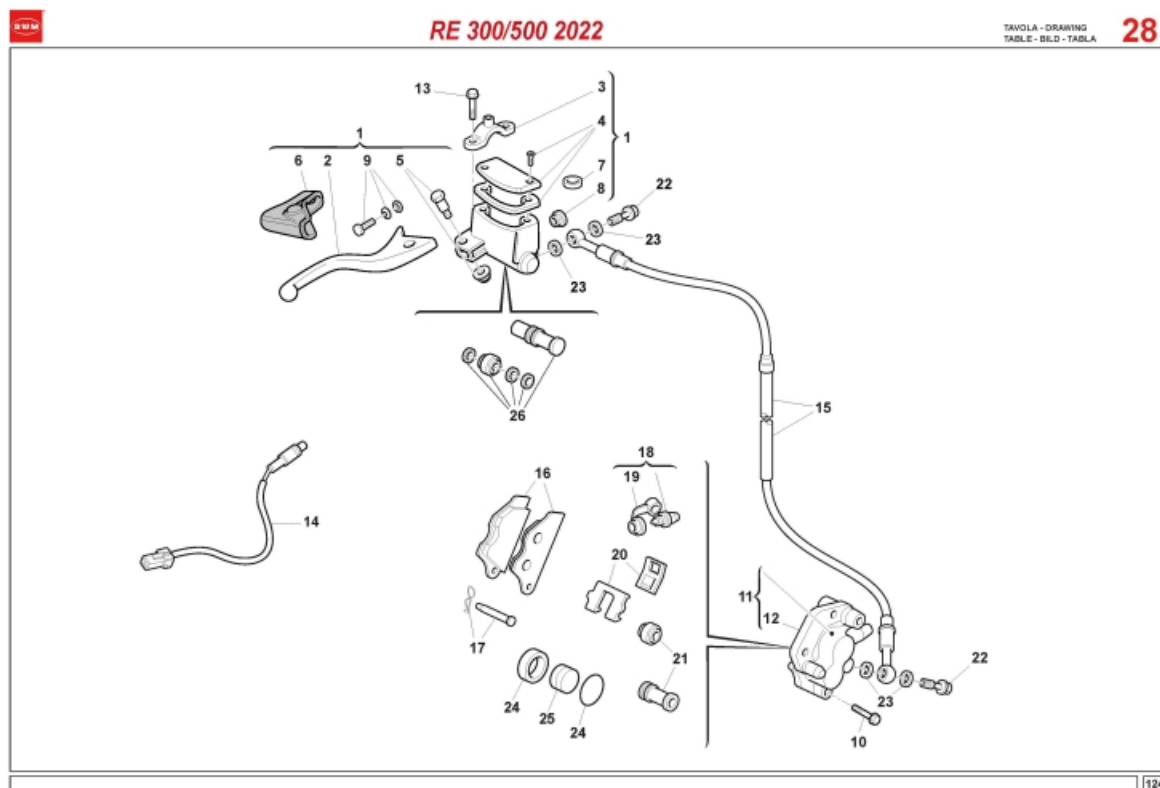

1	SWM-MASTER CYLINDER 8000A9348 (u. 1)
2	SWM-LEVER 8000A4564 (u. 1)
3	SWM-U-BOLT 8000A4568 (u. 1)
4	SWM-RADIATOR CAP RS 800094126 (u. 1)
5	SWM-HANDLE LEVER PIVOT BOLT RS 800094127 (u. 1)
6	SWM-DUST COVER 800094128 (u. 1)
7	SWM-ANTIEMULSION 800079099 (u. 1)
8	SWM-PORT-HOLE 800049654 (u. 1)
9	SWM-ADJUSTER 8000A9349 (u. 1)
10	SWM-FLANGE SCREW M8x1.25x40-CH12 ZA0062733 (u. 2)
11	SWM-FRONT CALIPER ASSY RS 8000H0768 (u. 1)
12	SWM-CALIPER SUPPORT 8000A7145 (u. 1)
13	SCREW TEF M6X1X25 CH8 PR7 - SWM/AJP Z00062729 (u. 1)
14	SWM-CONTROL MICROSWITCH 8000A0929 (u. 1)

15	SWM-FRONT BRAKE HOSE 8A00A6242 (u. 1)
16	SWM-FRONT BRAKE PAD SET 8000A7143 (u. 1)
17	SWM-PIN KIT 8000A0932 (u. 1)
18	SWM-DRAIN KIT 8000A0931 (u. 1)
19	SWM-BLEEDER VALVE CAP 800053259 (u. 1)
20	SWM-SPRING STEEL CLIP RS 8000A7144 (u. 1)
21	SWM-CAPS OVERHAUL SET 800079066 (u. 1)
22	SWM-BRAKE PIPE SCREW M10x1x19-CH14 U00057155 (u. 2)
23	SEALING WASHER PR7 - SWM/AJP 800021480 (u. 4)
24	SWM-BRAKE CALIPER GASKETS KIT 8000A1139 (u. 1)
25	SWM-HYDRAULIC BRAKE PISTON 8000A1138 (u. 1)
26	SWM-MASTER CYLINDER KIT 8000A9350 (u. 1)

 
FRONT WHEEL

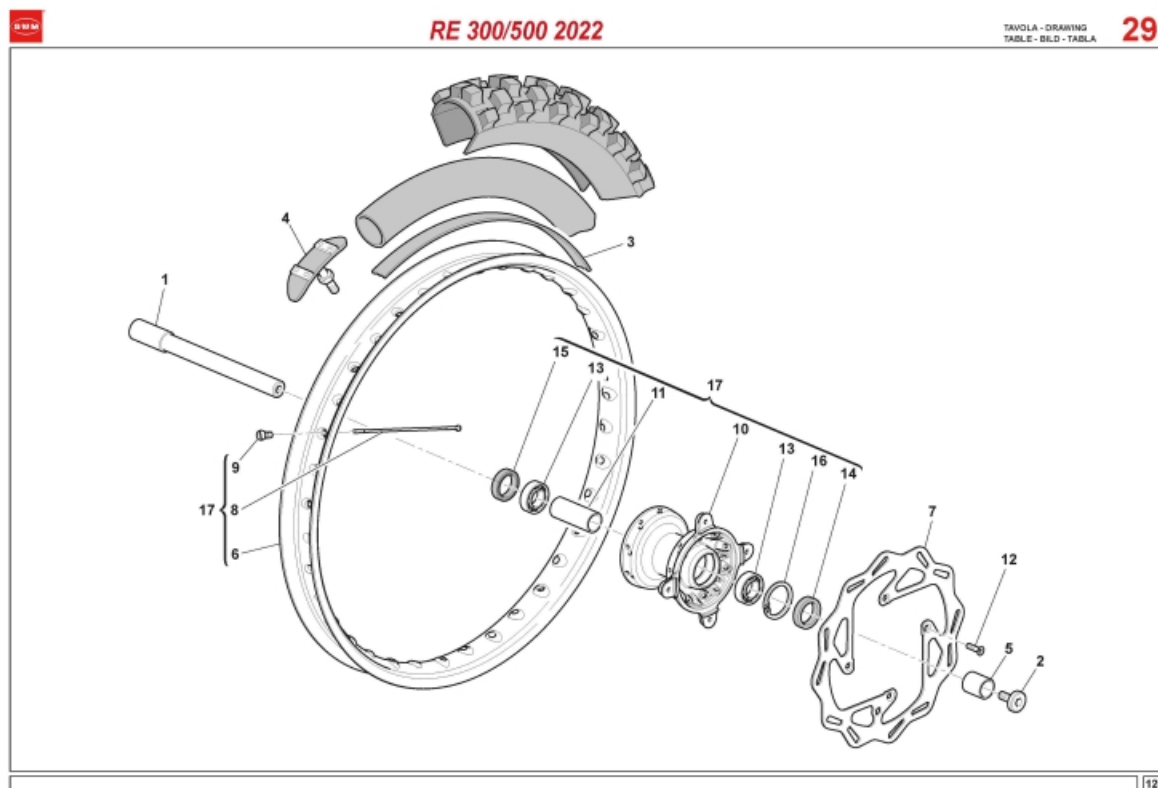

1	SWM-FRONT WHEEL PIN FA00P00058 (u. 1)
2	SWM-FRONT PIN PLUG M20 800096933 (u. 1)
3	SWM-FRONT WHEEL RIM BAND RS/SD-X 800013346 (u. 1)
4	SWM-AIR TUBE PNEUMATIC LOCK BRACKET 800049036 (u. 1)
5	SWM-FRONT WHEEL SPACER 8A0096930 (u. 1)
6	SWM-FRONT WHEEL RIM 1.6x21 F0B0P00259 (u. 1)
7	SWM-FRONT BRAKE DISC F000P01884 (u. 1)
8	SWM-FRONT WHEEL SPOKE RS 8000H1362 (u. 36)
9	SWM-FRONT WHEEL NIPPLE RS 8000A6208 (u. 36)
10	SWM-FRONT HUB FA00P01788 (u. 1)
11	SWM-HUB BEARING SPACER SD F000P00120 (u. 1)
12	SCREW (TCEI M6X1X14 CH5) SPR310/510 - SWM/AJP YA0055241 (u. 4)
13	SWM-BALL BEARING 800084938 (u. 2)
14	SWM-SEAL RING 42x32x7 800022966 (u. 1)

15	SWM-SEAL RING 42x28x7 8000H6187 (u. 1)
16	SWM-CIRCLIP 42mm DIN472 66N021270 (u. 1)
17	SWM-FRONT WHEEL ASSY WITHOUT TIRE RS FC00A00123 (u. 1)

 
REAR WHEEL

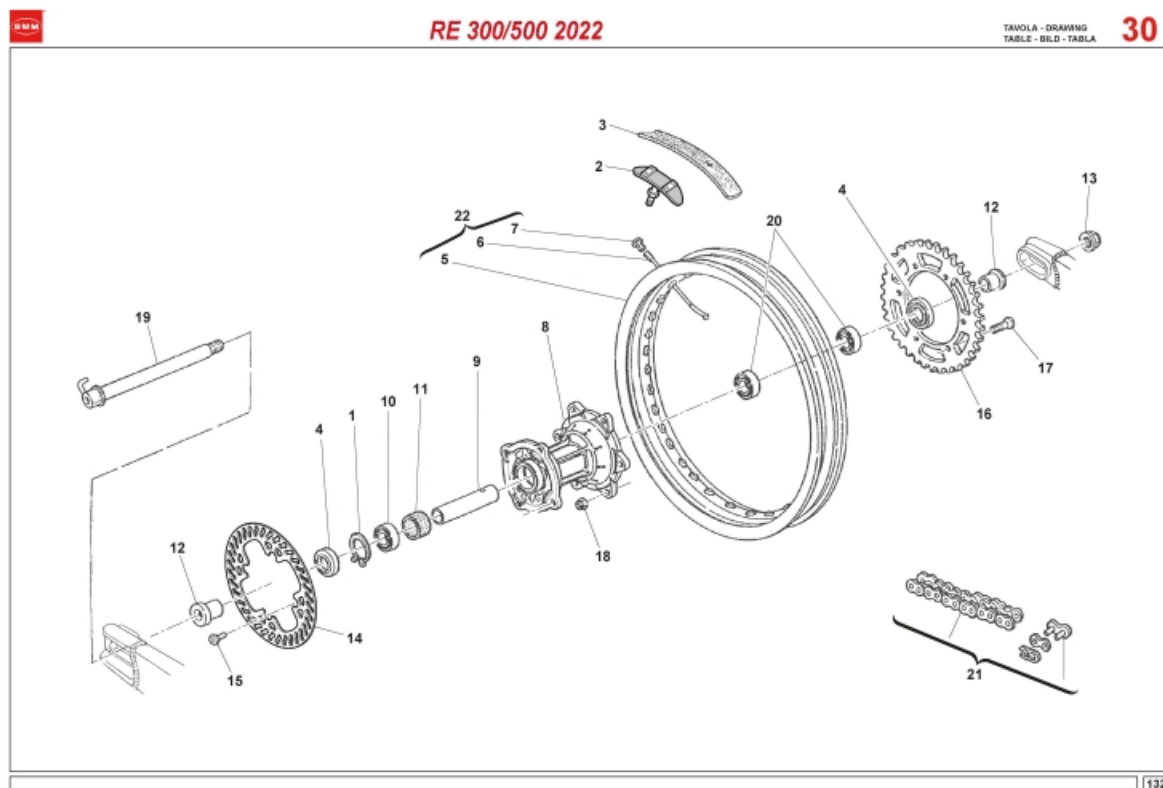

1	SWM-CIRCLIP 50.5x1.75 66N021272 (u. 1)
2	SWM-AIR TUBE BRACKET 800054073 (u. 1)
3	SWM-REAR WHEEL RIM BAND RS/SD 800001688 (u. 1)
4	SWM-SEAL RING 47x32x7 800089572 (u. 2)
5	SWM-REAR WHEEL RIM 18" x 2.15 F0B0P00260 (u. 1)
6	SWM-REAR WHEEL SPOKE SPROCKET SIDE RS 8000H1534 (u. 18)
	SWM-REAR WHEEL SPOKE DISC SIDE RS 8000H1533 (u. 18)
7	SWM-NIPPLE 8000A6209 (u. 36)
8	SWM-REAR WHEEL HUB F000P01789 (u. 1)
9	SWM-HUB BEARING SPACER RS 800092414 (u. 1)
10	SWM-BALL BEARING 25x47x16 8B0026846 (u. 1)
11	SWM-WHEEL INNER SPACER SUPPORT F000P00121 (u. 1)
12	SWM-RH REAR HUB SPACER 800096938 (u. 2)
13	SWM-NUT M20x1.5x15-CH27 Y00093072 (u. 1)

14	OBSOLETE - SWM-REAR BRAKE DISC RS F000P04409 F000P01885 (u. 1)	OBSOLETE
15	SWM-SCREW M6x1x14-CH8 Z00062726 (u. 4)	
16	SWM-GEAR RING Z=46 800096837 (u. 1) - <i>RE 500</i>	
	SWM-GEAR RING Z=50 8D0096837 (u. 1) - <i>RE 300</i>	
17	SWM-SCREW M8x1.25x28-CH6 8000H0158 (u. 6)	
18	SWM-BRAKED FLANGED NUT M8x1.25x8.5-CH12 Y00043928 (u. 6)	
19	SWM-REAR WHEEL PIN F000P00066 (u. 1)	
20	SWM-RADIAL BALL BEARING 47x25x12 8A0026846 (u. 1)	
21	SWM-TRANSMISSION CHAIN 112L RS-300R FB00P01135 (u. 1) - <i>RE 300</i>	
	SWM-TRANSMISSION CHAIN 110L RS-500R FA00P01135 (u. 1) - <i>RE 500</i>	
22	SWM-REAR WHEEL ASSY WITHOUT TIRE RS FB00A00124 (u. 1)	

 
DIGITAL INSTRUMENTS

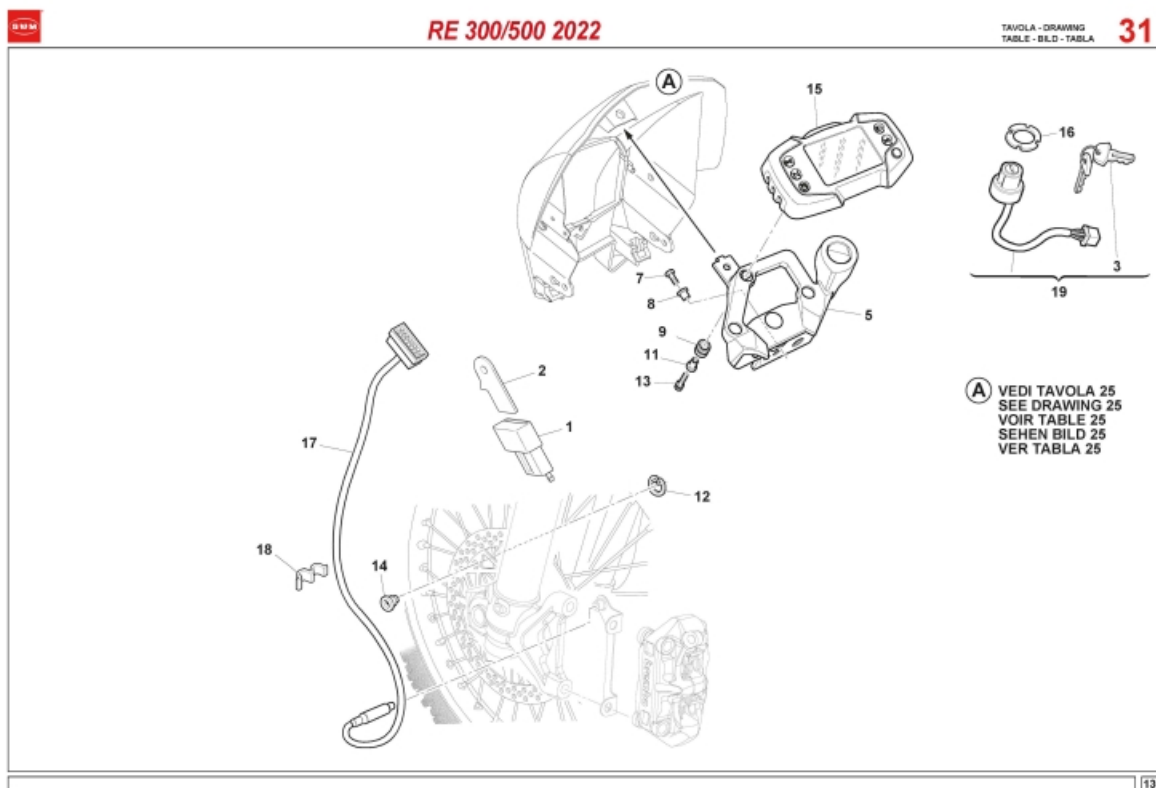

1	SWM-BLINKER UNIT RS E000P02280 (u. 1)
2	SWM-BLINKER UNIT SUPPORT 8000H1290 (u. 1)
3	SWM-ROUGH KEY 800035531 (u. 2)
4	SWM-SELF LOCKING FLANGE NUT M6x1x7-CH10 Z00044240 (u. 4)
5	SWM-SUPPORT PLATE F000P02428 (u. 1)
6	SWM-TURN INDICATOR RH FRONT-LH REAR E000P02279 (u. 2)
7	SCREW TEF M5X0.8X12 CH8 PR7 - SWM/AJP Z00067997 (u. 1)
8	SWM-BUSHING 14x7x5.25 800069282 (u. 1)
9	SWM-FRONT FENDER SILENTBLOCK 800095128 (u. 3)
10	SWM-TURN INDICATOR LH FRONT-RH REAR EA00P02279 (u. 2)
11	SWM-SPACER 14x7x5.25x10 8000B1774 (u. 3)
12	SWM-CIRCLIP FOR MAGNET 66N021200 (u. 1)
13	SWM-HEX FLANGE SCREW M5x0.8x16-CH8 ZA0067997 (u. 2)
14	SWM-MAGNET ASSY 800099775 (u. 1)

15	SWM-DASHBOARD RS F000P01267 (u. 1)
16	SWM-KEY LOCK SWITCH RING NUT 800074258 (u. 1)
17	SWM-MAGNETIC SENSOR WITH CABLE 8B0099652 (u. 1)
18	SWM-HOSE CLAMP L=25 800092668 (u. 3)
19	OBSOLETE - SWM-KEY LOCK SWITCH ASSY WITH KEY (89000A8900) 8000A8903 (u. 1)

 MAIN WIRING HARNESS

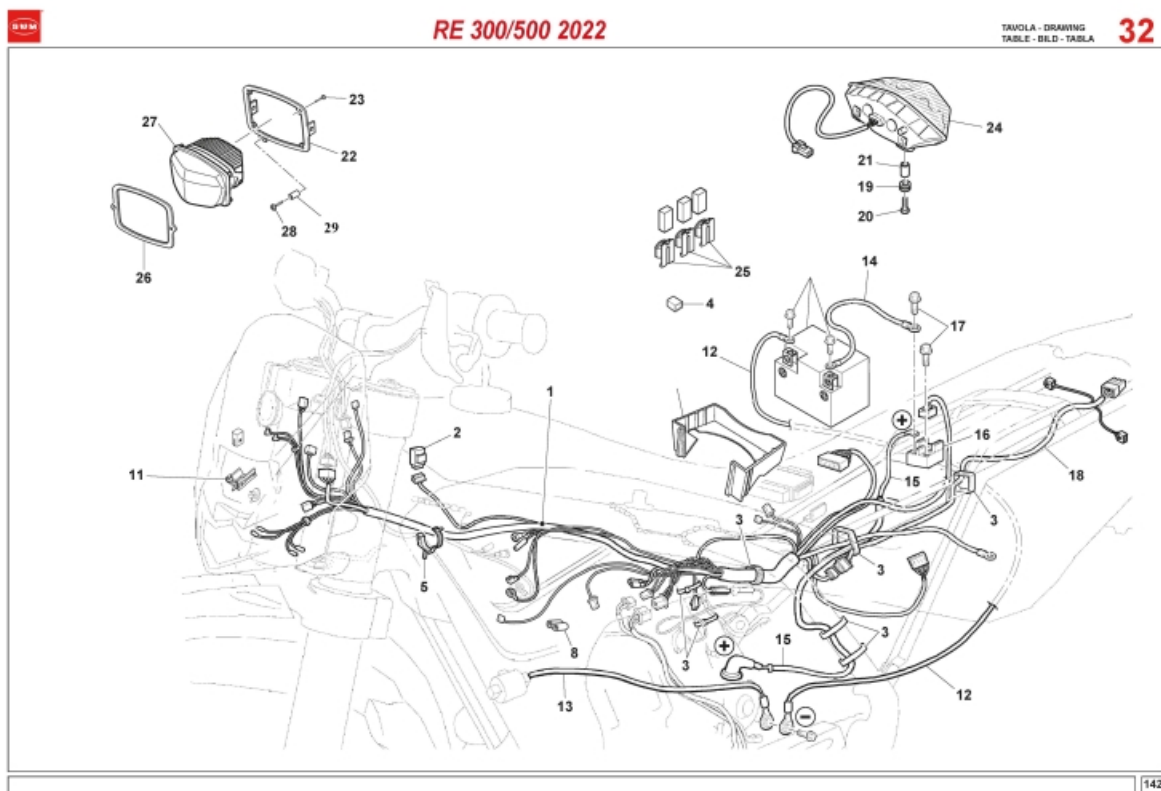


1	SWM-MAIN WIRING HARNESS E000P02493_P (u. 1)
2	SWM-RELAY 8000A6749 (u. 3)
3	SWM-CABLE TIE L188 800056444 (u. 16)
4	SWM-TILT SENSOR CUP RS 8000A6774 (u. 1)
5	SWM-CABLE RETAINING SPRING 8A0060283 (u. 2)
6	SWM-HORN ASSY RS E000A00026 (u. 1)
7	SWM-BATTERY 12V 7AH 8000A1891 (u. 1)
8	SWM-CONNECTOR PLUG 8000A6477 (u. 1)
9	SWM-HORN BOLT 8000A6638 (u. 1)
10	SWM-BATTERY SUPPORT 8000H0159 (u. 1)
11	SWM-PLASTIC CLIP 8000H0644 (u. 2)
12	SWM-BATTERY GROUND CABLE 890mm 8000B0254 (u. 1)
13	SWM-GROUND CABLE 460mm 8000B0253 (u. 1)
14	SWM-START RELAY-BATTERY CABLE E000P03276 (u. 1)

15	SWM-START RELAY-START MOTOR CABLE E000P00970 (u. 1)
16	SWM-STARTING RELAY E000P02437 (u. 1)
17	SWM-HEX FLANGE SCREW M6x1x8-CH8 ZS0067545 (u. 2)
18	SWM-CONNECTOR PLUG FOR DIAGNOSTIC 8000A6790 (u. 1)
19	SWM-HARNESS REAR LAMP RS 8000H1176 (u. 1)
20	SWM-FRONT FENDER SILENTBLOCK 800095128 (u. 2)
21	SWM-HEX FLANGE SCREW M6x1x16-CH8 Z00062727 (u. 2)
22	SWM-TAIL LIGHT SPACER 8000H1735 (u. 2)
23	SWM-HEADLIGHT SUPPORT RS 8000A6484 (u. 1)
24	SWM-SELF TAPPING SCREW 3.5x13 ZA0037283 (u. 2)
25	SWM-FUSE 20A 8G0095647 (u. 1)
26	SWM-TAIL LIGHT ASSY SD 8000H1418 (u. 1)
27	SWM-FUSE HOLDER SUPPORT 8000H0641 (u. 1)
28	SWM-FUSE 15A 8F0095647 (u. 2)
29	SWM-FRONT LIGHT GASKET 8000A1053 (u. 1)
30	SWM-FRONT LIGHT ASSY E000P02092 (u. 1)
31	SWM-SCREW TCEI M5x0.8x20 60ND02487 (u. 1)
32	SWM-ELASTIC SPACER RS 8A00A1051 (u. 1)
33	SWM-PLATE LIGHT 8000A0212 (u. 1)
34	SWM-NUT M5x0.8-CH8 61ND15192 (u. 1)
35	SWM-TCEI SCREW M5x0.8x16 60ND07330 (u. 1)
36	SWM-LAMP 12V-5W 800036230 (u. 1)

2022 SWM RE

 CYLINDER, PISTON

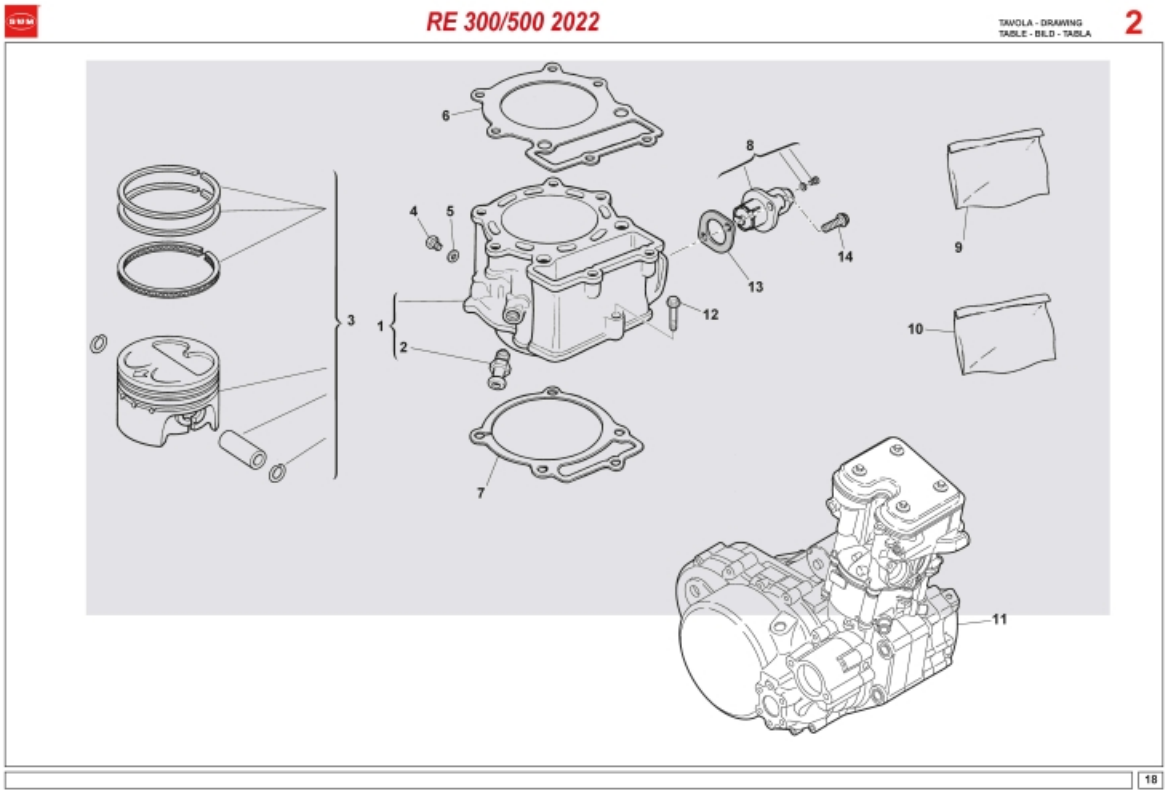

SWM-CYLINDER D83
M000P00152 (u. 1) - RE 300

1
CYLINDER ASSY SPR 510 - SWM/AJP
M000P00153 (u. 1) - RE 500

2
JOINT PR7 - SWM/AJP
800063885 (u. 2)

3
PISTON (97MM) SPR 510 - SWM/AJP
8000A9228 (u. 1) - RE 500
PISTON ASSY 83MM SPR300CC - SWM/AJP
8000H0507 (u. 1) - RE 300

4
SWM-HEX FLANGE SCREW M6x1x8-CH8
ZS0067545 (u. 1)


5
GASKET 10X6.2X1 PR7 - SWM/AJP
8A0015960 (u. 1)

6
SWM-CYLINDER HEAD GASKET 1.0mm
8E00A4195 (u. 1) - RE 500
GASKET. CYLINDER HEAD (1.1 MM) SPR 510 - SWM/AJP
8B00A4195 (u. 1) - RE 500
CYLINDER HEAD GASKET 0.8MM SPR310 - SWM/AJP
8000H0504 (u. 1) - RE 300
SWM-CYLINDER HEAD GASKET 1.2mm
8H00A4195 (u. 1) - RE 500
SWM-CYLINDER HEAD GASKET 0.9mm
8B00H0504 (u. 1) - RE 300
SWM-CYLINDER HEAD GASKET 0.7mm
8A00H0504 (u. 1) - RE 300

7
GASKET. CYLINDER BASE PR7 - SWM/AJP
800099841 (u. 1)

8	TENSIONER. TIMING CHAIN PR7 SPR300 - SWM/AJP 8000A6950 (u. 1)
9	SWM-ENGINE GASKETS KIT RS-500R M000A01128 (u. 1) - <i>RE 500</i>
	SWM-ENGINE GASKETS KIT RS-300R M000A01127 (u. 1) - <i>RE 300</i>
10	SWM-ENGINE SEAL RINGS KIT RS-500R 8000B0364 (u. 1) - <i>RE 500</i>
	SWM-ENGINE SEAL RINGS KIT RS-300R 8000B0373 (u. 1) - <i>RE 300</i>
11	SWM-ENGINE {RE 300cc 22→} M000A04195_C (u. 1) - <i>RE 300</i>
	SWM-ENGINE {RE 500cc 22→} M000A04196_C (u. 1) - <i>RE 500</i>
12	SWM-HEX FLANGE SCREW M6x1x40-CH8 ZE0067545 (u. 1)
13	GASKET. TENSIONER ADJUSTER PR7 - SWM/AJP 8000A6954 (u. 1)
14	SCREW TEF M6X1X20 CH8 PR7 - SWM/AJP Z00062728 (u. 2)

 CYLINDER HEAD

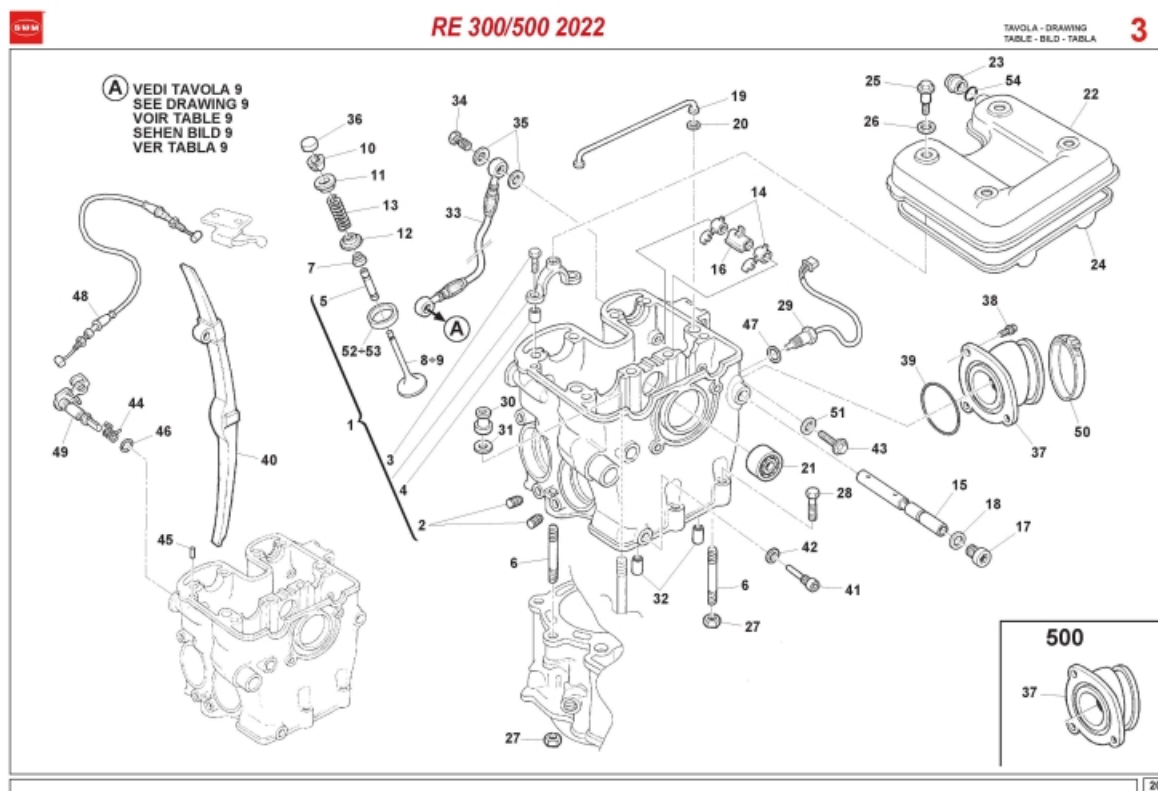

SWM-CILYNDER HEAD ASSY

8000H1474_P (u. 1) - RE 500

1

SWM-ENGINE HEAD WITH SEATS AND GUIDES ASSY

8000B0394_P (u. 1) - RE 300

2

SWM-HELI-COIL THREAD

800049792 (u. 4)

3

SCREW TCEI M6X1X25 PR7 - SWM/AJP

8A0085071 (u. 8)

4

BUSH 8X6.4X6 PR7 - SWM/AJP

161795501 (u. 8)

5

SWM-VALVE GUIDE D5 RS

8000A4152 (u. 4) - RE 300

SWM-VALVE GUIDE D5.5

8000A4159 (u. 2) - RE 500

SWM-VALVE GUIDE D5 SD

8000A4158 (u. 2) - RE 500

6

STUD BOLT M8X51 MM PR7 - SWM/AJP

800074836 (u. 2)

7

SEAL VALVE STEM 5 MM PR7 - SWM/AJP

8000A4136 (u. 4) - RE 300

SEAL VALVE STEM 5.5 MM - SWM/AJP

8000A4137 (u. 2) - RE 500

SEAL VALVE STEM 5 MM PR7 - SWM/AJP

8000A4136 (u. 2) - RE 500

8

SWM-TITANIUM INTAKE VALVE 5.5x37 RS-500R

8000A5445 (u. 2) - RE 500

SWM-TITANIUM INTAKE VALVE 5x30.5 RS-300R

8000A5440 (u. 2) - RE 300


9	VALVE. EXHAUST STEEL PR7 - SWM/AJP 8000H4194 (u. 2) - RE 500
	SWM-EXHAUST VALVE RS 8000H0185 (u. 2) - RE 300
10	COTTER. VALVE 5 MM PR7 - SWM/AJP 8000A4106 (u. 8) - RE 300
	COTTER. VALVE 5.5 MM PR7 - SWM/AJP 8000A4107 (u. 4) - RE 500
	COTTER. VALVE 5 MM PR7 - SWM/AJP 8000A4106 (u. 4) - RE 500
11	RETAINER. SPRING INTAKE VALVE 5.5 MM PR7 - SWM/AJP 8000A4157 (u. 2) - RE 500
	RETAINER. EXHAUST VALVE SPRING 5 MM PR7 - SWM/AJP 8000A4151 (u. 4) - RE 300
	RETAINER. EXHAUST VALVE SPRING 5 MM PR7 - SWM/AJP 8000A4151 (u. 2) - RE 500
12	SEAT. SPRING EXHAUST PR7 - SWM/AJP 800091578 (u. 4) - RE 300
	SEAT. SPRING EXHAUST PR7 - SWM/AJP 800091578 (u. 4) - RE 500
13	SWM-VALVE SPRING RS 800091579 (u. 4) - RE 300
	SWM-VALVE SPRING SD 8000A0568 (u. 1) - RE 500
14	SWM-ROCKER ARM 800091568 (u. 4)
15	AXLE. VALVE ROCKER ARM PR7 - SWM/AJP 8000A5437 (u. 1) - RE 500
	SWM-ROCKER ARM PIN RS 8000A5436 (u. 1) - RE 300
16	SWM-SPRING SPACER 23.5mm 8A00A5435 (u. 1) - RE 300
	SPACER. SPRING 30.8 MM PR7 - SWM/AJP 8C00A5435 (u. 1) - RE 500
	SWM-SPRING SPACER 22.5mm 8000A5435 (u. 1) - RE 300
	SPACER. SPRING 25.8 MM PR7 - SWM/AJP 8B00A5435 (u. 1) - RE 500
17	PLUG DIN 908 M14X1.5 PR7 - SWM/AJP 800099711 (u. 2)
18	WASHER 17.9X14.2X1.5 MM PR7 - SWM/AJP 800047763 (u. 2)
19	HOSE. OIL PR7 - SWM/AJP 800099834 (u. 1) - RE 500
	HOSE. OIL 310CC - SWM/AJP 800091583 (u. 1)
20	O-RING 2018 1.78 D4.48 PR7 - SWM/AJP 800091584 (u. 2)
21	BEARING. BALL 12X28X8 PR7 - SWM/AJP 800034317 (u. 1)
22	CYLINDER. HEAD COVER 300CC RED COLOR - SWM/AJP M0A0P00110 (u. 1) - RE 300
	SWM-HEAD COVER, PAINTED M0A0P01985 (u. 1) - RE 500
23	JOINT. CYLINDER HEAD COVER BREATHER PR7 - SWM/AJP 8000A7039 (u. 1)

24	GASKET. CYLINDER HEAD COVER SPR 310 - SWM/AJP 800091566 (u. 1) - <i>RE 300</i>
	GASKET CYLINDER HEAD COVER PR7 + SPR510CC - SWM/AJP 800099837 (u. 1) - <i>RE 500</i>
25	SWM-HEAD COVER BOLT 72012182 (u. 4)
26	WASHER PR7 - SWM/AJP 800091588 (u. 4)
27	NUT M8 PR7 - SWM/AJP Z00054700 (u. 2)
28	SCREW TE M6X1X30 CH8 PR7 - SWM/AJP Z00062730 (u. 2)
	SWM-HEX FLANGE SCREW M6x1x40-CH8 ZE0067545 (u. 1)
29	AJP-WATER TEMPERATURE SENSOR PR7 8000H3649 (u. 1)
30	NUT M10 PR7 - SWM/AJP 800091589 (u. 4)
31	WASHER PR7 - SWM/AJP Z00023374 (u. 4)
32	BUSH. CYLINDER HEAD (10.3X12.3X9.8) PR7 - SWM/AJP 8000H0278 (u. 4)
33	SWM-OIL HOSE RS-300R 80A0A0232 (u. 1) - <i>RE 300</i>
	SWM-OIL HOSE RS-500R 8AA0A0232 (u. 1) - <i>RE 500</i>
34	BANJO BOLT. M10X1 PR7 - SWM/AJP 8A00A0574 (u. 2)
35	SEALING WASHER PR7 - SWM/AJP 800021480 (u. 4)

36	PAD. VALVE ADJUSTING 1.75 MM PR7 - SWM/AJP 8C00A4162 (u. 4)
	PAD. VALVE ADJUSTING 2.60 MM PR7 - SWM/AJP 8W00A4162 (u. 4)
	PAD. VALVE ADJUSTING 2.45 MM PR7 - SWM/AJP 8T00A4162 (u. 4)
	PAD. VALVE ADJUSTING 1.95 MM PR7 - SWM/AJP 8G00A4162 (u. 4)
	PAD. VALVE ADJUSTING 2.35 MM PR7 - SWM/AJP 8R00A4162 (u. 4)
	PAD. VALVE ADJUSTING 2.10 MM PR7 - SWM/AJP 8K00A4162 (u. 4)
	PAD. VALVE ADJUSTING 1.85 MM PR7 - SWM/AJP 8E00A4162 (u. 4)
	PAD. VALVE ADJUSTING 1.70 MM PR7 - SWM/AJP 8B00A4162 (u. 4)
	PAD. VALVE ADJUSTING 2.20 MM PR7 - SWM/AJP 8M00A4162 (u. 4)
	PAD. VALVE ADJUSTING 2.30 MM PR7 - SWM/AJP 8P00A4162 (u. 4)
	PAD. VALVE ADJUSTING 2.25 MM PR7 - SWM/AJP 8N00A4162 (u. 4)
	PAD. VALVE ADJUSTING 2.05 MM PR7 - SWM/AJP 8J00A4162 (u. 4)
	PAD. VALVE ADJUSTING 2.55 MM PR7 - SWM/AJP 8V00A4162 (u. 4)
	PAD. VALVE ADJUSTING 1.90 MM PR7 - SWM/AJP 8F00A4162 (u. 4)
	PAD. VALVE ADJUSTING 1.65 MM PR7 - SWM/AJP 8A00A4162 (u. 4)
	PAD. VALVE ADJUSTING 2.00 MM PR7 - SWM/AJP 8H00A4162 (u. 4)
	PAD. VALVE ADJUSTING 2.15 MM PR7 - SWM/AJP 8L00A4162 (u. 4)
	PAD. VALVE ADJUSTING 1.80 MM PR7 - SWM/AJP 8D00A4162 (u. 4)
	PAD. VALVE ADJUSTING 1.60 MM PR7 - SWM/AJP 8000A4162 (u. 4)
	PAD. VALVE ADJUSTING 2.50 MM PR7 - SWM/AJP 8U00A4162 (u. 4)
	PAD. VALVE ADJUSTING 2.40 MM PR7 - SWM/AJP 8S00A4162 (u. 4)
37	SWM-TRHOTTLE BODY ENGINE UNION RS-500R 8000B0357 (u. 1) - <i>RE 500</i>
	SWM-TRHOTTLE BODY ENGINE UNION RS-300R 8000B0369 (u. 1) - <i>RE 300</i>
38	SWM-TCEI SCREW M6x1x20-CH5 60ND02509 (u. 3)
39	O-RING 2.62X50.47 PR7 - SWM/AJP 8A0028553 (u. 1)
40	SWM-CHAIN SLIDER 800091553 (u. 1)
41	SCREW PR7 - SWM/AJP 161535902 (u. 1)
42	WASHER 14X8.2X1 PR7 - SWM/AJP 800045194 (u. 1)

43	SCREW TEF M5X0.8X8 CH8 PR7 - SWM/AJP ZD0067997 (u. 1)
44	SWM-CYLINDER HEAD SPRING 800099687 (u. 1)
45	SWM-ROLLER 19.8x4 800044298 (u. 1)
46	O-RING (8.73X1.78) - SWM/AJP 800023107 (u. 1)
47	O-RING 2037 1.78X9.25 PR7 - SWM/AJP 8A0023108 (u. 4)
48	CONTROL CABLE SPR 310 /510 - SWM/AJP 8000A7777 (u. 1)
49	SWM-VALVE LIFTER, ASSY 800099684 (u. 1)
50	SWM-CLAMP FOR TUBE ASSY 8000A7693 (u. 1)
51	ALUMINIUM WASHER 10X5.1X1 MM PR7 - SWM/AJP 62N015672 (u. 1)
52	SWM-INLET VALVE SEAT RS-500R 8000A5450 (u. 2) - <i>RE 500</i>
	SWM-INLET VALVE SEAT RS-300R 8000A5447 (u. 2) - <i>RE 300</i>
53	SWM-EXHAUST VALVE SEAT RS-300R 8000A5446 (u. 2) - <i>RE 300</i>
	SWM-EXHAUST VALVE SEAT RS-500R 8000A5449 (u. 2) - <i>RE 500</i>
54	O-RING. CYLINDER HEAD COVER BREATHER 11X2 PR7 - SWM/AJP 800001199 (u. 1)

 CRANKSHAFT

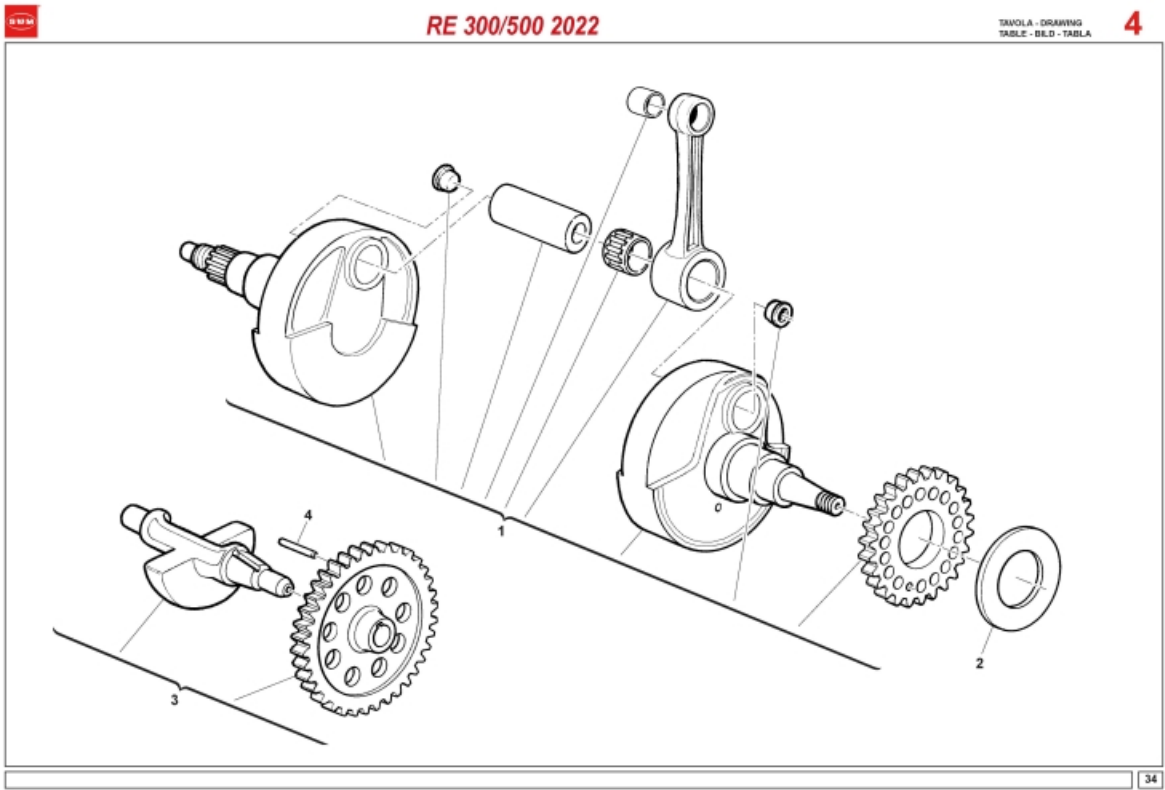

SWM-CRANK SHAFT AND GEAR, ASSY
8000A4177 (u. 1) - RE 500

1 CRANK SHAFT AND GEAR ASSY 310CC - SWM/AJP
M000A00174 (u. 1) - RE 300

SWM-THRUST WASHER 0.6mm
8D0028183 (u. 1)

SWM-THRUST WASHER 0.5mm
8C0028183 (u. 1)

SWM-THRUST WASHER 0.8mm
8F0028183 (u. 1)

 
SWM-THRUST WASHER 0.3mm
8A0028183 (u. 1)

SWM-BALANCE SHAFT, ASSY
M000A00176 (u. 1)

ROLLER PR7 - SWM/AJP
8A0047773 (u. 1)

SWM-THRUST WASHER 40x32x1 1.0mm
8H0028183 (u. 1)


PRIMARY DRIVE, CLUTCH

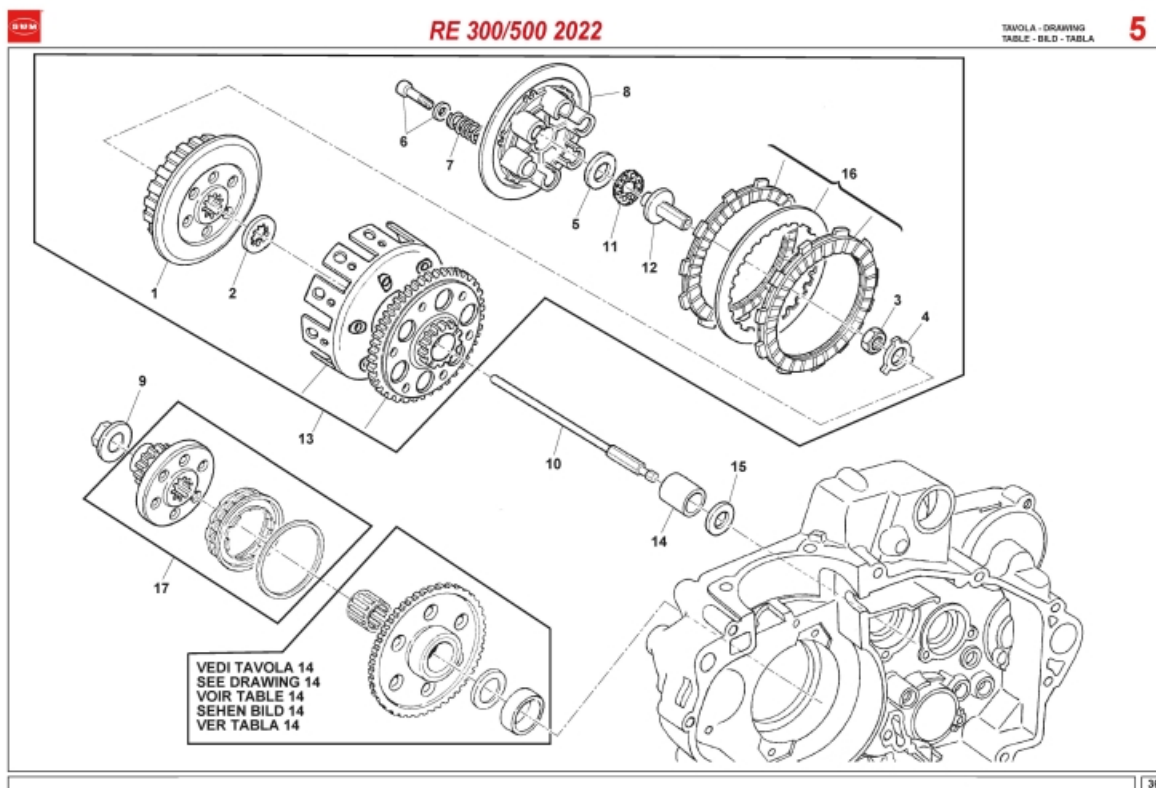

1	BOSS. CLUTCH PR7 - SWM/AJP 800085390 (u. 1)
2	WASHER 46X22X19 PR7 - SWM/AJP 800038350 (u. 1)
3	NUT M18X1 PR7 - SWM/AJP 800036856 (u. 1)
4	WASHER. LOCK 18MM PR7 - SWM/AJP 800036857 (u. 1)
5	WASHER. AXIAL BERING PR7 - SWM/AJP 800035781 (u. 1)
6	SCREW (M6X20) WITH WASHER (17.8) - SWM/AJP M000P00464 (u. 6)
7	CLUTCH SPRING PR7 - SWM/AJP 8000A0730 (u. 6)
8	DISC. CLUTCH PRESSURE PR7 - SWM/AJP 800048138 (u. 1)
9	SWM-FLANGE NUT Y00099933 (u. 1)
10	ROD PRESSURE SPR 310/510 - SWM/AJP 8A00B0497 (u. 1)
11	THRUST BEARING PR7 - SWM/AJP 800035780 (u. 1)
12	PIECE. CLUTCH PUSH PR7 - SWM/AJP 8000A9749 (u. 1)
13	SWM-CLUTCH ASSY 510 M000A00767 (u. 1) - RE 500
	SWM-DRIVE GEAR ASSEMBLY M000A00088 (u. 1) - RE 300

14	SWM-BUSHING FOR DRIVE GEAR 161538801 (u. 1)
15	THRUST WASHER 38X25.2 PR7 - SWM/AJP 8E0030053 (u. 1)
16	CLUTCH DISC SET PR7 + 310 +510 - SWM/AJP 8000A9764 (u. 1)
17	SWM-DRIVER GEAR WITH ONE WAY CLUTCH, ASSY : 8000A0709 M000A00900 (u. 1) - <i>RE 500</i>
	SPRING SIDE STAND OUTER - SWM/AJP M000A00899 (u. 1) - <i>RE 300</i>

 
VALVE TIMING

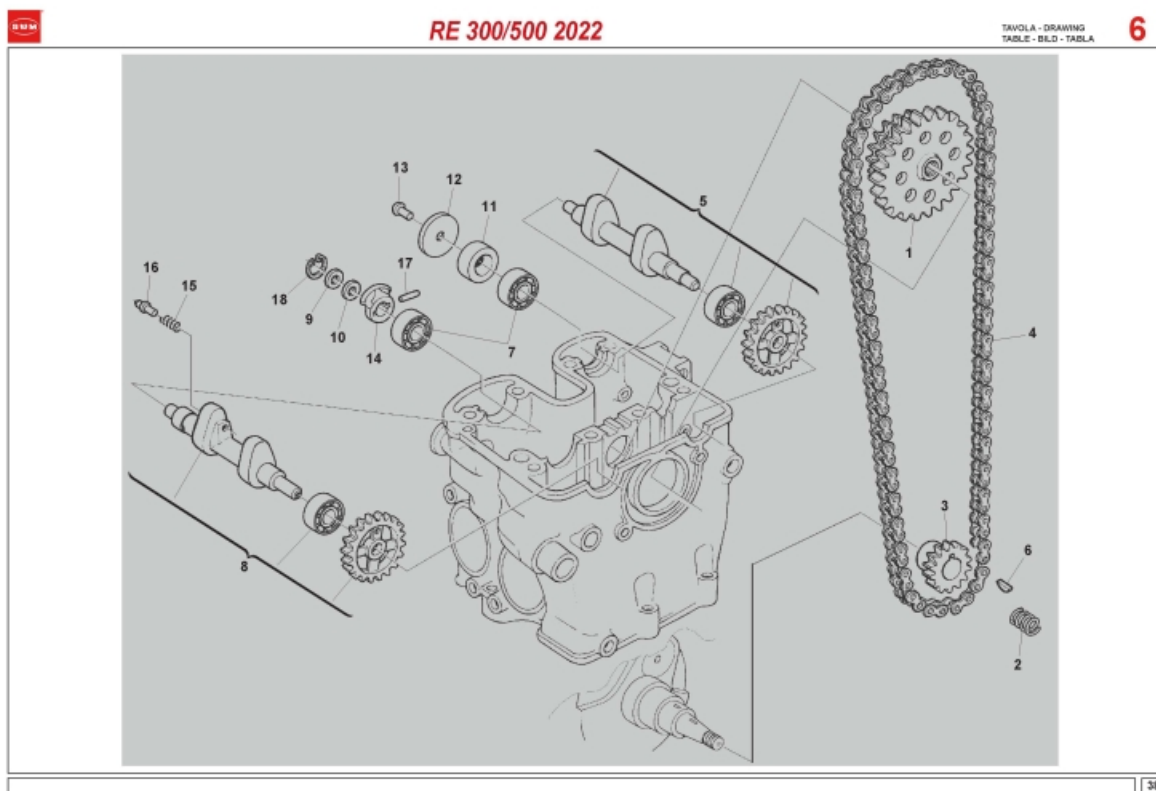

1	TIMMING GEAR 510CC - SWM/AJP 8000A4790 (u. 1) - RE 500
	TIMMING GEAR 310CC - SWM/AJP 8000A4791 (u. 1) - RE 300
2	SPRING 310/510CC - SWM/AJP 800061275 (u. 1)
3	TIMING GEAR T17 310CC AND 510CC - SWM/AJP 8C0063811 (u. 1)
4	TIMING CHAIN 510CC - SWM/AJP 8B0035794 (u. 1) - RE 500
	TIMING CHAIN 88 310CC - SWM/AJP 8F0035794 (u. 1) - RE 300
5	CAM SHAFT. INLET 310CC - SWM/AJP 8000A5592 (u. 1) - RE 300
	CAM SHAFT. INTAKE PR7/510 - SWM/AJP 8000A5595 (u. 1) - RE 500
6	KEY, WOODRUFF 310/510CC - SWM/AJP 161509801 (u. 1)
7	BEARING. BALL 12X28X8 PR7 - SWM/AJP 800034317 (u. 2)
8	CAM SHAFT. EXHAUST 310CC - SWM/AJP 800099694 (u. 1) - RE 300
	CAM SHAFT. EXHAUST PR7/510CC - SWM/AJP 8000A4953 (u. 1) - RE 500
9	WASHER. THRUST (16X19.2X0.8) PR7 - SWM/AJP 8A00H0597 (u. 1)
10	WASHER. THRUST (16X19.2X1) PR7 - SWM/AJP 8000H0597 (u. 1)

11	SPACER PR7 - SWM/AJP 8000A6271 (u. 1)
12	CENTRIFUGAL DISC PR7 - SWM/AJP 800099703 (u. 1)
13	SCREW TCEI M6X10 PR7 - SWM/AJP Z00055699 (u. 1)
14	WEIGHT. VALVE LIFTER 310 - SWM/AJP 8000A9450 (u. 1) - <i>RE 300</i>
	WEIGHT. VALVE LIFTER PR7 - SWM/AJP 8000A8994 (u. 1) - <i>RE 500</i>
15	SPRING PR7 - SWM/AJP 800099699 (u. 1)
16	SPACER PR7 - SWM/AJP 800099700 (u. 1)
17	ROLLER B (4X21.8) - SWM/AJP 800099701 (u. 1)
18	CIRCLIP 16 MM PR7 - SWM/AJP 66N021205 (u. 1)

 
LEFT HALF CRANKCASE

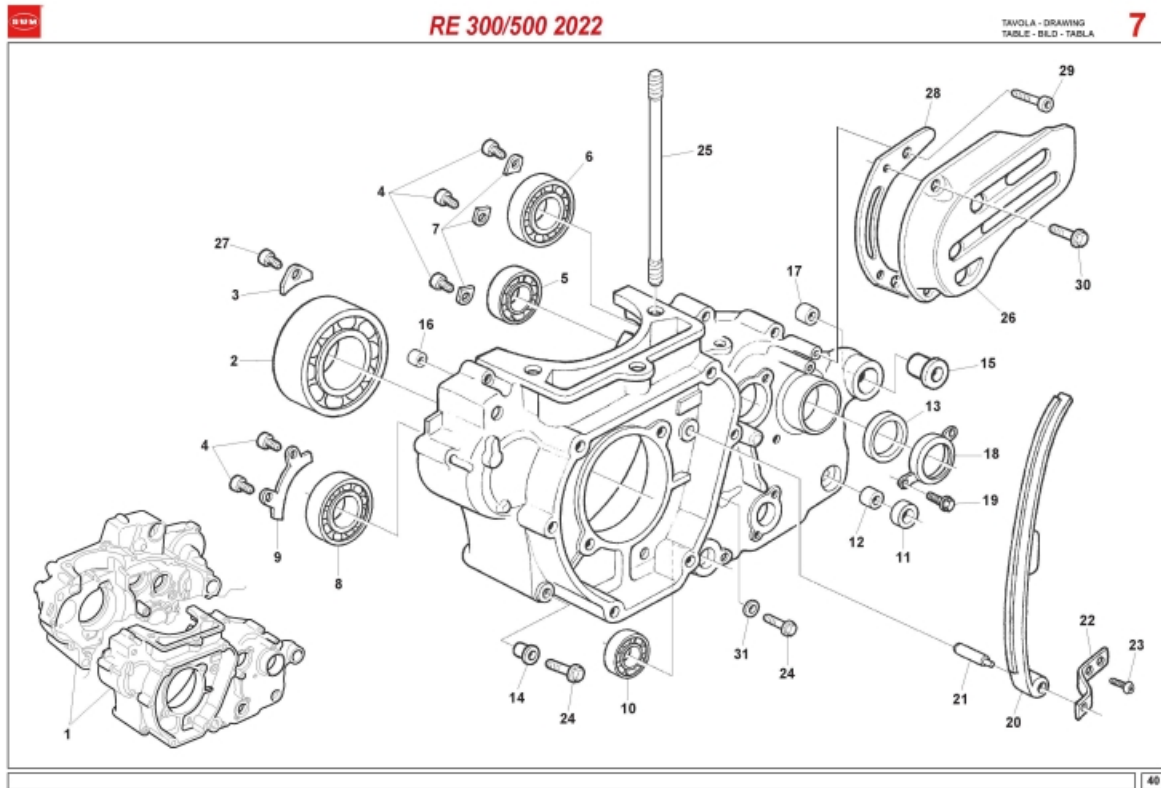

1	SWM-COUPLED BARE CRANKCASES 8A00A5665 (u. 1)
2	BALL BEARING (30X72X19 MM) SPR310/510 - SWM/AJP 800099846 (u. 1)
3	SWM-CRANKCASE BEARING PLATE RS 800097941 (u. 2)
4	SCREW (TCEI M6X1X14 CH5) SPR310/510 - SWM/AJP YA0055241 (u. 3)
5	SWM-BALL BEARING 17x40x12 800099847 (u. 1)
6	SWM-BALL BEARING 25x52x15 8A0043567 (u. 1)
7	RETAINER. BEARING PR7 - SWM/AJP 800051746 (u. 3)
8	BALL BEARING SPR310CC/510CC - SWM/AJP 8A0019768 (u. 1)
9	SWM-BEARING RETAINER 800091602 (u. 1)
10	SWM-BALL BEARING 25x37x7 800065884 (u. 1)
11	OIL SEAL 12X19X5 PR7 - SWM/AJP 800034451 (u. 1)
12	BUSH PR7 - SWM/AJP 8A0065847 (u. 1)
13	SEAL. OIL 32X40X5 PR7 - SWM/AJP 800059977 (u. 1)
14	SWM-FLANGE BUSHING 12.8x8.5x15 161077703 (u. 2)

15	SWM-CRANKCASE BUSHING 800073500 (u. 1)
16	BUSH. CRANKCASE FRONT (13X8.5X15) PR7 - SWM/AJP 161077601 (u. 1)
17	BUSH 22X17.5X15 PR7 - SWM/AJP 161459002 (u. 1)
18	SWM-OIL SEAL HOLDING PLATE RS 800099850 (u. 1)
19	SCREW TEF M5X0.8X12 CH8 PR7 - SWM/AJP Z00067997 (u. 2)
20	SWM-TENSIONER PLATE RS-300R 8000H0241 (u. 1) - <i>RE 300</i>
	CAM CHAIN TENSIONER SPR 510 - SWM/AJP 8000H0285 (u. 1) - <i>RE 500</i>
21	SWM-LH CRANKCASE PIN 800099704 (u. 1)
22	PLATE SPR 310/510 - SWM/AJP 800099705 (u. 1)
23	SWM-SCREW M4x0.7x8 Z00066774 (u. 2)
24	SWM-HEX FLANGE SCREW M6x1x45 Z00062731 (u. 12)
25	SWM-STUD BOLT L193 8D0081650 (u. 2) - <i>RE 500</i>
	SWM-STUD BOLT L165 8C0081650 (u. 2) - <i>RE 300</i>
26	SWM-PINION COVER 80A066973 (u. 1)
27	SCREW TSEI M6X1X14 DIN 7991 CH4 PR7 - SWM/AJP Y00028327 (u. 2)
28	CHAIN GUIDE PLATE SPR 310/510 - SWM/AJP 8000A0663 (u. 1)
29	SCREW (TCEI M6X1X14 CH5) SPR310/510 - SWM/AJP YA0055241 (u. 2)
30	SWM-TEF SCREW M6x1x10-CH8 Z00062725 (u. 2)
31	GASKET 10X6.2X1 PR7 - SWM/AJP 8A0015960 (u. 1)

 
RIGHT HALF CRANKCASE

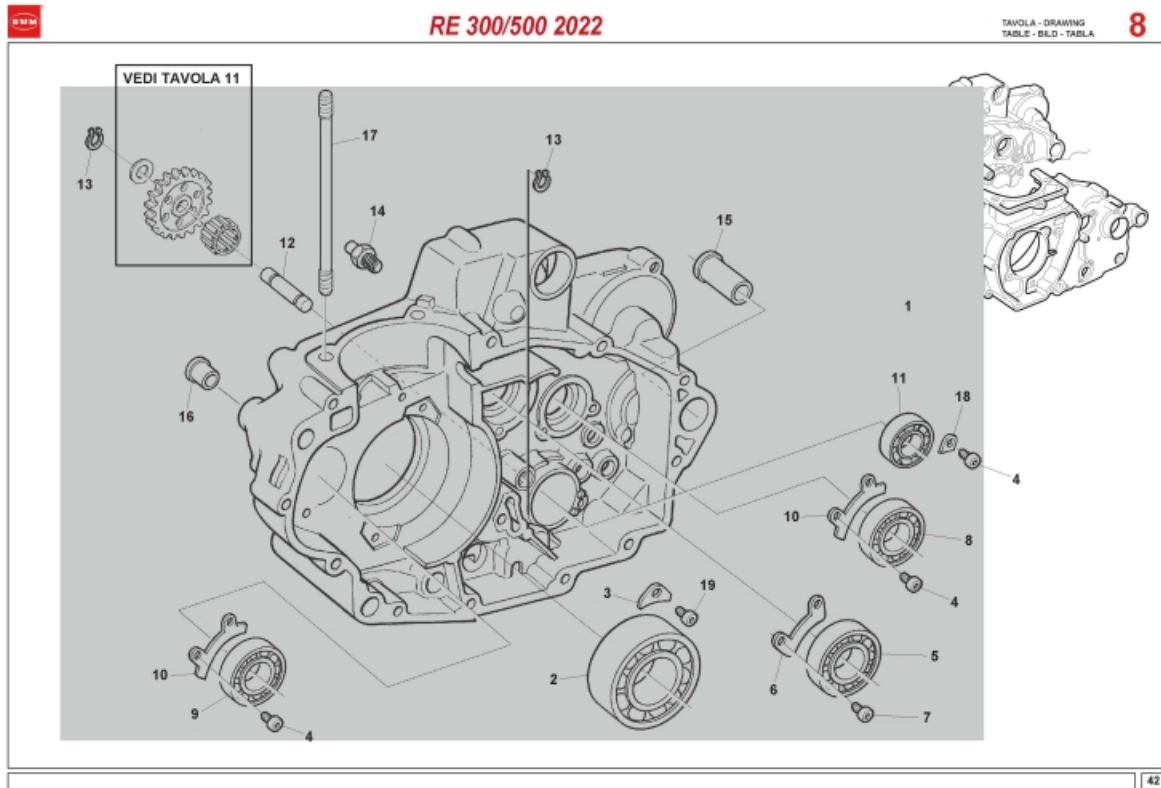

1	SWM-CRANKCASE ASSY RS 8A00A5671 (u. 1)
2	BALL BEARING (30X72X19 MM) SPR310/510 - SWM/AJP 800099846 (u. 1)
3	SWM-CRANKCASE BEARING PLATE RS 800097941 (u. 2)
4	SCREW (TCEI M6X1X14 CH5) SPR310/510 - SWM/AJP YA0055241 (u. 3)
5	SWM-BALL BEARING 25x52x15 8A0043567 (u. 1)
6	SWM-BEARING RETAINING PLATE 8A0042100 (u. 1)
7	SWM-TEF SCREW M6x1x10-CH5 YB0055241 (u. 2)
8	SWM-BALL BEARING 42x20x12 800017040 (u. 1)
9	BALL BEARING SPR310CC/510CC - SWM/AJP 8A0019768 (u. 1)
10	SWM-BEARING RETAINER 800091602 (u. 2)
11	BALL BEARING 25X42X9 PR7 - SWM/AJP 800085395 (u. 1)
12	SWM-PIN GEAR OIL PUMP 8000A5662 (u. 1)
13	SWM-CIRCLIP E-TYPE 18.5x9x1.1 mm DIN6799 66N021312 (u. 2)
14	SWM-SELECTOR LOCK PIN RS M000P00686 (u. 1)

15	SWM-CRANKCASE BUSHING 800073500 (u. 1)
16	SWM-FLANGE BUSHING 12.8x8.5x15 161077703 (u. 2)
17	SWM-STUD BOLT L193 8D0081650 (u. 2) - RE 500
	SWM-STUD BOLT L165 8C0081650 (u. 2) - RE 300
18	RETAINER. BEARING PR7 - SWM/AJP 800051746 (u. 1)
19	SCREW TSEI M6X1X14 DIN 7991 CH4 PR7 - SWM/AJP Y00028327 (u. 2)

 
RIGHT HALF CRANKCASE COVER

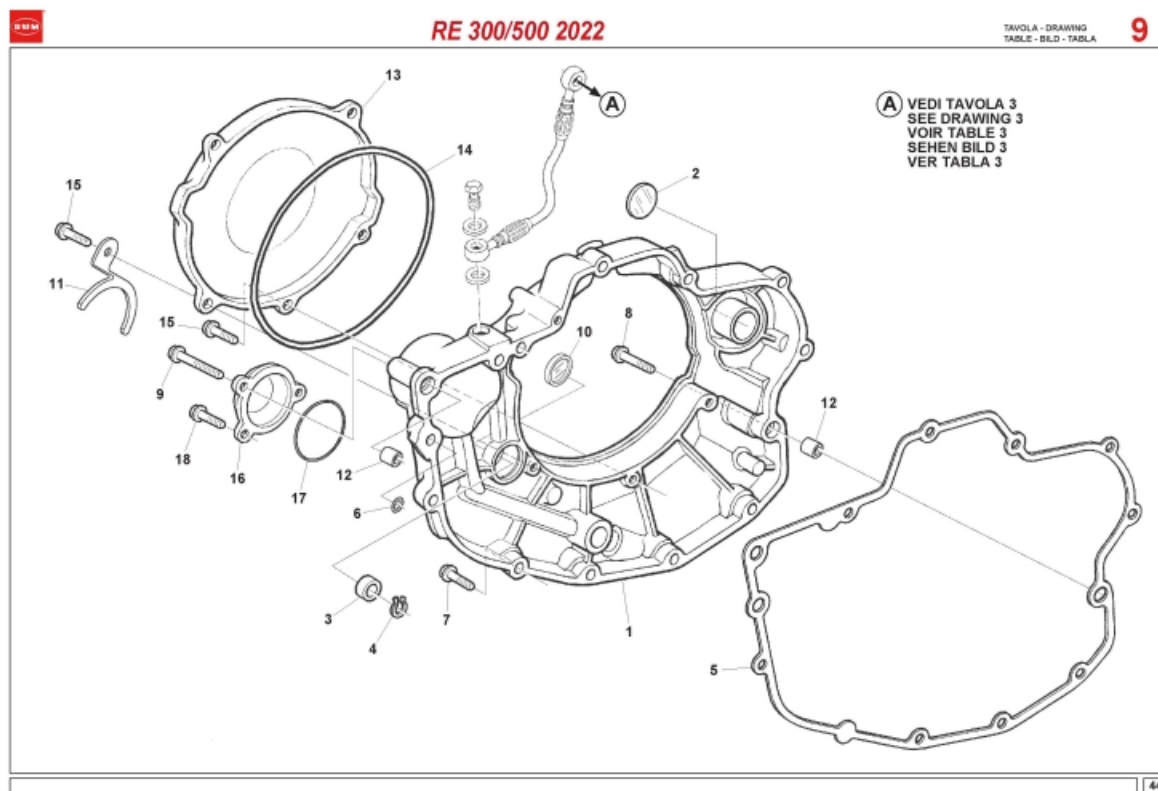

1	SWM-RH COVER PAINTED 80B0B0388 (u. 1)
2	SWM-SEALING PLUG 8000A0765 (u. 1)
3	SWM-OIL SEAL RING 8A0028855 (u. 1)
4	SWM-CIRCLIP 23.5x22x1 66N021258 (u. 1)
5	GASKET. CLUTCH COVER SPR310/510CC - SWM/AJP 8000A5906 (u. 1)
6	O-RING 108 (6.02X2.62) - SWM/AJP 800099855 (u. 1)
7	SCREW TEF M6X1X25 CH8 PR7 - SWM/AJP Z00062729 (u. 10)
8	SCREW TEF M6X1X45 PR7 - SWM/AJP ZA0067545 (u. 1)
9	SWM-HEX FLANGE SCREW M6x1x80-CH8 ZF0067545 (u. 1)
10	WINDOW. OIL LEVEL CHECK PR7 - SWM/AJP 800073529 (u. 1)
11	SWM-PORT RETENTION PLATE 8000B1507 (u. 1)
12	SWM-CENTERING BUSH 10x7.2x16 RS/SD 800007719 (u. 2)
13	SWM-CLUTCH COVER M0A0P00095 (u. 1)
14	SWM-O-RING 165x2.62 800086878 (u. 1)


15	SCREW TE M6X1X30 CH8 PR7 - SWM/AJP Z00062730 (u. 5)
16	SWM-OIL FILTER COVER, PAINTED 80B091551 (u. 1)
17	O-RING 2.62X50.47 PR7 - SWM/AJP 8A0028553 (u. 1)
18	SCREW TEF M6X1X20 CH8 PR7 - SWM/AJP Z00062728 (u. 2)

 LEFT HALF CRANKCASE COVER

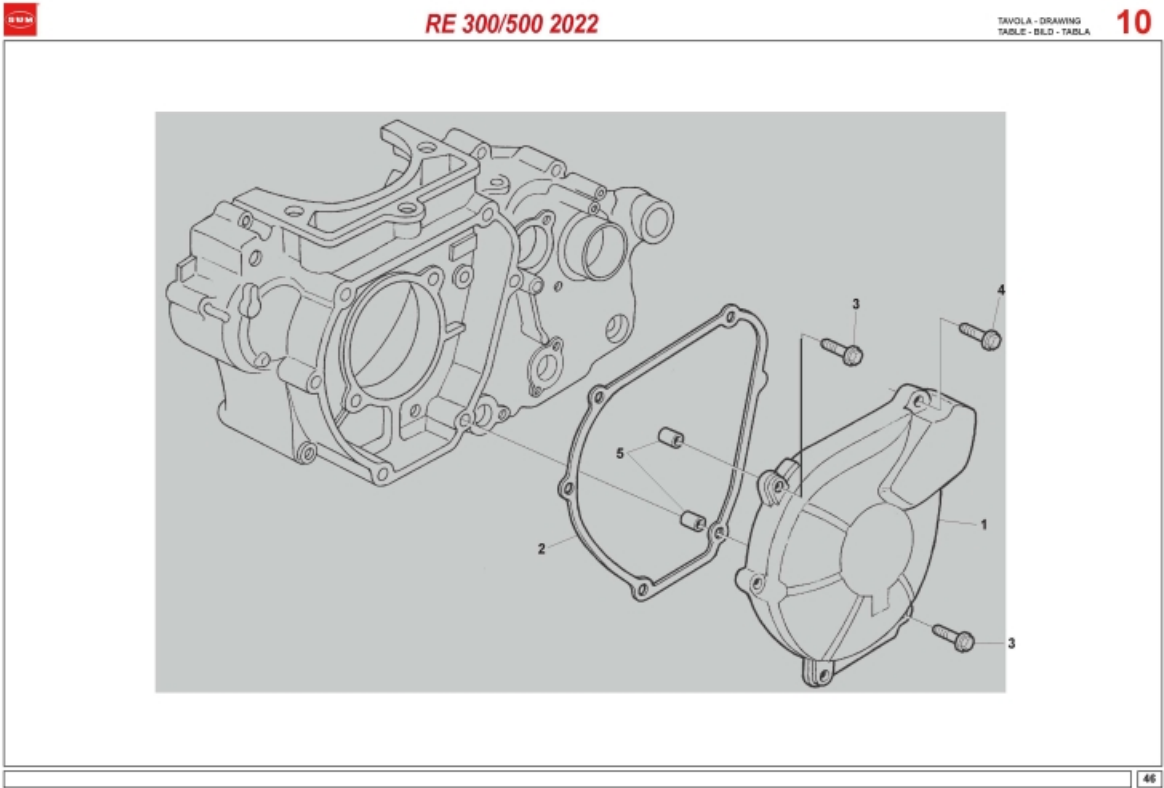

- | | |
|---|--|
| 1 | SWM-IGNITION COVER
M0A0P00090 (u. 1) |
| 2 | GASKET. GENERATOR COVER SPR310/510CC - SWM/AJP
800099856 (u. 1) |
| 3 | SCREW TEF M6X1X45 PR7 - SWM/AJP
ZA0067545 (u. 2) |
| 4 | SCREW TEF M6X1X25 CH8 PR7 - SWM/AJP
Z00062729 (u. 4) |
| 5 | SWM-CENTERING BUSH 10x7.2x16 RS/SD
800007719 (u. 2) |

 
LUBRICATION

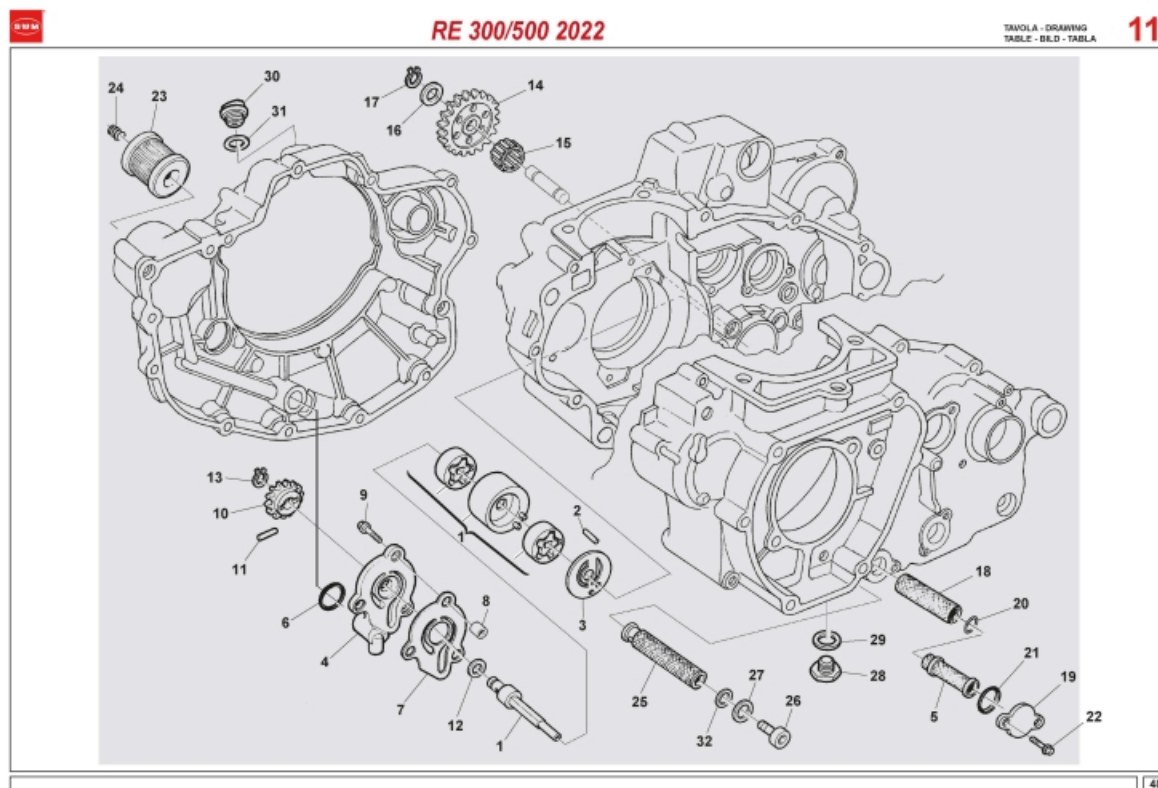

- | | |
|----|---|
| 1 | OIL PUMP ASSY WITH ROTORS 310 /510CC AND PR7 - SWM/AJP
M000A03431 (u. 1) |
| 2 | ROLLER PR7 - SWM/AJP
8A0047773 (u. 2) |
| 3 | SPACER. OIL PUMP ROTOR - SWM/AJP
800099861 (u. 1) |
| 4 | SWM-COVER AND VALVE ASSY
8000H0243 (u. 1) |
| 5 | Filter, Oil, Inner, PR7, SWM/AJP - SWM/AJP
800072427 (u. 1) |
| 6 | SWM-O RING 2.62x13.95 (NBR)
800025082 (u. 1) |
| 7 | SWM-PUMP MIDDLE COVER
800099862 (u. 1) |
| 8 | SWM-BUSHING 8x6.4x10
161795502 (u. 2) |
| 9 | SCREW TEF M6X1X20 CH8 PR7 - SWM/AJP
Z00062728 (u. 3) |
| 10 | SWM-OIL PUMP DRIVEN GEAR
800099863 (u. 1) |
| 11 | SWM-DRIVE ROLLER 3x15.8
800047773 (u. 1) |
| 12 | SWM-WASHER 14x8.2
8E0034292 (u. 1) |
| 13 | SWM-CIRCLIP 8mm DIN 471
800021375 (u. 1) |
| 14 | SWM-OIL PUMP IDLE GEAR
800099864 (u. 1) |


15	SWM-ROLLER BEARING 800033718 (u. 1)
16	SWM-WASHER 19x12x0.3 8A0001261 (u. 1)
17	SWM-CIRCLIP 12mm 66N021202 (u. 1)
18	Filter, Oil, Outer, PR7, SWM/AJP - SWM/AJP 800072426 (u. 1)
19	COVER. OIL ELEMENT PR7 - SWM/AJP 800072425 (u. 1)
20	O-RING 3062 15.54X2.62 PR7 - SWM/AJP 800026884 (u. 1)
21	O-RING 3087 T2,62-D22,00 (GACO P5) - SWM/AJP 800034609 (u. 1)
22	SCREW TEF M5X0.8X12 CH8 PR7 - SWM/AJP Z00067997 (u. 2)
23	OIL FILTER PR7 + SPR510 + SPR310 - SWM/AJP 8000B0593 (u. 1)
24	SWM-OIL FILTER SPRING RS 800099866 (u. 1)
25	OIL FILTER SPR310CC - SWM/AJP MA00P03544 (u. 1)
26	PLUG DIN 908 M14X1.5 PR7 - SWM/AJP 800099711 (u. 1)
27	WASHER. ALUMINIUM 21X14.3X1.2 PR7 - SWM/AJP 62N015678 (u. 1)
28	PLUG. OIL DRAIN SPR 310-510 - SWM/AJP 800073011 (u. 1)
29	WASHER. ALUMINIUM (24X16.3X1.15) SPR 310 + 510CC - SWM/AJP 62N015679 (u. 1)
30	CAP. OIL FILLER SPR 310-510 - SWM/AJP 800036786 (u. 1)
31	SWM-O RING 800029171 (u. 1)
32	O-RING (8.73X1.78) - SWM/AJP 800023107 (u. 1)

 THROTTLE BODY

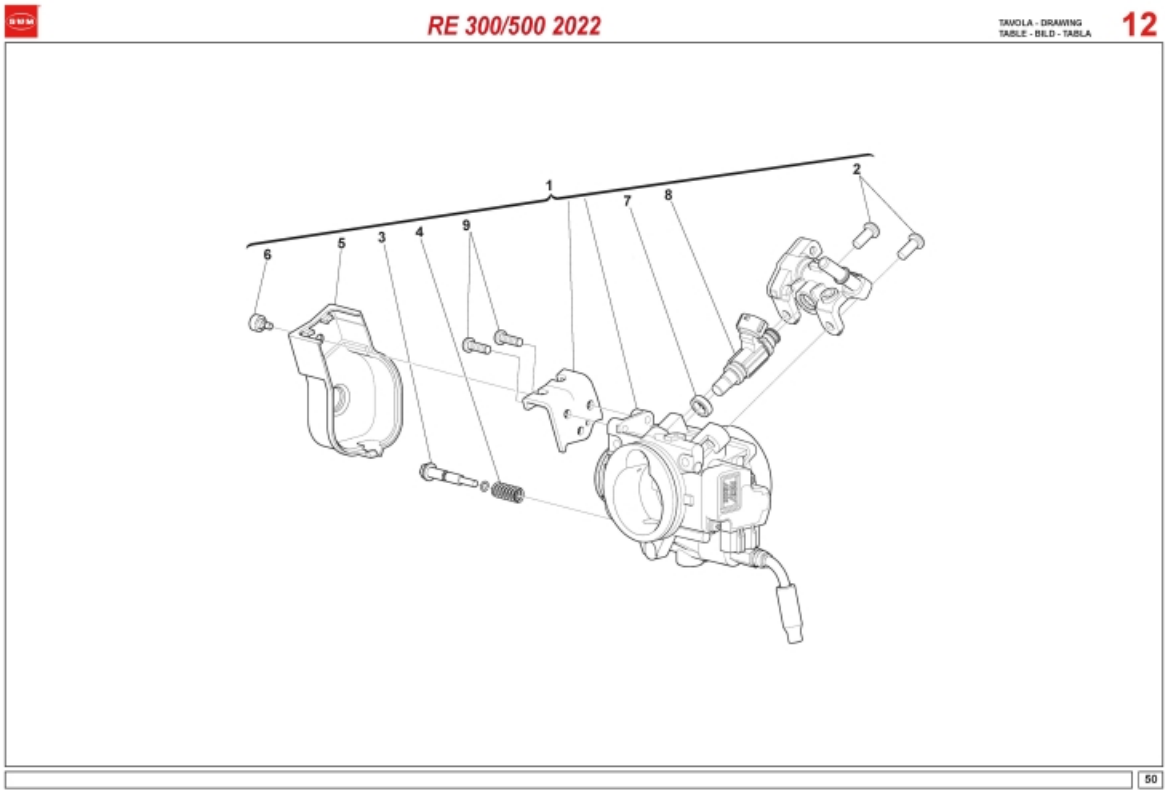

1	SWM-THROTTLE BODY 8000A6758 (u. 1)
2	SWM-THROTTLE BODY SCREW 8000A9258 (u. 1)
3	SWM-ADJUST SCREW 8000B1449 (u. 1)
4	SWM-THROTTLE BODY SPRING 8000B1450 (u. 1)
5	SWM-COVER 8000A9261 (u. 1)
6	SWM-GENERATOR SCREW 8000A9262 (u. 1)
7	SWM-THROTTLE BODY INJECTOR GASKET 8000A9263 (u. 1)
8	SWM-FUEL INJECTOR RS 8000A9264 (u. 1)
9	SWM-FIXED SCREW GAS CABLE PLATE 8000A9699 (u. 2)

 
IGNITION SYSTEM

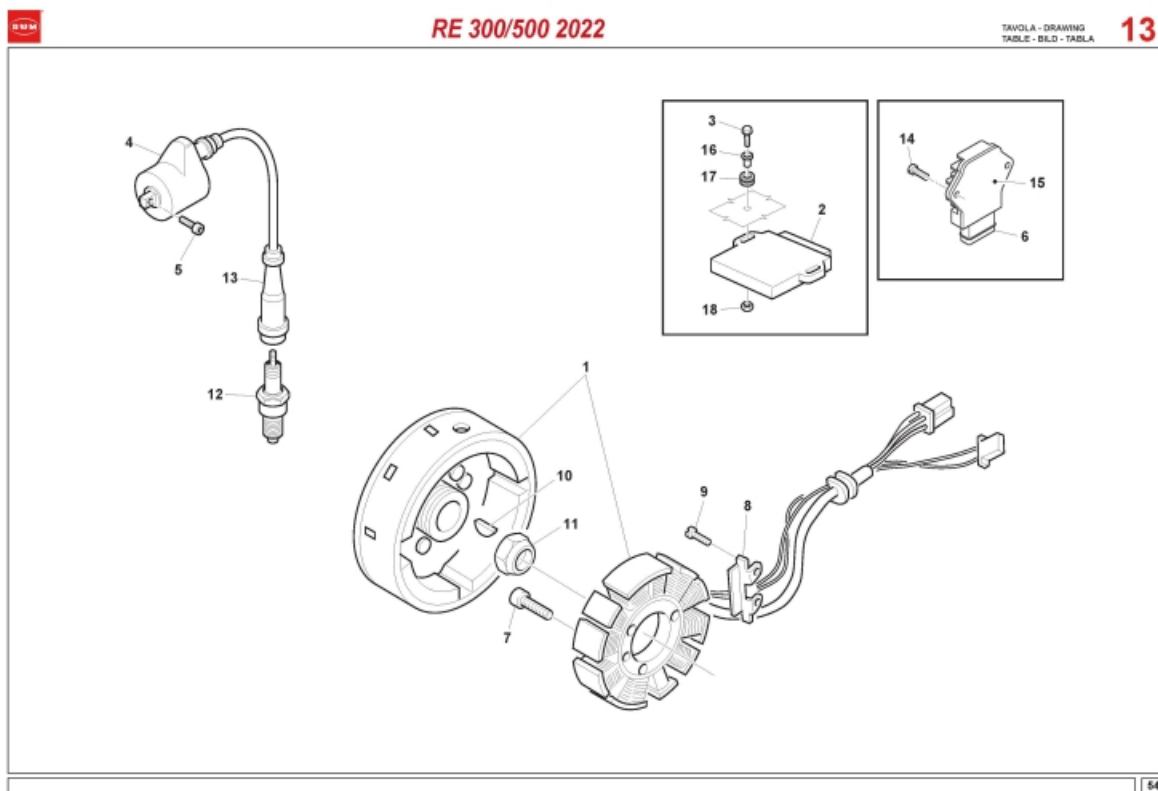

1	SWM-GENERATOR ASSY 8000A6737 (u. 1)
2	SWM-ECU E000P00814 (u. 1)
3	SCREW TEF M6X1X25 CH8 PR7 - SWM/AJP Z00062729 (u. 2)
4	SWM-COIL ASSY 8000H0277 (u. 1)
5	SCREW TEF M6X1X20 CH8 PR7 - SWM/AJP Z00062728 (u. 2)
6	RECTIFIER SPR310+ 510CC SWM - SWM/AJP 8000B0563 (u. 1)
7	SWM-SCREW M5x0.8x25 60ND02488 (u. 3)
8	CLAMP. WIRE SPR 310/510 - SWM/AJP 800099868 (u. 1)
9	SWM-HEX FLANGE SCREW M5x0.8x16-CH8 ZA0067997 (u. 2)
10	SWM-CRANKSHAFT KEY RS/SD 151371301 (u. 1)
11	SWM-FLANGE NUT M12x1 8000A0033 (u. 1)
12	SPARK PLUG CR8EB PR7 - SWM/AJP 8000A0573 (u. 1)
13	CAP. SPARK PLUG PR7 - SWM/AJP 8000A6740 (u. 1)
14	SCREW TEF M6X1X20 CH8 PR7 - SWM/AJP Z00062728 (u. 2)

15	SWM-HEAT DISSIPATION PLATE 8000B1061 (u. 1)
16	SWM-THREAD CONTROL UNIT SPACER F000P01527 (u. 2)
17	SWM-PASSENGER HANDLE SILENTBLOCK 800041862 (u. 2)
18	SWM-SELF LOCKING FLANGE NUT M6x1x7-CH10 Z00044240 (u. 2)

 
STARTER

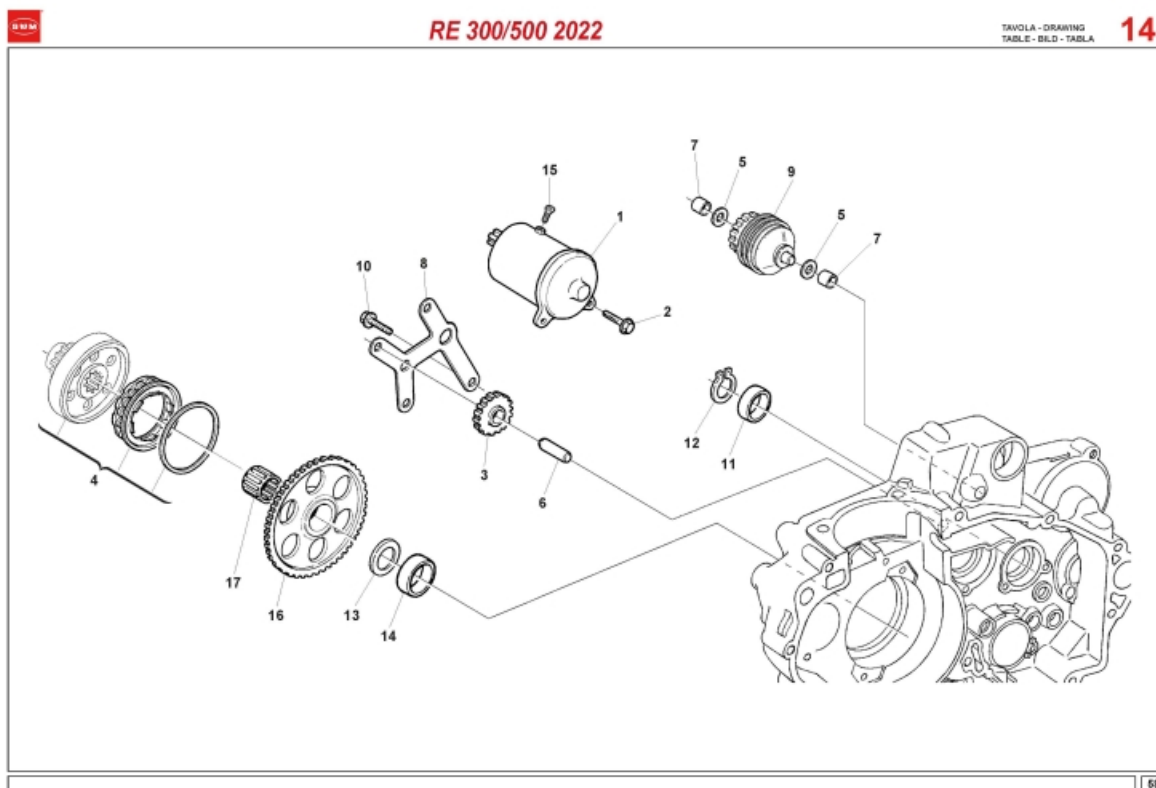

1	STARTING MOTOR SPR310 E 510CC - SWM/AJP 8000B1373 (u. 1)
2	SCREW TEF M6X1X25 CH8 PR7 - SWM/AJP Z00062729 (u. 2)
3	SWM-IDLE GEAR 800099958 (u. 1)
4	SPRING SIDE STAND OUTER - SWM/AJP M000A00899 (u. 1) - RE 300 SWM-DRIVER GEAR WITH ONE WAY CLUTCH, ASSY : 8000A0709 M000A00900 (u. 1) - RE 500
5	SWM-WASHER 18x10x0.5 800005876 (u. 2)
6	SWM-PIN REDUCTION GEAR 800099960 (u. 1)
7	BUSH PR7 - SWM/AJP 8000A1017 (u. 2)
8	SWM-PLATE ASSY 8000A1022 (u. 1)
9	SWM-STARTER CLUTCH ASSY RS 8000A1279 (u. 1)
10	SWM-HEX FLANGE SCREW M6x1x16-CH8 Z00062727 (u. 4)
11	SWM-STARTING SPACER 8000A0746 (u. 1)
12	SWM-CIRCLIP 28x16.5 mm 66N021208 (u. 1)
13	SWM-THRUST WASHER H=1.5 M000P00258 (u. 1)

14	SWM-RING GEAR SPACER 800099957 (u. 1)
15	SWM-HEX FLANGE SCREW M5x0.8x6.5-CH8 ZF0067997 (u. 1)
16	RING GEAR T70 - SWM/AJP 8000A0739 (u. 1)
17	SWM-NEEDLE BEARING 28x33x17 800035763 (u. 1)

 TRANSMISSION SHIFTER

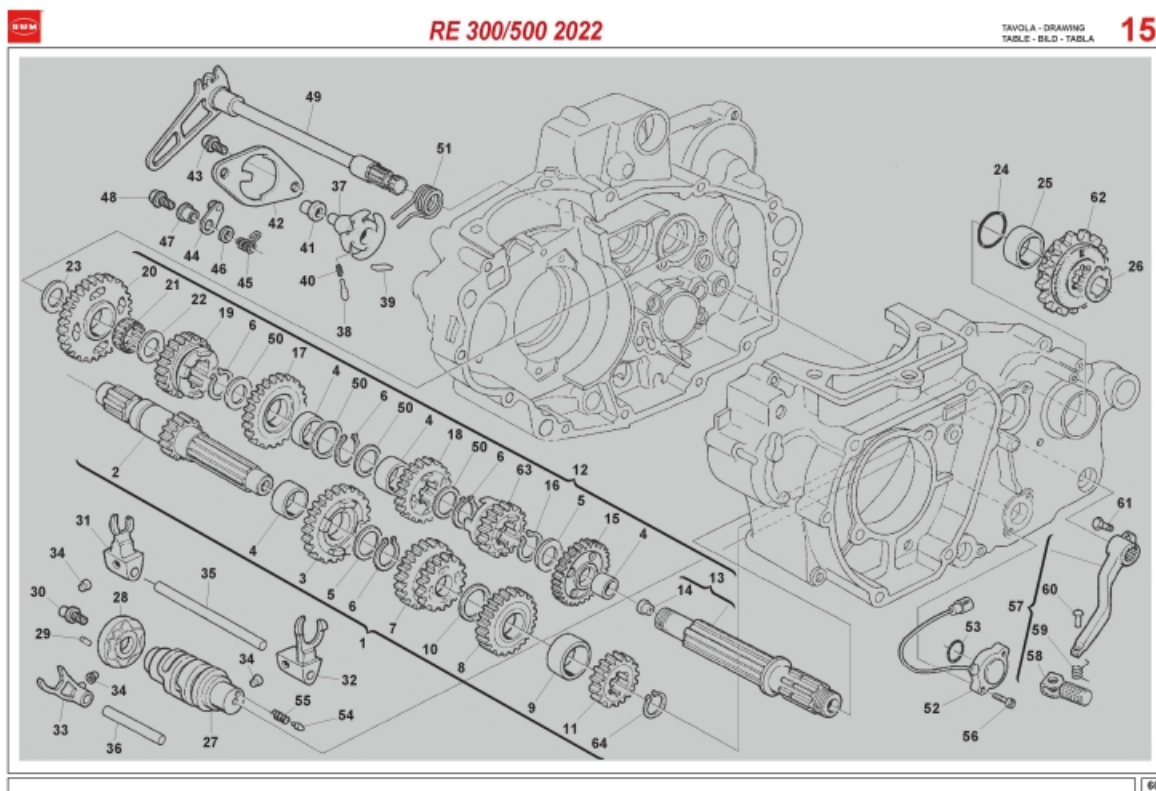


- | | |
|----|---|
| 1 | MAIN SHAFT ASSY SPR 310/510 : 8000A3972 - SWM/AJP
8000A3511 (u. 1) |
| 2 | SWM-MAIN SHAFT 14T RS
8000A3512 (u. 1) |
| 3 | SWM-5TH GEAR 25T RS
800088244 (u. 1) |
| 4 | BUSH 28X25X7 PR7 - SWM/AJP
800063822 (u. 5) |
| 5 | THRUST WASHER (32X25.1X0.5 MM) - SWM/AJP
8D0036022 (u. 2) |
| 6 | CIRCLIP (23.2X1.2 MM) SPR 310/510 - SWM/AJP
800031772 (u. 4) |
| 7 | AJP-GEAR DRIVE 3A-4A 18/23TSPR 310/510
8000A3972 (u. 1) |
| 8 | MAIN SHAFT ASSY SPR 310/510 : 8000A3972 - SWM/AJP
8000A3511 (u. 1) |
| 9 | SWM-BUSHING 25x22
8A0061261 (u. 1) |
| 10 | SWM-TRANSMISSION THRUST WASHER RS
8B0036023 (u. 1) |
| 11 | SWM-2ND GEAR 18T RS
800088247 (u. 1) |
| 12 | SWM-SECONDARY SHAFT ASSY RS
M000A00808 (u. 1) |
| 13 | SWM-SECONDARY SHAFT WITH CUP
M000A00809 (u. 1) |
| 14 | SWM-STABLE PLUG 12x6x10
800057196 (u. 1) |

15	SWM-2ND GEAR 29T RS 8000A1918 (u. 1)
16	CIRCLIP 25MM DIN471 PR7 + SPR310CC/510CC - SWM/AJP 66N021211 (u. 3)
17	DRIVEN GEAR 4TH SPEED 25T SPR 310-510 - SWM/AJP 800088254 (u. 1)
18	SWM-3RD GEAR 8000A3970 (u. 1)
19	SWM-5TH GEAR 23T RS 8000A1920 (u. 1)
20	SWM-1ST GEAR 28T RS 8000A1921 (u. 1)
21	SWM-NEEDLE BEARING 20x24x10 800022373 (u. 1)
22	SWM-WASHER 28x20x1 8G0007989 (u. 1)
23	SWM-WASHER 28x20x1 8G0007989 (u. 1)
24	O-RING (21.95X1.78) - SWM/AJP 800041693 (u. 1)
25	SWM-CHAIN SPROCKET SPACER 800086953 (u. 1)
26	CIRCLIP 25MM DIN471 PR7 + SPR310CC/510CC - SWM/AJP 66N021211 (u. 1)
27	SWM-GEAR SHIFT CONTROL SHAFT RS 8000H0246 (u. 1)
28	CAM-CHANGE DRUM PR7 - SWM/AJP 8A0097739 (u. 1)
29	ROLLER 4X8 PR7 - SWM/AJP 800038520 (u. 1)
30	SWM-SELECTOR DRUM FIXING SCREW 800098149 (u. 1)
31	GEAR SHIFT FORK 1ST-4RD SPR 310/510 - SWM/AJP 8A0086980 (u. 1)
32	GEAR SHIFT FORK 2ND-3RD SPR 310/510 - SWM/AJP 8A0048127 (u. 1)
33	SWM-FORK 5TH, 6TH 800099738 (u. 1)
34	SWM-SPROCKET ROLLER 800071010 (u. 3)
35	SWM-PIN FORK 1ST, 4TH AND 2ND, 3RD 800038711 (u. 1)
36	SWM-PIN FORK 5TH, 6TH 800038712 (u. 1)
37	GEAR SHIFT CAM ASSY 310/510 - SWM/AJP 8000H0247 (u. 1)
38	SWM-SPROCKET PAWL RS 8000A7515 (u. 2)
39	PUSH ROD PR7 - SWM/AJP 800071008 (u. 2)
40	SPRING PR7 - SWM/AJP 800071009 (u. 2)
41	SWM-SPROCKET ROLLER 800071010 (u. 1)
42	SWM-RATCHET LOCK PLATE 8000A7514 (u. 1)

43	SWM-SCREW M6x1x14-CH8 Z00062726 (u. 2)
44	SWM-CLICK ASSY RS 800085495 (u. 1)
45	SWM-SPRING CLICK ASSY 8000A1748 (u. 1)
46	SWM-THRUST WASHER 6.2x20 800086107 (u. 1)
47	SWM-TRANSMISSION SHIFTER BUSHING 800085493 (u. 1)
48	SWM-SCREW M6x1x14-CH8 Z00062726 (u. 1)
49	SWM-SELECTOR ARM, ASSY M000A00919 (u. 1)
50	THRUST WASHER - SWM/AJP 800088255 (u. 4)
51	SWM-SHIFT RETURN SPRING RS 8A00A7329 (u. 1)
52	SWM-GEAR SENSOR E000P01112 (u. 1)
53	O-RING 2093 23.52X1.78 MM PR7 - SWM/AJP 8A0042700 (u. 1)
54	POINT. NEUTRAL PR7 - SWM/AJP 800042676 (u. 1)
55	SPRING PR7 - SWM/AJP 800042677 (u. 1)
56	SCREW TEF M5X0.8X12 CH8 PR7 - SWM/AJP Z00067997 (u. 2)
57	GEARSHIFT CONTROL LEVER ASSY 310CC + 510CC - SWM/AJP 8000A3488 (u. 1)
58	SWM-GEARSHIFT CONTROL LEVER PIN 8A00A3485 (u. 1)
59	SWM-GEARSHIFT CONTROL LEVER SPRING 800070216 (u. 1)
60	SWM-RIVET 6X22 (UNI 748) 800099744 (u. 1)
61	SCREW TEF M6X1X20 CH8 PR7 - SWM/AJP Z00062728 (u. 1)
62	DRIVE SPROCKET. CHAIN T13 SPR310CC/510 - SWM/AJP M000P00806 (u. 1)
63	SWM-SECONDARY SHAFT ASSY RS M000A00808 (u. 1)
64	SWM-CIRCLIP D25 D15.7 SP1 66N021206 (u. 1)

 COOLING SYSTEM

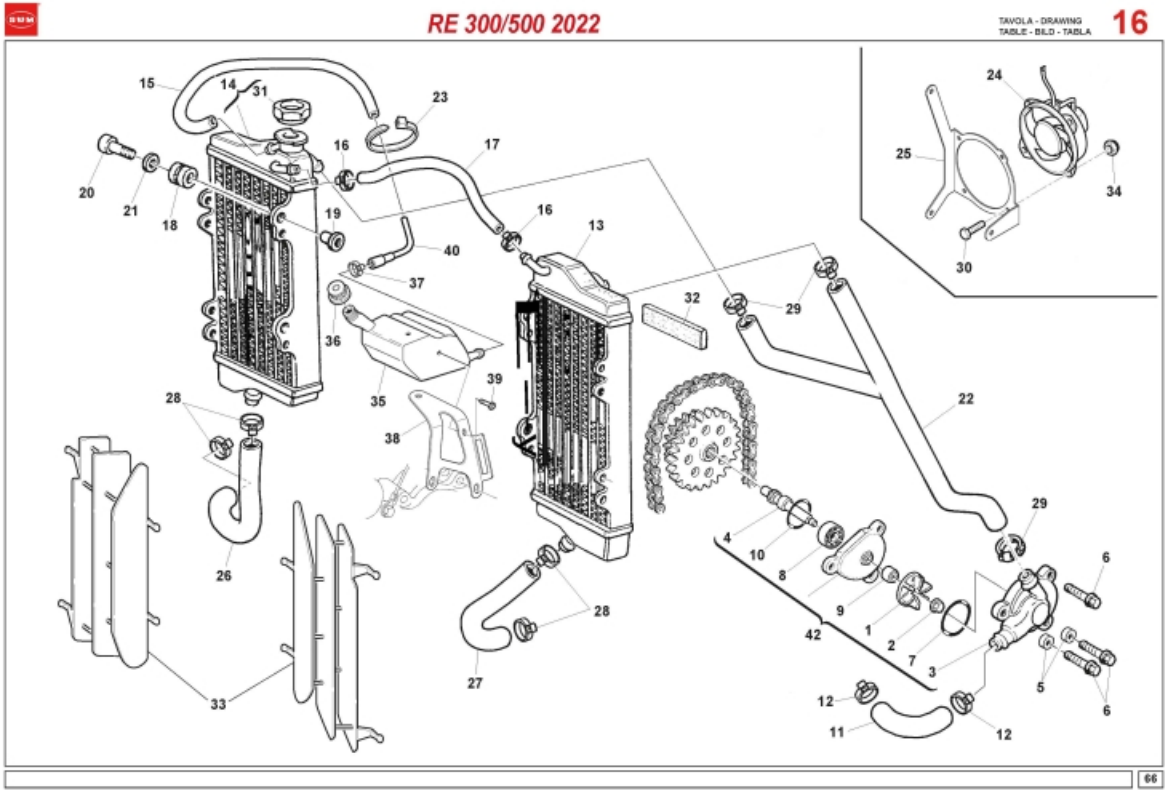


1	OBSOLETE - M000A01955 SWM- IMPELLER M000P01959 (u. 1)	OBSOLETE
2	SWM-NUT M5x0.8x6-CH8 Z00056443 (u. 1)	
3	SWM-PUMP BODY 8000H1958 (u. 1)	
4	WATER PUMP ASSEMBLY WITHOUT GASKET: M000P01959 - SWM/AJP M000A01955 (u. 1)	
5	BUSH 8X6.4X6 PR7 - SWM/AJP 161795501 (u. 2)	
6	SCREW TE M6X1X30 CH8 PR7 - SWM/AJP Z00062730 (u. 3)	
7	GASKET CAP PR7 - SWM/AJP 800027122 (u. 1)	
8	BEARING. BALL 12X28X8 PR7 - SWM/AJP 800034317 (u. 1)	
9	SEAL WATER PUMP PR7 - SWM/AJP 800053339 (u. 1)	
10	O-RING PR7 - SWM/AJP 800040007 (u. 1)	
11	SWM-HOSE PUMP HEAD 800099708 (u. 1) - RE 300 HOSE. WATER PUMP PR7 - SWM/AJP 8A0099708 (u. 1) - RE 500	
12	CLAMP. HOSE PR7 - SWM/AJP 8B0099475 (u. 2)	
13	SWM-LH RADIATOR F000P00022 (u. 1)	

14	SWM-RH RADIATOR F000P00023 (u. 1)
15	SWM-RADIATOR TO EXPANSION TANK PIPE RS 8000A1281 (u. 1)
16	SWM-CLAMP CLIC CLST 130 8000H1981 (u. 2)
17	SWM-RADIATOR PIPE L140 8000H1298 (u. 1)
18	SWM-RADIATOR MOUNTING SILENTBLOCK F000P00025 (u. 6)
19	SWM-COOLING SYSTEM BUSHING 800059802 (u. 6)
20	SCREW TEF M6X1X25 CH8 PR7 - SWM/AJP Z00062729 (u. 6)
21	SWM-WASHER 22x6.5x1 Z00059801 (u. 6)
22	SWM-RADIATOR HOSE RS-300R 8000H1410 (u. 1) - <i>RE 300</i>
	SWM-RADIATOR HOSE RS-500R 8000H1370 (u. 1) - <i>RE 500</i>
23	SWM-CABLE TIE L188 800056444 (u. 1)
24	SWM-AXIAL FAN VA32 8000A7715 (u. 1)
25	SWM-FAN HOLDER RS F000P00685 (u. 1)
26	SWM-RH RADIATOR LOWER HOSE F000P00117 (u. 1)
27	SWM-LH RADIATOR LOWER HOSE F000P00116 (u. 1)
28	SWM-CLAMP HOP8-12/22 8A0099475 (u. 4)
29	CLAMP. HOSE PR7 - SWM/AJP 8B0099475 (u. 3)
30	SWM-SCREW M4x0.7x25 60ND01030 (u. 4)
31	SWM-RADIATOR CAP SD F000P00717 (u. 1)
32	SWM-ELASTIC SHIM 800037140 (u. 1)
33	SWM-RADIATOR GRID 80A0A0872 (u. 2)
34	SWM-NUT M4x0.7x6-CH7 Z00040717 (u. 4)
35	EXPANSION TANK SPR E PR7 - SWM/AJP 8000B0612 (u. 1)
36	PLUG FOR EXPANSION TANK SPR AND PR7 - SWM/AJP 800040427 (u. 1)
37	SWM-HOSE CLAMP STAINLESS STEEL D12 8D0091687 (u. 1)
38	SWM-WATER RESERVOIR TANK PLATE 8000B0611 (u. 1)
39	SCREW TEF M5X0.8X8 CH8 PR7 - SWM/AJP ZD0067997 (u. 2)
40	SWM-RADIATOR TO EXPANSION TANK PIPE RS 8000A1281 (u. 1)

41	OBSOLETE - M000A01955 SWM- IMPELLER M000P01959 (u. 1)	OBSOLETE
----	--	----------

 AIR FILTER

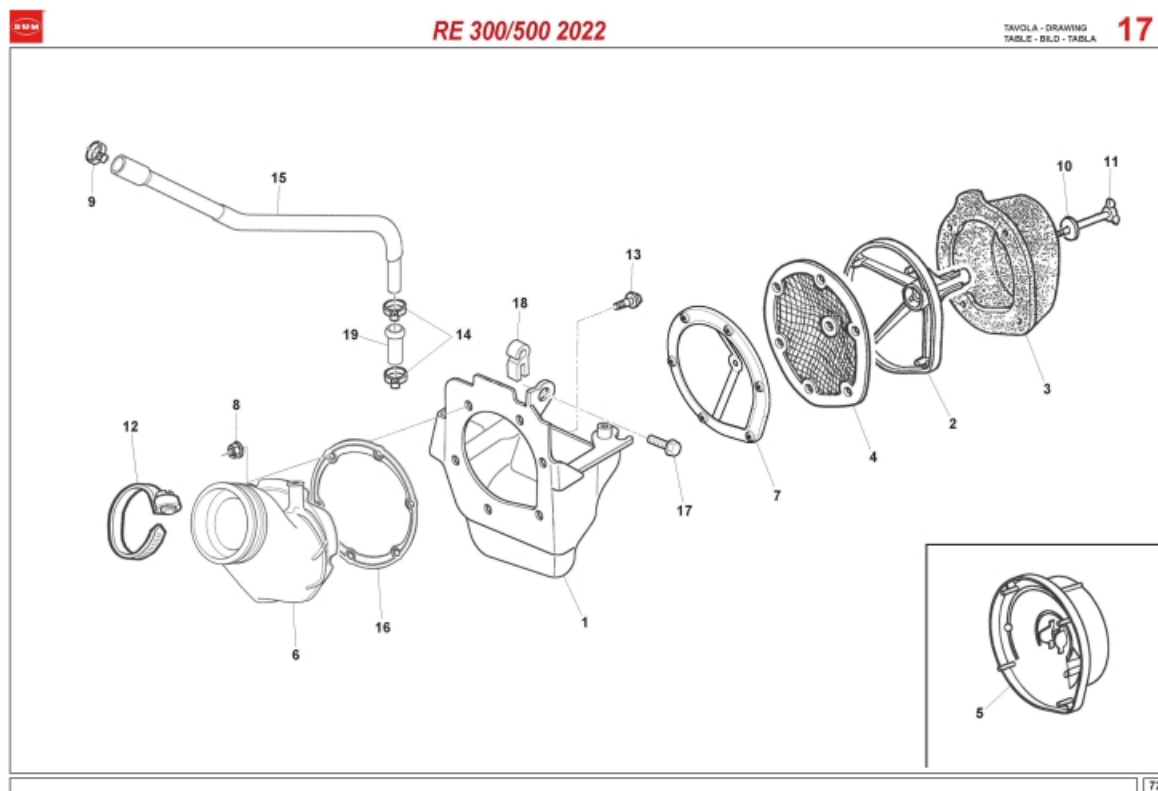

1	SWM-AIRBOX COMPLETE 8000H0054 (u. 1)
2	SWM-AIR FILTER SUPPORT RS 800069549 (u. 1)
3	FWF - ProLine Filter, SWM, 16-Up 90-00485 (u. 1) SWM-AIR FILTER RS 800072641 (u. 1)
4	SWM-FIRE WALL 8000A0656 (u. 1)
5	SWM-AIR FILTER SUPPORT RS (OPT) 8000H0805 (u. 1)
6	SWM-AIRBOX CONNECTION RS 8000B0248 (u. 1)
7	SWM-FIX FILTER GLANGE FITTING 8000H3013 (u. 1)
8	SWM-NUT M5x0.8x7-CH8 Z00040718 (u. 6)
9	SWM-HOSE CLAMP CLIC R 96-175 8A0092249 (u. 1)
10	SWM-WASHER 18x6.4x1 62ND15549 (u. 1)
11	SWM-BUTTERFLY SCREW M6x1 ZA0037947 (u. 1)
12	SWM-HOSE CLAMP NEMO-40/80 8E0099475 (u. 1)
13	SWM-SCREW WITH COLLAR M5x1x16-CH8 8B00A8421 (u. 2)

14	SWM-CLAMP CLIC R 96 D14.5 8M0092249 (u. 2)
15	SWM-BREATHER HOSE RS 8000B0399 (u. 1)
16	SWM-AIR FILTER HOUSING PLATE 8000B0575 (u. 1)
17	SWM-HEX FLANGE SCREW M5x1x12-CH8 8A00A8421 (u. 1)
18	SWM-PLASTIC SPRING 800072494 (u. 1)
19	SWM-BREATHER HOSE FITTING 8000A8999 (u. 1)