



SUPERDUAL T (SILVER) 2020

Exploded



 
SERVICE TOOLS, MANUALS




FRAME, FOOT RESTS




FRAME, FOOT RESTS

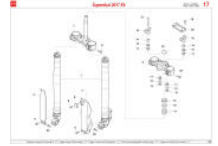


FRONT FORK ASSEMBLY

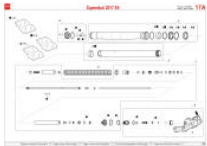 


LEFT FORK

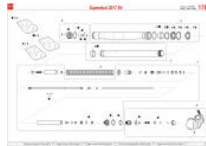 

RIGHT FORK

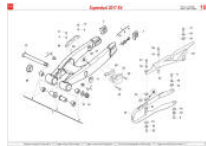 

REAR SWINGARM

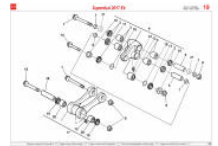 

REAR SUSPENSION LINKAGE



 
REAR SUSPENSION



HANDLEBAR / CONTROLS




PANEL, FENDERS, SEAT

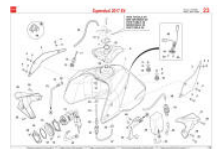

GAS TANK, PANEL



 EXHAUST SYSTEM

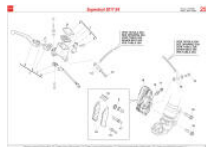


FRONT HYDRAULIC BRAKE



ABS SYSTEM



 
REAR HYDRAULIC BRAKE

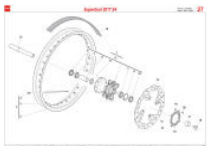

FRONT WHEEL



 REAR WHEEL

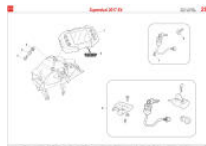


DIGITAL INSTRUMENTS, LOCKS



MAIN WIRING HARNESS




 DECALS

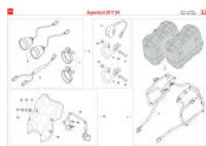

ACCESSORIES

 
SUPERDUAL 600cc

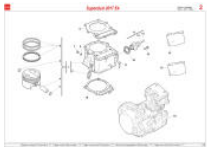


PISTON



 
CYLINDER HEAD

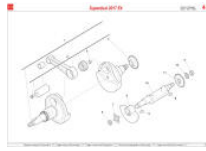

CRANKSHAFT

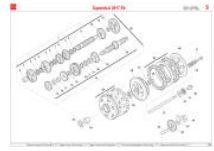 


PRIMARY DRIVE, CLUTCH

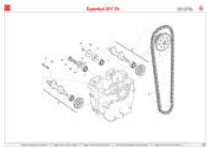 


VALVE TIMING



 LEFT HALF CRANKCASE

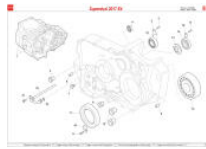

RIGHT HALF CRANKCASE

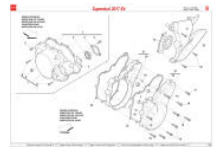 

CRANKCASE COVERS



 
GEARSHIFT




LUBRICATION



IGNITION SYSTEM

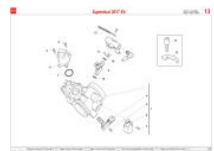

THROTTLE BODY

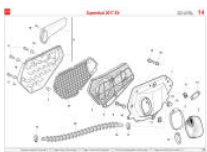 


AIR FILTER



COOLING SYSTEM

 SERVICE TOOLS, MANUALS

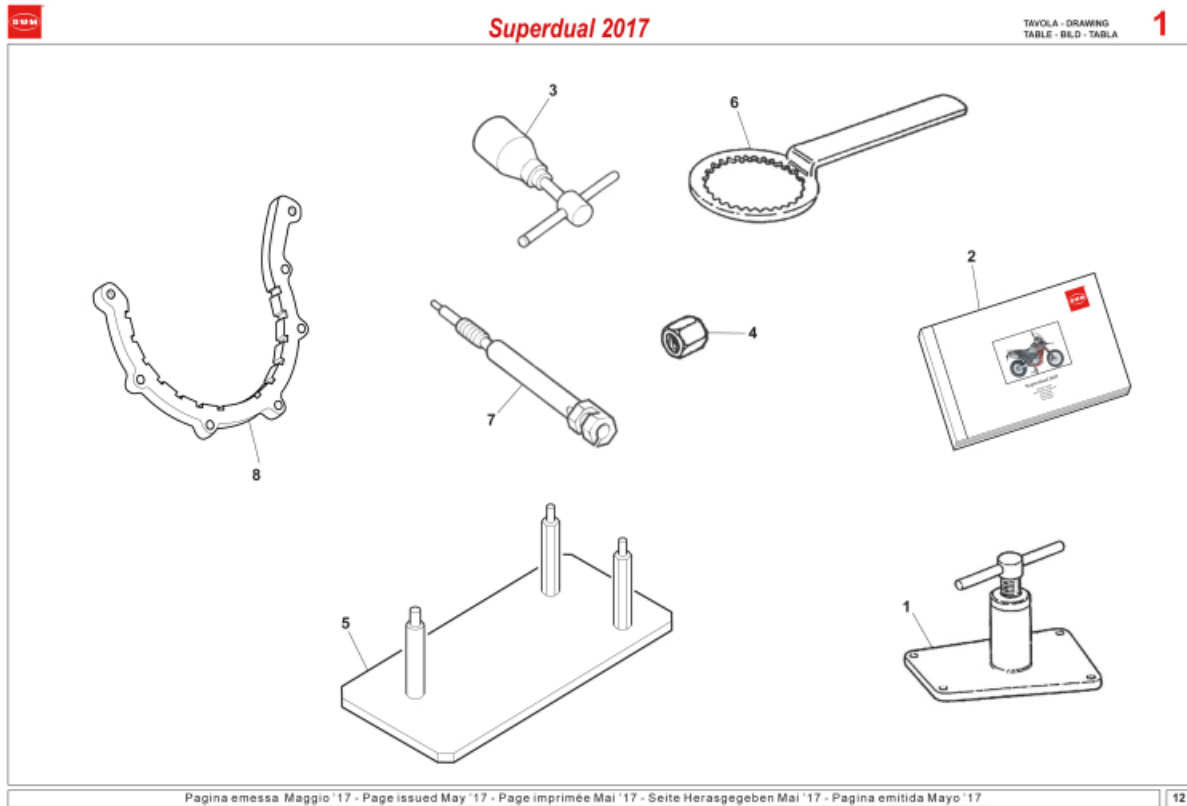


Pagina emessa Maggio '17 - Page issued May '17 - Page imprimée Mai '17 - Seite Herasgegeben Mai '17 - Pagina emitida Mayo '17

12

- | | |
|---|---|
| 1 | SWM-CRANK SHAFT REMOVING TOOL
800089743 (u. 1) - SUPERDUAL - X, T |
| 2 | SWM-OWNER QUICK MANUAL SD
A000P02253 (u. 1) - SUPERDUAL - X, T |
| 3 | SWM-FLYWHEEL REMOVING TOOL SD
800039523 (u. 1) - SUPERDUAL - X, T |
| 4 | SWM-F.W.M PULLER PROTECTION TOOL
800083254 (u. 1) - SUPERDUAL - X, T |
| 5 | SWM-ENGINE SUPPORT ASSEMBLY ASSY
8A0090662 (u. 1) - SUPERDUAL - X, T |
| 6 | SWM-WRENCH FOR CLUTCH DISK HUB
800079015 (u. 1) - SUPERDUAL - X, T |
| 7 | SWM-DIAL GAUGE HOLDING TOOL
8000A1625 (u. 1) - SUPERDUAL - X, T |
| 8 | TOOL. TDC PR7 - SWM/AJP
M000P00688 (u. 1) - SUPERDUAL - X, T |
| 9 | SWM-ECU PROGRAMMING WIRE
E000P00925 (u. 1) |

 FRAME, FOOT RESTS

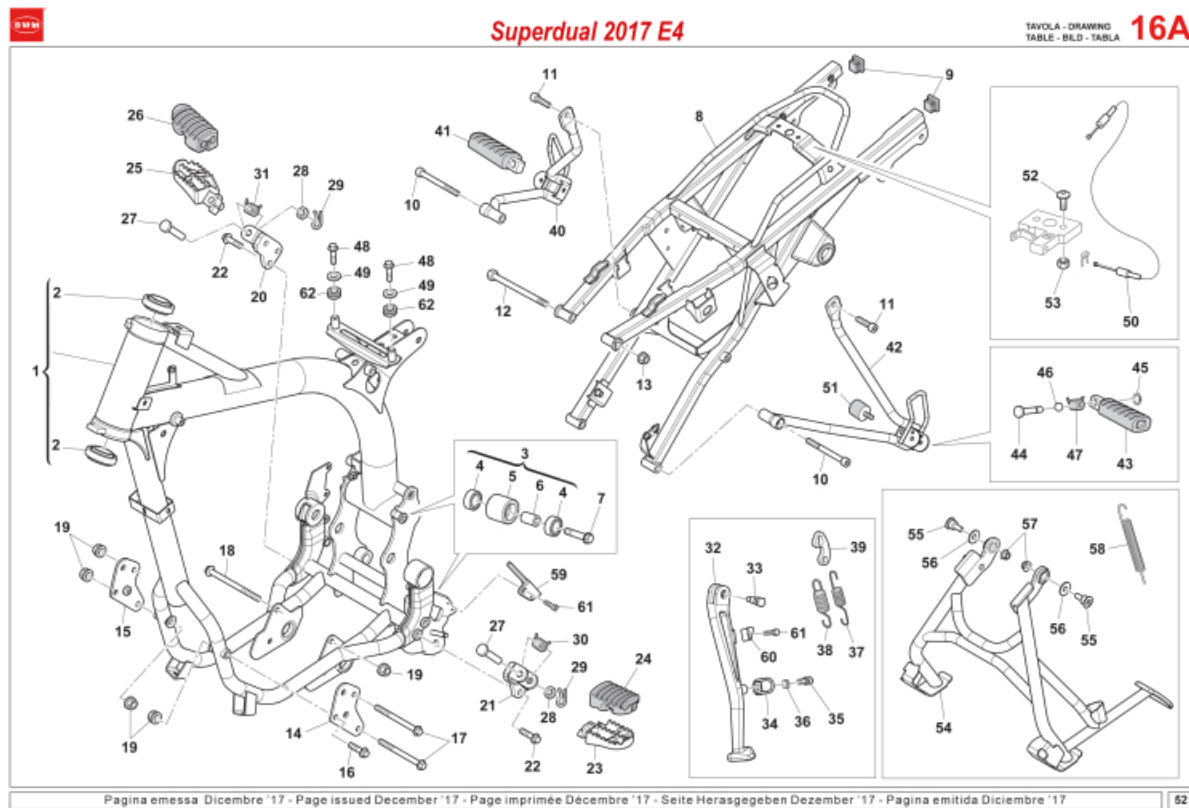


1	SWM-FRAME ASSY SD F000A01238 (u. 1) - SUPERDUAL - X, T
2	SWM-TAPERED ROLLER BEARING 800087243 (u. 1) - SUPERDUAL - X, T
3	SWM-CHAIN ROLLER ASSY 8C0059432 (u. 2) - SUPERDUAL - X, T
4	SWM-RADIAL BALL BEARING 22x8x7 800063312 (u. 2) - SUPERDUAL - X, T
5	SWM-CHAIN ROLLER 8AA059433 (u. 1) - SUPERDUAL - X, T
6	SWM-THREADED SPACER 8A0059434 (u. 1) - SUPERDUAL - X, T
7	SWM-SCREW TCEI M8x1.25x40 60ND02559 (u. 2) - SUPERDUAL - X, T
8	SWM-REAR FRAME ASSY SD F000P02150 (u. 1) - SUPERDUAL - X, T
9	SWM-SQUARE PLASTIC CAP F000P01960 (u. 2) - SUPERDUAL - X, T
10	SWM-SCREW M8x1.25x55 60ND02567 (u. 2) - SUPERDUAL - X, T
11	SWM-SCREW M8x1.25x20 60ND02555 (u. 2) - SUPERDUAL - X, T
12	SWM-SCREW M8x1.25x140 YA0069111 (u. 1) - SUPERDUAL - X, T
13	SWM-BRAKED FLANGED NUT M8x1.25x8.5-CH12 Y00043928 (u. 1) - SUPERDUAL - X, T
14	SWM-ENGINE FRONT FIXING PLATE LH F000P01137 (u. 1) - SUPERDUAL - X, T
15	SWM-ENGINE FRONT FIXING PLATE RH FA00P01137 (u. 1) - SUPERDUAL - X, T

16	SWM-HEX FLANGE SCREW M8x1.25x50-CH12 Z00062795 (u. 2) - SUPERDUAL - X, T
17	SWM-HEX FLANGE SCREW D17 M8Xx1.25x105-CH10 YL0073458 (u. 2) - SUPERDUAL - X, T
18	SWM-HEX FLANGE SCREW M8x1.25x135 YP0073458 (u. 1) - SUPERDUAL - X, T
19	SWM-BRAKED FLANGED NUT M8x1.25x8.5-CH12 Y00043928 (u. 5) - SUPERDUAL - X, T
20	SWM-RH FOOTREST SUPPORT F000P00206 (u. 1) - SUPERDUAL - X, T
21	SWM-FOOT REST SUPPORT LH ASSY 80B083987 (u. 1) - SUPERDUAL - X, T
22	SWM-HEX FLANGE SCREW M8x1.25x25-CH10 8000B1959 (u. 4) - SUPERDUAL - X, T
23	SWM-LH FOOTREST SD 80A089962 (u. 1) - SUPERDUAL - X, T
24	SWM-RUBBER COVER FOR LH FOOTBOARD F000P00138 (u. 1) - SUPERDUAL - X, T
25	SWM-RH FOOTREST SD 80A089953 (u. 1) - SUPERDUAL - X, T
26	SWM-RUBBER COVER FOR RH FOOTBOARD F000P00139 (u. 1) - SUPERDUAL - X, T
27	SWM-FOOTREST PIN Y00073140 (u. 2) - SUPERDUAL - X, T
28	SWM-WASHER 16x10.5x1 ZA0001815 (u. 2) - SUPERDUAL - X, T
29	SWM-SPLIT PIN L18x1.8 64ND20068 (u. 2) - SUPERDUAL - X, T
30	SWM-SPRING LH 800096907 (u. 1) - SUPERDUAL - X, T
31	SWM-SPRING RH 800096908 (u. 1) - SUPERDUAL - X, T
32	SWM-SIDE STAND SD-T F000P01017 (u. 1) - SUPERDUAL - T
33	SWM-SIDE STAND SPIN SCREW M8x1.25x25 SD F000P01116 (u. 1) - SUPERDUAL - X, T
34	SWM-BRACKET STAND 8000H2989 (u. 1) - SUPERDUAL - X, T
35	SWM-SPRING PIN 8000H0235 (u. 1) - SUPERDUAL - X, T
36	SWM-WASHER 15x8.4x0.5 62ND15769 (u. 1) - SUPERDUAL - X, T
37	SWM-INTERNAL SIDE STAND SPRING 8000A0268 (u. 1) - SUPERDUAL - X, T
38	SWM-EXTERNAL SIDE STAND SPRING 8000A0269 (u. 1) - SUPERDUAL - X, T
39	SWM-ANCHOR SPRINGS PLATE 8000A0267 (u. 1) - SUPERDUAL - X, T
40	SWM-PASSENGER RH FOOTREST SUPPORT ASSY F000P01018 (u. 1) - SUPERDUAL - X, T
41	SWM-RIGHT FOOTREST VULCANIZED 8A0085928 (u. 1) - SUPERDUAL - X, T
42	SWM-PASSENGER LH FOOTREST SUPPORT ASSY F000P01019 (u. 1) - SUPERDUAL - X, T
43	SWM-LEFT FOOTREST VULCANIZED 8A0085929 (u. 1) - SUPERDUAL - X, T

44	SWM-FOOTREST PIN (USA) ZB0053546 (u. 2) - SUPERDUAL - X, T
45	SWM-CIRCLIP D11-D5x0.7 66ND21308 (u. 2) - SUPERDUAL - X, T
46	SWM-STEEL BALL D1/4" 6BN021507 (u. 2) - SUPERDUAL - X, T
47	SWM-REAR FOOTPEG SPRING 800062655 (u. 2) - SUPERDUAL - X, T
48	SWM-HEX FLANGE SCREW M6x1x12-CH8 ZH0067545 (u. 1) - SUPERDUAL - X, T
49	SWM-WASHER 22x6.5x1 Z00059801 (u. 1) - SUPERDUAL - X, T
50	SWM-CABLE 8000H2016 (u. 1) - SUPERDUAL - X, T
51	SWM-SILENT BLOCK D25 F000P02250 (u. 1) - SUPERDUAL - X, T
52	SWM-SCREW M6x1x25 Z00055697 (u. 2) - SUPERDUAL - X, T
53	SWM-SELF LOCKING FLANGE NUT M6x1x7-CH10 Z00044240 (u. 2) - SUPERDUAL - X, T
54	SWM-MAIN STAND SD-T F000P00933 (u. 1) - SUPERDUAL - T
55	SWM-MAINSTAND SCREW F000P01542 (u. 2) - SUPERDUAL - X, T
56	SWM-WASHER 20x8.5x2 Z00047317 (u. 2) - SUPERDUAL - X, T
57	SWM-BRAKED FLANGED NUT M8x1.25x8.5-CH12 Y00043928 (u. 2) - SUPERDUAL - X, T
58	SWM-MAIN STAND SPRING F000P01132 (u. 2) - SUPERDUAL - X, T
59	SWM-SIDE STAND SWITCH E000P01648 (u. 1) - SUPERDUAL - X, T
60	SWM-SIDE STAND SWITCH MAGNET E000P01117 (u. 1) - SUPERDUAL - X, T
61	SWM-SCREW M4x0.7x10 60ND02461 (u. 3) - SUPERDUAL - X, T
62	SWM-SILENT-BLOCK F000P01570 (u. 2) - SUPERDUAL - X, T

 FRAME, FOOT RESTS

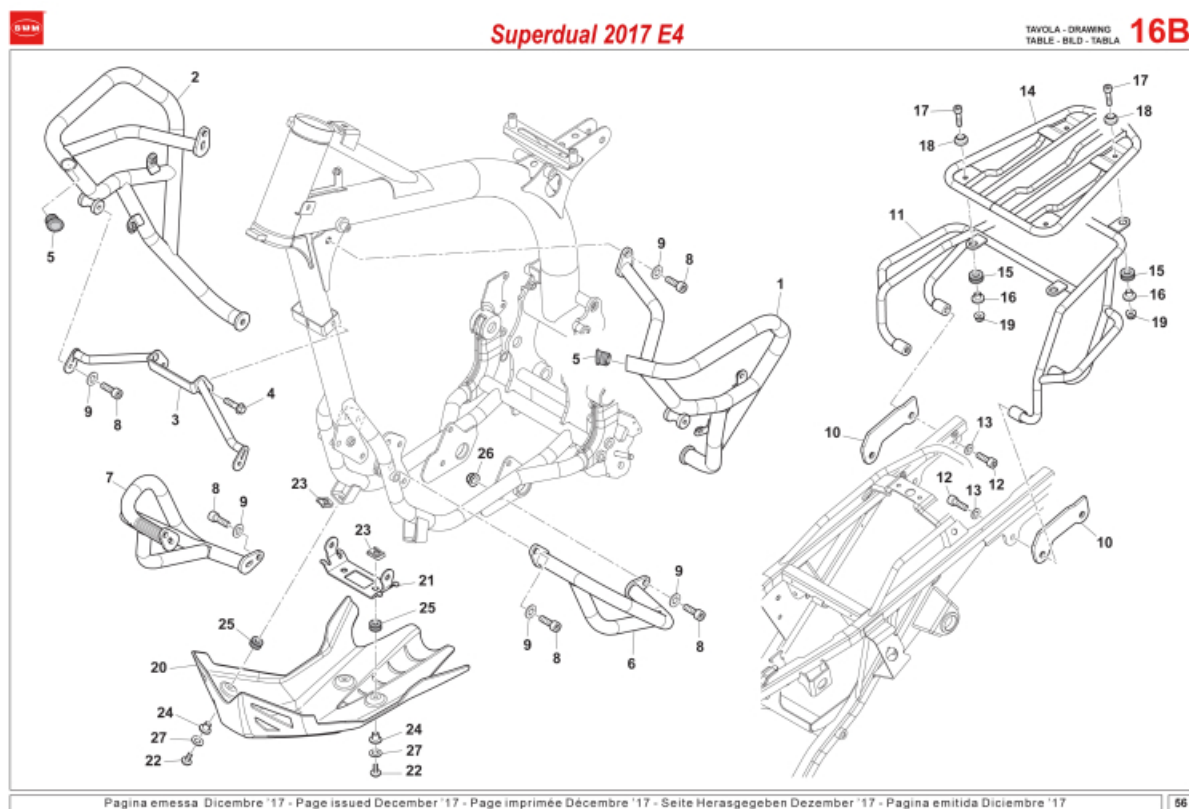


- | | |
|----|--|
| 1 | SWM-SIDE ROLL BAR LH
F000P00934 (u. 1) - SUPERDUAL - X, T |
| 2 | SWM-SIDE ROLL BAR RH
F000P00935 (u. 1) - SUPERDUAL - X, T |
| 3 | SWM-SIDE ROLL BARS CONNECTION
F000P01136 (u. 1) - SUPERDUAL - X, T |
| 4 | SCREW TEF M6X1X20 CH8 PR7 - SWM/AJP
Z00062728 (u. 2) - SUPERDUAL - X, T |
| 5 | SWM-ROLL BAR CAP
F000P01362 (u. 2) - SUPERDUAL - X, T |
| 6 | SWM-ENGINE LH ROLL BAR
F000P00940 (u. 1) - SUPERDUAL - X, T |
| 7 | SWM-ENGINE RH ROLL BAR
F000P00941 (u. 1) - SUPERDUAL - X, T |
| 8 | SWM-SCREW M8x1.25x20
60ND02555 (u. 6) - SUPERDUAL - X, T |
| 9 | SWM-WASHER 8.4x15x1.5
62ND15506 (u. 8) - SUPERDUAL - X, T |
| 10 | SWM-PLATE FOR REAR BAG CARRIER
F000P01586 (u. 2) - SUPERDUAL - X, T |
| 11 | SWM-PASSENGER HANDHOLD
F000P01587 (u. 1) - SUPERDUAL - X, T |
| 12 | SWM-SCREW M8x1.25x25-CH6
60ND02556 (u. 6) - SUPERDUAL - X, T |
| 13 | WASHER (16X8.3X1) - SWM/AJP
Z00056377 (u. 4) - SUPERDUAL - X, T |
| 14 | SWM-CARRIER
F000P00938 (u. 1) - SUPERDUAL - X, T |
| 15 | SWM-PASSENGER HANDLE SILENTBLOCK
800041862 (u. 4) - SUPERDUAL - X, T |

2020 - SUPERDUAL T (SILVER)

16	SWM-SPACER WITH COLLAR 8000B2799 (u. 4) - <i>SUPERDUAL - X, T</i>
17	SWM-SCREW TCEI M6x1x25-CH5 60ND02510 (u. 4) - <i>SUPERDUAL - X, T</i>
18	SWM-CONIC WASHER H7.5 F000P00768 (u. 4) - <i>SUPERDUAL - X, T</i>
19	SWM-SELF LOCKING FLANGE NUT M6x1x7-CH10 Z00044240 (u. 4) - <i>SUPERDUAL - X, T</i>
20	SWM-ENGINE GUARD SD F000P02544 (u. 1) - <i>SUPERDUAL - X, T</i>
21	SWM-ENGINE GUARD SUPPORT, REAR F000P01529 (u. 1) - <i>SUPERDUAL - X, T</i>
22	SCREW TEF M6X1X25 CH8 PR7 - SWM/AJP Z00062729 (u. 4) - <i>SUPERDUAL - X, T</i>
23	SWM-CLIP NUT M6x1 U00046893 (u. 4) - <i>SUPERDUAL - X, T</i>
24	SWM-SKID PLATE SPACER 8B00B2799 (u. 4) - <i>SUPERDUAL - X, T</i>
25	SWM-VIBRATION DAMPING RUBBER 8000H3250 (u. 4) - <i>SUPERDUAL - X, T</i>
26	SWM-BRAKED FLANGED NUT M8x1.25x8.5-CH12 Y00043928 (u. 6) - <i>SUPERDUAL - X, T</i>
27	SWM-WASHER 18x6.4x2 Z00048814 (u. 4) - <i>SUPERDUAL - X, T</i>

 FRONT FORK ASSEMBLY

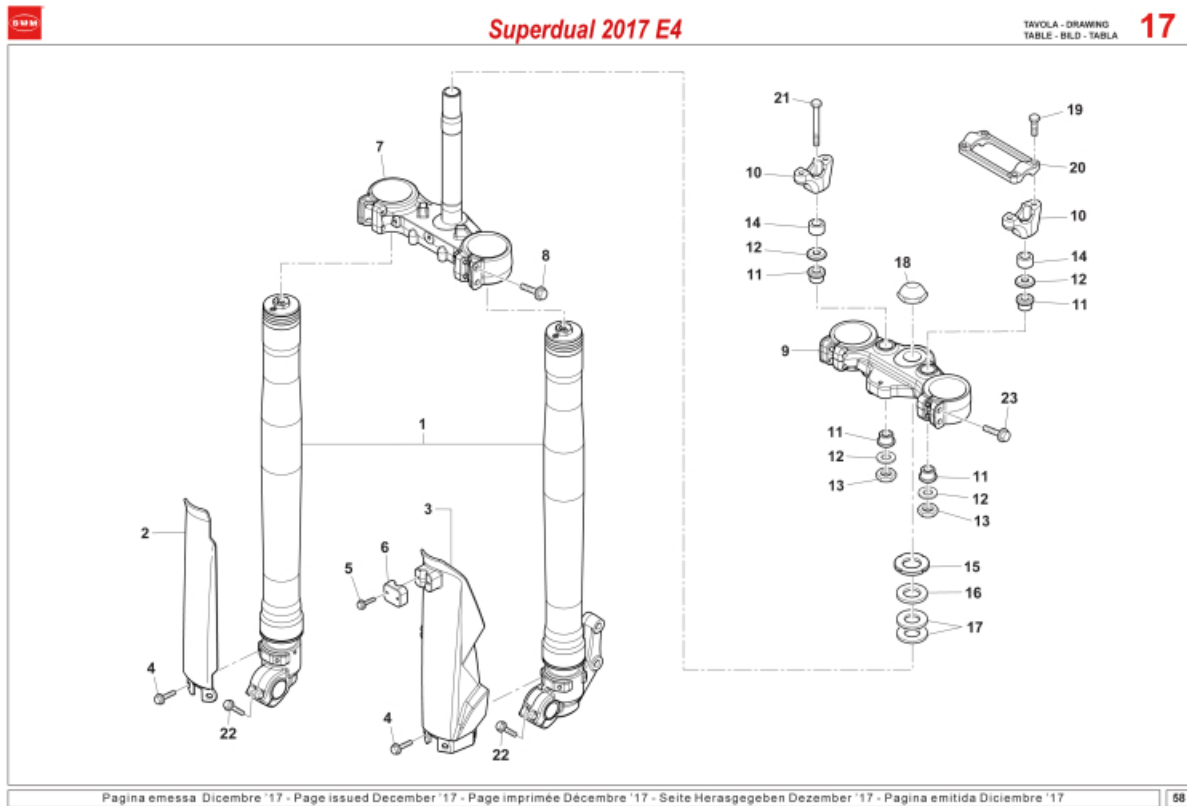

Pagina emessa Dicembre '17 - Page issued December '17 - Page imprimée Décembre '17 - Seite Herasgegeben Dezember '17 - Pagina emitida Diciembre '17

58


- | | |
|----|--|
| 1 | SWM-FORK LEGS ASSY COMPLETE
F000A01947 (u. 1) - SUPERDUAL - X, T |
| 2 | SWM-LH FORK GUARD SD-SILVER/BLACK
F0A0P01012 (u. 1) - SUPERDUAL - T |
| 3 | SWM-RH FORK GUARD SD-SILVER/BLACK
F0A0P01013 (u. 1) - SUPERDUAL - T |
| 4 | SWM-M5 SCREW WITH NECK M5x1x8-CH8 SD
8000A8423 (u. 7) - SUPERDUAL - X, T |
| 5 | SWM-SELF TAPPING SCREW
ZA0084658 (u. 1) - SUPERDUAL - X, T |
| 6 | SWM-FORK GUARD HOSE CLAMP SD-SILVER/BLACK
80F0A0633 (u. 1) - SUPERDUAL - T |
| 7 | SWM-STEERING CROWN WITH PIN
F000A01670 (u. 1) - SUPERDUAL - X, T |
| 8 | SWM-FLANGE SCREW M8x1.25x40-CH12
ZA0062733 (u. 4)

OBSOLETE : ZA0062733 : SWM-SCREW M8x1.25x40
Z00062796 (u. 4) - SUPERDUAL - X, T |
| 9 | SWM-STEERING HEAD
F000P02162 (u. 1) - SUPERDUAL - X, T |
| 10 | SWM-LOWER BAR CLAMP
8000H2355 (u. 2) - SUPERDUAL - X, T |
| 11 | SWM-RUBBER PAD D25-D21-D20-D12x17
800060233 (u. 4) - SUPERDUAL - X, T |
| 12 | SWM-WASHER 28x22x10.5x2.5
800060234 (u. 4) - SUPERDUAL - X, T |
| 13 | SWM-NUT M10x1.5
Z00061314 (u. 2) - SUPERDUAL - X, T |
| 14 | SWM-SPACER 32x10x13.5
8A00A6683 (u. 2) - SUPERDUAL - X, T |

OBSOLETE


15	SWM-NUT FOR STEERING PIN 8A0087717 (u. 1) - SUPERDUAL - X, T
16	SWM-WASHER 40.5x29.5x2 800087736 (u. 1) - SUPERDUAL - X, T
17	SWM-TRIPLE CLAMP GASKET 800087745 (u. 2) - SUPERDUAL - X, T
18	SWM-BLIND NUT M26x1-CH30 F000P01004 (u. 1) - SUPERDUAL - X, T
19	SWM-HEX FLANGED SCREW M8x1.25x30-CH12 ZC0069056 (u. 4) - SUPERDUAL - X, T
20	SWM-UPPER BAR CLAMP 8000B0522 (u. 1) - SUPERDUAL - X, T
21	SWM-SCREW M10x1.5x80 60ND01222 (u. 2) - SUPERDUAL - X, T
22	SWM-SCREW TCEI M8x1.25x30 60ND02557 (u. 4) - SUPERDUAL - X, T
23	SWM-HEX FLANGE SCREW M8x45 ZA0069056 (u. 4) - SUPERDUAL - X, T

 LEFT FORK

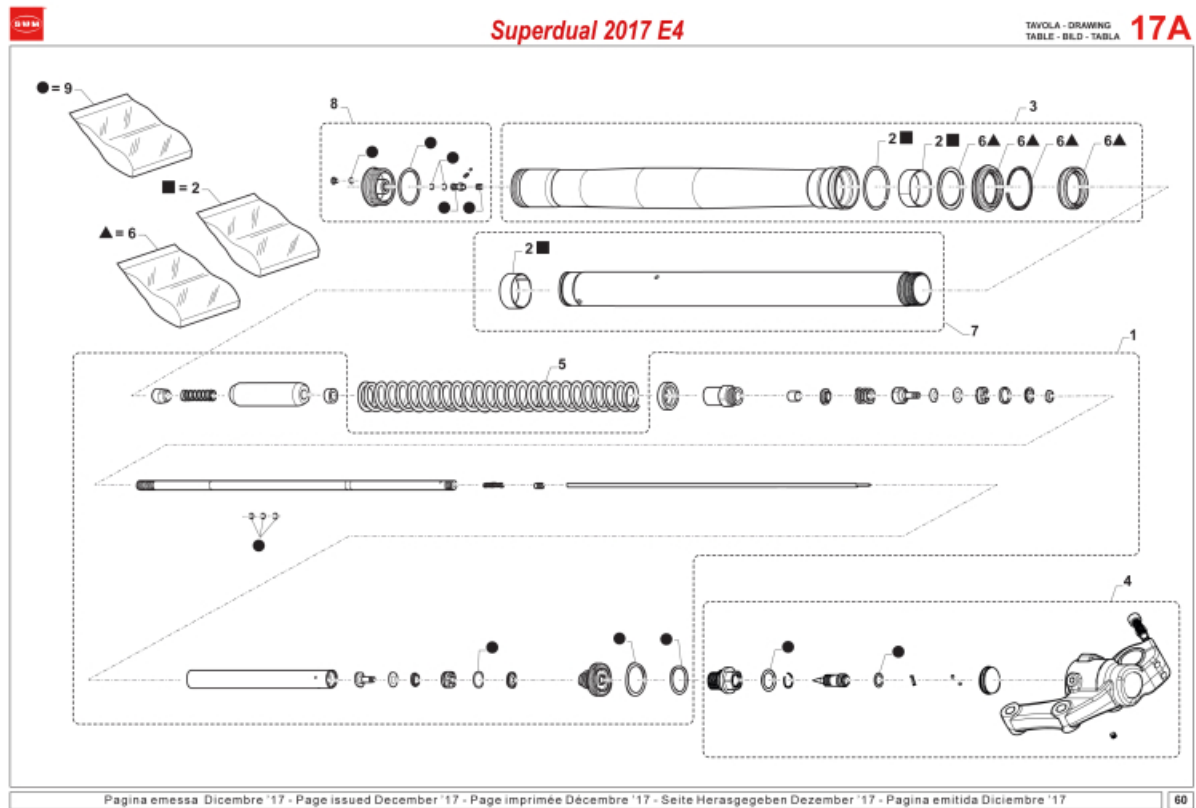


- | | |
|---|--|
| 1 | SWM-PUMPING GROUP
F000P02541 (u. 1) - SUPERDUAL - X, T |
| 2 | SWM-BEARINGS
F000P02455 (u. 1) - SUPERDUAL - X, T |
| 3 | SWM-OUTER TUBE
F000P02456 (u. 1) - SUPERDUAL - X, T |
| 4 | SWM-LH WHEEL CLAMP GROUP
F000P02543 (u. 1) - SUPERDUAL - X, T |
| 5 | SWM-FORK SPRING
F000P02542 (u. 1) - SUPERDUAL - X, T |
| 6 | SWM-DUST AND OIL SEAL GROUP
F000P02459 (u. 1) - SUPERDUAL - X, T |
| 7 | SWM-SLIDER TUBE
F000P02460 (u. 1) - SUPERDUAL - X, T |
| 8 | SWM-CAP GROUP
F000P02461 (u. 1) - SUPERDUAL - X, T |
| 9 | SWM-LEFT FORK O-RING KIT
F000P02462 (u. 1) - SUPERDUAL - X, T |

 RIGHT FORK

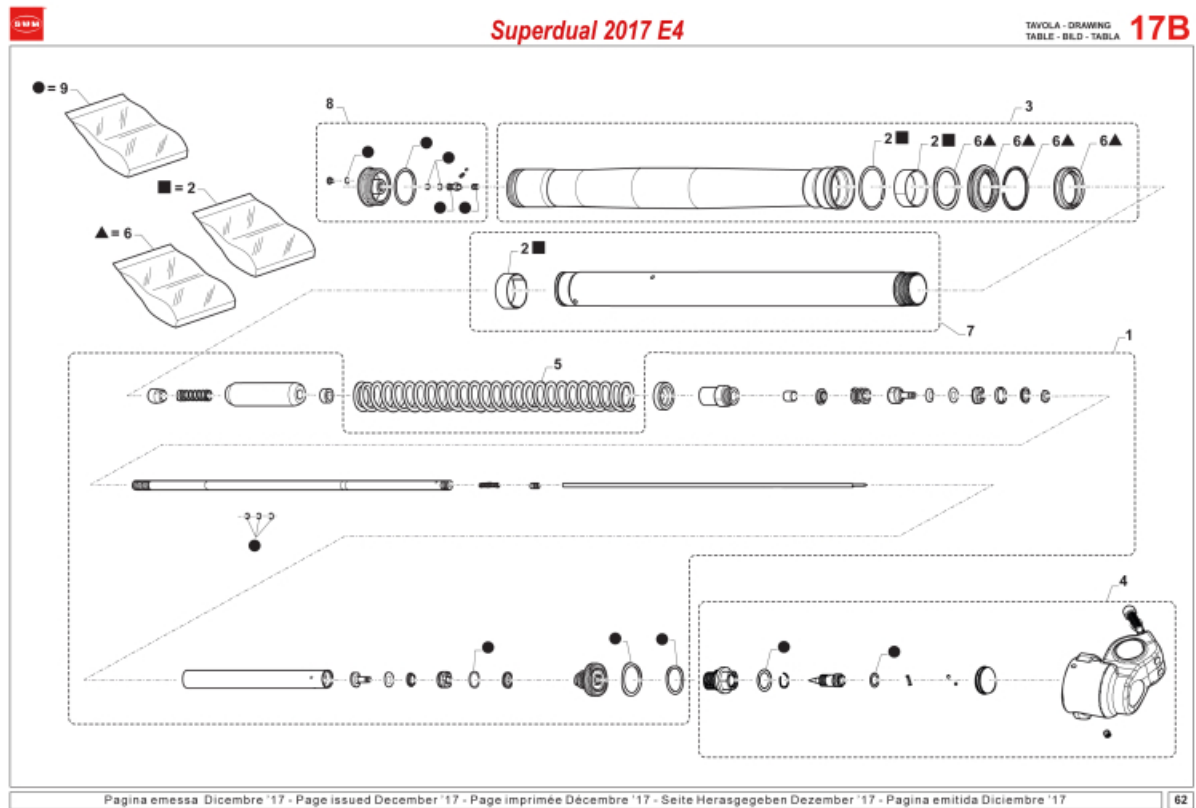

- | | |
|---|--|
| 1 | SWM-PUMPING GROUP
F000P02541 (u. 1) - SUPERDUAL - X, T |
| 2 | SWM-BEARINGS
F000P02455 (u. 1) - SUPERDUAL - X, T |
| 3 | SWM-OUTER TUBE
F000P02456 (u. 1) - SUPERDUAL - X, T |
| 4 | SWM-RH WHEEL CLAMP GROUP
F000P02457 (u. 1) - SUPERDUAL - X, T |
| 5 | SWM-FORK SPRING
F000P02542 (u. 1) - SUPERDUAL - X, T |
| 6 | SWM-DUST AND OIL SEAL GROUP
F000P02459 (u. 1) - SUPERDUAL - X, T |
| 7 | SWM-SLIDER TUBE
F000P02460 (u. 1) - SUPERDUAL - X, T |
| 8 | SWM-CAP GROUP
F000P02461 (u. 1) - SUPERDUAL - X, T |
| 9 | SWM-LEFT FORK O-RING KIT
F000P02462 (u. 1) - SUPERDUAL - X, T |

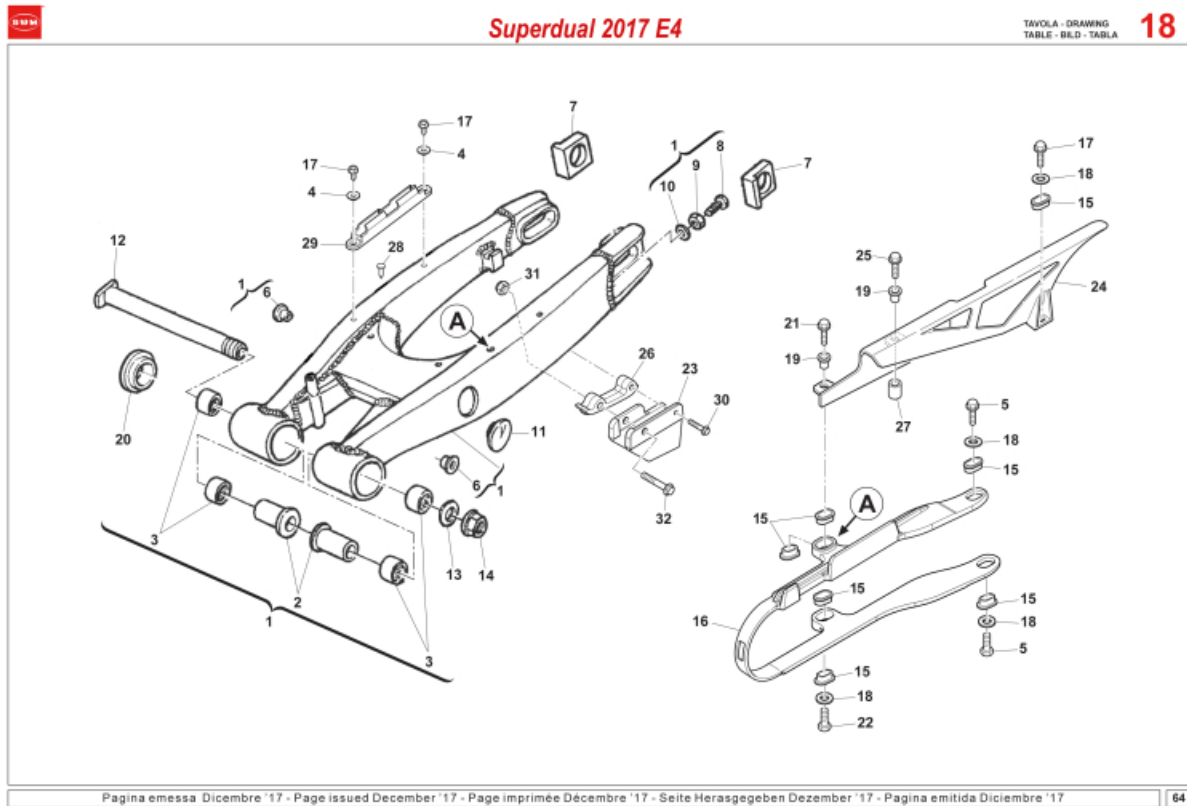 REAR SWINGARM


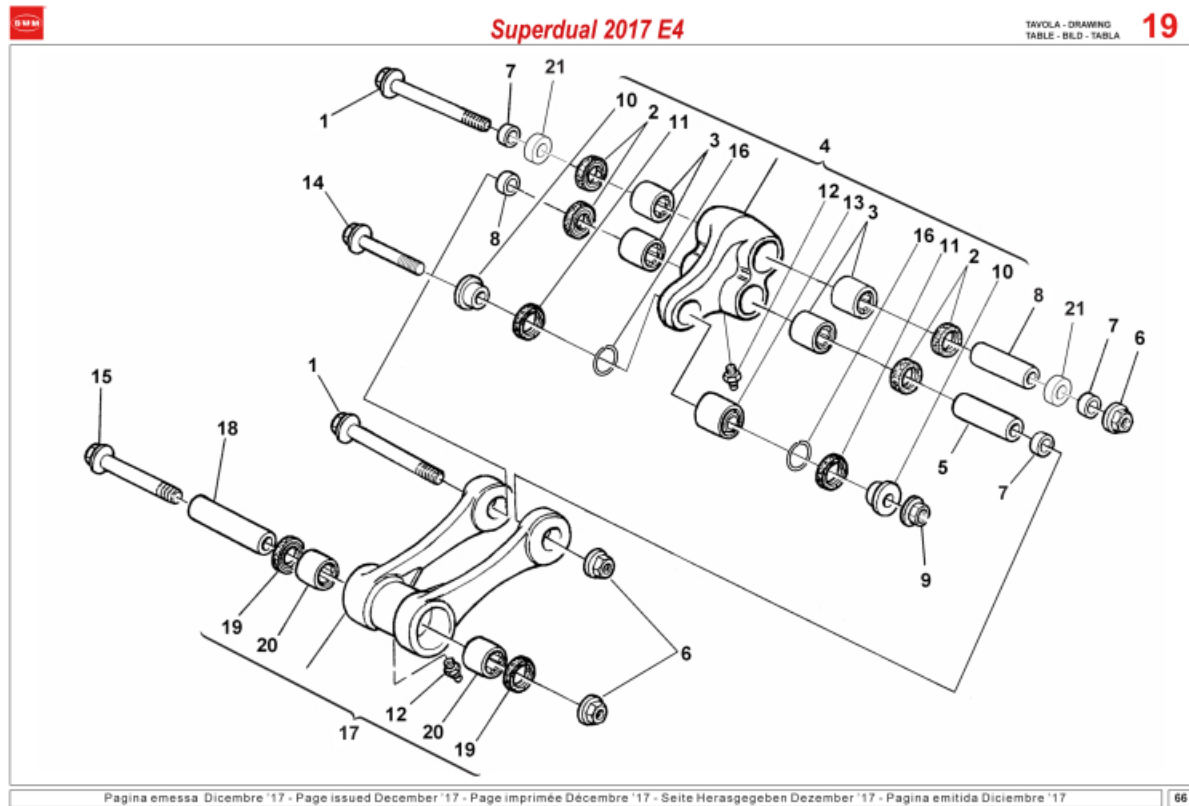 
Pagina emessa Dicembre '17 - Page issued December '17 - Page imprimée Décembre '17 - Seite Herasgegeben Dezember '17 - Pagina emitida Diciembre '17

64

- | | |
|----|--|
| 1 | SWM-REAR FORK ASSY SD
8000H3743 (u. 1) - SUPERDUAL - X, T |
| 2 | SWM-SWINGARM BUSHING
800083904 (u. 2) - SUPERDUAL - X, T |
| 3 | SWM-NEEDLE BEARING 22x28x11
800076283 (u. 4) - SUPERDUAL - X, T |
| 4 | SWM-BUSHING 14x7x5.25
800069282 (u. 2) - SUPERDUAL - X, T |
| 5 | SWM-HEX TAPPING SCREW WITH COLLAR 4.8x13-CH8
Z00020536 (u. 2) - SUPERDUAL - X, T |
| 6 | SWM-BUSH D26-D18-D15-SP13
8A0087810 (u. 2) - SUPERDUAL - X, T |
| 7 | SWM-CHAIN TENSIONER RH
800096944 (u. 1) - SUPERDUAL - X, T
SWM-CHAIN TENSIONER LH
800096941 (u. 1) - SUPERDUAL - X, T |
| 8 | SWM-SCREW M8x1.25
ZC0061121 (u. 2) - SUPERDUAL - X, T |
| 9 | SWM-NUT M8x1.25x8-CH12
Z00017810 (u. 2) - SUPERDUAL - X, T |
| 10 | SWM-WASHER 13x8.4x2
Z00008536 (u. 2) - SUPERDUAL - X, T |
| 11 | SWM-SWINGARM ARM CAP
80B074388 (u. 2) - SUPERDUAL - X, T |
| 12 | SWM-FORK PIN SD
F000P00173 (u. 1) - SUPERDUAL - X, T |
| 13 | SWM-WASHER 26x17.2x1.5
800032388 (u. 1) - SUPERDUAL - X, T |
| 14 | SWM-FLANGE NUT M16x1.5x15-CH22 BMW 770
Z00071623 (u. 1) - SUPERDUAL - X, T |

15	SWM-CUP 8000H3033 (u. 7) - SUPERDUAL - X, T
16	SWM-BUFFER CHAINCASE DEFENCE 8000H1320 (u. 1) - SUPERDUAL - X, T
17	SWM-HEX TAPPING SCREW WITH COLLAR 4.8x13-CH8 Z00020536 (u. 3) - SUPERDUAL - X, T
18	SWM-WASHER 11x5.5x1.5 Z00036137 (u. 4) - SUPERDUAL - X, T
19	SWM-SWINGARM BUSHING 14x7x5.25 8A0069282 (u. 2) - SUPERDUAL - X, T
20	SWM-REAR ARM PIVOT PLUG 800087027 (u. 1) - SUPERDUAL - X, T
21	SWM-HEX FLANGE SCREW M5x0.8x16-CH8 ZA0067997 (u. 1) - SUPERDUAL - X, T
22	SCREW TEF M5X0.8X12 CH8 PR7 - SWM/AJP Z00067997 (u. 1) - SUPERDUAL - X, T
23	SWM-CHAIN OUTER GUIDE F000P00595 (u. 1) - SUPERDUAL - X, T
24	SWM-CHAIN GUARD SD 8A00A5311 (u. 1) - SUPERDUAL - X, T
25	SWM-SCREW M5x0.8x35 60ND01059 (u. 1) - SUPERDUAL - X, T
26	SWM-CHAIN INNER GUIDE F000P00594 (u. 1) - SUPERDUAL - X, T
27	SWM-CHAIN GUARD BUSHING 800097025 (u. 1) - SUPERDUAL - X, T
28	SWM-SWINGARM RIVET "ITW" 800075160 (u. 7) - SUPERDUAL - X, T
29	SWM-SWING ARM CABLE GUIDE 8000B1166 (u. 1) - SUPERDUAL - X, T
30	SCREW TEF M6X1X25 CH8 PR7 - SWM/AJP Z00062729 (u. 2) - SUPERDUAL - X, T
31	SWM-BRAKED FLANGED NUT M8x1.25x8.5-CH12 Y00043928 (u. 1) - SUPERDUAL - X, T
32	SWM-HEX FLANGE SCREW M8x1.25x50-CH12 Z00062795 (u. 1) - SUPERDUAL - X, T

REAR SUSPENSION LINKAGE



1	SWM-SCREW M12x1.25x15x103 800093124 (u. 1) - SUPERDUAL - X, T
2	SWM-SEAL RING 34x26x4 800086137 (u. 4) - SUPERDUAL - X, T
3	SWM-ROLLER BEARING 28x22x16 800086136 (u. 4) - SUPERDUAL - X, T
4	SWM-EQUALIZER ASSY SD 800097052 (u. 1) - SUPERDUAL - X, T
5	SWM-PIN FOR SUSPENSION 22x15x50.4 800086176 (u. 1) - SUPERDUAL - X, T
6	SWM-SELF LOCKING FLANGE NUT M12x1.25x12.5-CH17 Z00042023 (u. 3) - SUPERDUAL - X, T
7	SWM-SPACER D26-D15x5 8000H3015 (u. 2) - SUPERDUAL - X, T
8	SWM-PIN FOR SUSPENSION 8D0086176 (u. 1) - SUPERDUAL - X, T
9	SWM-BRAKED FLANGED NUT WITH INSERT M10x1.25x10-CH14 Z00042022 (u. 1) - SUPERDUAL - X, T
10	SWM-REAR SUSPENSION BUSHING 151133302 (u. 2) - SUPERDUAL - X, T
11	SWM-SEALING D26-D15x4 800038767 (u. 2) - SUPERDUAL - X, T
12	SWM-GREASE FITTING M6x1x13.5-CH7 800001412 (u. 2) - SUPERDUAL - X, T
13	SWM-UNI-BALL 26x12x16 800072168 (u. 1) - SUPERDUAL - X, T
14	SWM-SCREW M10x1.25x47-CH14 ZD0062797 (u. 1) - SUPERDUAL - X, T
15	SWM-SCREW M12x1.25x15x131 8B0093124 (u. 1) - SUPERDUAL - X, T


2020 - SUPERDUAL T (SILVER)

16	SWM-CIRCLIP 28x24x2 800090561 (u. 2) - <i>SUPERDUAL - X, T</i>
17	SWM-REAR SUSPENSION TIE-ROD ASSY SD 8000A4428 (u. 1) - <i>SUPERDUAL - X, T</i>
18	SWM-LINKAGE PIN 22x15x87 800097050 (u. 1) - <i>SUPERDUAL - X, T</i>
19	SWM-SEAL RING 28x22x4 800038521 (u. 2) - <i>SUPERDUAL - X, T</i>
20	SWM-ROLLER BEARING 28x22x20 8000A4427 (u. 2) - <i>SUPERDUAL - X, T</i>
21	SWM-SPACER D26-D15x9.1 8A0086177 (u. 2) - <i>SUPERDUAL - X, T</i>

REAR SUSPENSION

Superdual 2017 E4

  TAVOLA - DRAWING
 TABLE - BILD - TABLA

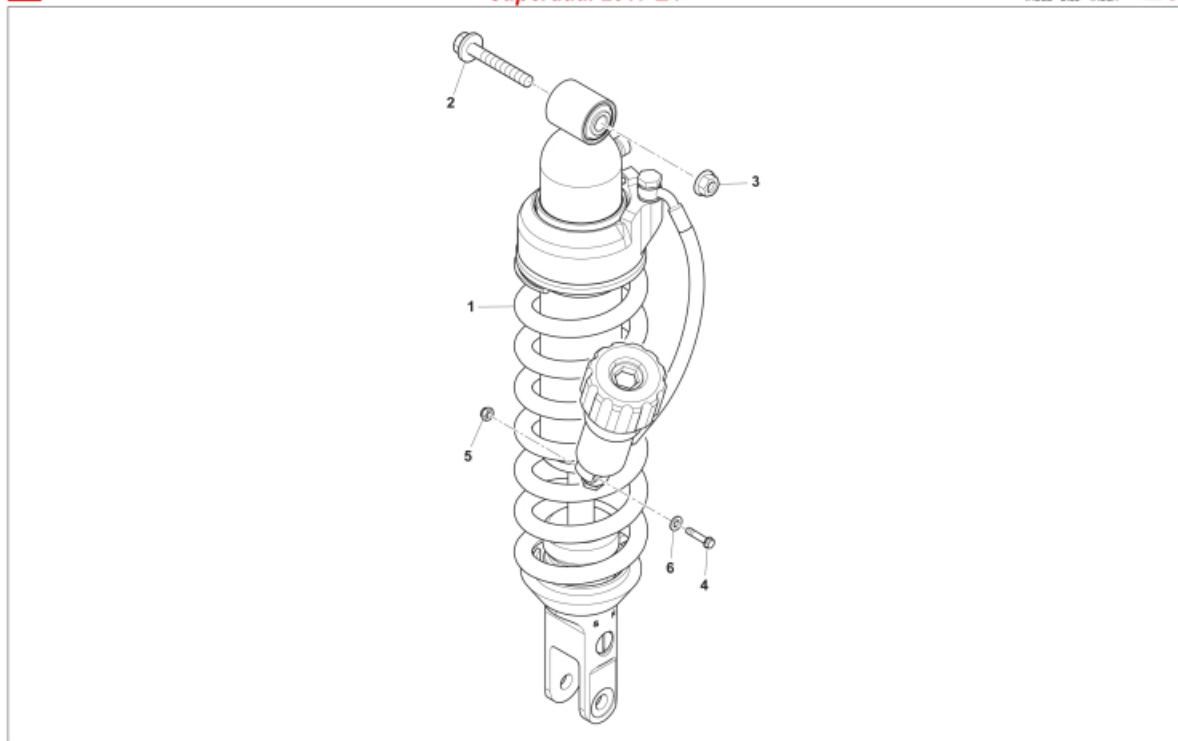20


Pagina emessa Dicembre '17 - Page issued December '17 - Page imprimée Décembre '17 - Seite Herasgegeben Dezember '17 - Pagina emitida Diciembre '17

68

- | | |
|---|--|
| 1 | SWM-REAR SHOCK ABSORBER SD
F000A01059 (u. 1) - SUPERDUAL - X, T |
| 2 | SWM-SCREW M10x1.25x47-CH14
ZD0062797 (u. 1) - SUPERDUAL - X, T |
| 3 | SWM-BRAKED FLANGED NUT WITH INSERT M10x1.25x10-CH14
Z00042022 (u. 1) - SUPERDUAL - X, T |
| 4 | SCREW TE M6X1X30 CH8 PR7 - SWM/AJP
Z00062730 (u. 2) - SUPERDUAL - X, T |
| 5 | SWM-SELF LOCKING FLANGE NUT M6x1x7-CH10
Z00044240 (u. 2) - SUPERDUAL - X, T |
| 6 | SWM-WASHER 8.4x15x1.5
62ND15506 (u. 2) - SUPERDUAL - X, T |


HANDLEBAR / CONTROLS



Superdual 2017 E4

TAVOLA - DRAWING
TABLE - BILD - TABLA

 21

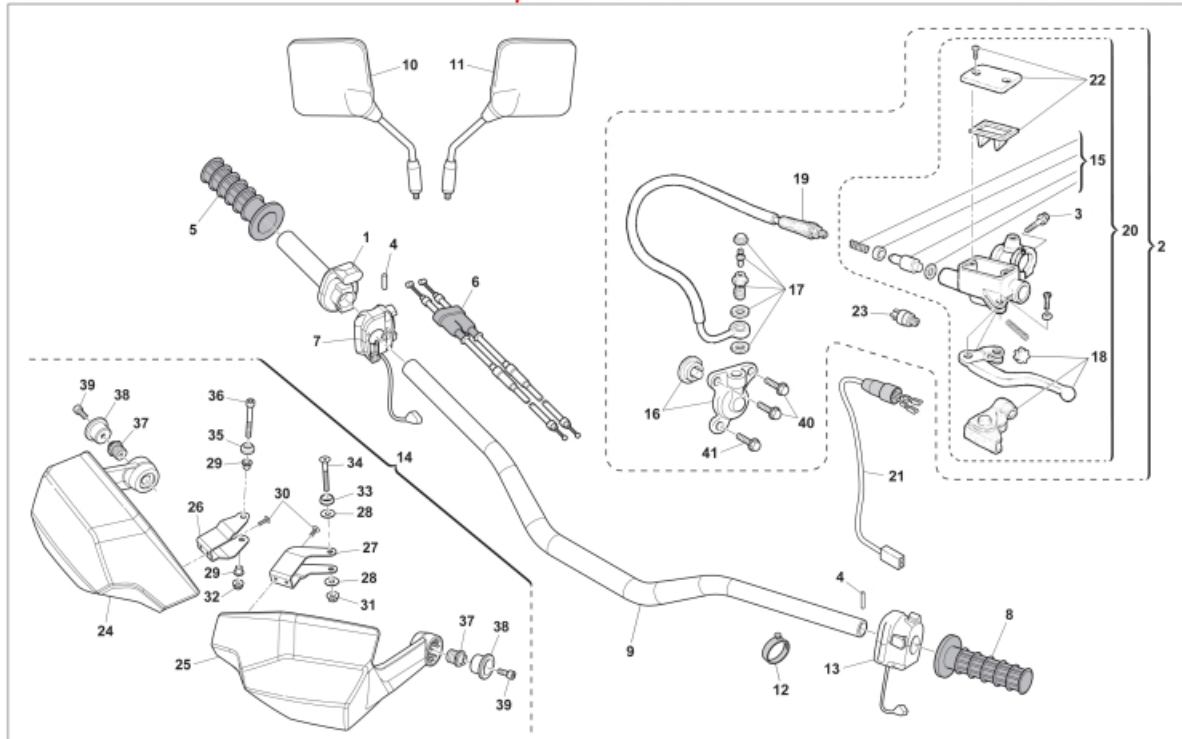

Pagina emessa Dicembre '17 - Page issued December '17 - Page imprimée Décembre '17 - Seite Herausgegeben Dezember '17 - Pagina emitida Diciembre '17


70

1	SWM-THROTTLE CONTROL ASSY F000A02009 (u. 1) - SUPERDUAL - X, T
2	SWM-HYDRAULIC CLUTCH CONTROL ASSY SD F000A01921 (u. 1) - SUPERDUAL - X, T
3	SWM-HEX FLANGE SCREW M6x1x16-CH8 Z00062727 (u. 1) - SUPERDUAL - X, T
4	SWM-RUBBER PIN 8000A1074 (u. 2) - SUPERDUAL - X, T
5	SWM-RIGHT GRIP SD F000P00943 (u. 1) - SUPERDUAL - X, T
6	SWM-THROTTLE CABLE SD F000P02158 (u. 1) - SUPERDUAL - X, T
7	SWM-RH HANDLE SWITCH SD E000P02185 (u. 1) - SUPERDUAL - X, T
8	SWM-LEFT GRIP SD F000P00944 (u. 1) - SUPERDUAL - X, T
9	SWM-HANDLEBAR SD F000P01543 (u. 1) - SUPERDUAL - X, T
10	SWM-REAR VIEW MIRROR SD F000P01471 (u. 1) - SUPERDUAL - X, T
11	SWM-REAR VIEW MIRROR RS FA00P01471 (u. 1) - SUPERDUAL - X, T
12	OBSOLETE - 80A050005 : SWM-HANDLEBAR CABLE TIE 800050005 (u. 1) - SUPERDUAL - X, T
13	SWM-LH HANDLE SWITCH SD E000P02149 (u. 1) - SUPERDUAL - X, T
14	SWM-SUPERDUAL HAND PROTECTORS KIT A000A00929 (u. 1) - SUPERDUAL - X, T
15	KIT PISTON PUMP CLUTCH (9.5MM) PR7 AND SPR 510 + 310 - SWM/AJP F000A00797 (u. 1) - SUPERDUAL - X, T

OBSOLETE

16	AJP-CYLINDER. CLUTCH PRESSURE PR7 F000A00798 (u. 1) - SUPERDUAL - X, T
17	RACORD KIT PR7 + SPR310/510CC - SWM/AJP F000A00799 (u. 1) - SUPERDUAL - X, T
18	CLUTCH LEVER KIT PR7 - SWM/AJP F000A00800 (u. 1) - SUPERDUAL - X, T
19	SWM-CLUTCH HOSE OIL F000P00801 (u. 1) - SUPERDUAL - X, T
20	SWM-CLUTCH MASTER CYLINDER F000A01922 (u. 1) - SUPERDUAL - X, T
21	SWM-CABLES FOR FRONT STOP SWITCH 800075477 (u. 1) - SUPERDUAL - X, T
22	SWM-CLUTCH PUMP COVER KIT SD F000A01923 (u. 1) - SUPERDUAL - X, T
23	SWM-MICROSWITCH F000P00804 (u. 1) - SUPERDUAL - X, T
24	SWM-RH HAND PROTECTOR F000P01415 (u. 1) - SUPERDUAL - X, T
25	SWM-LH HAND PROTECTOR F000P01416 (u. 1) - SUPERDUAL - X, T
26	SWM-RH HAND PROTECTOR BRACKET F000P01467 (u. 1) - SUPERDUAL - X, T
27	SWM-LH HAND PROTECTOR BRACKET F000P01468 (u. 1) - SUPERDUAL - X, T
28	SWM-WASHER 15x5.3-SP1 62ND15548 (u. 2) - SUPERDUAL - X, T
29	SWM-HANDGUARD BUSHING 8000H0822 (u. 2) - SUPERDUAL - X, T
30	SWM-THREAD CUTTING SCREW M4x10 F000P01535 (u. 4) - SUPERDUAL - X, T
31	SWM-NUT M5x0.8-CH8 61ND15192 (u. 1) - SUPERDUAL - X, T
32	SWM-SELF LOCKING FLANGE NUT M6x1x7-CH10 Z00044240 (u. 1) - SUPERDUAL - X, T
33	SWM-CONE BUSH F000P01536 (u. 1) - SUPERDUAL - X, T
34	SWM-COUNTERSUNK SCREW M5x40 ZA0026970 (u. 1) - SUPERDUAL - X, T
35	SWM-CONIC WASHER H7.5 F000P00768 (u. 1) - SUPERDUAL - X, T
36	SWM-SCREW M6x50 60ND02515 (u. 1) - SUPERDUAL - X, T
37	SWM-M16x1 HANDGUARD FIXTURE F000P01470 (u. 2) - SUPERDUAL - X, T
38	SWM-HAND GUARD END CAP F000P01469 (u. 2) - SUPERDUAL - X, T
39	SWM-TCEI SCREW M6x1x20-CH5 60ND02509 (u. 2) - SUPERDUAL - X, T
40	SCREW TEF M6X1X20 CH8 PR7 - SWM/AJP Z00062728 (u. 2) - SUPERDUAL - X, T
41	SWM-HEX FLANGE SCREW M6x1x40-CH8 ZE0067545 (u. 1) - SUPERDUAL - X, T

 PANEL, FENDERS, SEAT

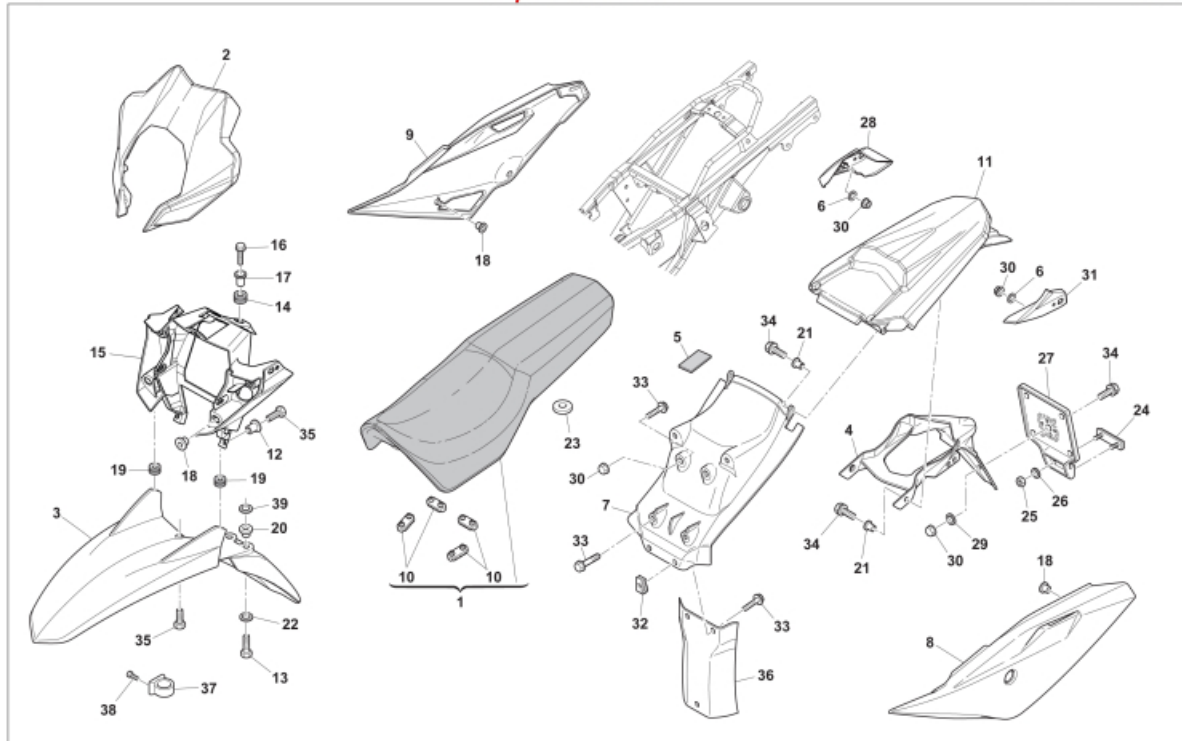**Superdual 2017 E4**TAVOLA - DRAWING
TABLE - BILD - TABLA**22**

Pagina emessa Dicembre '17 - Page issued December '17 - Page imprimée Décembre '17 - Seite Herasgegeben Dezember '17 - Pagina emitida Diciembre '17

74

OBSOLETE : F000A03170_P : SWM-SEAT ASSY
 F000A02153 (u. 1) - SUPERDUAL - T

OBSOLETE**1**

SWM-SEAT ASSY
 F000A03170_P (u. 1)

2

SWM-HEADLIGHT FAIRING ASSEMBLY SD-T,X BLACK
 FA00A02184 (u. 1) - SUPERDUAL - T

3

SWM-FRONT FENDER SD-T
 80E0A4711 (u. 1) - SUPERDUAL - T

4

SWM-NUMBER PLATE SUPPORT
 8A00H1405 (u. 1) - SUPERDUAL - X, T

5

SWM-SEAT SILENTBLOCK SD
 800086004 (u. 1) - SUPERDUAL - X, T

6

SWM-WASHER 18x6.4x1
 62ND15549 (u. 1) - SUPERDUAL - X, T

7

SWM-INSIDE MUDGUARD
 8000H1268 (u. 1) - SUPERDUAL - X, T

8

SWM-LH PANEL ASSEMBLY SD-SILVER
 FB00A00948 (u. 1) - SUPERDUAL - T (SILVER)

9

SWM-RH PANEL ASSEMBLY SD-SILVER
 FB00A00950 (u. 1) - SUPERDUAL - T (SILVER)

10

SWM-RUBBER SEAT PAD
 86610191A (u. 4) - SUPERDUAL - X, T

11

SWM-REAR MUDGUARD SD-T SILVER
 F000P01011 (u. 1) - SUPERDUAL - T (SILVER)

12

SWM-SPACER D16-D9.5-D6.5x13
 800069235 (u. 2) - SUPERDUAL - X, T

13


SCREW TEF M6X1X20 CH8 PR7 - SWM/AJP
 Z00062728 (u. 6) - SUPERDUAL - X, T

14

SWM-VIBRATION DAMPING RUBBER
 8000H3250 (u. 1) - SUPERDUAL - X, T

15	SWM-HEADLAMP AND DASHBOARD HOLDER 8000H1275 (u. 1) - SUPERDUAL - X, T (BLACK/SILVER)
16	SCREW TEF M6X1X25 CH8 PR7 - SWM/AJP Z00062729 (u. 1) - SUPERDUAL - X, T
17	SWM-BUSH D8-D6.2-L14 8000H3251 (u. 1) - SUPERDUAL - X, T
18	SWM-DAMPING RUBBER FOR PANEL FASTENING 24x13x9 800041874 (u. 6) - SUPERDUAL - X, T
19	SWM-FRONT FENDER SILENTBLOCK 800095128 (u. 2) - SUPERDUAL - X, T
20	SWM-SPACER WITH COLLAR 9x7x4.8 Z00069429 (u. 2) - SUPERDUAL - X, T
21	SWM-NUMBER PLATE SUPPORT SPACER 8CA0H3017 (u. 4) - SUPERDUAL - X, T
22	SWM-WASHER 18x6.4x2 Z00048814 (u. 2) - SUPERDUAL - X, T
23	SWM-RUBBER WASHER 8A00H2959 (u. 1) - SUPERDUAL - X, T
24	SWM-REFLEX REFLECTOR 800073834 (u. 1) - SUPERDUAL - X, T
25	SWM-NUT M4x0.7x6-CH7 Z00040717 (u. 2) - SUPERDUAL - X, T
26	SWM-WASHER 12x4.3x0.8 62ND15547 (u. 2) - SUPERDUAL - X, T
27	SWM-NUMBER PLATE 8000H3018 (u. 1) - SUPERDUAL - X, T
28	SWM-TURN INDICATOR BRACKET RH SD FA00P01552 (u. 1) - SUPERDUAL - X, T
29	SWM-WASHER 18x6.4x1 62ND15549 (u. 2) - SUPERDUAL - X, T
30	SWM-SELF LOCKING FLANGE NUT M6x1x7-CH10 Z00044240 (u. 4) - SUPERDUAL - X, T
31	SWM-TURN INDICATOR BRACKET LH SD F000P01552 (u. 1) - SUPERDUAL - X, T
32	SWM-CLIP NUT M6x1 U00046893 (u. 2) - SUPERDUAL - X, T
33	SWM-SCREW WITH NECK M6x1x12 8A00A8423 (u. 6) - SUPERDUAL - X, T
34	SWM-HEX FLANGE SCREW M6x1x16-CH8 Z00062727 (u. 2) - SUPERDUAL - X, T
35	SCREW TEF M6X1X20 CH8 PR7 - SWM/AJP Z00062728 (u. 6) - SUPERDUAL - X, T
36	SWM-SHOCK ABSORBER PROTECTION 800069551 (u. 1) - SUPERDUAL - X, T
37	SWM-FRONT BRAKE CABLE GUIDE SD 8000A0864 (u. 1) - SUPERDUAL - X, T
38	SWM-SELF TAPPING SCREW 3.5x13 ZA0037283 (u. 2) - SUPERDUAL - X, T
39	SWM-WASHER 18x6.4x2 Z00048814 (u. 2) - SUPERDUAL - X, T

 GAS TANK, PANEL

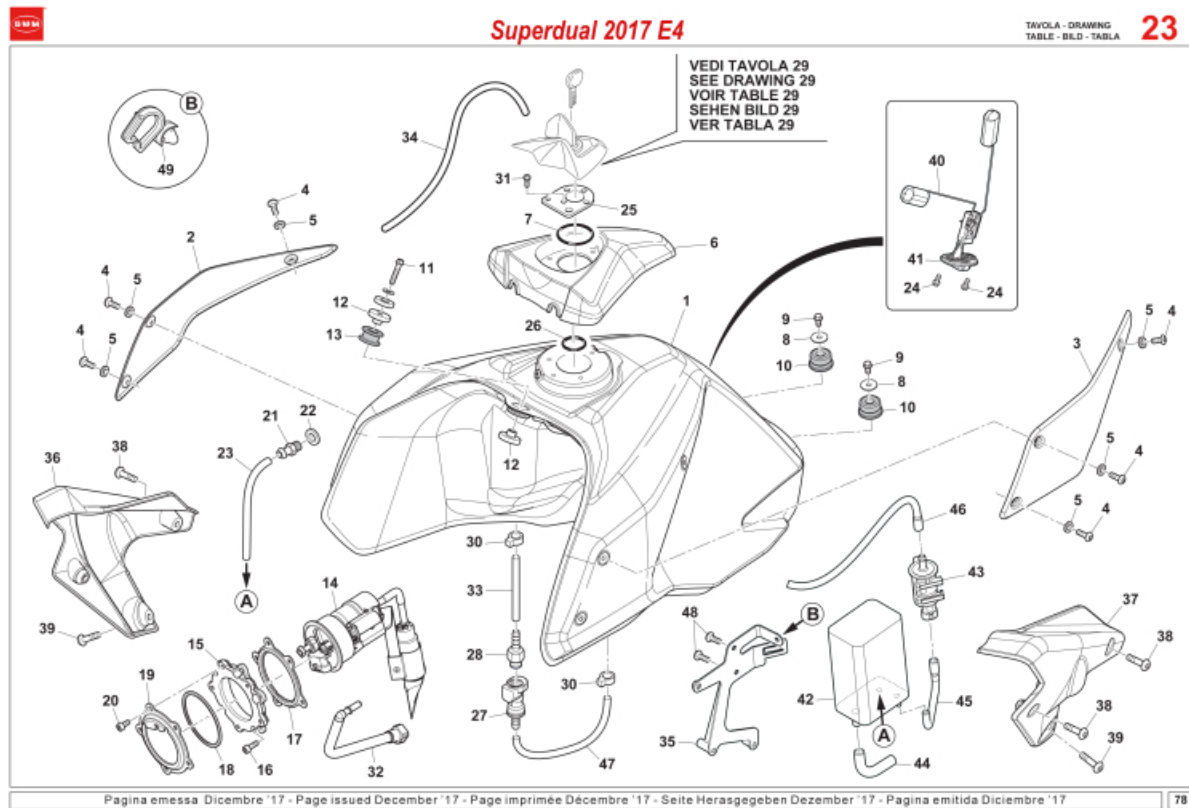

1	SWM-FUEL TANK ASSY SD-T SILVER F000A02187 (u. 1) - SUPERDUAL - T (SILVER)
4	SWM-SCREW M5x0.8x12 ZA0059572 (u. 6) - SUPERDUAL - X, T
5	SWM-INSULATING WASHER Di4.7 De14 8A0035112 (u. 6) - SUPERDUAL - X, T
6	SWM-FUEL TANK TOP COVER F000P01154 (u. 1) - SUPERDUAL - X, T
7	SWM-OR FUEL TANK TOP COVER F000P01576 (u. 1) - SUPERDUAL - X, T
8	SWM-WASHER 22x6.5x1 Z00059801 (u. 2) - SUPERDUAL - X, T
9	SWM-HEX FLANGE SCREW M6x1x12-CH8 ZH0067545 (u. 2) - SUPERDUAL - X, T
10	SWM-SILENT-BLOCK F000P01570 (u. 2) - SUPERDUAL - X, T
11	SWM-HEX FLANGE SCREW M8x1.25x30-CH10 8A00B1959 (u. 4) - SUPERDUAL - X, T
12	SWM-FUEL TANK UNION BUSHING F000P02163 (u. 2) - SUPERDUAL - X, T
13	SWM-SILENTBLOCK D=30-22-12.L=3+10.5+3 800089302 (u. 1) - SUPERDUAL - X, T
14	SWM-FUEL PUMP F000P01197 (u. 1) - SUPERDUAL - X, T
15	SWM-FUEL PUMP FLANGE F000P01230 (u. 1) - SUPERDUAL - X, T
16	SWM-SCREW M6x1x16-CH5 60ND07335 (u. 5) - SUPERDUAL - X, T
17	SWM-FUEL PUMP FLANGE GASKET F000P02488 (u. 1) - SUPERDUAL - X, T

18	SWM-FUEL PUMP GASKET 8C00H1186 (u. 1) - SUPERDUAL - X, T	
19	SWM-FUEL PUMP FLANGE RETAINER F000P01377 (u. 1) - SUPERDUAL - X, T	
20	SWM-SCREW M6x1x12 60ND02505 (u. 5) - SUPERDUAL - X, T	
21	SWM-THREADED CONNECTION FOR BREATHE 8000A4031 (u. 1) - SUPERDUAL - X, T	
22	SWM-WASHER 11x6.1x1 62N015673 (u. 1) - SUPERDUAL - X, T	
23	SWM-RUBBER HOSE 5x9x730 FB00P02214 (u. 1) - SUPERDUAL - X, T	
24	SWM-HEX FLANGE SCREW M6x1x16-CH8 Z00062727 (u. 2) - SUPERDUAL - X, T	
25	SWM-TANK CAP FLANGE 8000A7409 (u. 1) - SUPERDUAL - X, T	
26	SWM-SEAL RING 49.5 3 8A00A9701 (u. 1) - SUPERDUAL - X, T	
27	SWM-FEMALE JOIN WITH VALVE F000P02400 (u. 1) - SUPERDUAL - X, T	
28	SWM-MALE JOIN WITH VALVE F000P02399 (u. 1) - SUPERDUAL - X, T	
29	SWM-SELF LOCKING FLANGE NUT M6x1x7-CH10 Z00044240 (u. 2) - SUPERDUAL - X, T	
30	SWM-CLAMP CLIC CLST 110 8A00H1981 (u. 2) - SUPERDUAL - X, T	
31	SWM-SCREW M5x0.8-L14 Z00065535 (u. 4) - SUPERDUAL - X, T	
32	SWM-WITH FAST CONNECTOR F000P01575 (u. 1) - SUPERDUAL - X, T	
33	SWM-FUEL PIPE L210 8A0094010 (u. 1) - SUPERDUAL - X, T	
34	SWM-FUEL PIPE F000P02472 (u. 1) - SUPERDUAL - X, T	
35	SWM-CANISTER BRACKET F000P01945 (u. 1) - SUPERDUAL - X, T	
36	SWM-RH RADIATOR CONVEYOR F000P01420 (u. 1) - SUPERDUAL - X, T	
37	SWM-LH RADIATOR CONVEYOR FA00P01420 (u. 1) - SUPERDUAL - X, T	
38	SWM-SCREW M6x1x18 60ND02508 (u. 4) - SUPERDUAL - X, T	
39	SWM-TCEI SCREW M6x1x20-CH5 60ND02509 (u. 2) - SUPERDUAL - X, T	
40	SWM-FUEL LEVEL SENSOR FA00A01948 (u. 1) OBSOLETE : FA00A01948 : SWM-FUEL SENSOR LEVEL F000A01948 (u. 1) - SUPERDUAL - X, T	OBSOLETE
41	SWM-FUEL SENSOR GASKET F000P01949 (u. 1) - SUPERDUAL - X, T	
42	SWM-CANISTER SD 18210018 (u. 1) - SUPERDUAL - X, T	
43	SWM-SOLENOID VALVE 31350090 (u. 1) - SUPERDUAL - X, T	
44	SWM-CANISTER HOSE WITH CLIPS, OUT F000P02151 (u. 1) - SUPERDUAL - X, T	

2020 - SUPERDUAL T (SILVER)

45	SWM-SOLENOID VALVE HOSE WITH CLIPS F000P01943 (u. 1) - <i>SUPERDUAL - X, T</i>
46	SWM-CANISTER HOSE TO INTAKE MANIFOLD WITH CLIPS F000P01944 (u. 1) - <i>SUPERDUAL - X, T</i>
47	SWM-FUEL PIPE L140 8I0094010 (u. 1) - <i>SUPERDUAL - X, T</i>
48	SCREW TCEI M6X10 PR7 - SWM/AJP Z00055699 (u. 2) - <i>SUPERDUAL - X, T</i>
49	SWM-HOSE FIXING CLIP F000P02200 (u. 3) - <i>SUPERDUAL - X, T</i>


EXHAUST SYSTEM



Superdual 2017 E4

TAVOLA - DRAWING
TABLE - BILD - TABLA

 24

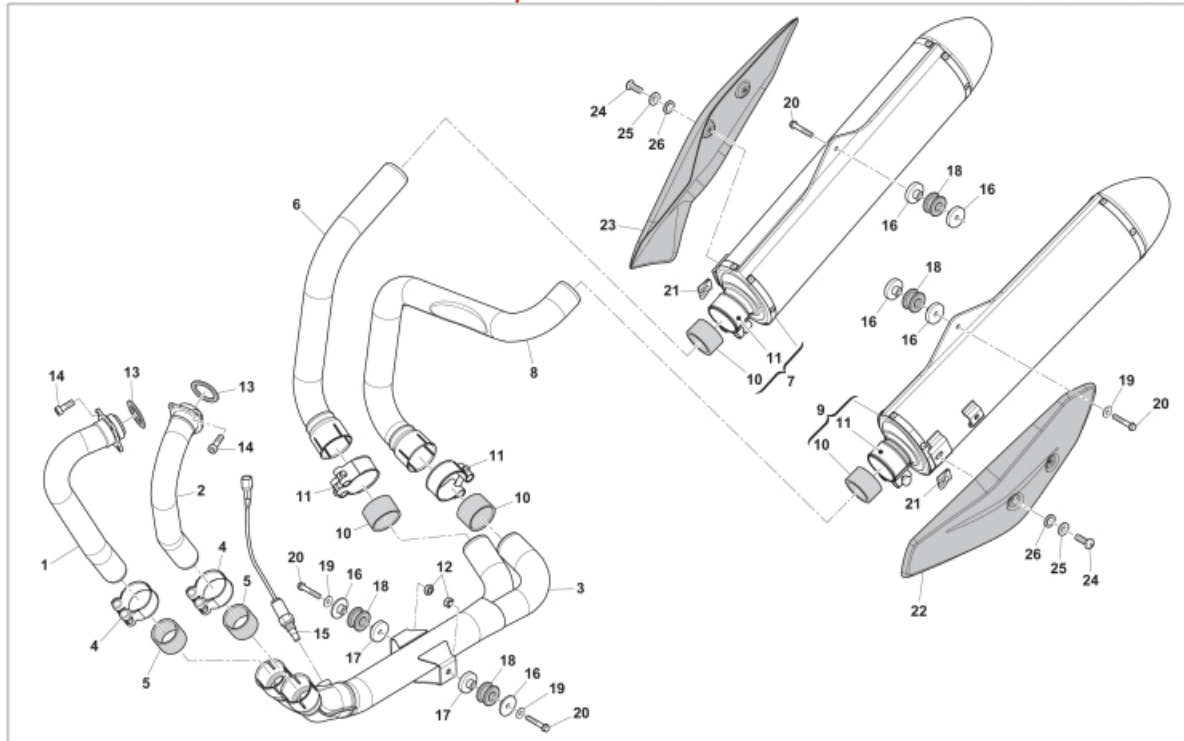

Pagina emessa Dicembre '17 - Page issued December '17 - Page imprimée Décembre '17 - Seite Herasgegeben Dezember '17 - Pagina emitida Diciembre '17

82

- | | |
|----|--|
| 1 | SWM-EXHAUST RH MANIFOLD
F000P00962 (u. 1) - SUPERDUAL - X, T |
| 2 | SWM-EXHAUST LH MANIFOLD
F000P00963 (u. 1) - SUPERDUAL - X, T |
| 3 | SWM-EXHAUST CENTRAL PIPE
F000P00964 (u. 1) - SUPERDUAL - X, T |
| 4 | SWM-CLAMP D44
8000H2219 (u. 2) - SUPERDUAL - X, T |
| 5 | SWM-HEADER GASKET
8000H1864 (u. 2) - SUPERDUAL - X, T |
| 6 | SWM-RH EXHAUST PIPE
F000P00965 (u. 1) - SUPERDUAL - X, T |
| 7 | SWM-RH EXHAUST SILENCER
FA00P00468 (u. 1) - SUPERDUAL - X, T |
| 8 | SWM-LH EXHAUST PIPE
F000P00966 (u. 1) - SUPERDUAL - X, T |
| 9 | SWM-LH EXHAUST SILENCER
F000P00467 (u. 1) - SUPERDUAL - X, T |
| 10 | SWM-SILENCER GASKET
8000H3876 (u. 4) - SUPERDUAL - X, T |
| 11 | SWM-CLAMP D48
8000H2220 (u. 4) - SUPERDUAL - X, T |
| 12 | SWM-SELF LOCKING FLANGE NUT M6x1x7-CH10
Z00044240 (u. 2) - SUPERDUAL - X, T |
| 13 | EXHAUST GASKET D38-D31 PR7 + SPR510CC - SWM/AJP
8A00A0873 (u. 2) - SUPERDUAL - X, T |
| 14 | SWM-TCEI SCREW M6x1x20-CH5
60ND02509 (u. 4) - SUPERDUAL - X, T |
| 15 | SWM-OXYGEN SENSOR SD
F000P01987 (u. 1) - SUPERDUAL - X, T |

16	SWM-MUFFLER SPACER 8C00A7729 (u. 6) - SUPERDUAL - X, T
17	SWM-EXHAUST PIPE SPACER 8D00A7729 (u. 2) - SUPERDUAL - X, T
18	SWM-SILENTBLOCK D=30-22-12.L=3+10.5+3 800089302 (u. 4) - SUPERDUAL - X, T
19	SWM-WASHER 20x6.4x1.5 800022271 (u. 8) - SUPERDUAL - X, T
20	SWM-HEX FLANGE SCREW M6x1x40-CH8 ZE0067545 (u. 4) - SUPERDUAL - X, T
21	SWM-CLIP NUT M6x1 U00046893 (u. 4) - SUPERDUAL - X, T
22	SWM-LH SILENCER HEAT GUARD ASSY F000A01060 (u. 1) - SUPERDUAL - X, T
23	SWM-RH SILENCER HEAT GUARD ASSY F000A01061 (u. 1) - SUPERDUAL - X, T
24	SWM-SCREW M6x1x14 Z00055703 (u. 4) - SUPERDUAL - X, T
25	SWM-WASHER 12x6.4x0.5 62N115778 (u. 4) - SUPERDUAL - X, T
26	SWM-INSULATING WASHER 14x5.5x2 800035112 (u. 4) - SUPERDUAL - X, T


FRONT HYDRAULIC BRAKE



Superdual 2017 E4

TAVOLA - DRAWING
TABLE - BILD - TABLA

 25

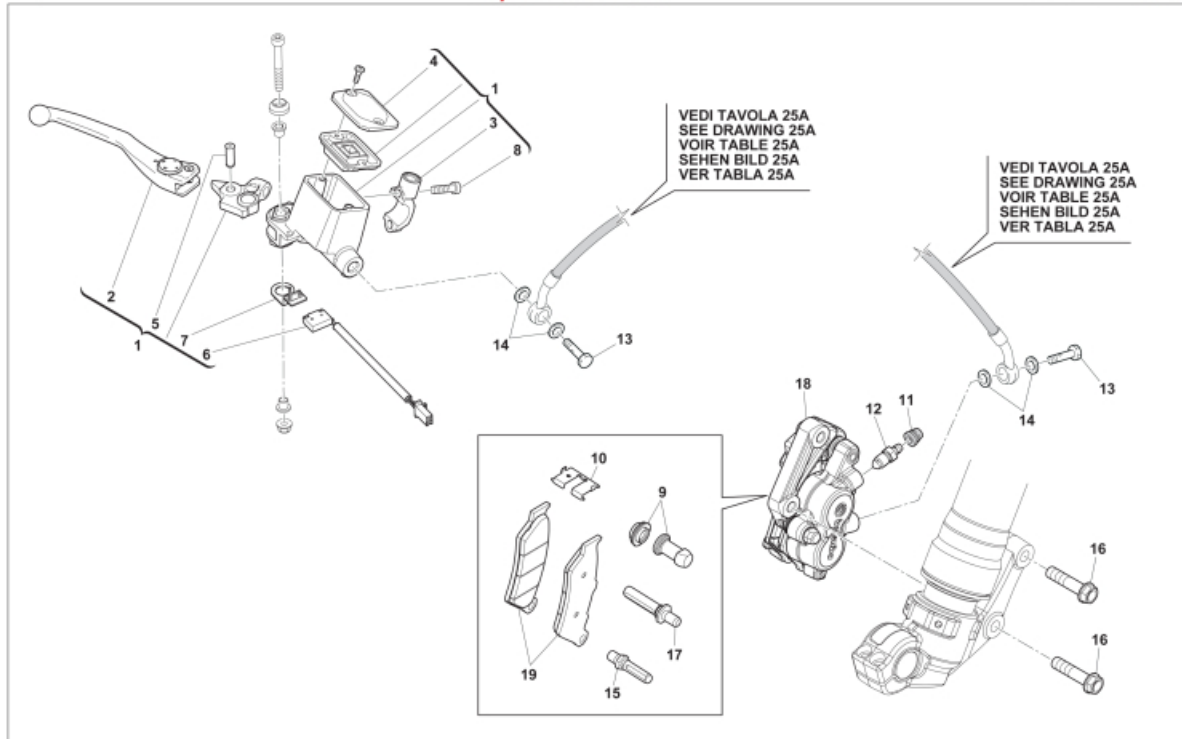

Pagina emessa Dicembre '17 - Page issued December '17 - Page imprimée Décembre '17 - Seite Herausgegeben Dezember '17 - Pagina emitida Diciembre '17


84

- | | |
|----|--|
| 1 | SWM-MASTER CYLINDER ASSY
FA00P00942 (u. 1) - SUPERDUAL - X, T |
| 2 | SWM-MASTER CYLINDER LEVER
F000P01172 (u. 1) - SUPERDUAL - X, T |
| 3 | SWM-MASTER CYLINDER CLAMP
F000P01173 (u. 1) - SUPERDUAL - X, T |
| 4 | SWM-MASTER CYLINDER RESERVOIR CAP
F000P01174 (u. 1) - SUPERDUAL - X, T |
| 5 | SWM-MASTER CYLINDER LEVER PIN
F000P01175 (u. 1) - SUPERDUAL - X, T |
| 6 | SWM-CABLED MICROSWITCH
FA00P01176 (u. 1) - SUPERDUAL - X, T |
| 7 | SWM-MICROSWITCH HOLDER
F000P01177 (u. 1) - SUPERDUAL - X, T |
| 8 | SCREW TEF M6X1X25 CH8 PR7 - SWM/AJP
Z00062729 (u. 1) - SUPERDUAL - X, T |
| 9 | SWM-CAPS OVERHAUL SET
800079066 (u. 1) - SUPERDUAL - X, T |
| 10 | SWM-BRAKE PAD CLIP SD
F000P01171 (u. 1) - SUPERDUAL - X, T |
| 11 | SWM-DUST SEAL SD
800048432 (u. 1) - SUPERDUAL - X, T |
| 12 | SWM-BLEEDER SCREW
F000P01170 (u. 1) - SUPERDUAL - X, T |
| 13 | SWM-BRAKE PIPE SCREW M10x1x19-CH14
U00057155 (u. 2) - SUPERDUAL - X, T |
| 14 | SEALING WASHER PR7 - SWM/AJP
800021480 (u. 4) - SUPERDUAL - X, T |
| 15 | SWM-PIN RETAINER SD
8000A0936 (u. 1) - SUPERDUAL - X, T |

2020 - SUPERDUAL T (SILVER)

16	SWM-TEF SCREW M10x1.25x43-CH14 ZH0062797 (u. 2) - <i>SUPERDUAL - X, T</i>
17	SWM-PIN AND SPLIT PIN SD 8000A0933 (u. 1) - <i>SUPERDUAL - X, T</i>
18	SWM-FRONT CALIPER ASSY SD F000A00958 (u. 1) - <i>SUPERDUAL - X, T</i>
19	SWM-BRAKE PADS F000P01167 (u. 1) - <i>SUPERDUAL - X, T</i>

 
ABS SYSTEM

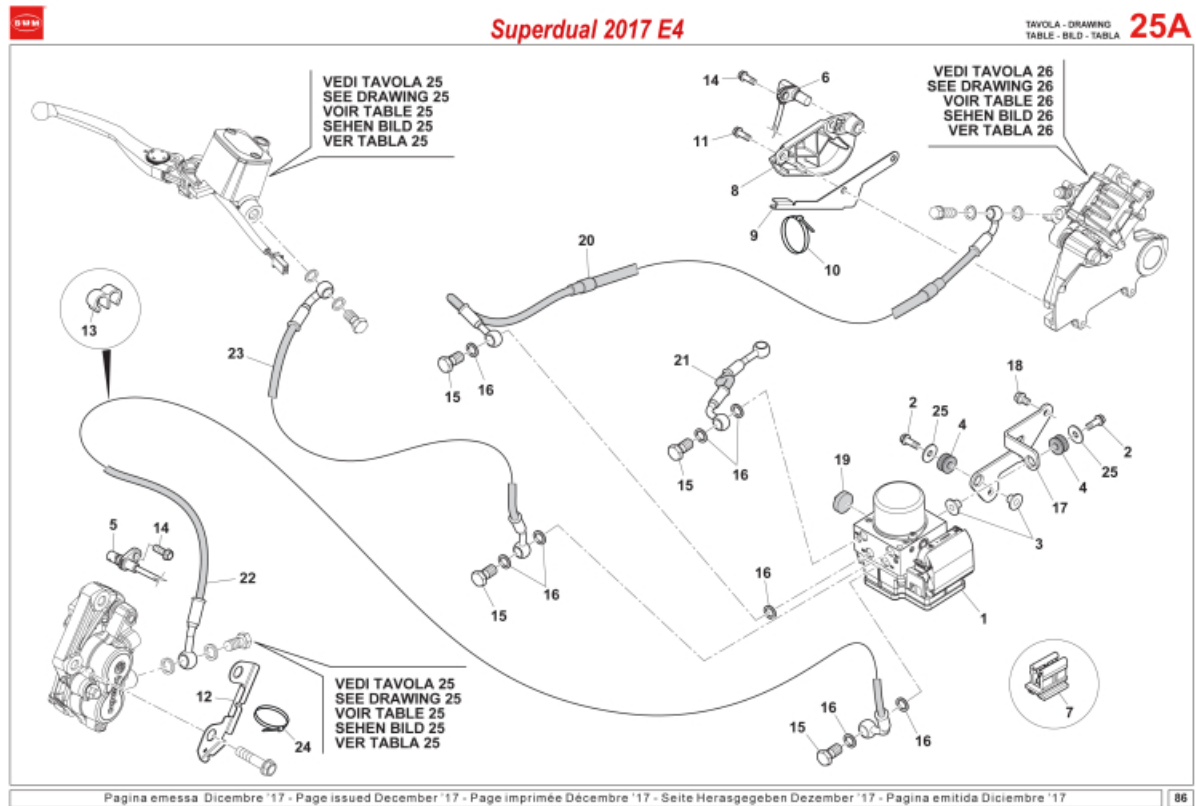

- | | |
|----|--|
| 1 | SWM-ABS SD ECU T
FB00P01023 (u. 1) - SUPERDUAL - T |
| 2 | SWM-SCREW M6x14-CH8
Z00062726 (u. 2) - SUPERDUAL - X, T |
| 3 | SWM-SPACER WITH COLLAR
8000B2799 (u. 2) - SUPERDUAL - X, T |
| 4 | SWM-PASSENGER HANDLE SILENTBLOCK
800041862 (u. 3) - SUPERDUAL - X, T |
| 5 | SWM-FRONT SPEED SENSOR
E000P02175 (u. 1) - SUPERDUAL - X, T |
| 6 | SWM-REAR SPEED SENSOR
F000P01041 (u. 1) - SUPERDUAL - X, T |
| 7 | SWM-ABS CONNECTOR CLIP
E000P02492 (u. 1) - SUPERDUAL - X, T |
| 8 | SWM-SPEED SENSOR BRACKET
F000P01044 (u. 1) - SUPERDUAL - X, T |
| 9 | SWM-ABS CABLE RETAINER
F000P02176 (u. 1) - SUPERDUAL - X, T |
| 10 | SWM-ABS CABLE TIE
800056783 (u. 2) - SUPERDUAL - X, T |
| 11 | SWM-SCREW TTEI M6x16-CH4
ZB0061070 (u. 2) - SUPERDUAL - X, T |
| 12 | SWM-ABS SPEED SENSOR CABLE RETAINING PLATE
F000P02554 (u. 1) - SUPERDUAL - X, T |
| 13 | SWM-WIRING CLIP
8000A0664 (u. 1) - SUPERDUAL - X, T |
| 14 | SWM-SCREW M6x14-CH8
Z00062726 (u. 2) - SUPERDUAL - X, T |
| 15 | SWM-BRAKE PIPE SCREW M10x19-CH14
U00057155 (u. 4) - SUPERDUAL - X, T |

16	SEALING WASHER PR7 - SWM/AJP 800021480 (u. 8) - <i>SUPERDUAL - X, T</i>
17	SWM-ABS ECU BRACKET F000P01649 (u. 1) - <i>SUPERDUAL - X, T</i>
18	SWM-TEF SCREW M6x1x10-CH8 Z00062725 (u. 2) - <i>SUPERDUAL - X, T</i>
19	SWM-ABS ECU SILENTBLOCK F000P02186 (u. 1) - <i>SUPERDUAL - X, T</i>
20	SWM-BRAKE HOSE REAR CALIPER F000P01051 (u. 1) - <i>SUPERDUAL - X, T</i>
21	SWM-BRAKE HOSE REAR MASTER CYLINDER F000P01052 (u. 1) - <i>SUPERDUAL - X, T</i>
22	SWM-BRAKE HOSE FRONT CALIPER F000P01049 (u. 1) - <i>SUPERDUAL - X, T</i>
23	SWM-BRAKE HOSE FRONT MASTER CYLINDER F000P01050 (u. 1) - <i>SUPERDUAL - X, T</i>
24	SWM-HOSE CLAMP L=25 800092668 (u. 3) - <i>SUPERDUAL - X, T</i>
25	SWM-WASHER 18x6.4x1 62ND15549 (u. 3) - <i>SUPERDUAL - X, T</i>

 REAR HYDRAULIC BRAKE

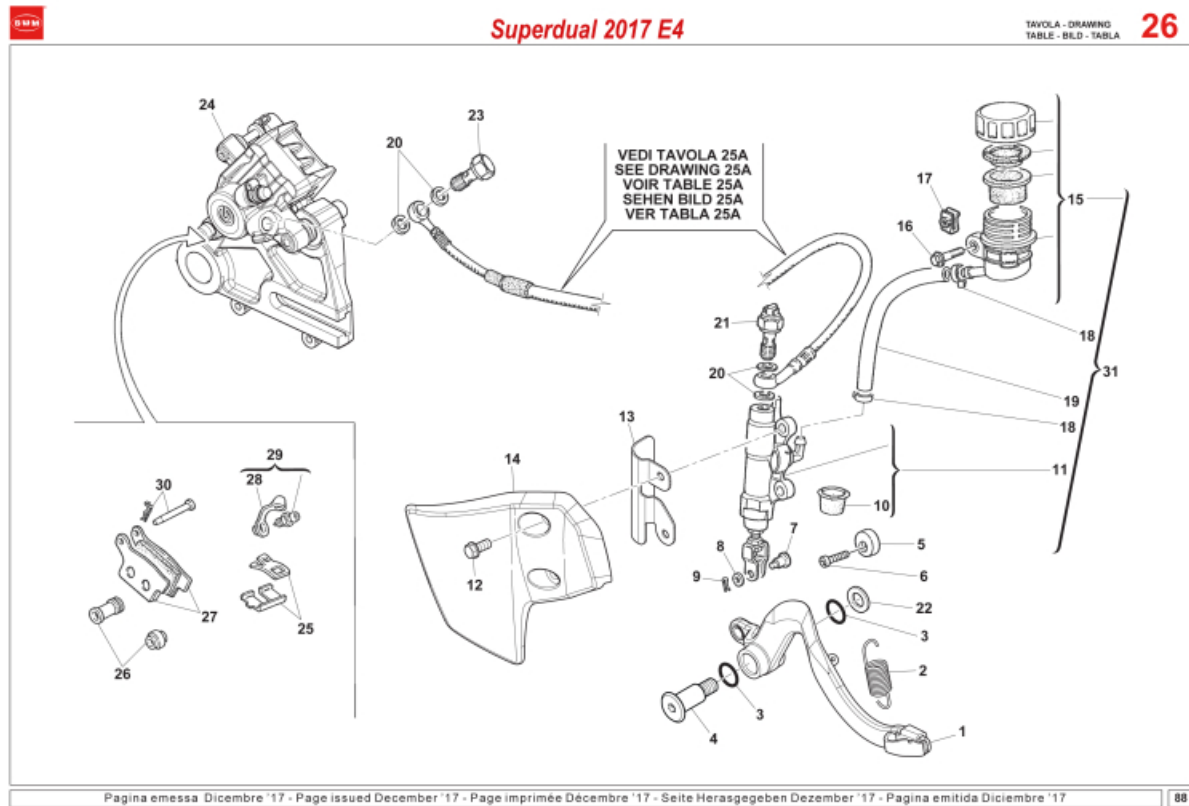

1	SWM-BRAKE CONTROL PEDAL SD F000A01663 (u. 1) - SUPERDUAL - X, T
2	SWM-BRAKE PEDAL SPRING SD 800055903 (u. 1) - SUPERDUAL - X, T
3	SWM-O-RING 2056 1.78x14 (NBR) 800022551 (u. 2) - SUPERDUAL - X, T
4	SWM-SCREW M10x1.25x16+24.8 Y00055902 (u. 1) - SUPERDUAL - X, T
5	SWM-CAM FOR BRAKING 8A0069125 (u. 1) - SUPERDUAL - X, T
6	SWM-TSEI SCREW M6x1x14-CH5 Y00055241 (u. 1) - SUPERDUAL - X, T
7	SWM-PIN D8x20 800070696 (u. 1) - SUPERDUAL - X, T
8	WASHER (16X8.3X1) - SWM/AJP Z00056377 (u. 1) - SUPERDUAL - X, T
9	SWM-SPLIT PIN L18x1.8 64ND20068 (u. 1) - SUPERDUAL - X, T
10	SWM-HOOD 800079075 (u. 1) - SUPERDUAL - X, T
11	SWM-REAR BRAKE PUMP 800076338 (u. 1) - SUPERDUAL - X, T
12	SWM-SCREW M6x1x16-CH8 8B00A8423 (u. 2) - SUPERDUAL - X, T
13	SWM-REAR BRAKE PUMP HEAT PROTECTION F000P01199 (u. 2) - SUPERDUAL - X, T
14	SWM-REAR BRAKE M/C PROTECTION F000P01122 (u. 1) - SUPERDUAL - X, T
15	SWM-BRAKE OIL TANK 800061078 (u. 1) - SUPERDUAL - X, T

16	SWM-HEX FLANGE SCREW M6x1x16-CH8 Z00062727 (u. 1) - SUPERDUAL - X, T
17	SWM-CLIP NUT M6x1 U00046893 (u. 1) - SUPERDUAL - X, T
18	SWM-CLAMP 800042349 (u. 2) - SUPERDUAL - X, T
19	SWM-RUBBER PIPE D6.5X10.5-L300 8L0066179 (u. 1) - SUPERDUAL - X, T
20	SEALING WASHER PR7 - SWM/AJP 800021480 (u. 4) - SUPERDUAL - X, T
21	SWM-REAR STOP SWITCH 800094849 (u. 1) - SUPERDUAL - X, T
22	SWM-WASHER 10.5x25x2 8000H1412 (u. 1) - SUPERDUAL - X, T
23	SWM-BRAKE PIPE SCREW M10x1x19-CH14 U00057155 (u. 1) - SUPERDUAL - X, T
24	SWM-REAR CALIPER ASSY SD F000A00315 (u. 1) - SUPERDUAL - X, T
25	SWM-BRAKE PAD SUPPORT SD 800085932 (u. 1) - SUPERDUAL - X, T
26	SWM-CAPS OVERHAUL SET 800079066 (u. 1) - SUPERDUAL - X, T
27	SWM-REAR BRAKE PAD SET SD 8000A9231 (u. 1) - SUPERDUAL - X, T
28	SWM-BLEEDER VALVE CAP 800053259 (u. 1) - SUPERDUAL - X, T
29	SWM-DRAIN KIT 8000A0931 (u. 1) - SUPERDUAL - X, T
30	SWM-PIN AND SPLIT PIN SD 8000A0933 (u. 1) - SUPERDUAL - X, T
31	SWM-REAR BRAKE PUMP ASSY SD 8A0076026 (u. 1) - SUPERDUAL - X, T


FRONT WHEEL



Superdual 2017 E4

TAVOLA - DRAWING
TABLE - BILD - TABLA

 27

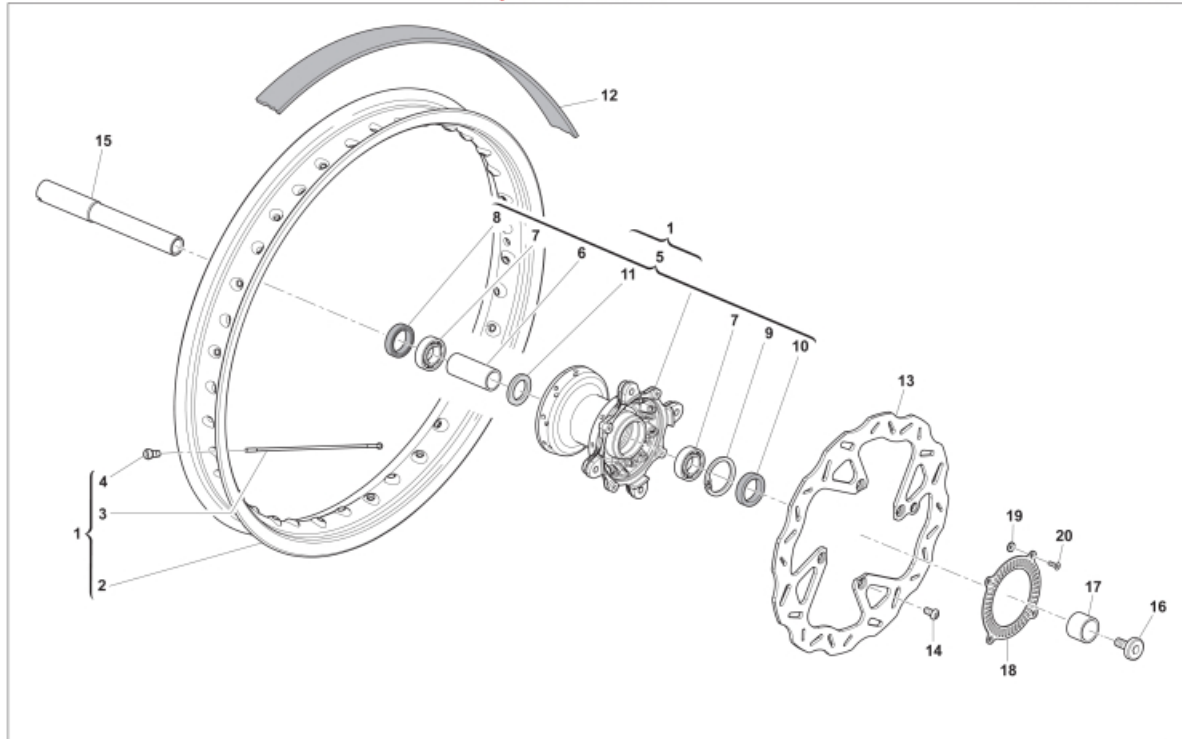

Pagina emessa Dicembre '17 - Page issued December '17 - Page imprimée Décembre '17 - Seite Herasgegeben Dezember '17 - Pagina emitida Diciembre '17

90

1 SWM-FRONT WHEEL ASSY WITHOUT TIRE SD-T
F000A01873 (u. 1) - SUPERDUAL - T

2 SWM-FRONT WHEEL RIM 2.5"X19"
F000P00055 (u. 1) - SUPERDUAL - T

3 SWM-FRONT WHEEL SPOKE SD-T
F000P00056 (u. 36) - SUPERDUAL - T

4 SWM-NIPPLE 6.53x4.1x18
69N429004 (u. 36) - SUPERDUAL - T

5 SWM-FRONT WHEEL HUB ASSY SD
F000A01823 (u. 1) - SUPERDUAL - T

6 SWM-HUB BEARING SPACER SD
F000P00120 (u. 1) - SUPERDUAL - T

7 SWM-BALL BEARING
800084938 (u. 2) - SUPERDUAL - T

8 SWM-SEAL RING 42x28x7
8000H6187 (u. 1) - SUPERDUAL - T

9 SWM-CIRCLIP 42mm DIN472
66N021270 (u. 1) - SUPERDUAL - T

10 SWM-SEAL RING 42x32x7
800022966 (u. 1) - SUPERDUAL - T

11 SWM-WHEEL INNER SPACER SUPPORT
F000P00121 (u. 1) - SUPERDUAL - T

12 SWM-FRONT WHEEL RIM BAND SD-T
800010777 (u. 1) - SUPERDUAL - T

13 SWM-FRONT BRAKE DISC SD
F000P00957 (u. 1) - SUPERDUAL - T


14 SWM-SCREW M8x1.25x16
YA0092876 (u. 4) - SUPERDUAL - T

15 SWM-FRONT WHEEL PIN
FA00P00058 (u. 1) - SUPERDUAL - T

2020 - SUPERDUAL T (SILVER)

16	SWM-FRONT PIN PLUG M20 800096933 (u. 1) - <i>SUPERDUAL - T</i>
17	SWM-FRONT WHEEL SPACER 8A0096930 (u. 1) - <i>SUPERDUAL - T</i>
18	SWM-FRONT HUB TONE WHEEL F000P01032 (u. 1) - <i>SUPERDUAL - T</i>
19	SWM-DISC BRAKE SPACER F000P01792 (u. 4) - <i>SUPERDUAL - T</i>
20	SWM-HEX COUNTERSUNK HEAD SCREW M4x12 8000H5785 (u. 4) - <i>SUPERDUAL - T</i>

 REAR WHEEL

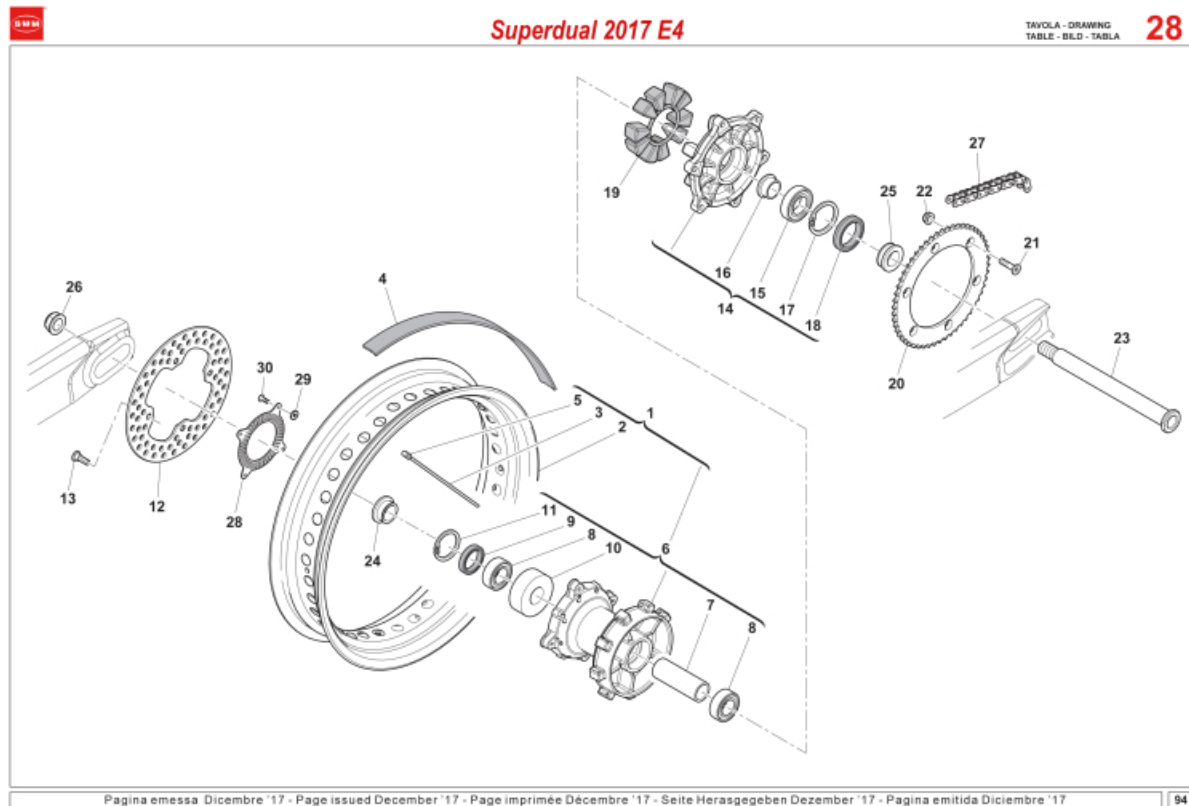

1 OBSOLETE : F000A01872_P : REAR WHEEL ASSY WITHOUT TIRE
F000A01874 (u. 1) - SUPERDUAL - T

OBSOLETE

2 SWM-REAR WHEEL RIM 3.5"X17"
F000P00061 (u. 1) - SUPERDUAL - T

3 SWM-REAR WHEEL SPOKE-B SD-T
F000P00063 (u. 18) - SUPERDUAL - T

SWM-REAR WHEEL SPOKE-A SD-T
8000H1725 (u. 18) - SUPERDUAL - T

4 SWM-GASKET FOR AIR TUBE PROTECTION
8B0082879 (u. 1) - SUPERDUAL - T

5 SWM-NIPPLE 4x19
69N429005 (u. 36) - SUPERDUAL - T

6 SWM-REAR WHEEL HUB ASSY SD
F000A01875 (u. 1) - SUPERDUAL - T

7 SWM-INNER SPACER
F000P00998 (u. 1) - SUPERDUAL - T

8 SWM-BALL BEARING 25x47x16
8B0026846 (u. 2) - SUPERDUAL - T

9 SWM-SEAL RING 47x32x7
800089572 (u. 1) - SUPERDUAL - T

10 SWM-WHEEL INNER SPACER SUPPORT
F000P00121 (u. 1) - SUPERDUAL - T

11 SWM-CIRCLIP 50.5x1.75
66N021272 (u. 1) - SUPERDUAL - T

12 SWM-REAR BRAKE DISC SD
800088887 (u. 1) - SUPERDUAL - T

13 SWM-SCREW M6x1x11
800055878 (u. 4) - SUPERDUAL - T

14 SWM-SPROKET SUPPORT FLANGE ASSY
F000A01001 (u. 1) - SUPERDUAL - T

15	SWM-RADIAL BALL BEARING 55x30x13 F000P00999 (u. 1) - <i>SUPERDUAL - T</i>
16	SWM-SPACER 30x25 F000P01000 (u. 1) - <i>SUPERDUAL - T</i>
17	SWM-CIRCLIP D55x2 66N021276 (u. 1) - <i>SUPERDUAL - T</i>
18	SWM-SEAL RING 55-D38x7 F000P01098 (u. 1) - <i>SUPERDUAL - T</i>
19	SWM-RUBBER BUFFER 800082075 (u. 1) - <i>SUPERDUAL - T</i>
20	SWM-GEAR RING Z=38 8G0085291 (u. 1) - <i>SUPERDUAL - T</i>
21	SWM-SCREW M8x1.25x28-CH6 8000H0158 (u. 6) - <i>SUPERDUAL - T</i>
22	SWM-BRAKED FLANGED NUT M8x1.25x8.5-CH12 Y00043928 (u. 6) - <i>SUPERDUAL - T</i>
23	SWM-REAR WHEEL PIN F000P00066 (u. 1) - <i>SUPERDUAL - T</i>
24	SWM-RH REAR HUB SPACER 800096938 (u. 1) - <i>SUPERDUAL - T</i>
25	SWM-LH REAR HUB SPACER F000P01099 (u. 1) - <i>SUPERDUAL - T</i>
26	SWM-NUT M20x1.5x15-CH27 Y00093072 (u. 1) - <i>SUPERDUAL - T</i>
27	SWM-TRANSMISSION CHAIN 110L SD FA00P01133 (u. 1) - <i>SUPERDUAL - T</i>
28	SWM-REAR HUB TONE WHEEL F000P01033 (u. 1) - <i>SUPERDUAL - T</i>
29	SWM-DISC BRAKE SPACER F000P01792 (u. 4) - <i>SUPERDUAL - T</i>
30	SWM-HEX COUNTERSUNK HEAD SCREW M4x12 8000H5785 (u. 4) - <i>SUPERDUAL - T</i>


DIGITAL INSTRUMENTS, LOCKS



Superdual 2017 E4

TAVOLA - DRAWING
TABLE - BILD - TABLA

 29

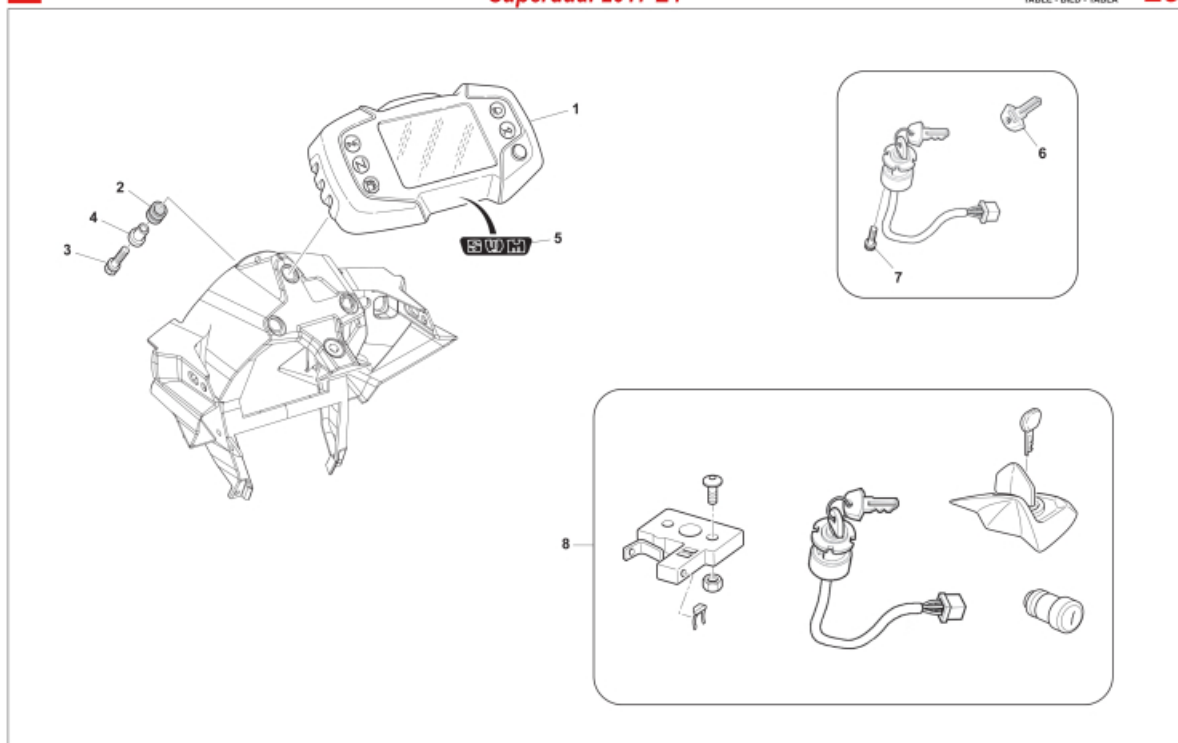

Pagina emessa Dicembre '17 - Page issued December '17 - Page imprimée Décembre '17 - Seite Herasgegeben Dezember '17 - Pagina emitida Diciembre '17


98

- | | |
|---|---|
| 1 | SWM-DASHBOARD SD
F000P01950 (u. 1) - SUPERDUAL - X, T |
| 2 | SWM-FRONT FENDER SILENTBLOCK
800095128 (u. 3) - SUPERDUAL - X, T |
| 3 | SWM-HEX FLANGE SCREW M5x0.8x16-CH8
ZA0067997 (u. 3) - SUPERDUAL - X, T |
| 4 | SWM-SPACER 14x7x5.25x10
8000B1774 (u. 3) - SUPERDUAL - X, T |
| 5 | SWM-DASHBOARD DECAL
F000P00186 (u. 1) - SUPERDUAL - X, T |
| 6 | SWM-RAW KEY
F000P01565 (u. 2)

OBSOLETE : F000P01565 : SWM-KEYS PAIR
F000P00195 (u. 2) - SUPERDUAL - X, T |
| 7 | SWM-SCREW M8x1.25x20
60ND02555 (u. 2) - SUPERDUAL - X, T |
| 8 | SWM-KEYS KIT
F000A01927 (u. 1) - SUPERDUAL - X, T |

OBSOLETE

 MAIN WIRING HARNESS

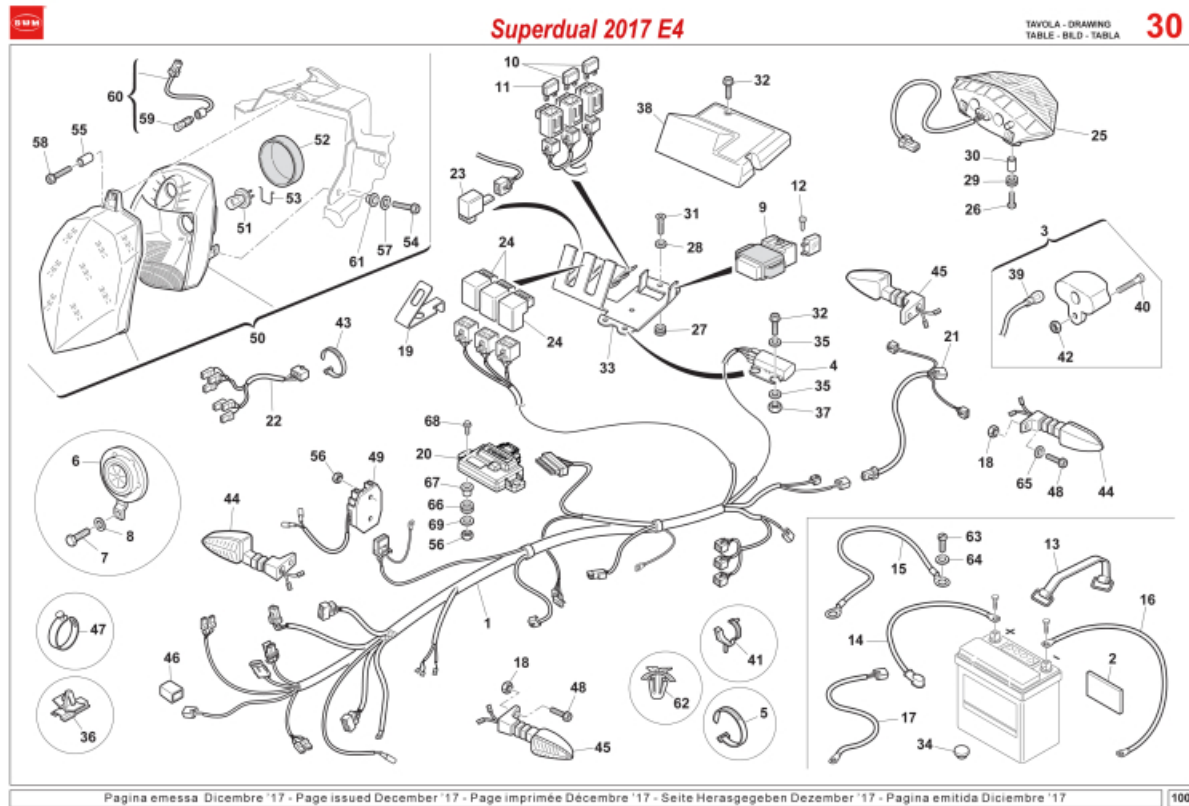


- | | |
|----|--|
| 1 | SWM-MAIN HARNESS
E000P01941 (u. 1) - SUPERDUAL - X, T |
| 2 | SWM-SHIM FOR BATTERY
800057673 (u. 1) - SUPERDUAL - X, T |
| 3 | SWM-PLATE LIGHT
8000A0212 (u. 1) - SUPERDUAL - X, T |
| 4 | SWM-TILT SENSOR CUP SD
8000A6756 (u. 1) - SUPERDUAL - X, T |
| 5 | SWM-CABLE TIE L188
800056444 (u. 12) - SUPERDUAL - X, T |
| | SWM-HD CABLE TIE L188
8A0056444 (u. 9) - SUPERDUAL - X, T |
| 6 | SWM-HORN ASSY SD
E000A01753 (u. 1) - SUPERDUAL - X, T |
| 7 | SWM-SCREW M6x1x14-CH8
Z00062726 (u. 1) - SUPERDUAL - X, T |
| 8 | SWM-WASHER 18x6.4x2
Z00048814 (u. 1) - SUPERDUAL - X, T |
| 9 | SWM-STARTING RELAY
E000P02437 (u. 1) - SUPERDUAL - X, T |
| 10 | SWM-FUSE 15A
8F0095647 (u. 2) - SUPERDUAL - X, T |
| 11 | SWM-FUSE 20A
8G0095647 (u. 1) - SUPERDUAL - X, T |
| 12 | SWM-SCREW M5x0.8-L14
Z00065535 (u. 3) - SUPERDUAL - X, T |
| 13 | SWM-RUBBER CLAMP
800077612 (u. 1) - SUPERDUAL - X, T |
| 14 | SWM-START RELAY-BATTERY CABLE SD
8000H1868 (u. 1) - SUPERDUAL - X, T |

15	SWM-GROUND WIRE REAR FRAME - FRAME E000P02831 (u. 1) - SUPERDUAL - X, T
16	SWM-BATTERY GROUND TO FRAME E000P02378 (u. 1) - SUPERDUAL - X, T
17	SWM-GROUND FROM FRAME TO ENGINE E000P02379 (u. 1) - SUPERDUAL - X, T
18	SWM-SELF LOCKING FLANGE NUT M6x1x7-CH10 Z00044240 (u. 2) - SUPERDUAL - X, T
19	SWM-FUSE SUPPORT PLATE F000P02411 (u. 1) - SUPERDUAL - X, T
20	SWM-ECU E000P00814 (u. 1) - SUPERDUAL - X, T
21	SWM-HARNESS REAR LAMP SD E000P02377 (u. 1) - SUPERDUAL - X, T
22	SWM-FRONT LIGHT HARNESS 8000A6094 (u. 1) - SUPERDUAL - X, T
23	SWM-BLINKER UNIT SD 8000H1082 (u. 1) - SUPERDUAL - X, T
24	SWM-RELAY 8000A6749 (u. 3) - SUPERDUAL - X, T
25	SWM-TAIL LIGHT ASSY SD 8000H1418 (u. 1) - SUPERDUAL - X, T
26	SWM-HEX FLANGE SCREW M6x1x16-CH8 Z00062727 (u. 2) - SUPERDUAL - X, T
27	SWM-SILENTBLOCK 15.5x7x7 8000H2374 (u. 3) - SUPERDUAL - X, T
28	SWM- CONNECTOR BRAKET SPACER 800067245 (u. 3) - SUPERDUAL - X, T
29	SWM-FRONT FENDER SILENTBLOCK 800095128 (u. 2) - SUPERDUAL - X, T
30	SWM-TAIL LIGHT SPACER 8000H1735 (u. 2) - SUPERDUAL - X, T
31	SWM-SCREW M5x0.8-L14 Z00065535 (u. 3) - SUPERDUAL - X, T
32	SWM-SCREW M4x0.7x25 60ND01030 (u. 2) - SUPERDUAL - X, T
33	SWM-PLATE SUPPORT ELECTRIC USER 8000H1813 (u. 1) - SUPERDUAL - X, T
34	SWM-BATTERY SILENTBLOCK 800045490 (u. 3) - SUPERDUAL - X, T
35	SWM-WASHER 10.8x4.2x1.2 Z00038291 (u. 4) - SUPERDUAL - X, T
36	SWM-PLASTIC CLIP 8000H0644 (u. 1) - SUPERDUAL - X, T
37	SWM-NUT M4x0.7x6 Z00091033 (u. 2) - SUPERDUAL - X, T
38	SWM-COVER ASSY F000A02402 (u. 1) - SUPERDUAL - X, T
39	SWM-LAMP 12V-5W 800036230 (u. 1) - SUPERDUAL - X, T
40	SWM-TCEI SCREW M5x0.8x16 60ND07330 (u. 1) - SUPERDUAL - X, T
41	SWM-CABLE RETAINING SPRING 8A0060283 (u. 1) - SUPERDUAL - X, T
42	SWM-NUT M5x0.8-CH8 61ND15192 (u. 1) - SUPERDUAL - X, T

43	SWM-CABLE TIE : 800050005 80A050005 (u. 5) - SUPERDUAL - X, T
44	SWM-RH/F-LH/R TURN ID EB00P00263 (u. 2) - SUPERDUAL - X, T
45	SWM-LH/F-RH/R TURN ID EC00P00263 (u. 2) - SUPERDUAL - X, T
46	SWM-CONNECTOR PLUG FOR DIAGNOSTIC 8000A6790 (u. 1) - SUPERDUAL - X, T
47	SWM-CLAMP 78mm 800071578 (u. 4) - SUPERDUAL - X, T
48	SWM-HEX FLANGE SCREW M6x1x16-CH8 Z00062727 (u. 4) - SUPERDUAL - X, T
49	RECTIFIER PR7 - SWM/AJP 8000A6768 (u. 1) - SUPERDUAL - X, T
50	SWM-HEADLAMP ASSY 8000H1177 (u. 1) - SUPERDUAL - X, T
51	SWM-LAMP 12V-60/55W H4 800042946 (u. 1) - SUPERDUAL - X, T
52	SWM-LAMP PROTECTION CAP 8000H1874 (u. 1) - SUPERDUAL - X, T
53	SWM-LAMP HOLDER SPRING 8000H1873 (u. 1) - SUPERDUAL - X, T
54	SWM-HEX FLANGE SCREW M6x1x16-CH8 Z00062727 (u. 2) - SUPERDUAL - X, T
55	SWM-HEAD LIGHT SPACER 8000A1051 (u. 1) - SUPERDUAL - X, T
56	SWM-SELF LOCKING FLANGE NUT M6x1x7-CH10 Z00044240 (u. 2) - SUPERDUAL - X, T
57	SWM- HEAD LIGHT WASHER SD 62ND15645 (u. 2) - SUPERDUAL - X, T
58	SWM-HEX FLANGE SCREW M5x0.8x30 ZB0067997 (u. 1) - SUPERDUAL - X, T
59	SWM-LAMP 12V-5W 800036230 (u. 1) - SUPERDUAL - X, T
60	SWM-BULB SOCKET & HARNESS 800095886 (u. 1) - SUPERDUAL - X, T
61	SWM-HEAD LIGHT SHELL BUSHING 8000H3681 (u. 2) - SUPERDUAL - X, T
62	SWM-CONNECTOR CLIP E000P02516 (u. 1) - SUPERDUAL - X, T
63	SWM-SELF TAPPING SCREW 5.5x19 Z00037745 (u. 1) - SUPERDUAL - X, T
64	SWM-WASHER 11x5.5x1.5 Z00036137 (u. 1) - SUPERDUAL - X, T
65	SWM-WASHER 18x6.4x1 62ND15549 (u. 2) - SUPERDUAL - X, T
66	SWM-PASSENGER HANDLE SILENTBLOCK 800041862 (u. 2) - SUPERDUAL - X, T
67	SWM-THREAD CONTROL UNIT SPACER F000P01527 (u. 2) - SUPERDUAL - X, T
68	SCREW TEF M6X1X25 CH8 PR7 - SWM/AJP Z00062729 (u. 2) - SUPERDUAL - X, T
69	SWM-WASHER 18x6.4x2 Z00048814 (u. 2) - SUPERDUAL - X, T

 DECALS

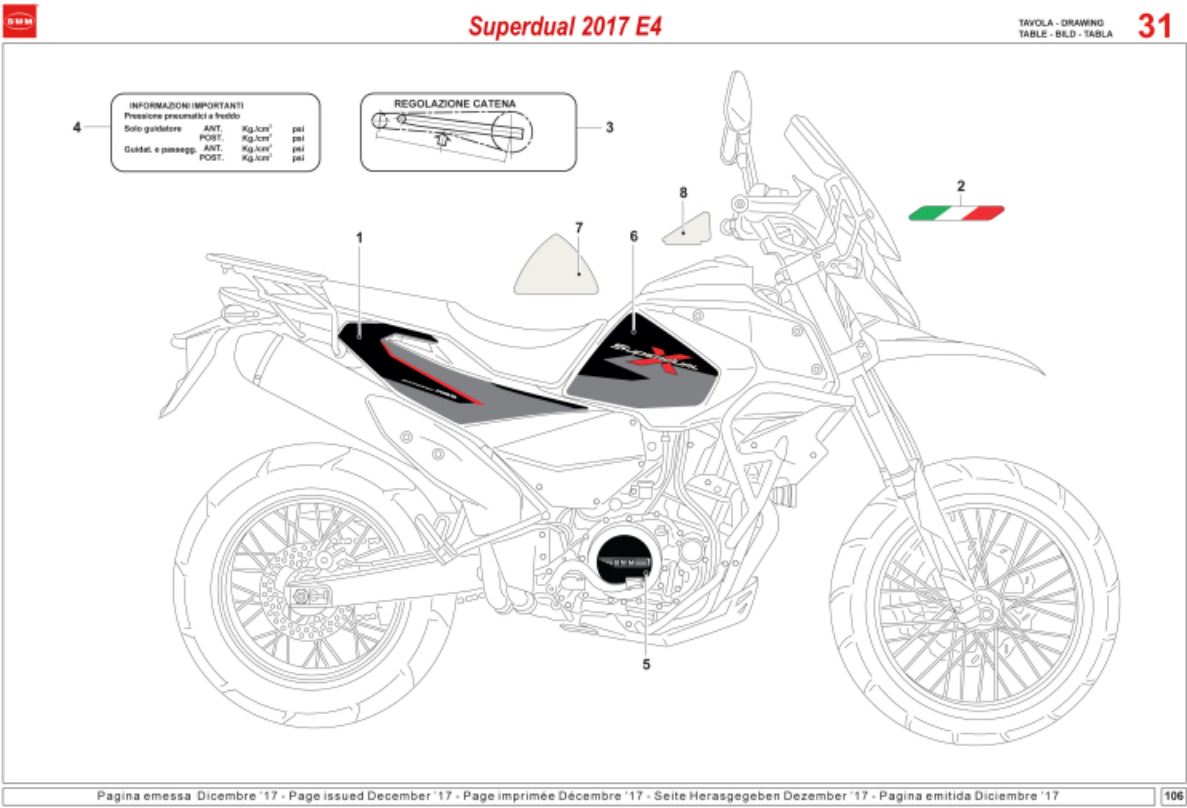

SWM-RH PANEL DECAL SD-SILVER
F000P02182 (u. 1) - *SUPERDUAL - T (SILVER)*

SWM-LH PANEL DECAL SD-SILVER
F000P02180 (u. 1) - *SUPERDUAL - T (SILVER)*

SWM-HEADLIGHT FAIRING DECAL SD
F000P02185 (u. 1) - *SUPERDUAL - X, T*

SWM-DECAL
800077872 (u. 1) - *SUPERDUAL - X, T*

SWM-TIRES PRESSURE LABEL
8C0077871 (u. 1) - *SUPERDUAL - X, T*

SWM-IGNITION COVER DECAL
M000P00225 (u. 1) - *SUPERDUAL - X, T*

SWM-RH FUEL TANK DECAL SD-T SILVER
F000P02188 (u. 1) - *SUPERDUAL - T (SILVER)*

SWM-LH FUEL TANK DECAL SD-T SILVER
F000P02189 (u. 1) - *SUPERDUAL - T (SILVER)*

SWM-FUEL TANK REAR PROTECTION DECAL
F000P02708 (u. 1) - *SUPERDUAL - X, T*

SWM-FUEL TANK SIDE PROTECTION DECAL
F000P02709 (u. 1) - *SUPERDUAL - X, T*


ACCESSORIES



Superdual 2017 E4

TAVOLA - DRAWING
TABLE - BILD - TABLA

 32

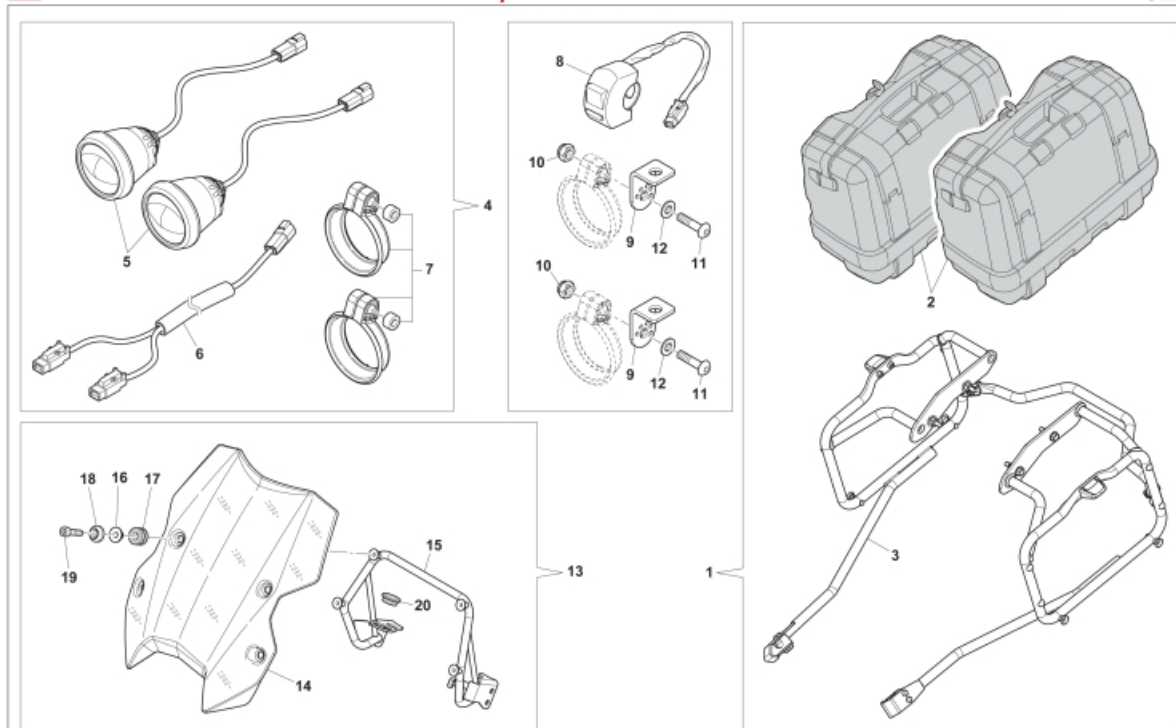

Pagina emessa Dicembre '17 - Page issued December '17 - Page imprimée Décembre '17 - Seite Herausgegeben Dezember '17 - Pagina emitida Diciembre '17

108

- | | |
|----|---|
| 1 | SWM-GT PACK KIT
A000A01056 (u. 1) - SUPERDUAL - X, T |
| 2 | SWM-COUPLE SIDE BAGS
A000A01953 (u. 1) - SUPERDUAL - X, T |
| 3 | OBSOLETE : SWM-RACK FOR SIDE BAGS
A000A01954 (u. 1) - SUPERDUAL - X, T |
| 4 | SWM-HEADLIGHTS KIT
A000A01057 (u. 1) - SUPERDUAL - X, T |
| 5 | SWM-FOGLIGHT
A000P01749 (u. 2) - SUPERDUAL - X, T |
| 6 | SWM-FOGLIGHT CABLE
A000P01750 (u. 1) - SUPERDUAL - X, T |
| 7 | SWM-FOGLIGHT FIXING KIT
A000P02419 (u. 1) - SUPERDUAL - X, T |
| 8 | SWM-SWITCH
A000P01419 (u. 1) - SUPERDUAL - X, T |
| 9 | SWM-FOG LIGHT SUPPORT
A000P01550 (u. 2) - SUPERDUAL - X, T |
| 10 | SWM-NUT M4x0.7x6
Z00091033 (u. 2) - SUPERDUAL - X, T |
| 11 | SWM-SCREW M4x22
F000P02226 (u. 2) - SUPERDUAL - X, T |
| 12 | SWM-WASHER M4X9
F000P02227 (u. 4) - SUPERDUAL - X, T |
| 13 | SWM-WINDSHIELD KIT
A000A00930 (u. 1) - SUPERDUAL - X, T |
| 14 | SWM-WINDSHIELD
A000P01054 (u. 1) - SUPERDUAL - X, T |
| 15 | SWM-WINDSHIELD SUPPORT FRAME
A000P01055 (u. 1) - SUPERDUAL - X, T |


OBSOLETE

2020 - SUPERDUAL T (SILVER)

16	SWM-SPACER WITH COLLAR 8000B2799 (u. 4) - <i>SUPERDUAL - X, T</i>
17	SWM-PASSENGER HANDLE SILENTBLOCK 800041862 (u. 4) - <i>SUPERDUAL - X, T</i>
18	SWM-CONIC WASHER H7.5 F000P00768 (u. 4) - <i>SUPERDUAL - X, T</i>
19	SWM-TCEI SCREW M6x1x20-CH5 60ND02509 (u. 4) - <i>SUPERDUAL - X, T</i>
20	SWM-RUBBER CAP F000P01678 (u. 1) - <i>SUPERDUAL - X, T</i>

SUPERDUAL 600cc

 PISTON

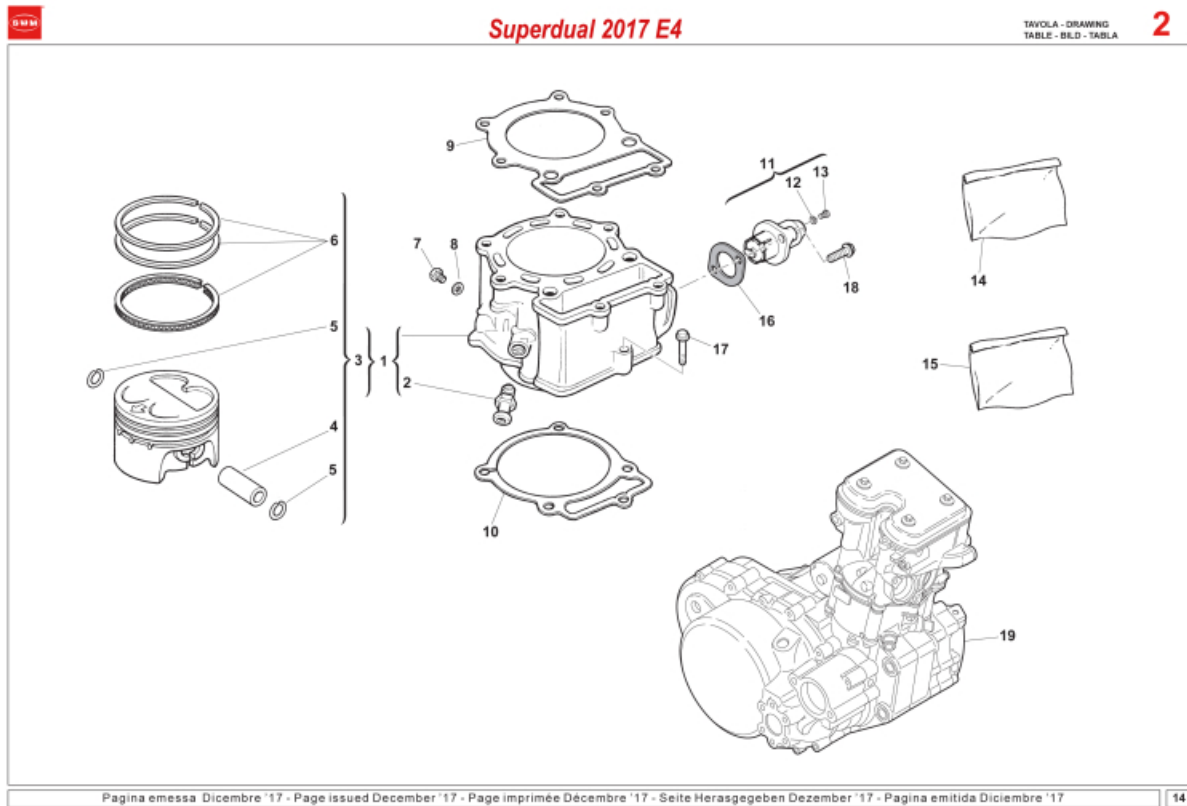

- | | |
|----|--|
| 1 | CYLINDER ASSY PR7 - SWM/AJP
M000A00100 (u. 1) - SUPERDUAL - X, T |
| 2 | JOINT PR7 - SWM/AJP
800063885 (u. 2) - SUPERDUAL - X, T |
| 3 | PISTON ASSY PR7 - SWM/AJP
8000H6251 (u. 1) - SUPERDUAL - X, T |
| 4 | PIN. PISTON (GUDGEON PIN) PR7 - SWM/AJP
8000A9652 (u. 1) - SUPERDUAL - X, T |
| 5 | PISTON ASSY PR7 - SWM/AJP
8000H6251 (u. 2)
CLIP. PISTON PIN PR7 - SWM/AJP
8000A5475 (u. 2) - SUPERDUAL - X, T |
| 6 | PISTON RING SET PR7 - SWM/AJP
8000H6252 (u. 1) - SUPERDUAL - X, T |
| 7 | SWM-HEX FLANGE SCREW M6x1x8-CH8
ZS0067545 (u. 1) - SUPERDUAL - X, T |
| 8 | GASKET 10X6.2X1 PR7 - SWM/AJP
8A0015960 (u. 1) - SUPERDUAL - X, T |
| 9 | CYLINDER HEAD GASKET PR7 1.1MM - SWM/AJP
8A00H0937 (u. 1) - SUPERDUAL - X, T
CYLINDER HEAD GASKET PR7 1.2MM - SWM/AJP
8000H0937 (u. 1) - SUPERDUAL - X, T
SWM-CYLINDER HEAD GASKET THK1
8B00H0937 (u. 1) - SUPERDUAL - X, T |
| 10 | GASKET. CYLINDER BASE PR7 - SWM/AJP
800099841 (u. 1) - SUPERDUAL - X, T |
| 11 | TENSIONER. TIMING CHAIN PR7 SPR300 - SWM/AJP
8000A6950 (u. 1) - SUPERDUAL - X, T |

12	OBSOLETE : 8000A6950 : SWM-WASHER 13x6x1 8000A6358 (u. 1) - <i>SUPERDUAL - X, T</i>	OBSOLETE
	TENSIONER. TIMING CHAIN PR7 SPR300 - SWM/AJP 8000A6950 (u. 1)	
13	TENSIONER. TIMING CHAIN PR7 SPR300 - SWM/AJP 8000A6950 (u. 1)	OBSOLETE
	OBSOLETE : 8000A6950 : SWM-FLANGE BOLT M6x8x14 8000A6357 (u. 1) - <i>SUPERDUAL - X, T</i>	
14	SWM-ENGINE GASKET KIT M000A01129 (u. 1) - <i>SUPERDUAL - X, T</i>	
15	SWM-ENGINE SEAL RING KIT 8000H1761 (u. 1) - <i>SUPERDUAL - X, T</i>	
16	GASKET. TENSIONER ADJUSTER PR7 - SWM/AJP 8000A6954 (u. 1) - <i>SUPERDUAL - X, T</i>	
17	SCREW TE M6X1X30 CH8 PR7 - SWM/AJP Z00062730 (u. 2) - <i>SUPERDUAL - X, T</i>	
18	SCREW TEF M6X1X20 CH8 PR7 - SWM/AJP Z00062728 (u. 2) - <i>SUPERDUAL - X, T</i>	
19	SWM-ENGINE ASSY M000A01966 (u. 1) - <i>SUPERDUAL - X, T</i>	


CYLINDER HEAD



Superdual 2017 E4

TAVOLA - DRAWING
TABLE - BILD - TABLA

 3

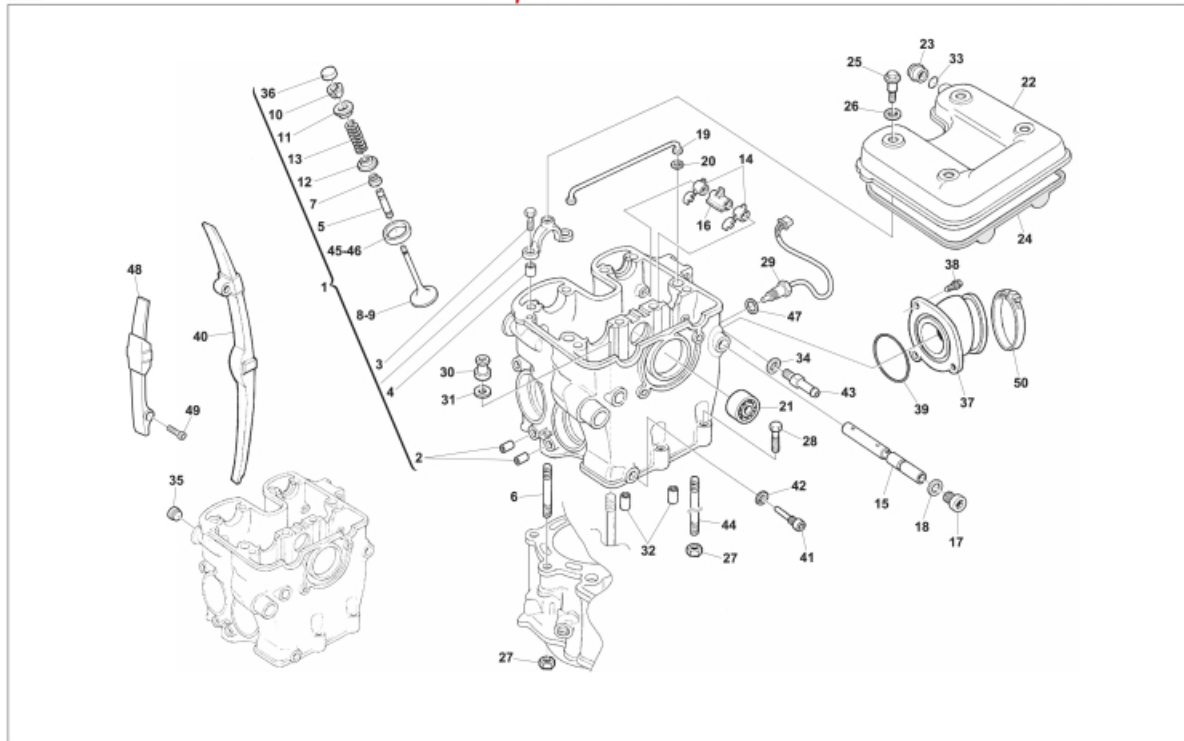

Pagina emessa Dicembre '17 - Page issued December '17 - Page imprimée Décembre '17 - Seite Herausgegeben Dezember '17 - Pagina emitida Diciembre '17

16

- | | |
|----|---|
| 1 | SWM-CYLINDER HEAD ASSY SD
M000A00096 (u. 1) - SUPERDUAL - X, T |
| 2 | SWM-HELI-COIL THREAD
800049792 (u. 4) - SUPERDUAL - X, T |
| 3 | SCREW TCEI M6X1X25 PR7 - SWM/AJP
8A0085071 (u. 8) - SUPERDUAL - X, T |
| 4 | BUSH 8X6.4X6 PR7 - SWM/AJP
161795501 (u. 8) - SUPERDUAL - X, T |
| 5 | SWM-VALVE GUIDE D5.5
8000A4159 (u. 2) - SUPERDUAL - X, T
SWM-VALVE GUIDE D5 SD
8000A4158 (u. 2) - SUPERDUAL - X, T |
| 6 | STUD BOLT M8X51 MM PR7 - SWM/AJP
800074836 (u. 2) - SUPERDUAL - X, T |
| 7 | SEAL VALVE STEM 5.5 MM - SWM/AJP
8000A4137 (u. 2) - SUPERDUAL - X, T
SEAL VALVE STEM 5 MM PR7 - SWM/AJP
8000A4136 (u. 2) - SUPERDUAL - X, T |
| 8 | VALVE. INTAKE PR7 - SWM/AJP
8000H4195 (u. 1) - SUPERDUAL - X, T |
| 9 | VALVE. EXHAUST STEEL PR7 - SWM/AJP
8000H4194 (u. 2) - SUPERDUAL - X, T |
| 10 | COTTER. VALVE 5 MM PR7 - SWM/AJP
8000A4106 (u. 4) - SUPERDUAL - X, T
COTTER. VALVE 5.5 MM PR7 - SWM/AJP
8000A4107 (u. 4) - SUPERDUAL - X, T |
| 11 | RETAINER. EXHAUST VALVE SPRING 5 MM PR7 - SWM/AJP
8000A4151 (u. 2) - SUPERDUAL - X, T
RETAINER. SPRING INTAKE VALVE 5.5 MM PR7 - SWM/AJP
8000A4157 (u. 2) - SUPERDUAL - X, T |

12	SEAT. SPRING EXHAUST PR7 - SWM/AJP 800091578 (u. 2) - SUPERDUAL - X, T
	SEAT. SPRING INTAKE PR7 - SWM/AJP 8000A4135 (u. 2) - SUPERDUAL - X, T
13	SWM-VALVE SPRING SD 8000A0568 (u. 4) - SUPERDUAL - X, T
14	SWM-ROCKER ARM 800091568 (u. 4) - SUPERDUAL - X, T
15	AXLE. VALVE ROCKER ARM PR7 - SWM/AJP 8000A5437 (u. 2) - SUPERDUAL - X, T
16	SPACER. SPRING 30.8 MM PR7 - SWM/AJP 8C00A5435 (u. 1) - SUPERDUAL - X, T
	SPACER. SPRING 25.8 MM PR7 - SWM/AJP 8B00A5435 (u. 1) - SUPERDUAL - X, T
17	PLUG DIN 908 M14X1.5 PR7 - SWM/AJP 800099711 (u. 2) - SUPERDUAL - X, T
18	WASHER 17.9X14.2X1.5 MM PR7 - SWM/AJP 800047763 (u. 2) - SUPERDUAL - X, T
19	HOSE. OIL PR7 - SWM/AJP 800099834 (u. 1) - SUPERDUAL - X, T
20	O-RING 2018 1.78 D4.48 PR7 - SWM/AJP 800091584 (u. 2) - SUPERDUAL - X, T
21	BEARING. BALL 12X28X8 PR7 - SWM/AJP 800034317 (u. 1) - SUPERDUAL - X, T
22	SWM-HEAD COVER, PAINTED M0A0P01985 (u. 1) - SUPERDUAL - X, T
23	JOINT. CYLINDER HEAD COVER BREATHER PR7 - SWM/AJP 8000A7039 (u. 1) - SUPERDUAL - X, T
24	GASKET CYLINDER HEAD COVER PR7 + SPR510CC - SWM/AJP 800099837 (u. 1) - SUPERDUAL - X, T
25	AJP-SCREW PR7 Z00091587 (u. 4) - SUPERDUAL - X, T
	SWM-HEAD COVER BOLT 72012182 (u. 4)
26	WASHER PR7 - SWM/AJP 800091588 (u. 4) - SUPERDUAL - X, T
27	NUT M8 PR7 - SWM/AJP Z00054700 (u. 2) - SUPERDUAL - X, T
28	SCREW TE M6X1X30 CH8 PR7 - SWM/AJP Z00062730 (u. 2) - SUPERDUAL - X, T
	SWM-HEX FLANGE SCREW M6x1x40-CH8 ZE0067545 (u. 1) - SUPERDUAL - X, T
29	AJP-WATER TEMPERATURE SENSOR PR7 8000H3649 (u. 1) - SUPERDUAL - X, T
30	NUT M10 PR7 - SWM/AJP 800091589 (u. 4) - SUPERDUAL - X, T
31	WASHER PR7 - SWM/AJP Z00023374 (u. 4) - SUPERDUAL - X, T
32	BUSH. CYLINDER HEAD (10.3X12.3X9.8) PR7 - SWM/AJP 8000H0278 (u. 4) - SUPERDUAL - X, T
33	O-RING. CYLINDER HEAD COVER BREATHER 11X2 PR7 - SWM/AJP 800001199 (u. 1) - SUPERDUAL - X, T
34	ALUMINIUM WASHER 10X5.1X1 MM PR7 - SWM/AJP 62N015672 (u. 1) - SUPERDUAL - X, T
35	SWM-STABLE PLUG 12x6x10 800057196 (u. 1) - SUPERDUAL - X, T

	PAD. VALVE ADJUSTING 1.90 MM PR7 - SWM/AJP 8F00A4162 (u. 4) - <i>SUPERDUAL - X, T</i>
	PAD. VALVE ADJUSTING 2.20 MM PR7 - SWM/AJP 8M00A4162 (u. 4) - <i>SUPERDUAL - X, T</i>
	PAD. VALVE ADJUSTING 2.15 MM PR7 - SWM/AJP 8L00A4162 (u. 4) - <i>SUPERDUAL - X, T</i>
	PAD. VALVE ADJUSTING 2.10 MM PR7 - SWM/AJP 8K00A4162 (u. 4) - <i>SUPERDUAL - X, T</i>
	PAD. VALVE ADJUSTING 2.55 MM PR7 - SWM/AJP 8V00A4162 (u. 4) - <i>SUPERDUAL - X, T</i>
	PAD. VALVE ADJUSTING 1.65 MM PR7 - SWM/AJP 8A00A4162 (u. 4) - <i>SUPERDUAL - X, T</i>
	PAD. VALVE ADJUSTING 2.00 MM PR7 - SWM/AJP 8H00A4162 (u. 4) - <i>SUPERDUAL - X, T</i>
	PAD. VALVE ADJUSTING 2.45 MM PR7 - SWM/AJP 8T00A4162 (u. 4) - <i>SUPERDUAL - X, T</i>
	PAD. VALVE ADJUSTING 1.60 MM PR7 - SWM/AJP 8000A4162 (u. 4) - <i>SUPERDUAL - X, T</i>
	PAD. VALVE ADJUSTING 2.50 MM PR7 - SWM/AJP 8U00A4162 (u. 4) - <i>SUPERDUAL - X, T</i>
36	PAD. VALVE ADJUSTING 2.40 MM PR7 - SWM/AJP 8S00A4162 (u. 4) - <i>SUPERDUAL - X, T</i>
	PAD. VALVE ADJUSTING 2.30 MM PR7 - SWM/AJP 8P00A4162 (u. 4) - <i>SUPERDUAL - X, T</i>
	PAD. VALVE ADJUSTING 1.70 MM PR7 - SWM/AJP 8B00A4162 (u. 4) - <i>SUPERDUAL - X, T</i>
	PAD. VALVE ADJUSTING 1.95 MM PR7 - SWM/AJP 8G00A4162 (u. 4) - <i>SUPERDUAL - X, T</i>
	PAD. VALVE ADJUSTING 2.25 MM PR7 - SWM/AJP 8N00A4162 (u. 4) - <i>SUPERDUAL - X, T</i>
	PAD. VALVE ADJUSTING 1.80 MM PR7 - SWM/AJP 8D00A4162 (u. 4) - <i>SUPERDUAL - X, T</i>
	PAD. VALVE ADJUSTING 2.35 MM PR7 - SWM/AJP 8R00A4162 (u. 4) - <i>SUPERDUAL - X, T</i>
	PAD. VALVE ADJUSTING 1.75 MM PR7 - SWM/AJP 8C00A4162 (u. 4) - <i>SUPERDUAL - X, T</i>
	PAD. VALVE ADJUSTING 1.85 MM PR7 - SWM/AJP 8E00A4162 (u. 4) - <i>SUPERDUAL - X, T</i>
	PAD. VALVE ADJUSTING 2.05 MM PR7 - SWM/AJP 8J00A4162 (u. 4) - <i>SUPERDUAL - X, T</i>
	PAD. VALVE ADJUSTING 2.60 MM PR7 - SWM/AJP 8W00A4162 (u. 4) - <i>SUPERDUAL - X, T</i>
37	SWM-TRHOTTLE BODY ENGINE UNION SD 8000H0879 (u. 1) - <i>SUPERDUAL - X, T</i>
38	SWM-TCEI SCREW M6x1x20-CH5 60ND02509 (u. 3) - <i>SUPERDUAL - X, T</i>
39	O-RING 2.62X50.47 PR7 - SWM/AJP 8A0028553 (u. 1) - <i>SUPERDUAL - X, T</i>
40	TIMING CHAIN GUIDE PR7 - SWM/AJP 8000H1783 (u. 1) - <i>SUPERDUAL - X, T</i>
41	SCREW PR7 - SWM/AJP 161535902 (u. 2) - <i>SUPERDUAL - X, T</i>
42	WASHER 14X8.2X1 PR7 - SWM/AJP 800045194 (u. 1) - <i>SUPERDUAL - X, T</i>
43	SWM-THREADED CONNECTION FOR BREATHE F000P02382 (u. 1) - <i>SUPERDUAL - X, T</i>

2020 - SUPERDUAL T (SILVER)

44	STUD BOLT M10X185 MM PR7 - SWM/AJP 8B0081650 (u. 4) - <i>SUPERDUAL - X, T</i>
45	SWM-INLET VALVE SEAT RS-500R 8000A5450 (u. 2) - <i>SUPERDUAL - X, T</i>
46	SWM-EXHAUST VALVE SEAT RS-500R 8000A5449 (u. 2) - <i>SUPERDUAL - X, T</i>
47	O-RING 2037 1.78X9.25 PR7 - SWM/AJP 8A0023108 (u. 2) - <i>SUPERDUAL - X, T</i>
48	CAM CHAIN TENSIONER PR7 - SWM/AJP 8000H1782 (u. 1) - <i>SUPERDUAL - X, T</i>
49	SCREW PR7 - SWM/AJP 161535902 (u. 2) - <i>SUPERDUAL - X, T</i>
50	SWM-CLAMP FOR TUBE ASSY 8000A7693 (u. 1) - <i>SUPERDUAL - X, T</i>


CRANKSHAFT



Superdual 2017 E4

TAVOLA - DRAWING
TABLE - BILD - TABLA

 4

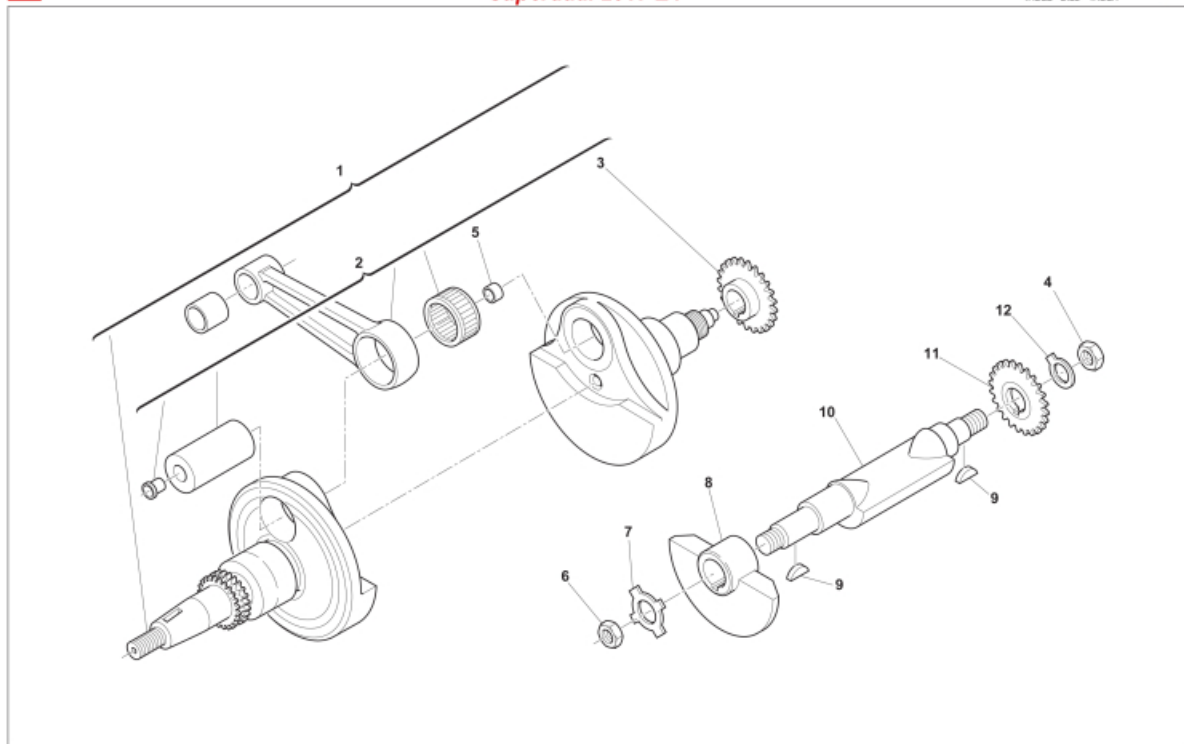

Pagina emessa Dicembre '17 - Page issued December '17 - Page imprimée Décembre '17 - Seite Herausgegeben Dezember '17 - Pagina emitida Diciembre '17


22

- | | |
|----|--|
| 1 | CRANKSHAFT PR7 - SWM/AJP
8000H7033 (u. 1) - SUPERDUAL - X, T |
| 2 | CRANKSHAFT PR7 - SWM/AJP
8000H7033 (u. 1)

OBSOLETE : 8000H7033 : SWM-CONNECTING ROAD WITH PIN AND CAGE ASSY
8000H7035 (u. 1) - SUPERDUAL - X, T |
| 3 | DRIVE GEAR T39 PR7 - SWM/AJP
M000P00001 (u. 1) - SUPERDUAL - X, T |
| 4 | NUT PR7 - SWM/AJP
800003170 (u. 1) - SUPERDUAL - X, T |
| 5 | SWM-STABLE PLUG 12x6x10
800057196 (u. 2) - SUPERDUAL - X, T |
| 6 | NUT PR7 - SWM/AJP
800071031 (u. 1) - SUPERDUAL - X, T |
| 7 | WASHER. LOCK PR7 - SWM/AJP
800071034 (u. 1) - SUPERDUAL - X, T |
| 8 | COUNTERWEIGHT WITH GEARS PR7 - SWM/AJP
800071024 (u. 1) - SUPERDUAL - X, T |
| 9 | SWM-CRANKSHAFT KEY RS/SD
151371301 (u. 2) - SUPERDUAL - X, T |
| 10 | CRANK BALANCER PR7 - SWM/AJP
800071023 (u. 1) - SUPERDUAL - X, T |
| 11 | DRIVEN GEAR T39 PR7 - SWM/AJP
M000P00002 (u. 1) - SUPERDUAL - X, T |
| 12 | WASHER. LOCK PR7 - SWM/AJP
800071035 (u. 1) - SUPERDUAL - X, T |

OBSOLETE

 PRIMARY DRIVE, CLUTCH

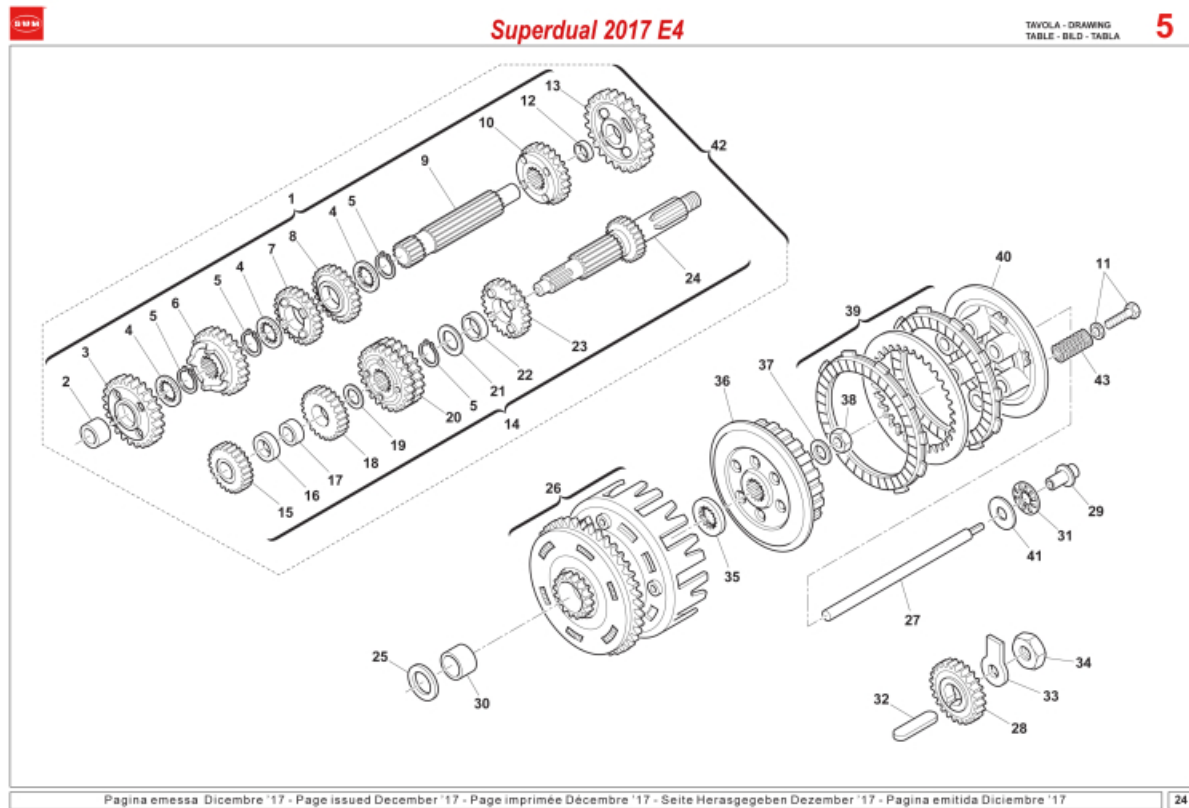

Pagina emessa Dicembre '17 - Page issued December '17 - Page imprimée Décembre '17 - Seite Herausgegeben Dezember '17 - Pagina emitida Diciembre '17

24

- | | |
|----|---|
| 1 | SWM-SECONDARY SHAFT ASSY SD
M000A02245 (u. 1) - SUPERDUAL - X, T |
| 2 | BUSH 28X25X7 PR7 - SWM/AJP
800063822 (u. 1) - SUPERDUAL - X, T |
| 3 | SWM-2ND GEAR 29T SD
800074864 (u. 1) - SUPERDUAL - X, T |
| 4 | SWM-SHIM WASHER
M000P02383 (u. 3) - SUPERDUAL - X, T |
| 5 | CIRCLIP 25MM DIN471 PR7 + SPR310CC/510CC - SWM/AJP
66N021211 (u. 4) - SUPERDUAL - X, T |
| 6 | SWM-3RD GEAR 27T SD
M000P02386 (u. 1) - SUPERDUAL - X, T |
| 7 | SWM-6TH GEAR SD
M000P02389 (u. 1) - SUPERDUAL - X, T |
| 8 | SWM-5TH GEAR 22T SD
M000P02388 (u. 1) - SUPERDUAL - X, T |
| 9 | SWM-GEAR BOX ASSY
M000A02244 (u. 1)
OBSOLETE : M000A02244 : SWM-SECONDARY SHAFT
M000P02246 (u. 1) - SUPERDUAL - X, T |
| 10 | SWM-4TH GEAR 24T SD
M000P02387 (u. 1) - SUPERDUAL - X, T |
| 11 | SCREW (M6X20) WITH WASHER (17.8) - SWM/AJP
M000P00464 (u. 6) - SUPERDUAL - X, T |
| 12 | SWM-COUNTER SHAFT GEAR BUSHING
161241501 (u. 1) - SUPERDUAL - X, T |
| 13 | DRIVEN GEAR 1ST SPEED T34 PR7 - SWM/AJP
800074862 (u. 1) - SUPERDUAL - X, T |
| 14 | SWM-MAIN SHAFT ASSY SD
M000A02351 (u. 1) - SUPERDUAL - X, T |

OBSOLETE

15	INPUT GEAR 2ND T16 PR7 - SWM/AJP 800074863 (u. 1) - SUPERDUAL - X, T
16	SWM-MAIN SHAFT SHIM BUSHING 161248101 (u. 1) - SUPERDUAL - X, T
17	SWM-MAIN SHAFT GEAR BUSHING 161248001 (u. 1) - SUPERDUAL - X, T
18	GEAR DRIVE 3RD SPEED T20 PR7 - SWM/AJP 800079688 (u. 1) - SUPERDUAL - X, T
19	SWM-MAIN SHAFT SHIM WASHER 161284201 (u. 1) - SUPERDUAL - X, T
20	SWM-5th-6th GEAR M000P02385 (u. 1) - SUPERDUAL - X, T
21	SWM-SHIM WASHER 32x25.1 8H0036022 (u. 1) - SUPERDUAL - X, T
22	SWM-BUSH D28-D25x9.9 M000P02384 (u. 1) - SUPERDUAL - X, T
23	GEAR. 4TH DRIVE T22 PR7 - SWM/AJP 800079686 (u. 1) - SUPERDUAL - X, T
24	SWM-MAIN SHAFT 13T SD M000P02350 (u. 1) - SUPERDUAL - X, T
25	THRUST WASHER 38X25.2 PR7 - SWM/AJP 8E0030053 (u. 1) - SUPERDUAL - X, T
26	AJP-GEAR. DRIVEN ASSY PR7 8000H2946 (u. 1)
	SWM-CLUTCH ASSY 650 M000A00764 (u. 1)
	OBSOLETE : 8000H2946 : SWM-DRIVEN GEAR ASSY WITH CLUTCH HOUSING 8000H2945 (u. 1) - SUPERDUAL - X, T
27	ROD. CLUTCH PUSH PR7 - SWM/AJP 8000H5375 (u. 1) - SUPERDUAL - X, T
28	GEAR DRIVE T32 PR7 - SWM/AJP 800097935 (u. 1) - SUPERDUAL - X, T
29	PIECE. CLUTCH PUSH PR7 - SWM/AJP 8000A9749 (u. 1) - SUPERDUAL - X, T
30	BUSH 28X25 MM PR7 - SWM/AJP 161538802 (u. 1) - SUPERDUAL - X, T
31	THRUST BEARING PR7 - SWM/AJP 800035780 (u. 1) - SUPERDUAL - X, T
32	KEY PR7 - SWM/AJP 800022426 (u. 1) - SUPERDUAL - X, T
33	WASHER. LOCK PR7 - SWM/AJP 800086007 (u. 1) - SUPERDUAL - X, T
34	NUT M24X1.25 PR7 - SWM/AJP 800086006 (u. 1) - SUPERDUAL - X, T
35	WASHER 46X22X19 PR7 - SWM/AJP 800038350 (u. 1) - SUPERDUAL - X, T
36	BOSS. CLUTCH PR7 - SWM/AJP 800085390 (u. 1) - SUPERDUAL - X, T
37	WASHER. LOCK 18MM PR7 - SWM/AJP 800036857 (u. 1) - SUPERDUAL - X, T
38	NUT M18X1 PR7 - SWM/AJP 800036856 (u. 1) - SUPERDUAL - X, T
39	CLUTCH DISC SET PR7 + 310 +510 - SWM/AJP 8000A9764 (u. 1) - SUPERDUAL - X, T
40	DISC. CLUTCH PRESSURE PR7 - SWM/AJP 800048138 (u. 1) - SUPERDUAL - X, T

OBSOLETE

2020 - SUPERDUAL T (SILVER)

41	WASHER. AXIAL BEARING PR7 - SWM/AJP 800035781 (u. 1) - <i>SUPERDUAL - X, T</i>
42	SWM-GEAR BOX ASSY M000A02244 (u. 1) - <i>SUPERDUAL - X, T</i>
43	CLUTCH SPRING PR7 - SWM/AJP 8000A0730 (u. 6) - <i>SUPERDUAL - X, T</i>


VALVE TIMING



Superdual 2017 E4

TAVOLA - DRAWING
TABLE - BILD - TABLA

 6

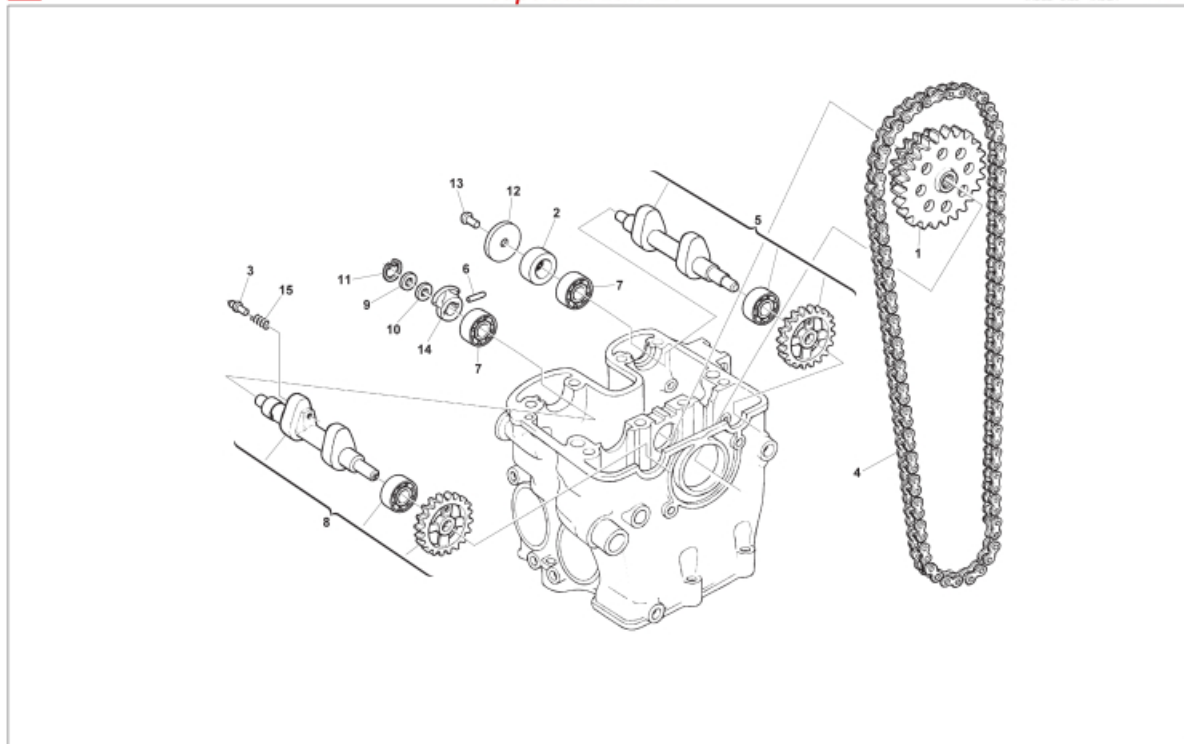


Pagina emessa Dicembre '17 - Page issued December '17 - Page imprimée Décembre '17 - Seite Herausgegeben Dezember '17 - Pagina emitida Diciembre '17

28

- | | |
|----|---|
| 1 | TIMMING GEAR (Z42/Z36) PR7 - SWM/AJP
8000H0986 (u. 1) - SUPERDUAL - X, T |
| 2 | SPACER PR7 - SWM/AJP
8000A6271 (u. 1) - SUPERDUAL - X, T |
| 3 | SPACER PR7 - SWM/AJP
800099700 (u. 1) - SUPERDUAL - X, T |
| 4 | TIMING CHAIN PR7 - SWM/AJP
8C00H0987 (u. 1) - SUPERDUAL - X, T |
| 5 | CAM SHAFT. INTAKE PR7/510 - SWM/AJP
8000A5595 (u. 1) - SUPERDUAL - X, T |
| 6 | ROLLER B (4X21.8) - SWM/AJP
800099701 (u. 1) - SUPERDUAL - X, T |
| 7 | BEARING. BALL 12X28X8 PR7 - SWM/AJP
800034317 (u. 2) - SUPERDUAL - X, T |
| 8 | CAM SHAFT. EXHAUST PR7/510CC - SWM/AJP
8000A4953 (u. 1) - SUPERDUAL - X, T |
| 9 | WASHER. THRUST (16X19.2X0.8) PR7 - SWM/AJP
8A00H0597 (u. 1) - SUPERDUAL - X, T |
| 10 | SWM-SHIM WASHER 0.6
8B00H0597 (u. 1) - SUPERDUAL - X, T |
| 11 | CIRCLIP 16 MM PR7 - SWM/AJP
66N021205 (u. 1) - SUPERDUAL - X, T |
| 12 | CENTRIFUGAL DISC PR7 - SWM/AJP
800099703 (u. 1) - SUPERDUAL - X, T |
| 13 | SCREW TCEI M6X10 PR7 - SWM/AJP
Z00055699 (u. 1) - SUPERDUAL - X, T |
| 14 | WEIGHT. VALVE LIFTER PR7 - SWM/AJP
8000A8994 (u. 1) - SUPERDUAL - X, T |
| 15 | SPRING PR7 - SWM/AJP
800099699 (u. 1) - SUPERDUAL - X, T |

 
LEFT HALF CRANKCASE

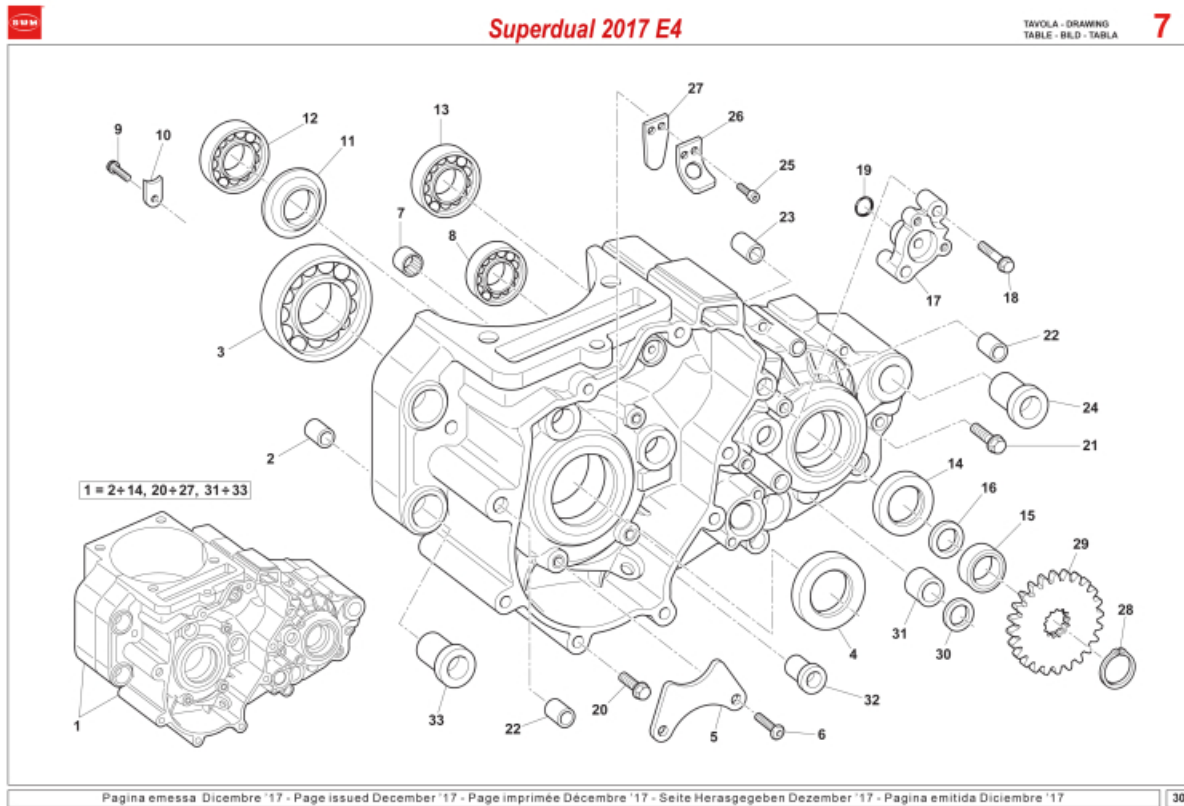

1	SWM-CRANKCASE ASSY SD M000A02604 (u. 1) - SUPERDUAL - X, T
2	BUSH. CRANKCASE FRONT (13X8.5X15) PR7 - SWM/AJP 161077601 (u. 1) - SUPERDUAL - X, T
3	BALL BEARING. CRANKSAFT 62009/C3 (85X45X19) PR7 - SWM/AJP 800085380 (u. 1) - SUPERDUAL - X, T
4	OIL SEAL. CRANKSHAFT (60X45X7) PR7 - SWM/AJP 800085381 (u. 1) - SUPERDUAL - X, T
5	OIL SEAL HOLDING PLATE. CRANKSHAFT LEFT SIDE PR7 - SWM/AJP 800085383 (u. 1) - SUPERDUAL - X, T
6	SWM-HEX FLANGE SCREW M5x0.8x16-CH8 ZA0067997 (u. 2) - SUPERDUAL - X, T
7	NEEDLE BEARING. GEAR SHIFT CAM (24X30X7.5) PR7 - SWM/AJP 800062200 (u. 1) - SUPERDUAL - X, T
8	BALL BEARING. MAIN SHAFT (42X15X13) PR7 - SWM/AJP 800019768 (u. 1) - SUPERDUAL - X, T
9	SWM-HEX FLANGE SCREW M5x0.8x16-CH8 ZA0067997 (u. 1) AJP-SCREW TEF M5X0.8X16 CH8 PR7 ZA0066525 (u. 1) - SUPERDUAL - X, T
10	RETAINING PLATE. CRANKSHAFT LEFT SIDE BEARING PR7 - SWM/AJP 800081663 (u. 1) - SUPERDUAL - X, T
11	SEAL. CRANK BALANCER BEARING NUP 204 JV PR7 - SWM/AJP 800072966 (u. 1) - SUPERDUAL - X, T
12	ROLLER BEARING. CRANK BALANCER NSK 204 (20X47X14) PR7 - SWM/AJP 800072964 (u. 1) - SUPERDUAL - X, T
13	ROLLER BEARING. DRIVE GEAR NU205 PR7 - SWM/AJP 800043789 (u. 1) - SUPERDUAL - X, T
14	SEAL. OIL 32X40X5 PR7 - SWM/AJP 800059977 (u. 1) - SUPERDUAL - X, T

15	SPACER 32X28.2X25X10.3 PR7 - SWM/AJP 800060464 (u. 1) - SUPERDUAL - X, T
16	O-RING. COUNTER SHAFT (2100 28.68X1.72) - SWM/AJP 800023110 (u. 1) - SUPERDUAL - X, T
17	SWM-HYDRAULIC CLUTCH SLAVE SD 80A0H0994 (u. 1) - SUPERDUAL - X, T
18	SCREW TE M6X1X30 CH8 PR7 - SWM/AJP Z00062730 (u. 2) - SUPERDUAL - X, T
19	O-RING 13X1.8 PR7 - SWM/AJP 8B0023109 (u. 1) - SUPERDUAL - X, T
20	SCREW TEF M6X55 CH8 PR7 - SWM/AJP ZB0067545 (u. 9) - SUPERDUAL - X, T
21	SCREW TEF M6X65 CH8 PR7 - SWM/AJP ZC0067545 (u. 2) - SUPERDUAL - X, T
22	SWM-CENTERING BUSH 10x7.2x16 RS/SD 800007719 (u. 2) - SUPERDUAL - X, T
23	BUSH 22X17.5X15 PR7 - SWM/AJP 161459002 (u. 1) - SUPERDUAL - X, T
24	SWM-BUSH FOR FORK AXIS D32-D22-D17.2 800071154 (u. 1) - SUPERDUAL - X, T
25	SCREW TCI M4X0.7X6 PR7 - SWM/AJP 60ND02866 (u. 2) - SUPERDUAL - X, T
26	STOPPER. REED VALVE PR7 - SWM/AJP 161510501 (u. 1) - SUPERDUAL - X, T
27	READ VALVE COMP PR7 - SWM/AJP 161534801 (u. 1) - SUPERDUAL - X, T
28	CIRCLIP 25MM DIN471 PR7 + SPR310CC/510CC - SWM/AJP 66N021211 (u. 1) - SUPERDUAL - X, T
29	SWM-TRANSMISSION GEAR PINION Z=15 M000P00712 (u. 1) - SUPERDUAL - X, T
30	OIL SEAL 12X19X5 PR7 - SWM/AJP 800034451 (u. 1) - SUPERDUAL - X, T
31	BUSH PR7 - SWM/AJP 8A0065847 (u. 1) - SUPERDUAL - X, T
32	SWM-FLANGE BUSHING D20-D12.8-D8.5-L27 161077701 (u. 1) - SUPERDUAL - X, T
33	SWM-FLANGE BUSHING D20-D12.8-D8.5-L33 161077702 (u. 2) - SUPERDUAL - X, T

 RIGHT HALF CRANKCASE

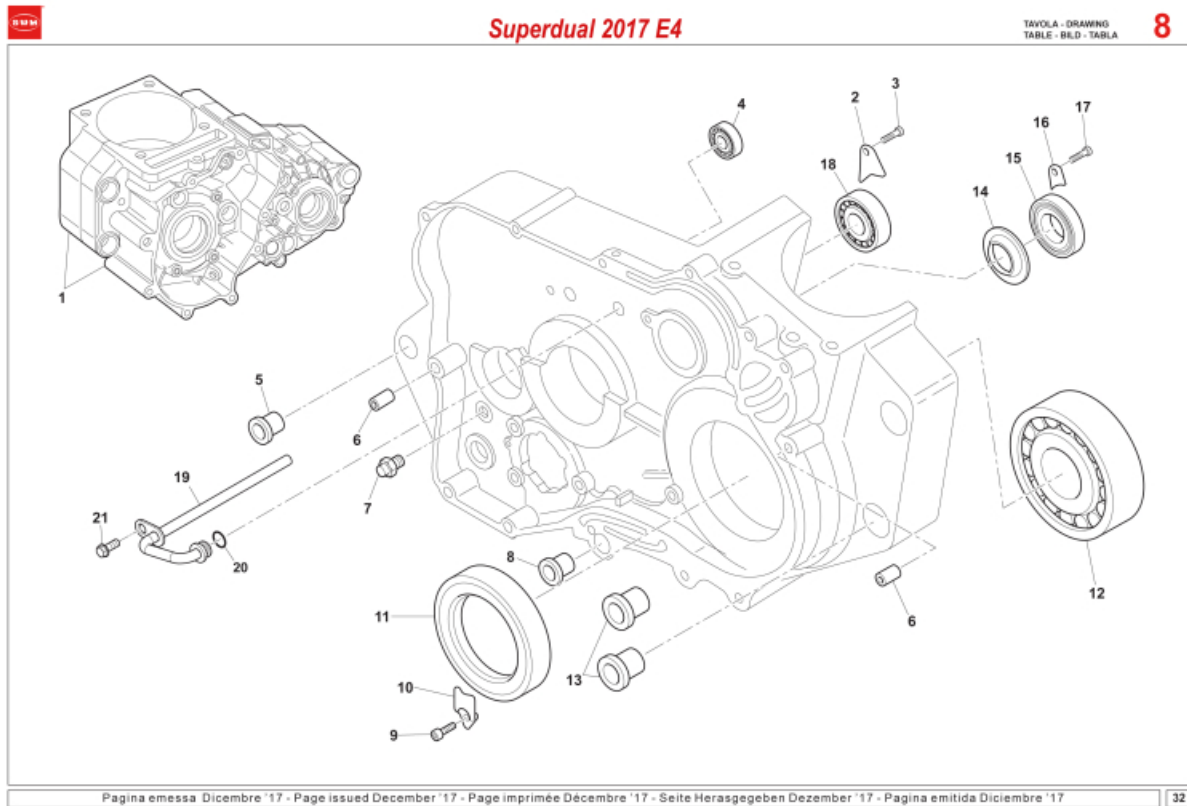

Pagina emessa Dicembre '17 - Page issued December '17 - Page imprimée Décembre '17 - Seite Herausgegeben Dezember '17 - Pagina emitida Diciembre '17

32

OBSOLETE : M000A02604 : SWM-RIGHT CRANKCASE ASSY

M000A02606 (u. 1) - SUPERDUAL - X, T

OBSOLETE

1

SWM-CRANKCASE ASSY SD

M000A02604 (u. 1) - SUPERDUAL - X, T

2

RETAINER. BEARING PR7 - SWM/AJP

800051746 (u. 1) - SUPERDUAL - X, T

3

SCREW M6X1.00X8.5 PR7 - SWM/AJP

Z00042643 (u. 1) - SUPERDUAL - X, T

4

BALL BEARING 47X17X14 PR7 - SWM/AJP

800072962 (u. 1) - SUPERDUAL - X, T

SWM-BALL BEARING 47x17x14

800010290 (u. 1) - SUPERDUAL - X, T (OPTION)

5

SWM-BUSH FOR FORK AXIS D32-D22-D17.2

800071154 (u. 1) - SUPERDUAL - X, T

6

SWM-CENTERING BUSH 10x7.2x16 RS/SD

800007719 (u. 2) - SUPERDUAL - X, T

7

PIN PR7 - SWM/AJP

8A0066953 (u. 1) - SUPERDUAL - X, T

8

SWM-FLANGE BUSHING D20-D12.8-D8.5-L27

161077701 (u. 1) - SUPERDUAL - X, T

9

SWM-TEF SCREW M6x1x10-CH8

Z00062725 (u. 1) - SUPERDUAL - X, T

10

PLATE HOLDING OIL SEAL PR7 - SWM/AJP

800085382 (u. 1) - SUPERDUAL - X, T

11

OIL SEAL. CRANKSHAFT (60X45X7) PR7 - SWM/AJP

800085381 (u. 1) - SUPERDUAL - X, T

12

BALL BEARING. CRANKSAFT 62009/C3 (85X45X19) PR7 - SWM/AJP

800085380 (u. 1) - SUPERDUAL - X, T


13

SWM-FLANGE BUSHING D20-D12.8-D8.5-L33

161077702 (u. 2) - SUPERDUAL - X, T

14	SEAL. MECHANICAL 6204 Z JV PR7 - SWM/AJP 8B0072966 (u. 1) - <i>SUPERDUAL - X, T</i>
15	BALL BEARING 20X47X14 PR7 - SWM/AJP 800076680 (u. 1) - <i>SUPERDUAL - X, T</i>
16	RETAINING PLATE. CRANKSHAFT LEFT SIDE BEARING PR7 - SWM/AJP 800081663 (u. 1) - <i>SUPERDUAL - X, T</i>
17	SWM-HEX FLANGE SCREW M5x0.8x16-CH8 ZA0067997 (u. 1)
	AJP-SCREW TEF M5X0.8X16 CH8 PR7 ZA0066525 (u. 1) - <i>SUPERDUAL - X, T</i>
18	BALL BEARING 52X25X15 PR7 - SWM/AJP 8A0059975 (u. 1) - <i>SUPERDUAL - X, T</i>

 CRANKCASE COVERS

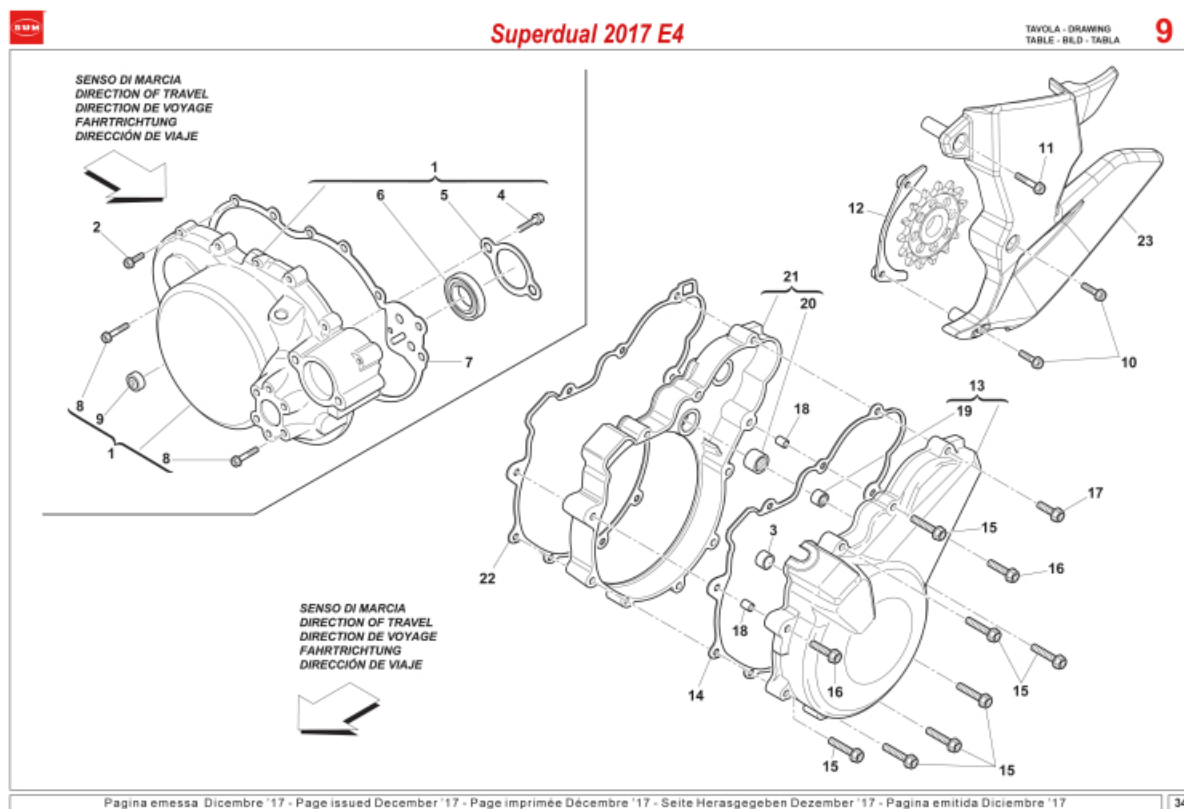

- | | |
|----|---|
| 1 | COVER. CLUTCH PR7 - SWM/AJP
M000A00106 (u. 1) - SUPERDUAL - X, T |
| 2 | SCREW TE M6X1X30 CH8 PR7 - SWM/AJP
Z00062730 (u. 11) - SUPERDUAL - X, T |
| 3 | BALL BEARING 6201C3 (32X12X10) PR7 - SWM/AJP
800002124 (u. 1) - SUPERDUAL - X, T |
| 4 | SCREW TSEI M5X0.8X10 PR7 - SWM/AJP
Z00049608 (u. 2) - SUPERDUAL - X, T |
| 5 | COVER. OIL SEAL PR7 - SWM/AJP
800084817 (u. 1) - SUPERDUAL - X, T |
| 6 | OIL SEAL 17X28X7 PR7 - SWM/AJP
800062209 (u. 1) - SUPERDUAL - X, T |
| 7 | GASKET. CLUTCH COVER PR7 - SWM/AJP
M000P00108 (u. 1) - SUPERDUAL - X, T |
| 8 | SCREW TEF M6X65 CH8 PR7 - SWM/AJP
ZC0067545 (u. 2) - SUPERDUAL - X, T |
| 9 | WINDOW. OIL LEVEL CHECK PR7 - SWM/AJP
800073529 (u. 1) - SUPERDUAL - X, T |
| 10 | SCREW TEF M6X1X25 CH8 PR7 - SWM/AJP
Z00067545 (u. 2) - SUPERDUAL - X, T |
| 11 | SWM-HEX FLANGE SCREW M6x1x45
Z00062731 (u. 1) - SUPERDUAL - X, T |
| 12 | PLATE PR7 - SWM/AJP
8000H2207 (u. 1) - SUPERDUAL - X, T |
| 13 | COVER. GENERATOR PR7 - SWM/AJP
M000A00105 (u. 1) - SUPERDUAL - X, T |
| 14 | GASKET. GENERATOR COVER PR7 - SWM/AJP
8000A1368 (u. 1) - SUPERDUAL - X, T |
| 15 | SCREW TEF M6X55 CH8 PR7 - SWM/AJP
ZB0067545 (u. 7) - SUPERDUAL - X, T |

16	SCREW TEF M6X65 CH8 PR7 - SWM/AJP ZC0067545 (u. 2) - SUPERDUAL - X, T
17	SCREW TE M6X1X30 CH8 PR7 - SWM/AJP Z00062730 (u. 1) - SUPERDUAL - X, T
18	PIN. DOWEL 10X39.9X7.2 PR7 - SWM/AJP M000P00423 (u. 2) - SUPERDUAL - X, T
19	BEARING. NEEDLE HK1015 PR7 - SWM/AJP 800086243 (u. 1) - SUPERDUAL - X, T
20	BEARING. NEEDLE HK1412 PR7 - SWM/AJP 800033422 (u. 1) - SUPERDUAL - X, T
21	COVER. BRACKET STARTING MOTOR PR7 - SWM/AJP 8C0086246 (u. 1) - SUPERDUAL - X, T
22	GASKET PR7 - SWM/AJP 8000A1367 (u. 1) - SUPERDUAL - X, T
23	SWM-SPROCKET COVER F000P02152 (u. 1) - SUPERDUAL - X, T


GEARSHIFT



Superdual 2017 E4

TAVOLA - DRAWING
TABLE - BILD - TABLA

 10

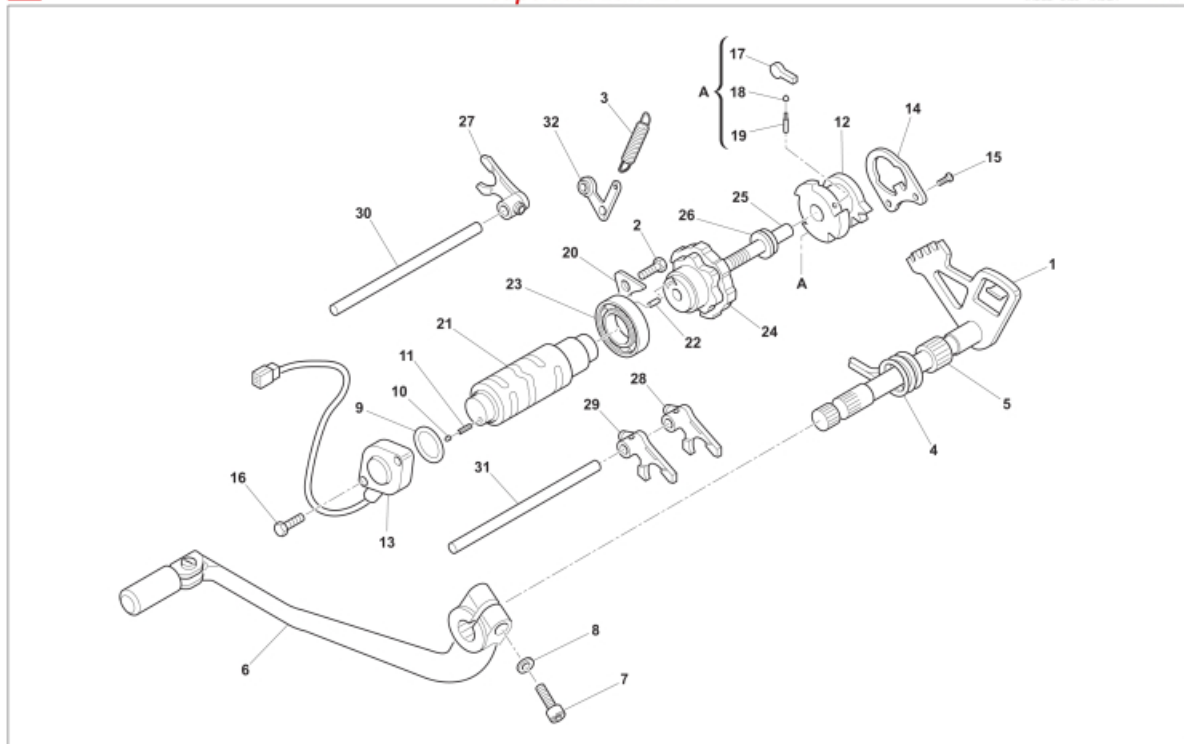

Pagina emessa Dicembre '17 - Page issued December '17 - Page imprimée Décembre '17 - Seite Herausgegeben Dezember '17 - Pagina emitida Diciembre '17

36

- | | |
|----|--|
| 1 | SWM-SELECTOR ARM, ASSY
M000A00918 (u. 1) - SUPERDUAL - X, T |
| | AJP-GEAR SELECTOR SHAFT PR7
800075302 (u. 1) - SUPERDUAL - X, T |
| 2 | SCREW TE M6X1X15 PR7 - SWM/AJP
8B0054139 (u. 1) - SUPERDUAL - X, T |
| 3 | SPRING. PAWL PR7 - SWM/AJP
M000P00578 (u. 1) - SUPERDUAL - X, T |
| 4 | SPRING. SHIFT RETURN PR7 - SWM/AJP
800046225 (u. 1) - SUPERDUAL - X, T |
| 5 | BUSH PR7 - SWM/AJP
8A0031503 (u. 1) - SUPERDUAL - X, T |
| 6 | SWM-GEARSHIFT CONTROL LEVER ASSY SD
M000A01058 (u. 1) - SUPERDUAL - X, T |
| 7 | SCREW TE M6X1X22 PR7 - SWM/AJP
60ND07336 (u. 1) - SUPERDUAL - X, T |
| 8 | WASHER. SPRING (11X6.4X0.5) PR7 - SWM/AJP
62NA15767 (u. 1) - SUPERDUAL - X, T |
| 9 | O-RING 2093 23.52X1.78 MM PR7 - SWM/AJP
8A0042700 (u. 1) - SUPERDUAL - X, T |
| 10 | POINT. NEUTRAL PR7 - SWM/AJP
800042676 (u. 1) - SUPERDUAL - X, T |
| 11 | SPRING PR7 - SWM/AJP
800042677 (u. 1) - SUPERDUAL - X, T |
| 12 | CAM-CHANGE DRUM PR7 - SWM/AJP
800075291 (u. 1) - SUPERDUAL - X, T |
| 13 | SWM-GEAR SENSOR
E000P01112 (u. 1) - SUPERDUAL - X, T |
| 14 | PLATE PR7 - SWM/AJP
800071012 (u. 1) - SUPERDUAL - X, T |

15	SCREW TSEI M6X1X14 DIN 7991 CH4 PR7 - SWM/AJP Y00028327 (u. 2) - SUPERDUAL - X, T
16	SCREW TEF M5X0.8X12 CH8 PR7 - SWM/AJP Z00067997 (u. 2) - SUPERDUAL - X, T
17	PAWL PR7 - SWM/AJP 800071007 (u. 2) - SUPERDUAL - X, T
18	PUSH ROD PR7 - SWM/AJP 800071008 (u. 2) - SUPERDUAL - X, T
19	SPRING PR7 - SWM/AJP 800071009 (u. 2) - SUPERDUAL - X, T
20	RETAINER. BEARING PR7 - SWM/AJP 800083126 (u. 1) - SUPERDUAL - X, T
21	CAM. GEAR SHIFT PR7 - SWM/AJP 800082347 (u. 1) - SUPERDUAL - X, T
22	ROLLER 4X8 PR7 - SWM/AJP 800038520 (u. 1) - SUPERDUAL - X, T
23	BALL BEARING 25X42X9 PR7 - SWM/AJP 800085395 (u. 1) - SUPERDUAL - X, T
24	CAM-CHANGE DRUM PR7 - SWM/AJP 8A0097739 (u. 1) - SUPERDUAL - X, T
25	SCREW PR7 - SWM/AJP 800071011 (u. 1) - SUPERDUAL - X, T
26	WASHER (16X8.3X1) - SWM/AJP Z00056377 (u. 1) - SUPERDUAL - X, T
27	FORK. GEAR SHIFTING 3TH-4TH PR7 - SWM/AJP 800071158 (u. 1) - SUPERDUAL - X, T
28	FORK. GEAR SHIFTING 1ST-5TH PR7 - SWM/AJP 800071159 (u. 1) - SUPERDUAL - X, T
29	FORK. GEAR SHIFTING 2ND-6TH PR7 - SWM/AJP 800071160 (u. 1) - SUPERDUAL - X, T
30	AXLE. GEAR SHIFT FORK 85MM PR7 - SWM/AJP 800035876 (u. 1) - SUPERDUAL - X, T
31	AXLE. GEAR SHIFT FORK 93.5MM PR7 - SWM/AJP 8B0035876 (u. 1) - SUPERDUAL - X, T
32	STOPPER LEVER PR7 - SWM/AJP 800054136 (u. 1) - SUPERDUAL - X, T


LUBRICATION



Superdual 2017 E4

TAVOLA - DRAWING
TABLE - BILD - TABLA

 11

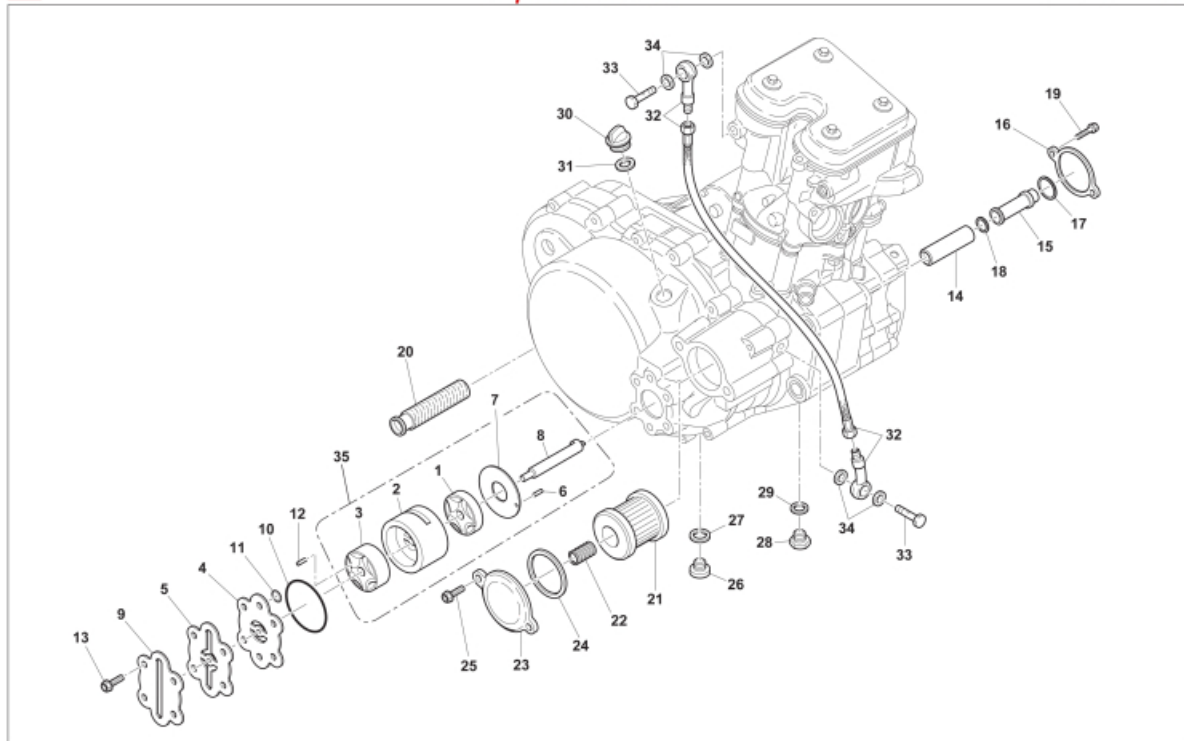

Pagina emessa Dicembre '17 - Page issued December '17 - Page imprimée Décembre '17 - Seite Herasgegeben Dezember '17 - Pagina emitida Diciembre '17

38

1 ROTOR. OIL PUMP SCAVENGE PR7 - SWM/AJP
8000H4001 (u. 1) - SUPERDUAL - X, T

2 AJP-HOUSING. OIL PUMP PR7
8000H4002 (u. 1) - SUPERDUAL - X, T

3 OIL SUCTION ROTOR PR7 - SWM/AJP
800082948 (u. 1) - SUPERDUAL - X, T

4 COVER PR7 - SWM/AJP
800084821 (u. 1) - SUPERDUAL - X, T

5 HOUSING. BEARING PR7 - SWM/AJP
8000A1374 (u. 1) - SUPERDUAL - X, T

6 ROLLER PR7 - SWM/AJP
8B0047773 (u. 1) - SUPERDUAL - X, T

7 INNER SPACER PR7 - SWM/AJP
800084819 (u. 1) - SUPERDUAL - X, T

8 AJP-SHAFT. OIL PUMP PR7
800084818 (u. 1) - SUPERDUAL - X, T

9 COVER OIL PUMP PR7 - SWM/AJP
80C075630 (u. 1) - SUPERDUAL - X, T

10 O-RING 3156 39.34X2.6 PR7 - SWM/AJP
800027073 (u. 1) - SUPERDUAL - X, T

11 O-RING 2037 1.78X9.25 PR7 - SWM/AJP
8A0023108 (u. 2) - SUPERDUAL - X, T

12 ROLLER PR7 - SWM/AJP
8A0047773 (u. 2) - SUPERDUAL - X, T

13 SCREW TEF M6X1X20 CH8 PR7 - SWM/AJP
Z00062728 (u. 4) - SUPERDUAL - X, T

14 Filter, Oil, Outer, PR7, SWM/AJP - SWM/AJP
800072426 (u. 1) - SUPERDUAL - X, T

15 Filter, Oil, Inner, PR7, SWM/AJP - SWM/AJP
800072427 (u. 1) - SUPERDUAL - X, T

16	COVER. OIL ELEMENT PR7 - SWM/AJP 800072425 (u. 1) - SUPERDUAL - X, T
17	O-RING 3087 T2,62-D22,00 (GACO P5) - SWM/AJP 800034609 (u. 1) - SUPERDUAL - X, T
18	O-RING 3062 15.54X2.62 PR7 - SWM/AJP 800026884 (u. 1) - SUPERDUAL - X, T
19	SCREW TEF M5X0.8X12 CH8 PR7 - SWM/AJP Z00067997 (u. 2) - SUPERDUAL - X, T
20	Strainer, Oil, PR7, SWM/AJP 800074716 (u. 1) - SUPERDUAL - X, T
21	OIL FILTER PR7 + SPR510 + SPR310 - SWM/AJP 8000B0593 (u. 1) - SUPERDUAL - X, T
22	SPRING. OIL FILTER PR7 - SWM/AJP 800085385 (u. 1) - SUPERDUAL - X, T
23	SWM-OIL FILTER COVER PAINTED 80C078988 (u. 1) - SUPERDUAL - X, T
24	O-RING 2.62X50.47 PR7 - SWM/AJP 8A0028553 (u. 1) - SUPERDUAL - X, T
25	SCREW TEF M6X1X20 CH8 PR7 - SWM/AJP Z00062728 (u. 2) - SUPERDUAL - X, T
26	OIL DRAIN PLUG M22X1.5 PR7 - SWM/AJP 800096747 (u. 1) - SUPERDUAL - X, T
27	WASHER 22.3X28X1 PR7 - SWM/AJP 62N015682 (u. 1) - SUPERDUAL - X, T
28	OIL DRAIN PLUG M14X1.25 PR7 - SWM/AJP 800075415 (u. 1) - SUPERDUAL - X, T
29	WASHER. ALUMINIUM 21X14.3X1.2 PR7 - SWM/AJP 62N015678 (u. 1) - SUPERDUAL - X, T
30	CAP. OIL FILLER PR7 - SWM/AJP 800049032 (u. 1) - SUPERDUAL - X, T
31	O-RING 2081 20.35X1.78 PR7 - SWM/AJP 800019789 (u. 1) - SUPERDUAL - X, T
32	HOSE. OIL DELIVERY PR7 - SWM/AJP 8000H1763 (u. 1) - SUPERDUAL - X, T
33	BANJO BOLT. M10X1 PR7 - SWM/AJP 8A00A0574 (u. 2) - SUPERDUAL - X, T
34	SEALING WASHER PR7 - SWM/AJP 800021480 (u. 4) - SUPERDUAL - X, T
35	OIL PUMP ASSY - SWM/AJP M000A02545 (u. 1) - SUPERDUAL - X, T


IGNITION SYSTEM



Superdual 2017 E4

TAVOLA - DRAWING
TABLE - BILD - TABLA

 12

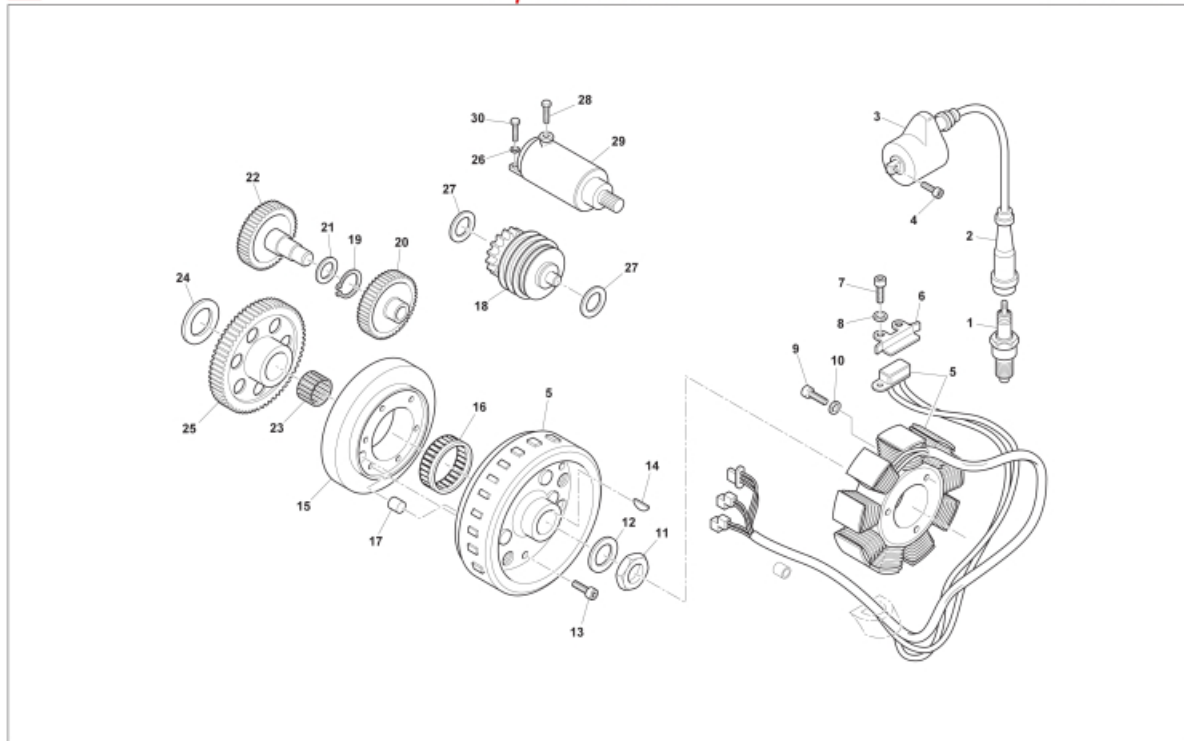

Pagina emessa Dicembre '17 - Page issued December '17 - Page imprimée Décembre '17 - Seite Herasgegeben Dezember '17 - Pagina emitida Diciembre '17

42

- | | |
|----|--|
| 1 | SPARK PLUG CR8EB PR7 - SWM/AJP
8000A0573 (u. 1) - SUPERDUAL - X, T |
| 2 | CAP. SPARK PLUG PR7 - SWM/AJP
8000A6740 (u. 1) - SUPERDUAL - X, T |
| 3 | SWM-COIL ASSY
8000H0277 (u. 1) - SUPERDUAL - X, T |
| 4 | SWM-HEX FLANGE SCREW M6x1x16-CH8
Z00062727 (u. 2) - SUPERDUAL - X, T |
| 5 | SWM-FWM WITH
M000A00914 (u. 1) - SUPERDUAL - X, T |
| 6 | CLAMP. WIRE PR7 - SWM/AJP
8000H3841 (u. 1) - SUPERDUAL - X, T |
| 7 | SWM-SCREW M4x0.7x10
60ND02461 (u. 2) - SUPERDUAL - X, T |
| 8 | SPRING WASHER 7.3X4.3X0.9 PR7 - SWM/AJP
62ND15534 (u. 2) - SUPERDUAL - X, T |
| 9 | SWM-SCREW M6x1x30
60ND02511 (u. 3) - SUPERDUAL - X, T |
| 10 | WASHER. SPRING (11X6.4X0.5) PR7 - SWM/AJP
62NA15767 (u. 3) - SUPERDUAL - X, T |
| 11 | NUT (M16X1)PR7 - SWM/AJP
8000H3679 (u. 1) - SUPERDUAL - X, T |
| 12 | WASHER (16.3X28X2) PR7 - SWM/AJP
8000H3680 (u. 1) - SUPERDUAL - X, T |
| 13 | SCREW PR7 - SWM/AJP
8A0078647 (u. 6) - SUPERDUAL - X, T |
| 14 | KEY. WOODRUFF PR7 - SWM/AJP
65N121007 (u. 1) - SUPERDUAL - X, T |
| 15 | ADDITIONAL WEIGHT PR7 - SWM/AJP
8A0084828 (u. 1) - SUPERDUAL - X, T |

16	CLUTCH. ONE WAY PR7 - SWM/AJP 800083136 (u. 1) - SUPERDUAL - X, T
17	PIN DOWEL 8X10 PR7 - SWM/AJP 800086051 (u. 1) - SUPERDUAL - X, T
18	TORQUE LIMITER Z17/52 PR7 - SWM/AJP 8000A5015 (u. 1) - SUPERDUAL - X, T
19	AJP-CIRCLIP 13 MM PR7 66ND21196 (u. 1) - SUPERDUAL - X, T
	SWM-CIRCLIP D13x1 66N021196 (u. 1)
20	IDLE GEAR T27 PR7 - SWM/AJP 800084831 (u. 1) - SUPERDUAL - X, T
21	WASHER 22X14.5X1 PR7 - SWM/AJP 8F0009408 (u. 1) - SUPERDUAL - X, T
22	IDLE GEAR T27 PR7 - SWM/AJP 800089012 (u. 1) - SUPERDUAL - X, T
23	BEARING. NEEDLE 28X34X20 PR7 - SWM/AJP 800084597 (u. 1) - SUPERDUAL - X, T
24	WASHER. THRUST (28X47.8X1.5) PR7 - SWM/AJP 8A0084473 (u. 1) - SUPERDUAL - X, T
25	GEAR. FREE-WHEEL T62 PR7 - SWM/AJP 800089011 (u. 1) - SUPERDUAL - X, T
26	SPRING WASHER 10X6.4X0.5 PR7 - SWM/AJP 800048591 (u. 2) - SUPERDUAL - X, T
27	BUSH PR7 - SWM/AJP 8000A1017 (u. 2) - SUPERDUAL - X, T
28	SCREW TEF M6X1X25 CH8 PR7 - SWM/AJP Z00062729 (u. 1) - SUPERDUAL - X, T
29	STARTING MOTOR PR7 - SWM/AJP 8000H1772 (u. 1) - SUPERDUAL - X, T
30	SCREW TEF M6X1X20 CH8 PR7 - SWM/AJP Z00062728 (u. 1) - SUPERDUAL - X, T


THROTTLE BODY



Superdual 2017 E4

TAVOLA - DRAWING
TABLE - BILD - TABLA

 13

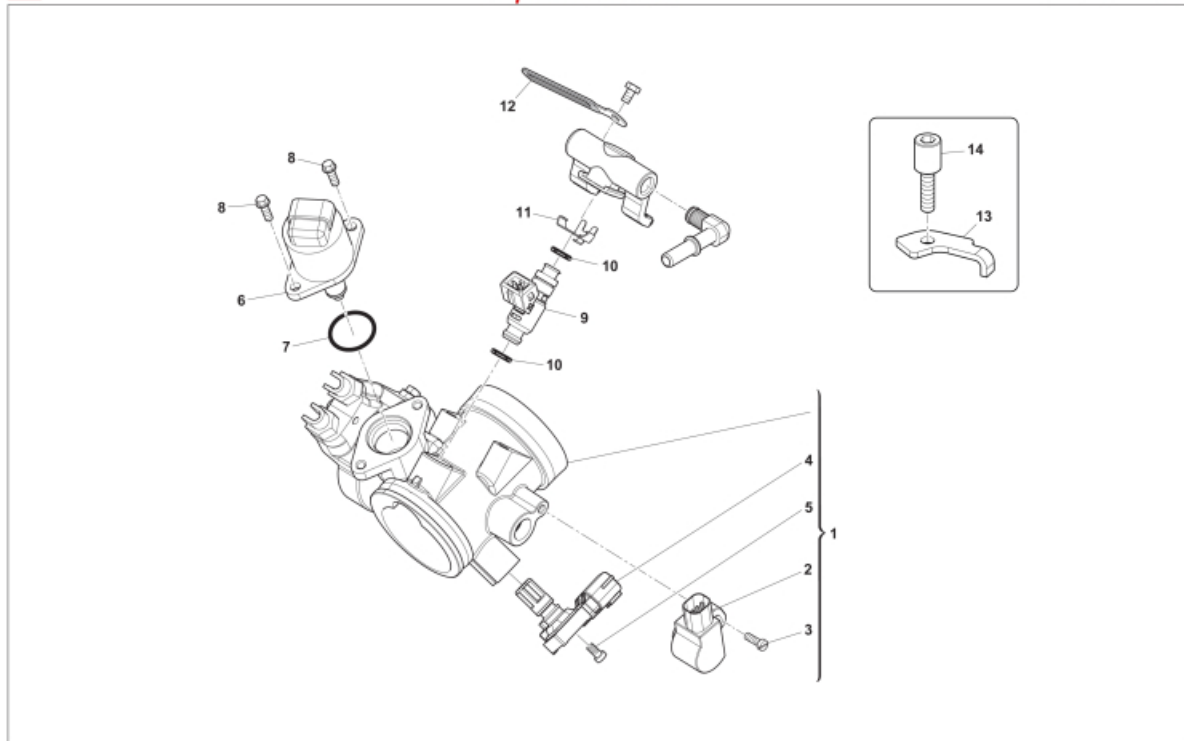


Pagina emessa Dicembre '17 - Page issued December '17 - Page imprimée Décembre '17 - Seite Herasgegeben Dezember '17 - Pagina emitida Diciembre '17

44

- | | |
|----|--|
| 1 | SWM-THROTTLE BODY 46, ASSY
M000A01406 (u. 1) - SUPERDUAL - X, T |
| 2 | SWM-POSITION SENSOR
31350080 (u. 1) - SUPERDUAL - X, T |
| 3 | SWM-SCREW 4x16
72030657 (u. 2) - SUPERDUAL - X, T |
| 4 | SWM-PRESSURE SENSOR
31350057 (u. 1) - SUPERDUAL - X, T |
| 5 | SWM-FLANGED EXAGON HEAD SCREW M5x12
72030078 (u. 1) - SUPERDUAL - X, T |
| 6 | SWM-STEPPER MOTOR
M000P01389 (u. 1) - SUPERDUAL - X, T |
| 7 | SWM-O-RING 4075 18.64x3.56
M000P02527 (u. 1) - SUPERDUAL - X, T |
| 8 | SCREW TEF M5X0.8X12 CH8 PR7 - SWM/AJP
Z00067997 (u. 2) - SUPERDUAL - X, T |
| 9 | SWM-RUEL INJECTOR SD
M000P01388 (u. 1) - SUPERDUAL - X, T |
| 10 | SWM-INJECTOR OR KIT
F000P01472 (u. 2) - SUPERDUAL - X, T |
| 11 | SWM-THROTTLE BODY CLIP
F000P00852 (u. 1) - SUPERDUAL - X, T |
| 12 | SWM-METALLIC CLAMP
8000A1792 (u. 1) - SUPERDUAL - X, T |
| 13 | SWM-LIMIT PLATE
M000P02201 (u. 1) - SUPERDUAL - X, T |
| 14 | SWM-SPECIAL SCEW
M000P02354 (u. 1) - SUPERDUAL - X, T |

 AIR FILTER

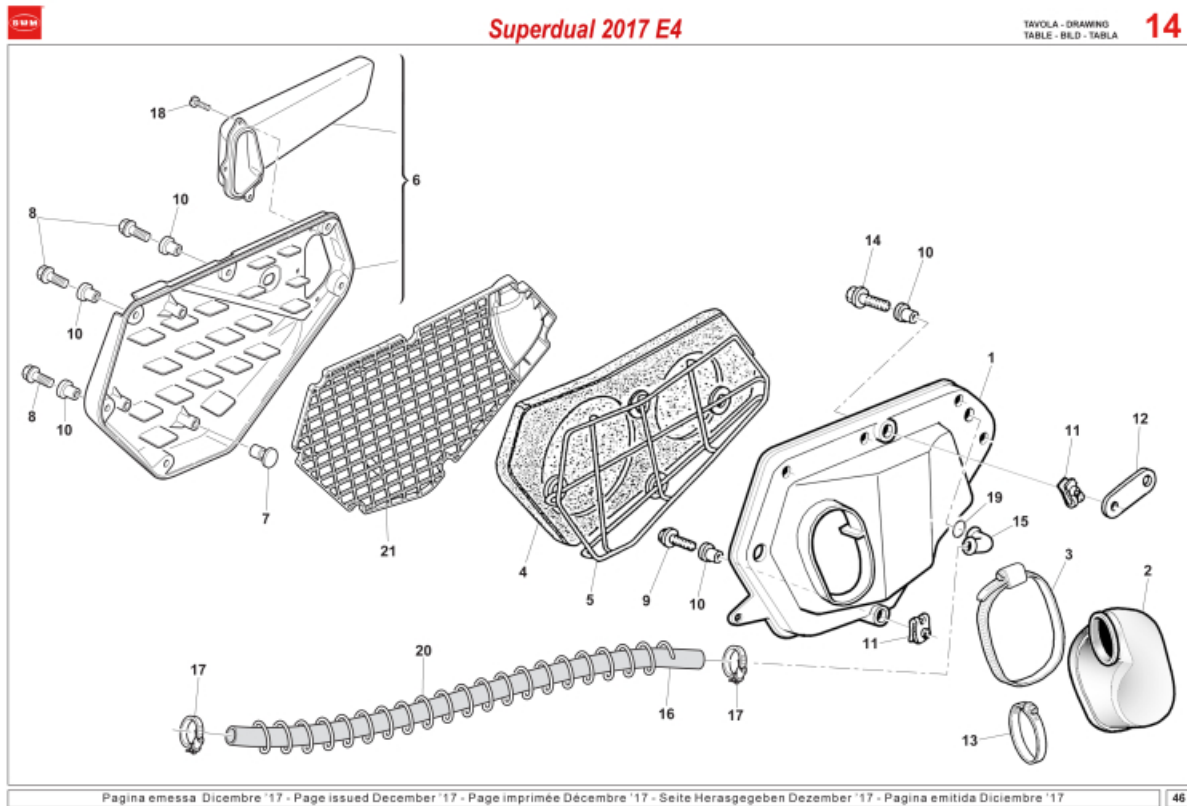


1	SWM-AIRBOX ASSY F000A00051 (u. 1) - SUPERDUAL - X, T
2	SWM-AIRBOX CONNECTION SD 8000H0914 (u. 1) - SUPERDUAL - X, T
3	SWM-HOSE CLAMP NEMO-60/145 8F0099475 (u. 1) - SUPERDUAL - X, T
4	SWM-AIR FILTER SD 800092948 (u. 1) - SUPERDUAL - X, T
5	SWM-AIR FILTER SUPPORT SD 8000H2366 (u. 1) - SUPERDUAL - X, T
6	SWM-AIRBOX COVER ASSY F000A00052 (u. 1) - SUPERDUAL - X, T
7	SWM-FILTER BOX SILENTBLOCK 800067970 (u. 3) - SUPERDUAL - X, T
8	SWM-HEX FLANGE SCREW M6x16-CH8 Z00062727 (u. 6) - SUPERDUAL - X, T
9	SCREW TEF M6X55 CH8 PR7 - SWM/AJP ZB0067545 (u. 1) - SUPERDUAL - X, T
10	SWM-BUSH D14-D8-D6.25x4 8000H3017 (u. 8) - SUPERDUAL - X, T
11	SWM-CLIP NUT M6x1 U00046893 (u. 2) - SUPERDUAL - X, T
12	SWM-FIXED UPPER BASE PLATE 151580301 (u. 1) - SUPERDUAL - X, T
13	SWM-HOSE CLAMP NEMO-40/80 8E0099475 (u. 1) - SUPERDUAL - X, T
14	SWM-HEX FLANGE SCREW M6x16-CH8 Z00062727 (u. 1) - SUPERDUAL - X, T
15	JOINT. CYLINDER HEAD COVER BREATHER PR7 - SWM/AJP 8000A7039 (u. 1) - SUPERDUAL - X, T

2020 - SUPERDUAL T (SILVER)

16	SWM-BREATHER HOSE SD 8B00H1033 (u. 1) - <i>SUPERDUAL - X, T</i>
17	SWM-HOSE CLAMP CLIC R 96-175 8A0092249 (u. 2) - <i>SUPERDUAL - X, T</i>
18	SWM-SELF TAPPING SCREW L12 8A00H0534 (u. 3) - <i>SUPERDUAL - X, T</i>
19	O-RING. CYLINDER HEAD COVER BREATHER 11X2 PR7 - SWM/AJP 800001199 (u. 1) - <i>SUPERDUAL - X, T</i>
20	SWM-HOSE PROTECTOR SPRING 8000H4196 (u. 1) - <i>SUPERDUAL - X, T</i>
21	SWM-AIRBOX FILTER HOLDER GRID F000P02491 (u. 1) - <i>SUPERDUAL - X, T</i>

 COOLING SYSTEM

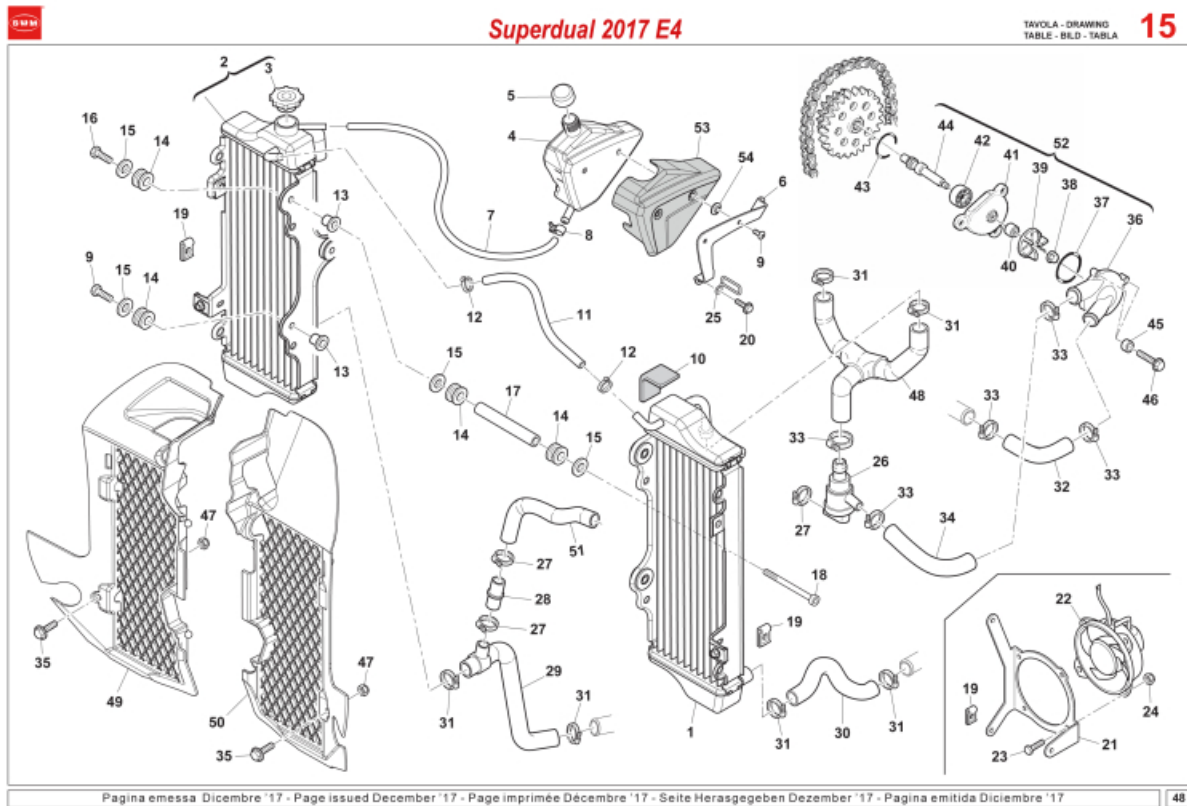

1	SWM-LH RADIATOR F000P00022 (u. 1) - SUPERDUAL - X, T
2	SWM-RH RADIATOR F000P00023 (u. 1) - SUPERDUAL - X, T
3	SWM-RADIATOR CAP SD F000P00717 (u. 1) - SUPERDUAL - X, T
4	SWM-EXPANSION TANK SD F000P01968 (u. 1) - SUPERDUAL - X, T
5	PLUG FOR EXPANSION TANK SPR AND PR7 - SWM/AJP 800040427 (u. 1) - SUPERDUAL - X, T
6	SWM-EXPANSION TANK HOLDER PLATE F000P01048 (u. 1) - SUPERDUAL - X, T
7	SWM-RADIATOR TO EXPANSION TANK PIPE SD F000P02066 (u. 1) - SUPERDUAL - X, T
8	SWM-CLAMP CLIC CLST 110 8A00H1981 (u. 1) - SUPERDUAL - X, T
9	SWM-SCREW M5x0.8x12 ZA0059572 (u. 1)
10	SWM-RADIATOR SILENTBLOCK 800087072 (u. 1) - SUPERDUAL - X, T
11	SWM-RADIATOR PIPE L160 8A00H1298 (u. 1) - SUPERDUAL - X, T
12	SWM-CLAMP CLIC CLST 130 8000H1981 (u. 2) - SUPERDUAL - X, T
13	SWM-RH RADIATOR BUSHING SD 8G0059802 (u. 4) - SUPERDUAL - X, T
14	SWM-RADIATOR MOUNTING SILENTBLOCK F000P00025 (u. 6) - SUPERDUAL - X, T
15	SWM-WASHER 22x6.5x1 Z00059801 (u. 3) - SUPERDUAL - X, T

16	SCREW TEF M6X1X25 CH8 PR7 - SWM/AJP Z00062729 (u. 2) - SUPERDUAL - X, T	
17	SWM-SPACER D10-D7-L64 800066858 (u. 1) - SUPERDUAL - X, T	
18	SWM-SCREW M6x1x100 60ND02525 (u. 1) - SUPERDUAL - X, T	
19	SWM-ELASTIC NUT M6x1 U00060873 (u. 3) - SUPERDUAL - X, T	
20	SWM-SCREW M5x0.8x12 ZA0059572 (u. 2) - SUPERDUAL - X, T	
21	SWM-FAN HOLDER SD 8000H0911 (u. 1) - SUPERDUAL - X, T	
22	SWM-AXIAL FAN VA32 8000A7715 (u. 1) - SUPERDUAL - X, T	
23	SWM-SCREW M4x0.7x25 60ND01030 (u. 4) - SUPERDUAL - X, T	
24	SWM-NUT M4x0.7x6-CH7 Z00040717 (u. 4) - SUPERDUAL - X, T	
25	SWM-HOSE RETAINER 800086951 (u. 1) - SUPERDUAL - X, T	
26	SWM-THERMOSTAT 8B0075984 (u. 1) - SUPERDUAL - X, T	
27	SWM-HOSE CLAMP CLIC R 96-175 8A0092249 (u. 3) - SUPERDUAL - X, T	
28	SWM-PIPES UNION BUSH 800094680 (u. 1) - SUPERDUAL - X, T	
29	SWM-RIGHT RADIATOR-CYLINDER PIPE 8000H1205 (u. 1) - SUPERDUAL - X, T	
30	SWM-LEFT RADIATOR-CYLINDER PIPE 8000H1206 (u. 1) - SUPERDUAL - X, T	
31	SWM-CLAMP HOP8-12/22 8A0099475 (u. 6) - SUPERDUAL - X, T	
32	HOSE. WATER PUMP PR7 - SWM/AJP 8A0099708 (u. 1) - SUPERDUAL - X, T	
33	CLAMP. HOSE PR7 - SWM/AJP 8B0099475 (u. 6) - SUPERDUAL - X, T	
34	SWM-PUMP-THERMOSTAT PIPE 8000H1529 (u. 1) - SUPERDUAL - X, T	
35	SWM-HEX FLANGE SCREW M6x1x12-CH8 ZH0067545 (u. 2) - SUPERDUAL - X, T	
36	SWM-PUMP BODY 8000H1958 (u. 1) - SUPERDUAL - X, T	
37	GASKET CAP PR7 - SWM/AJP 800027122 (u. 1) - SUPERDUAL - X, T	
38	SWM-NUT M5x0.8x6-CH8 Z00056443 (u. 1) - SUPERDUAL - X, T	
39	OBSOLETE - M000A01955 SWM- IMPELLER M000P01959 (u. 1) - SUPERDUAL - X, T	OBSOLETE
40	SEAL. WATER PUMP (8X16X10) – 2 - SWM/AJP M000P01958 (u. 1) - SUPERDUAL - X, T	
41	OBSOLETE - M000A01955 : SWM-WATER PUMP FLANGE MOUNTING M000P01957 (u. 1) - SUPERDUAL - X, T	OBSOLETE
	WATER PUMP ASSEMBLY WITHOUT GASKET: M000P01959 - SWM/AJP M000A01955 (u. 1)	
42	BEARING. BALL 12X28X8 PR7 - SWM/AJP 800034317 (u. 1) - SUPERDUAL - X, T	

43	O-RING PR7 - SWM/AJP 800040007 (u. 1) - <i>SUPERDUAL - X, T</i>
44	WATER PUMP ASSEMBLY WITHOUT GASKET: M000P01959 - SWM/AJP M000A01955 (u. 1) PENDING - M000A01955 : SWM-WATER PUMP SHAFT M000P01956 (u. 1) - <i>SUPERDUAL - X, T</i>
45	BUSH 8X6.4X6 PR7 - SWM/AJP 161795501 (u. 2) - <i>SUPERDUAL - X, T</i>
46	SCREW TE M6X1X30 CH8 PR7 - SWM/AJP Z00062730 (u. 3) - <i>SUPERDUAL - X, T</i>
47	SWM-SELF LOCKING FLANGE NUT M6x1x7-CH10 Z00044240 (u. 2) - <i>SUPERDUAL - X, T</i>
48	SWM-THERMOSTAT-RADIATOR PIPE 8000H1202 (u. 1) - <i>SUPERDUAL - X, T</i>
49	SWM-RADIATOR PROTECTION F000P01421 (u. 1) - <i>SUPERDUAL - X, T</i>
50	SWM-LH RADIATOR PROTECTION F000P01423 (u. 1) - <i>SUPERDUAL - X, T</i>
51	SWM-BY-PASS PIPE 8000H1203 (u. 1) - <i>SUPERDUAL - X, T</i>
52	WATER PUMP ASSEMBLY WITHOUT GASKET: M000P01959 - SWM/AJP M000A01955 (u. 1) - <i>SUPERDUAL - X, T</i>
53	SWM-EXPANSION TANK COVER F000P02219 (u. 1) - <i>SUPERDUAL - X, T</i>
54	SWM-WATER TANK COVER SPACER F000P02251 (u. 2) - <i>SUPERDUAL - X, T</i>