 




PR3 125 EM 2020

 
Exploded

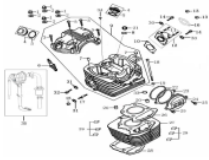


CYLINDER HEAD ASSY




VALVE MECHANISM

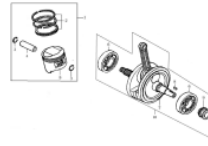

CRANKSHAFT - PISTON

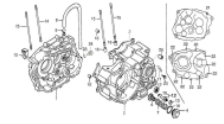 


CRANKCASES

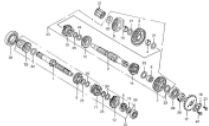 


GEARBOX



 
GEARSHIFT SHAFT

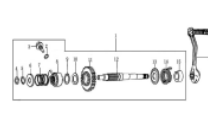


KICKSTARTER SHAFT

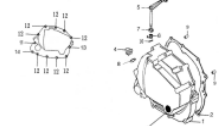 


RIGHT CRANKCASE COVER

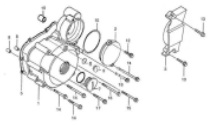 


LEFT CRANKCASE COVER

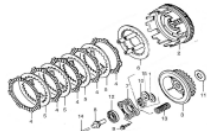 


CLUTCH

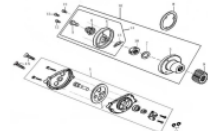 


OIL PUMP

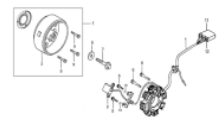 


ESTATOR

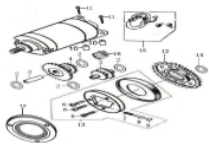 

ELECTRIC STARTER MECHANISM

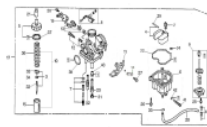 

CARBURETTOR

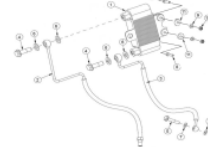 


OIL RADIATOR




INTAKE



 EXHAUST SYSTEM

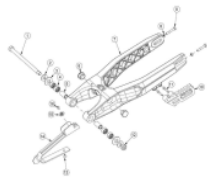


REAR SWING ARM

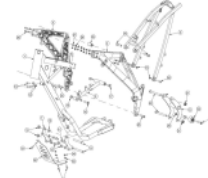 


FRAME



 
SIDE STAND - FOOTPEG

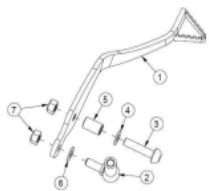


REAR BRAKE PEDAL

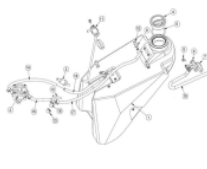 

FUEL TANK

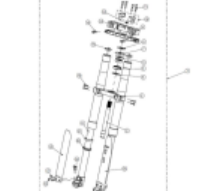 


FRONT SUSPENSION

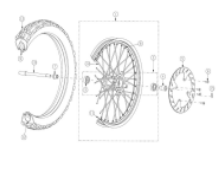 


FRONT WHEEL



 
FRONT BRAKE

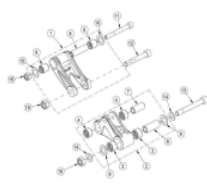


SUSPENSION LINKS

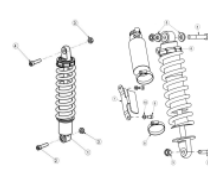 


SHOCK ABSORBER

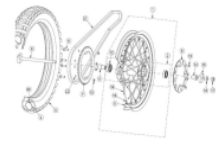 

REAR WHEEL

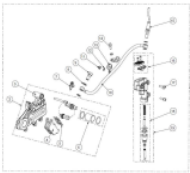 


REAR BRAKE

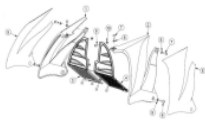 


FRAME COVER



 
FRONT PLASTICS

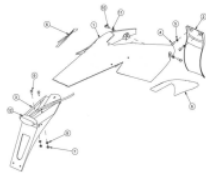


REAR FENDER

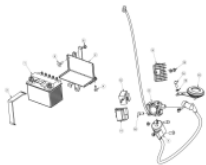 

BATTERY – ELECTRIC SYSTEM

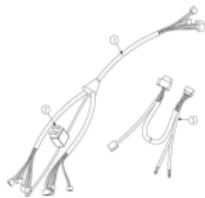 


WIRE HARNESS

 

COCKPIT



 
TURN SIGNALS

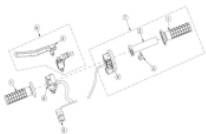

CONTROLS




 HANDLEBAR

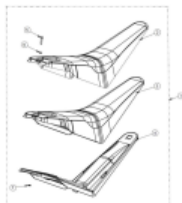

SEAT

 
CYLINDER HEAD ASSY

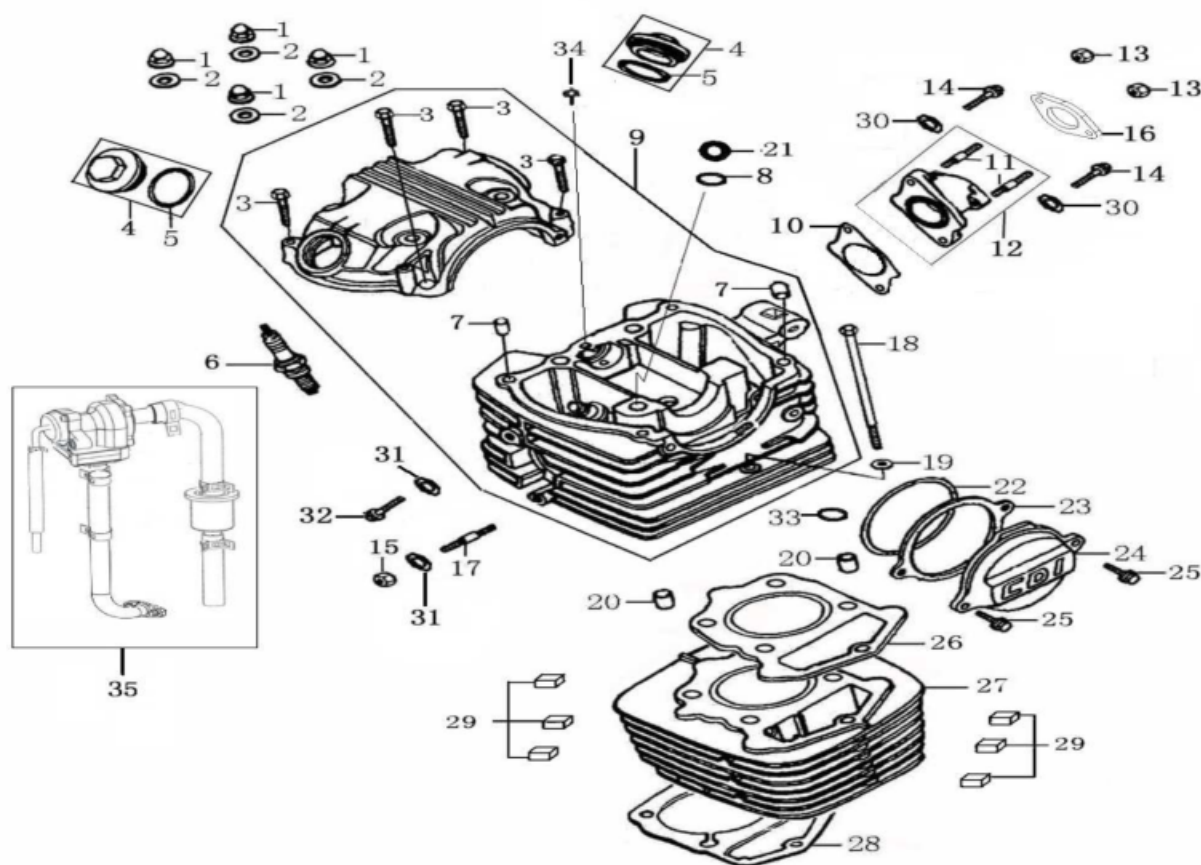

1	AJP-HEX. CUP NUT 8MM 1100810060000 (u. 4)
2	AJP-CYLINDER HEAD BOLT WASHER (8X18X2) 1100710060000 (u. 4)
3	AJP-SCREW CDI COVER M6X20MM S701300000000 (u. 4)
4	AJP-TAPPED ADJUST CAP 1123110060000 (u. 2)
5	AJP-O-RING 35X3MM 9010410060000 (u. 2)
6	AJP-SPARK CHAMPION 91A231110000 (u. 1) AJP-SPARK PLUG ENGINE 200 8130010490000 (u. 1)
7	AJP-DOWEL PIN 8X14MM 9150210060000 (u. 2)
10	AJP-200 INTAKE MANIFOLD GASKET 00MTS01A0021 (u. 1)
11	AJP-BOLT M6X26 125/200/240 91127L0440000 (u. 2)
12	AJP-CARBURETTOR INSULATOR 00MTS01A0086 (u. 1) AJP-CARBURETTOR INSULATOR 00MTS01A0098 (u. 1)
13	AJP-NUT DIN985 M6 PC0985006000 (u. 2)
14	AJP-SCREW DIN912 M6X20 PF0912006020 (u. 2)


15	AJP-NUT DIN980 M6 PC0980006000 (u. 1)
18	AJP-BOLT M6X110MM 125 91104I0060000 (u. 1)
19	AJP-SEAL WASHER 6.5X12.8X2MM 91307I0060000 (u. 1)
20	AJP-DOWEL PIN 10X20 91506I0080000 (u. 3)
22	AJP-O.-RING 75X2.65MM 90109I0060000 (u. 1)
23	AJP-CYLINDER HEAD SIDE COVER GASKET 11004I0060000 (u. 1)
24	AJP-CYLINDER HEAD SIDE COVER 11005I0060AJP (u. 1)
25	AJP-SCREW CDI COVER M6X20MM S701300000000 (u. 2)
26	AJP-CYLINDER HEAD GASKET 150 9022BJ0250000 (u. 1)
28	AJP-CYLINDER GASKET 125 90205I0060000 (u. 1)
	AJP-CYLINDER GASKET 150 90205J0250000 (u. 1)
30	AJP-WASHER DIN125 M6 AN0125006000 (u. 2)
31	AJP-WASHER DIN127 M6 AN0127006000 (u. 2)
	AJP-WASHER DIN127 M8 AN0127008000 (u. 2)
32	AJP-SCREW DIN933 M6X25 PF0933006025 (u. 1)
	AJP-SCREW DIN933 M8X25 PF0933008025 (u. 1)
33	AJP-O RING 10X1.6 11014I0060000 (u. 1)
34	AJP-RUBBER PIN 11015I0060000 (u. 1)

 VALVE MECHANISM

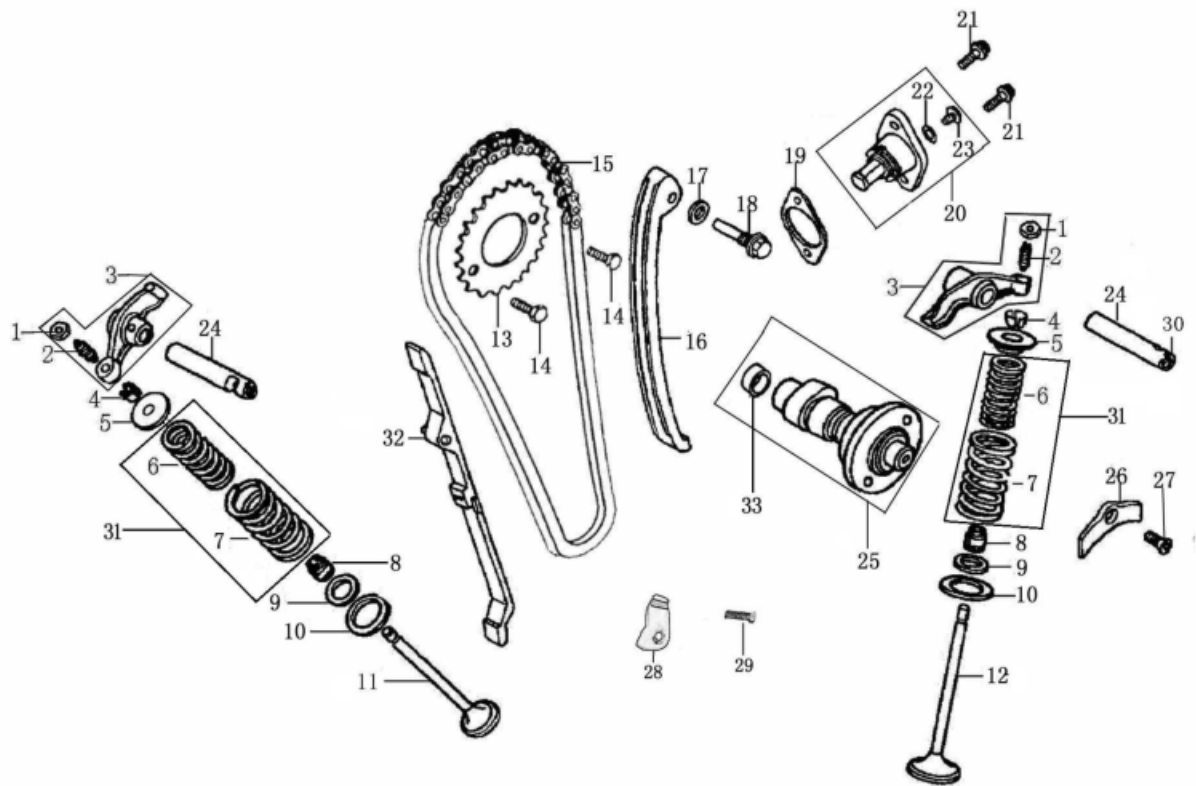


1	AJP-TAPPED ADJUST SCREW 15403I0060000 (u. 2)
2	AJP-AFINADOR VÁLVULA 15404I0060000 (u. 2)
3	AJP-VALVE ROCKER ARM. ASSY 125/200/240 1540AI0060000 (u. 1)
4	AJP-VALVE COTTER 125 15707I0060000 (u. 4)
5	AJP-VALVE SPRING CONTAINER 125 / 200 / 240 15705I0060000 (u. 2)
6	AJP-INNER VALVE SPRING 125/200/240 15704I0060000 (u. 2)
7	AJP-OUTER VALVE SPRING 125/200/240 15703I0060000 (u. 2)
11	AJP-EXHAUST VALVE 125 15702I0060000 (u. 1)
12	AJP-INTAKE VALVE 125 15701I0060000 (u. 1)
13	AJP-SPROCKET 15301I0060000 (u. 1)
14	AJP-SCREW M6X10 S307300000000 (u. 2)
15	AJP-TIMING CHAIN 125 1532BI0060000 (u. 1)
16	AJP-TIMING CHAIN TENSIONER 125 1552AI0060000 (u. 1)
18	AJP-TIMING CHAIN TENSIONER PIVOT BOLT 91109I0060000 (u. 1)
19	AJP-TENSIONER ADJUSTER GASKET 90211I0490000 (u. 1)

20	AJP-TENSIONER ADJUSTER 1554BI0490000 (u. 1)
22	AJP-O-RING 1.5X9.6 Q500100000000 (u. 1)
23	AJP-BOLT M6X6 91120I0490000 (u. 1)
24	AJP-ROCKER ARM SHAFT IN/EX 15402I0060000 (u. 2)
25	AJP-CAMSHAFT 125 15100I0060000 (u. 1)
26	AJP-SHAFT HOLDER 11200I0060000 (u. 1)
27	AJP-BOLT M6X16MM 15403L0440002 (u. 1)
28	AJP-TIMING CHAIN PROTECTION PLATE 240 2143BL0440000 (u. 1)
29	AJP-SCREW DIN933 M6X16 PF0933006016 (u. 1)
32	AJP-TIMING CHAIN GUIDE 125 1553AI0060000 (u. 1)
33	AJP-CAMSHAFT DOWEL PIN 125 1512AI0060000 (u. 1)

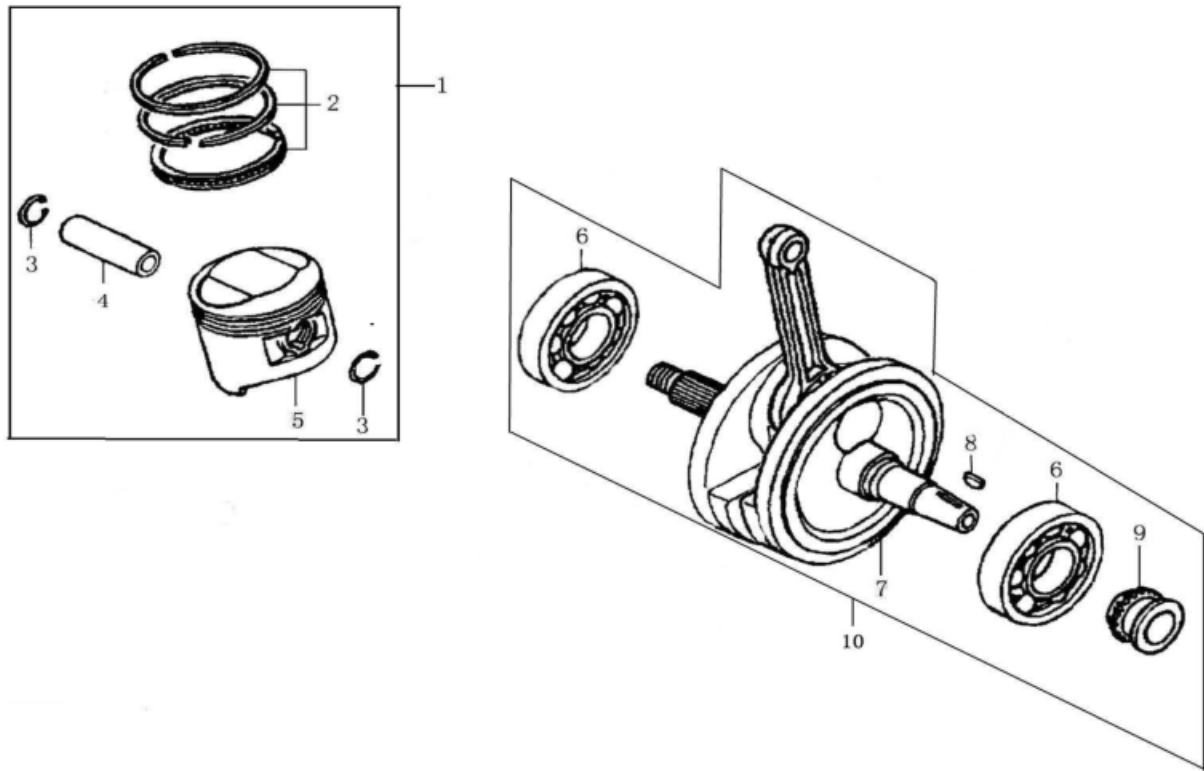 CRANKSHAFT - PISTON


1	AJP-PISTON ASSEMBLY 125 13100I0060000 (u. 1)
	AJP-PISTON ASSY 150 00MTS01A0157 (u. 1)
2	AJP-PISTON RING SET 125 13103I0060000 (u. 1)
	AJP-PISTON RING SET 150 1310AJ0250000 (u. 1)
3	AJP-CIR-CLIP 15MM 91401I0060000 (u. 2)
4	AJP-PISTON PIN 125 13102I0060000 (u. 1)
	AJP-PISTON PIN 150 13102J0250000 (u. 1)
5	AJP-PISTON 200 13101J0250100 (u. 1)
	AJP-PISTON 125 13101I0060000 (u. 1)
7	AJP-CRANKSHAFT 125 13220I0060001 (u. 1)
9	AJP-TIMING SPROCKET 125 13203I0060000 (u. 1)
10	AJP-CRANKSHAFT ASSEMBLY 125 1320BI0060000 (u. 1)
	AJP-CRANKSHAFT CONNECTING ROD ASSY 125 (Ø22 00MTS01A0158 (u. 1)

 
CRANKCASES

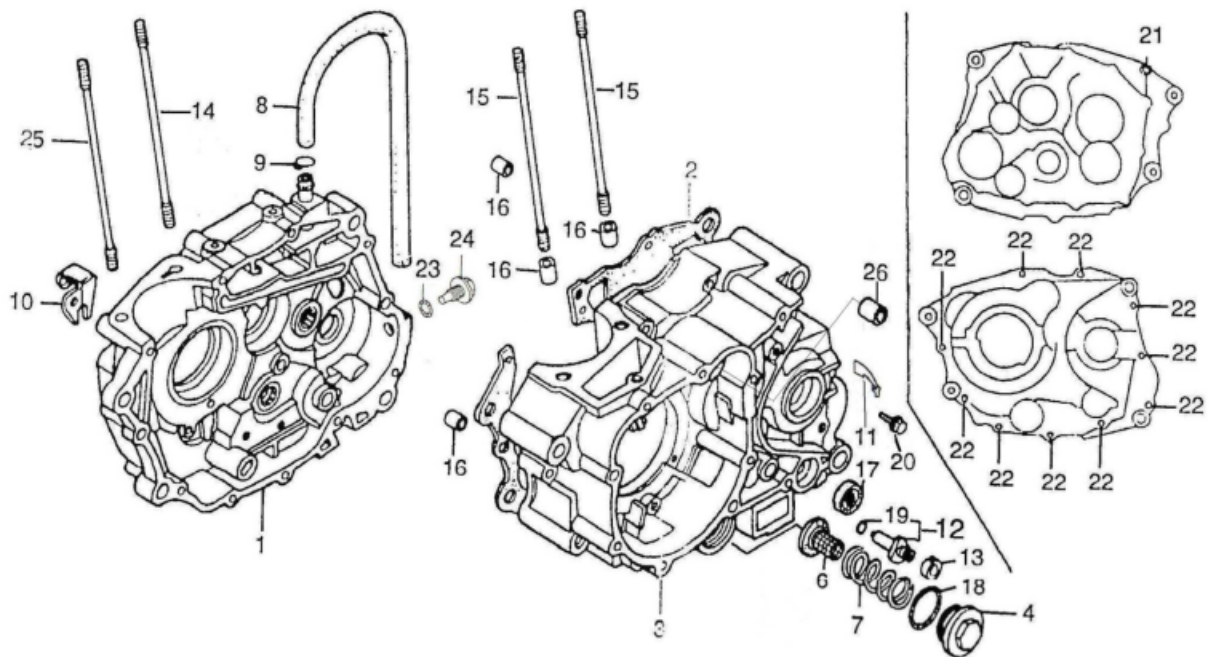

1	AJP-RIGHT CRANKCASE 12200I0490000 (u. 1)
2	AJP-CRANKCASE GASKET 90205I0490000 (u. 1)
3	AJP-LEFT CRANKCASE 12000I0490000 (u. 1)
4	AJP-OIL FILTER COVER 11229I0060000 (u. 1)
6	AJP-OIL FILTER 1413BI0490000 (u. 1)
7	AJP-OIL FILTER SPRING 14221I0490000 (u. 1)
8	AJP-BREATHER TUBE 12105I0060000 (u. 1)
10	AJP-CLUTCH WIRE HOLDER 22422I0490000 (u. 1)
11	AJP-GENERATOR WIRE HOLDER 12103I0080000 (u. 1)
12	AJP-NEUTRAL CONTACT 8802BD0020000 (u. 1)
14	AJP-CYLINDER STUD BOLT M8X212 (6.5) 91102I0490000 (u. 1)
15	AJP-CYLINDER STUD BOLT M8X224 91101I0490000 (u. 2)
16	AJP-DOWEL PIN 10X14MM 91504I0490000 (u. 4)
17	AJP-GEAR OIL SEAL 90301I0060000 (u. 1)
18	AJP-O-RING 35X3MM 90104I0060000 (u. 1)
19	AJP-O RING 7X1.7 90133D0020000 (u. 2)
20	AJP-SCREW M6X14 L310200000000 (u. 1)

21	AJP-SCREW M6X60 S702000000000 (u. 1)
22	AJP-SCREW M6X50 S701900000000 (u. 10)
23	AJP-O.RING 11.8X2.65 9110110118000265 (u. 1)
24	AJP-SIDE SCREW 9110810060000 (u. 1)
25	AJP-CYLINDER STUD BOLT 125 (M8X212) 9110110060100 (u. 1)
26	AJP-BEARING HK1010 Z303900000000 (u. 1)

 
GEARBOX

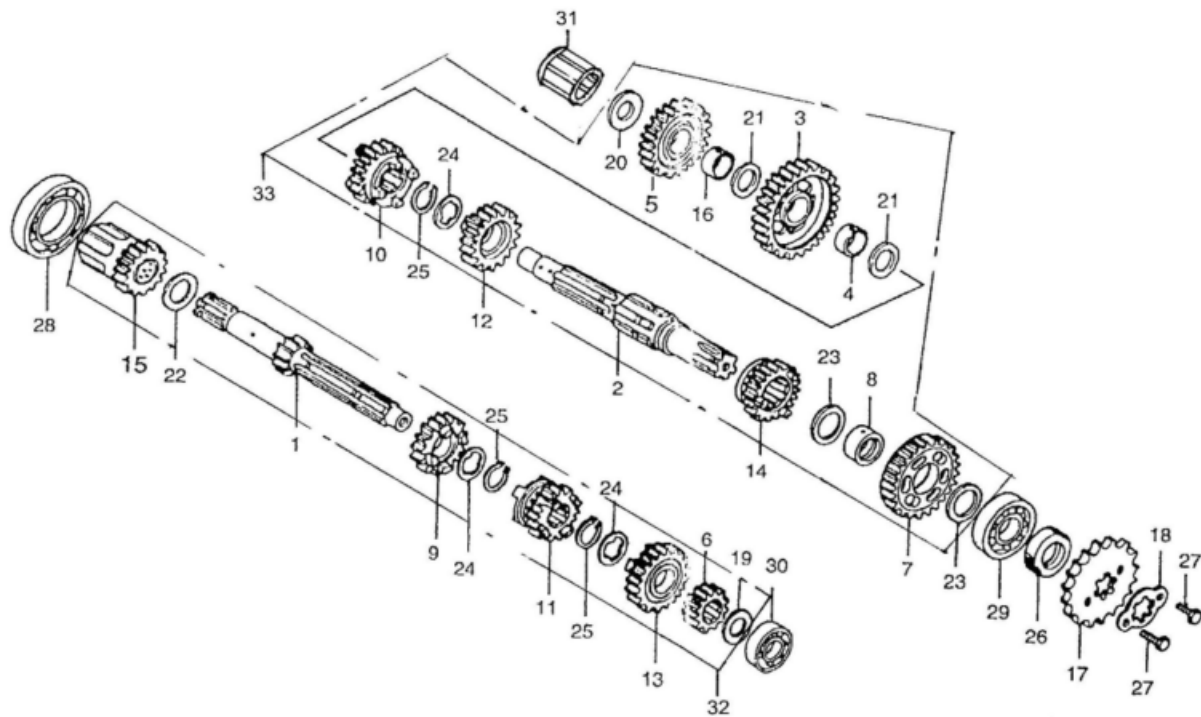

1	AJP-MAIN SHAFT (Z13) 23221I0060000 (u. 1)
2	AJP-SECONDARY SHAFT 23241I0060000 (u. 1)
3	AJP-1ST GEAR. SECONDARY SHAFT (Z26) 23242I0060001 (u. 1)
4	AJP-DOWEL PIN 23203I0060001 (u. 1)
5	AJP-SECONDARY STARTING GEAR (Z28) 23248I0060000 (u. 1)
6	AJP-2ND GEAR. MAIN SHAFT (Z17) 23222I0060002 (u. 1)
7	AJP-2ND GEAR. SECONDARY SHAFT (Z32) 23242I0060002 (u. 1)
8	AJP-DOWEL PIN 20X23X9 23203I0060002 (u. 1)
9	AJP-3RD GEAR. MAIN SHAFT (Z20) 23222I0060003 (u. 1)
10	AJP-3RD GEAR. SECONDARY SHAFT (Z28) 23242I0060003 (u. 1)
11	AJP-4RD GEAR. MAIN SHAFT(Z23) 23222I0060004 (u. 1)
12	AJP-4RD GEAR. SECONDARY SHAFT (Z26) 23242I0060004 (u. 1)
13	AJP-5TH GEAR. MAIN SHAFT (Z25) 23222I0060005 (u. 1)
14	AJP-5TH GEAR. SECONDARY SHAFT (Z24) 23242I0060005 (u. 1)
15	AJP-MAIN STARTER GEAR (Z19) 23231I0060000 (u. 1)
16	AJP-DOWEL PIN 23203I0060003 (u. 1)

17	AJP-DRIVE SPROCKET (Z13) 00MTS01A0084 (u. 1)
	AJP-DRIVE SPROCKET (17T) 00MTS01B0018 (u. 1)
	AJP-DRIVE SPROCKET (Z14) 00MTS01A0036 (u. 1)
	AJP-DRIVE SPROCKET (Z16) 00MTS01A0018 (u. 1)
	AJP-DRIVE SPROCKET (Z15) 23401I0060000 (u. 1)
	AJP-DRIVE SPROCKET (Z13) 00MTS01A0035 (u. 1)
18	AJP-SPROCKET FIXING PLATE 23402I0060000 (u. 1)
20	AJP-WASHER 15 MM 240 9330161521030000 (u. 1)
24	AJP-WASHER 20 MM 23223I0060000 (u. 3)
26	AJP-SEAL 20X34X7 90303I0060000 (u. 1)
27	AJP-SCREW M6X12 B05783000600107 (u. 2)
28	AJP-BEARING 6006 9210200000006006 (u. 1)
32	AJP-MAIN SHAFT ASSEMBLY 23220I0060000 (u. 1)
33	AJP-SECONDARY SHAFT ASSEMBLY 23240I0060000 (u. 1)

 
GEARSHIFT SHAFT

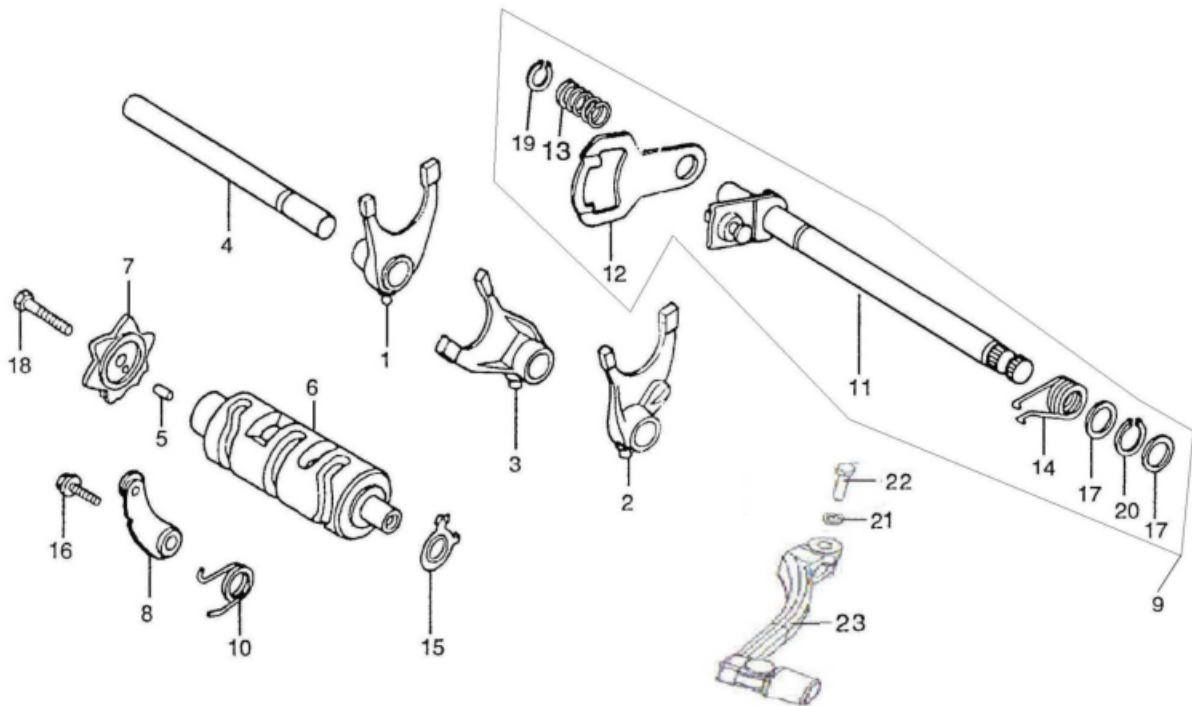


1	AJP-RIGHT GEAR SHIFT FORK 24101I0060000 (u. 1)
2	AJP-LEFT GEAR SHIFT FORK 24102I0060000 (u. 1)
3	AJP-CENTRAL GEAR SHIFT FORK 24103I0060000 (u. 1)
4	AJP-GEAR SHIFT FORK GUIDE 24104I0060000 (u. 1)
5	AJP-PIN 4X10 X306200000000 (u. 1)
6	AJP-GEAR SHIFT DRUM 24201I0060000 (u. 1)
7	AJP-GEAR SHIFT CAM 24202I0060000 (u. 1)
8	AJP-GEAR SHIFT DRUM STOPER 24221I0060000 (u. 1)
9	AJP-GEAR SHIFT SPINDLE ASSEMBLY 24300I0060000 (u. 1)
10	AJP-GEAR DRUM STOPPER SPRING 125/200/240 24302I0060000 (u. 1)
11	AJP-GEAR SHIFT SPINDLE 2432AI0060000 (u. 1)
12	AJP-GEAR SHIFT PLATE 24301I0060000 (u. 1)
13	AJP-GEAR SHIFT PLATE SPRING 24303I0080000 (u. 1)
14	AJP-GEAR SHIFT RETURN SPRING 24303I0060000 (u. 1)
15	AJP-NEUTRAL SWITCH ROTOR 88002I0060000 (u. 1)
16	AJP-SCREW M6X22 S706000000000 (u. 1)

17	AJP-WASHER 14MM 24304I0060000 (u. 2)
18	AJP-BOLT M6X25 S303100000000 (u. 1)
19	AJP-STOPPER RING 12MM D200300000000 (u. 1)
20	AJP-STOPPER RING 14 MM D200500000000 (u. 1)
21	AJP-WASHER DIN125 M6 AN0125006000 (u. 1)
22	AJP-SCREW DIN933 M6X25 PF0933006025 (u. 1)
23	AJP-GEAR SELECTOR PR3 00MTS01B0016 (u. 1)

 KICKSTARTER SHAFT

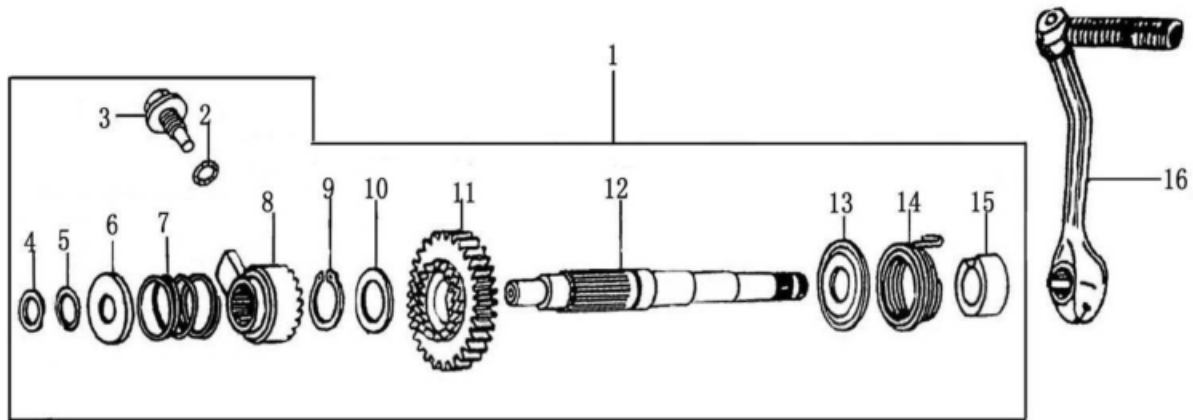


1	AJP-KICK STARTING SHAFT ASSEMBLY 21100I0060000 (u. 1)
2	AJP-Ó-RING 11.8X2.65 9010110118000265 (u. 1)
3	AJP-BOLT M12x25 91108I00600000X (u. 1)
5	AJP-STOPPER RING 16MM B00804116000000C (u. 1)
6	AJP-GUIDE PLATE 125/200/240 21123I0060000 (u. 1)
7	AJP-SPRING. KICK STARTING RATCHET WHEEL 125/200/240 21119I0060000 (u. 1)
8	AJP-STARTING RATCHET 125/200/240 21118I0060000 (u. 1)
9	AJP-CIRCLIP Ø18.5x1.2x Ø 22.4 91402I0080000 (u. 1)
10	AJP-WASHER 20x0.5x27 (125/200/240) 9330152020527000 (u. 1)
11	AJP-GEAR. KICK STARTER 125/200/240 21117I0060000 (u. 1)
12	AJP-PIVOT. KICK STARTING SHAFT 125/200/240 21107I0060000 (u. 1)
13	AJP-WASHER KICKS 125/200 21104I0060000 (u. 1)
14	AJP-RETURN SPRING. KICK STARTING SHAFT 21106I0060000 (u. 1)
15	AJP-SLEEV KICKSTARTER SHAFT 21102I0060000 (u. 1)

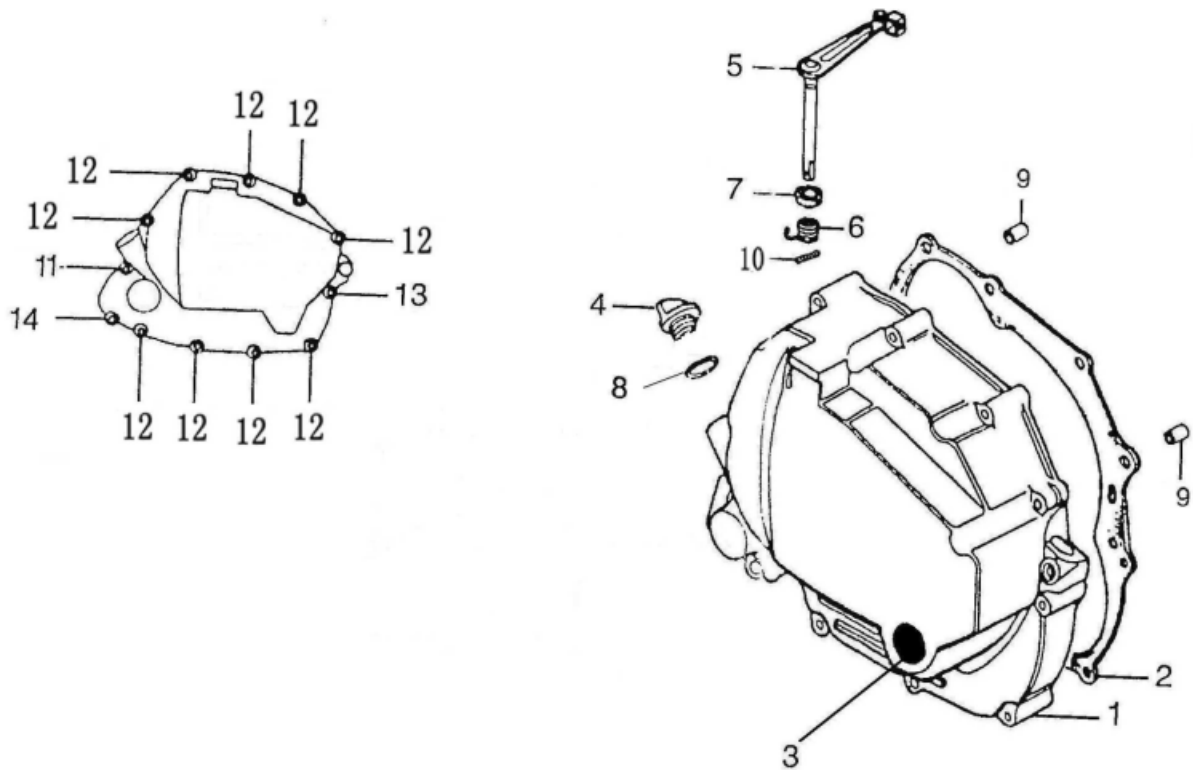 RIGHT CRANKCASE COVER


1	AJP-RIGHT CRANKCASE COVER 1242150490AJP (u. 1)
2	AJP-RIGHT CRANKCASE COVER GASKET 9020610060000 (u. 1)
3	AJP-OIL LEVEL VIEW-FINDER 1242610080000 (u. 1)
4	AJP-OIL LEVEL GAUGE 1430110060000 (u. 1)
5	AJP-CLUTCH LEVER 00MTS01A0007 (u. 1) AJP-CLUTCH LEVER 2242AI0060000 (u. 1)
6	AJP-CLUTCH LEVER SPRING 2242710060000 (u. 1)
8	AJP-O RING 18X3 90106D0020000 (u. 1)
9	AJP-DOWEL PIN 8X14 91502D0020000 (u. 2)
10	AJP-RING 3X12 XA00100000000 (u. 1)
11	AJP-CYLINDER HEAD BOLT M6X35MM S701600000000 (u. 1)
12	AJP-SCREW M6X40 S701700000000 (u. 9)
13	AJP-SCREW M6X50 S701900000000 (u. 1)
14	AJP-SCREW M6X25 S701400000000 (u. 1)

 
LEFT CRANKCASE COVER

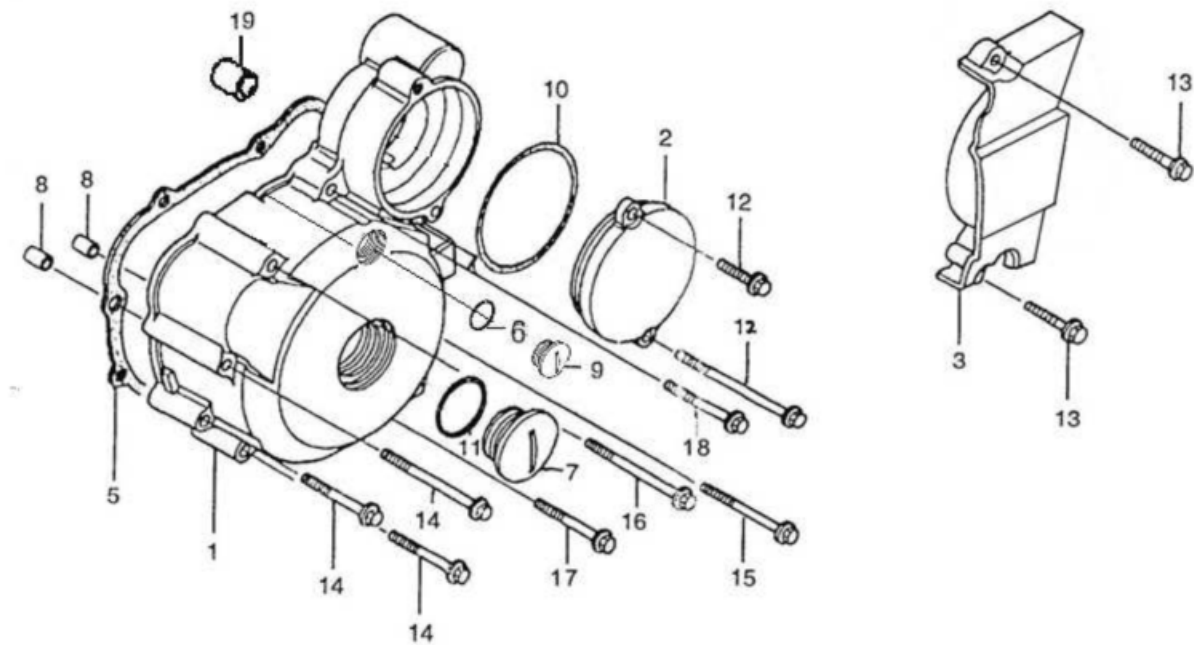

1	AJP-LEFT CRANKCASE COVER 125/200/240CC 1230110490AJP (u. 1)
2	AJP-REDUCTION GEAR COVER 1230810490AJP (u. 1)
3	AJP-LEFT CRANKCASE RR COVER 1230210490AJP (u. 1)
5	AJP-LEFT CRANKCASE COVER GASKET 1200110490000 (u. 1)
6	AJP-TOP SIGHT HOLE CAP 12303G0110AJP (u. 1)
7	AJP-SIGHT HOLE CAP 12304G0110AJP (u. 1)
8	AJP-DOWEL PIN 8X14MM 9150210060000 (u. 1)
9	AJP-O-RING 13.8X2.5 1230610060000 (u. 1)
10	AJP-O-RING 63X3 FOR REDUCTION GEAR COVER 1230910490000 (u. 1)
11	AJP-O-RING 27.4X2.4 1230710060000 (u. 1)
12	AJP-SCREW M6X20 S701310060000 (u. 2)
13	AJP-SCREW M6X25 S701400000000 (u. 2)
14	AJP-SCREW M6X25 S701400000000 (u. 3)
15	AJP-SCREW M6X60 S701000000000 (u. 1)
16	AJP-CYLINDER HEAD BOLT M6X35MM S701600000000 (u. 1)
17	AJP-SCREW M6X40 S701700000000 (u. 1)
18	AJP-SCREW M6X75 S706400000000 (u. 2)

19	AJP-BEARING HK1010 Z303900000000 (u. 1)
----	--

 
CLUTCH

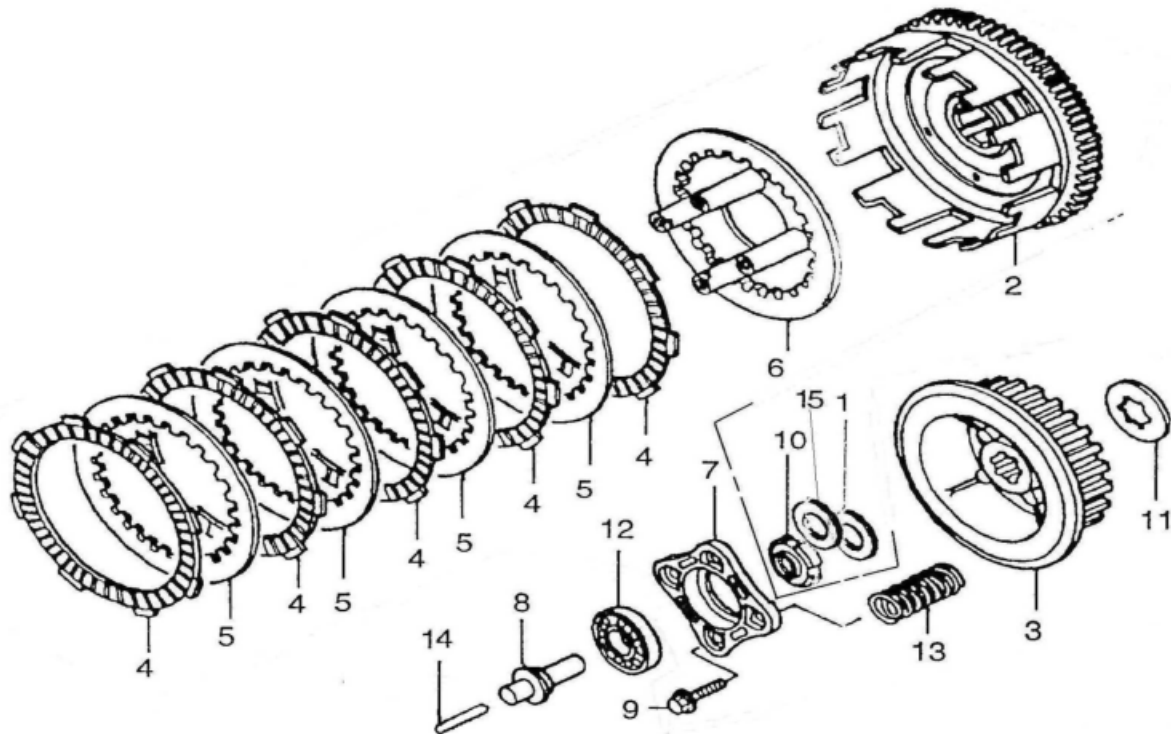

2	AJP-PRIMARY DRIVEN GEAR Z73 2230510060000 (u. 1)
	AJP-PRIMARY DRIVEN GEAR (Z70) 22150L0440000 (u. 1)
3	AJP-HUB. CLUCH SLEEVE 2220210060000 (u. 1)
	AJP-HUB. CLUCH SLEEVE 2213010060000 (u. 1)
4	AJP-DRIVE PLATE CLUTCH 2223A10060000 (u. 5)
5	AJP-DRIVEN PLATE. CLUTCH 125/200/240 2220110060000 (u. 4)
6	AJP-PRESSURE DISC. CLUTCH 5 SPRINGS 2212210060000 (u. 1)
	AJP-PRESSURE DISC. CLUTCH 2210510080000 (u. 1)
7	AJP-END PLATE. CLUTCH 2212110060000 (u. 1)
	AJP-END PLATE. CLUTCH 2220310060000 (u. 1)
8	AJP-PUSH ROD CLUTCH 2240410060000 (u. 1)
	AJP-PUSH ROD. CLUTCH 2240310060000 (u. 1)
9	AJP-SCREW CLUTCH PLATE 9111010060000 (u. 1)
10	AJP-NUT M16 1420610060000 (u. 1)
11	AJP-WASHER B. 20MM 2220510060000 (u. 1)
12	AJP-BEARING 16003 125/200 Z009800000000 (u. 1)


13	AJP-PUSH ROD. CLUTCH. PIN 22405I0060000 (u. 5)
	AJP-CLUTCH SPRING 22204I0060000 (u. 4)
15	AJP-CONIC WASHER 22004I0060000 (u. 1)

 OIL PUMP

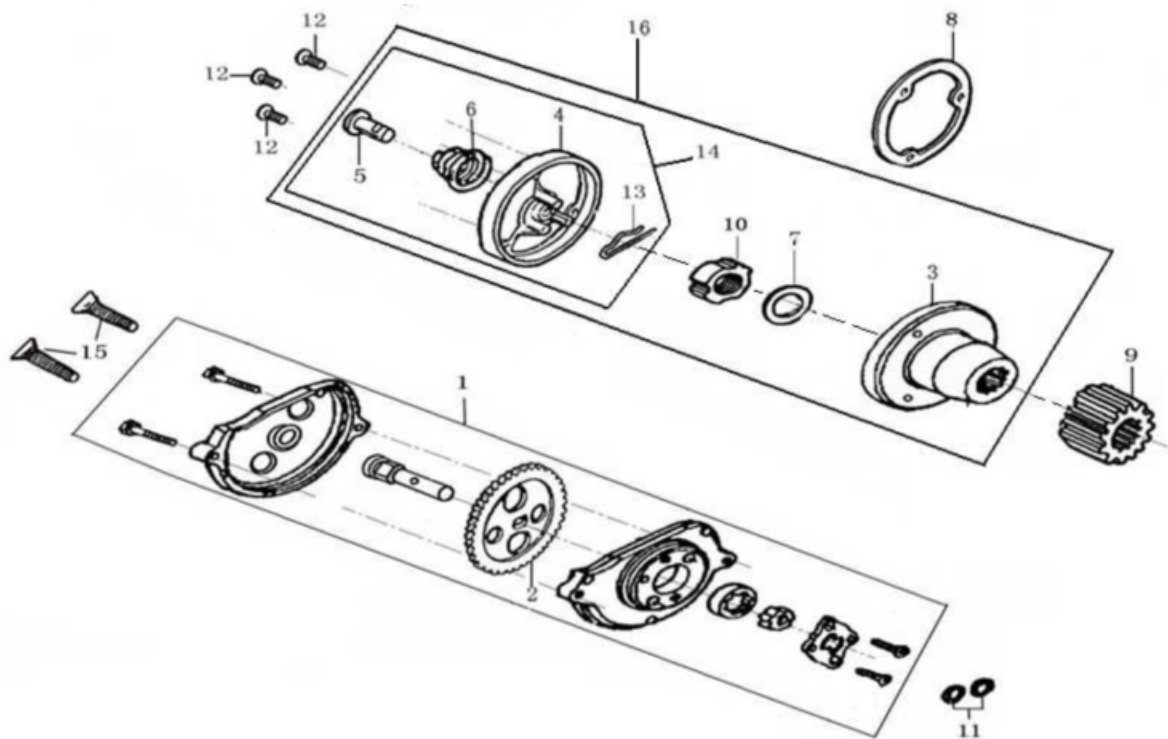


1	AJP-OIL PUMP ASSEMBLY 125 14100I0060000 (u. 1)
	AJP-OIL PUMP ASSEMBLY (Z39) 14100I0060001 (u. 1)
2	AJP-OIL PUMP DRIVE GEAR (Z39) 14102L0440000 (u. 1)
3	AJP-OIL FILTER ROTOR 1422AI0060000 (u. 1)
4	AJP-OIL FILTER ROTOR CAP 14201I0060000 (u. 1)
5	AJP-OIL THROUGH 14202I0060000 (u. 1)
6	AJP-OIL THROUGH SPRING 14203I0060000 (u. 1)
7	AJP-CONIC WASHER 22004I0060000 (u. 1)
8	AJP-OIL FILTER ROTOR GASKET 90208I0060000 (u. 1)
9	AJP-PRIMARY DRIVE GEAR (Z18) 23101I0060000 (u. 1)
10	AJP-NUT M16 14206I0060000 (u. 1)
11	AJP-O RING 24X3 90108I0060000 (u. 2)
12	AJP-SCREW M5X12 125/200/240 L605200000000 (u. 3)
13	AJP-CIR-CLIP 8MM 91505I0060000 (u. 1)
14	AJP-OIL FILTER ROTOR CAP ASSEMBLY 14210I0060000 (u. 1)
15	AJP-SCREW 6X30 125/200/240 B08190106003020B (u. 2)

 ESTATOR

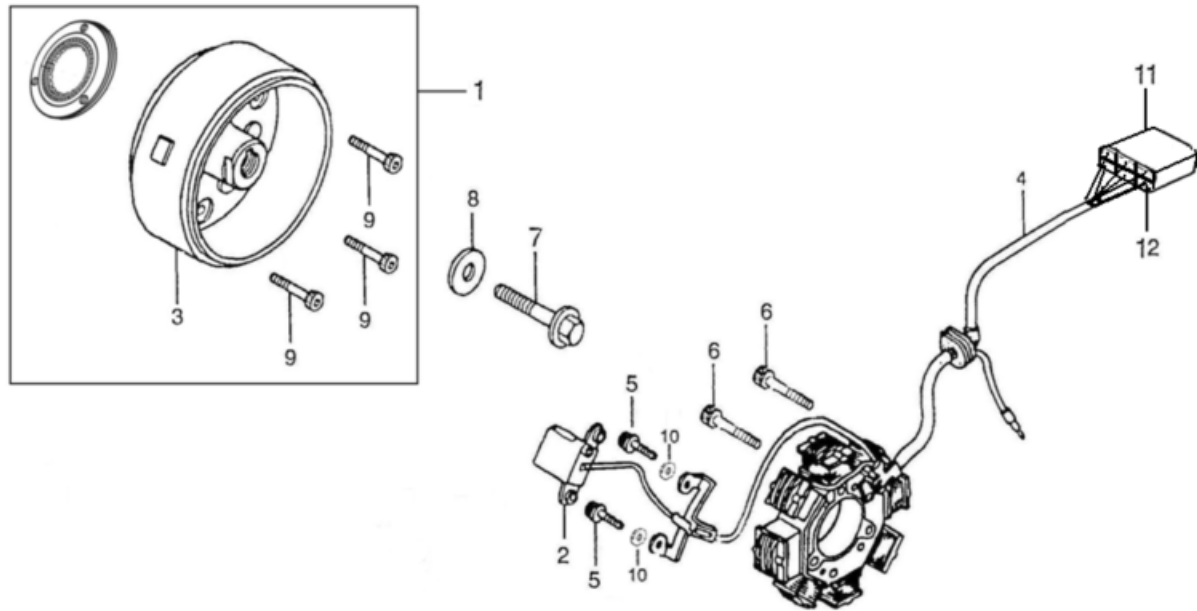


1	AJP-FLY WHEEL ASSEMBLY 22MM 82130L0440100 (u. 1)
	AJP-FLY WHEEL ASSEMBLY 82130L0440000 (u. 1)
2	AJP-PULSE GENERATOR 8210500000000 (u. 1)
3	AJP-FLY WHEEL 22MM 82101I0490AJP100 (u. 1)
	AJP-FLY WHEEL 20MM 82101I0490AJP (u. 1)
4	AJP-STATOR 82120L0440000 (u. 1)
5	AJP-SCREW L304200000000 (u. 2)
7	AJP-SCREW M10X36 91106I0080000 (u. 1)
	AJP-HEX BOLT M8X33 91106I0060000 (u. 1)
8	AJP-WASHER 10X24X2.5 91313I0060100 (u. 1)
	AJP-WASHER 8X24 91313I0060000 (u. 1)
11	AJP-STATOR WIRE CONNECTOR 2013 00ELS01A0066 (u. 1)
12	AJP-STATOR CONNECTOR TERMINAL 2013 00ELS01A0067 (u. 6)

 ELECTRIC STARTER MECHANISM

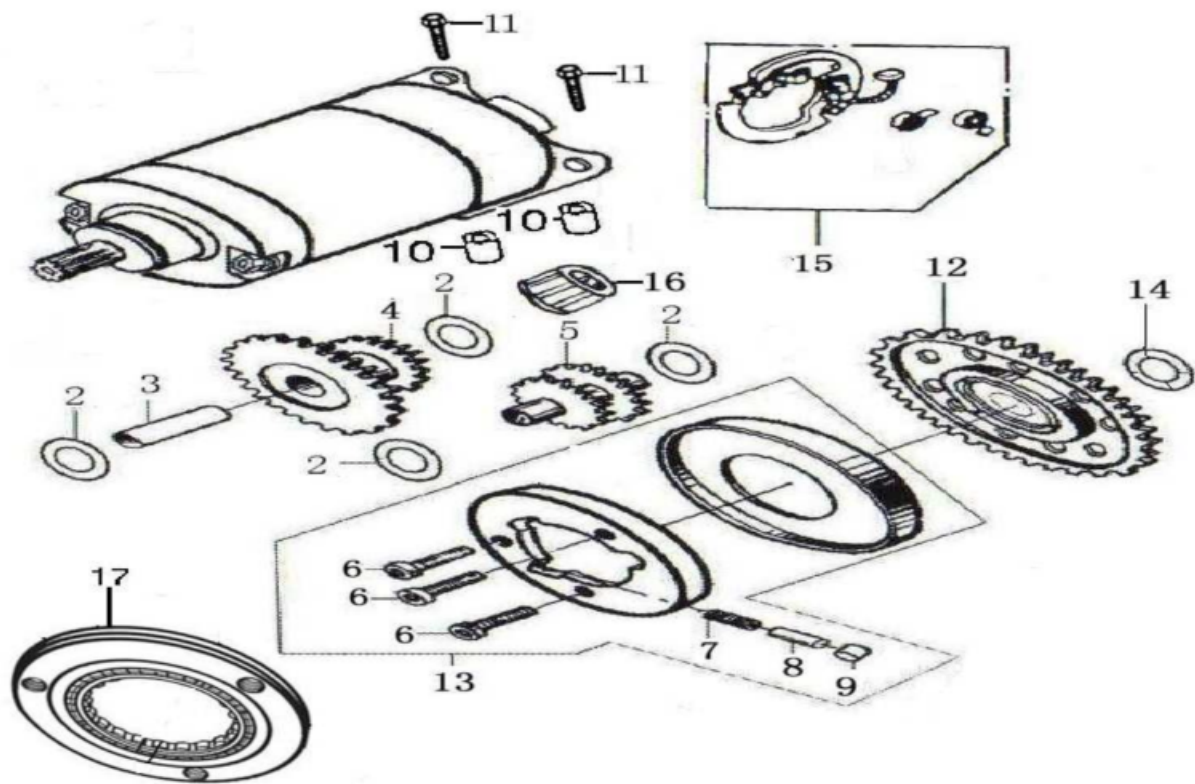


1	AJP-STARTING MOTOR 82200I0490AJP (u. 1)
3	AJP-STARTER REDUCTION GEAR SPACER 21402I0490000 (u. 1)
4	AJP-STARTER REDUCTION GEAR 61/21 21421I0490000 (u. 1)
5	AJP-STATOR GEAR 15/16 21401I0490000 (u. 1)
6	AJP-SCREW M8X18 B0070010800187 (u. 3)
7	AJP-CLUTCH SPRING 21303I0490000 (u. 3)
8	AJP-SPRING CAP 21305I0490000 (u. 3)
9	AJP-ROLL 10.2X11.6 21304I0490000 (u. 3)
12	AJP-STARTER DRIVE GEAR 22MM 125/200 CC 2142AI0490100 (u. 1)
	AJP-STARTER DRIVE GEAR 2142AI0490000 (u. 1)
13	AJP-STARTER DRIVE GEAR ASSEMBLY 21300I0490000 (u. 1)
14	AJP-STARTER REDUCTION GEAR 61/21 21421I0490000 (u. 1)
	AJP-STARTING MOTOR WASHER 22X34X3.5 240CC 2013 93301E2203534000 (u. 1)
15	AJP-STARTER MOTOR BRUSH HOLDER 125/200CC 82228I0490000 (u. 1)
16	AJP-BEARING HK1010 Z303900000000 (u. 2)

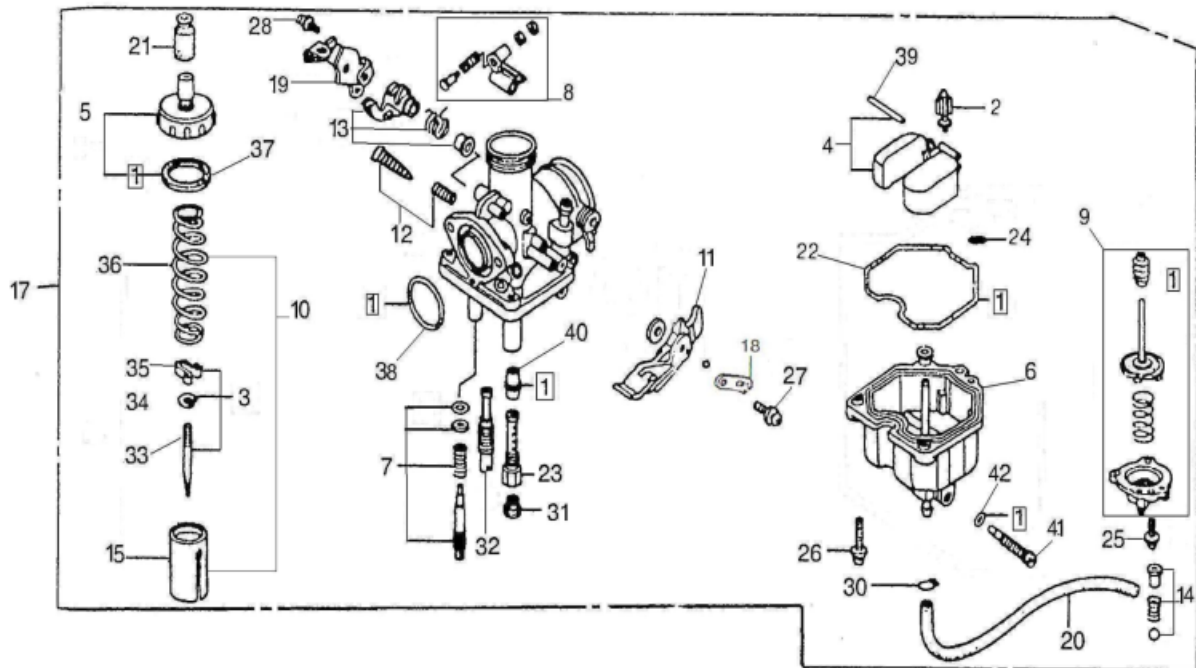 CARBURETTOR


1	AJP-GASKET SET CARBURETOR 1710110060000 (u. 1)
2	AJP-CONIC VALVE 1710210060000 (u. 1)
3	AJP-NEEDLE WITH CIR-CLIP 1710310060000 (u. 1)
4	AJP-FLOAT 1710410060000 (u. 1)
5	AJP-PISTON CAP 125CC 1710510060000 (u. 1)
6	AJP-FLOAT CAMARA 1710610060000 (u. 1) AJP-FLOAT CAMARA S/POWER JET 1710610060100 (u. 1)
7	AJP-ADJUSTING SCREW SET 1710710060000 (u. 1)
8	AJP-PUMP ARM 1710810060000 (u. 1)
9	AJP-POWER JET 1710910060000 (u. 1)
11	AJP-CHOKE CABLE BRACKET 1711210060000 (u. 1)
12	AJP-ADJUSTING SCREW 1711310060000 (u. 1)
13	AJP-PUMP ARM 1710810060000 (u. 1)
14	AJP-CHECK VALVE 1711510060000 (u. 1)
15	AJP-CARBURETTOR PISTON 17105L0440000 (u. 1)
17	AJP-CARBURETTOR 2013 WITHOUT POWER JET 00MTS01A0119 (u. 1)
19	AJP-LINK PLATE. PUMP ARM 1711910060000 (u. 1)

20	AJP-FUEL TUBE 1712110060000 (u. 1)
21	AJP-DUST CAP 1712210060000 (u. 1)
22	AJP-FLOAT CHAMBER GASKET 1712310060000 (u. 1)
23	AJP-NEEDLE DIFFUSER PZ30 171A2L0440000 (u. 1)
	AJP-NEEDLE DIFFUSER PZ26 1712410060000 (u. 1)
24	AJP-O-RING 4.5X1.6 S13051604500 (u. 1)
	AJP-O-RING 3.5X2 S13052003500 (u. 1)
25	AJP-SCREW L304200000000 (u. 3)
26	AJP-SCREW M4X16MM L304300000000 (u. 3)
27	AJP-SCREW 5X12 L305200000000 (u. 1)
28	AJP-SCREW 5X14 L309400000000 (u. 1)
30	AJP-CLAMP FOR B86.5 PR3 1712900000000 (u. 1)
31	AJP-MAIN JET 105 00MTS01A0093 (u. 1)
32	AJP-IDLE JET 48 00MTS01A0092 (u. 1)
33	AJP-NEEDLE 17156L0440000 (u. 1)
34	AJP-NEEDLE CIR-CLIP 17106L0440000 (u. 1)
35	AJP-V-CLIP 17104L0440000 (u. 1)
36	AJP-THROTTLE PISTON SPRING 91A094120000 (u. 1)
	AJP-AIR THROTTLE RETURN SPRING 17165L0440000 (u. 1)
37	AJP-TOP CAP GASKET 17147L0440000 (u. 1)
38	AJP-O-RING 34X2.5 9010110300000150 (u. 1)
	AJP-O-RING 30X2.5 91A094390000 (u. 1)
39	AJP-FLOAT PIN 17144L0440000 (u. 1)
40	AJP-MAIN JET 17151L0440000 (u. 1)
41	AJP-DRAIN SCREW 171A5L0440000 (u. 1)
42	AJP-O-RING DRAIN SCREW 4.5X1 9010110045000100 (u. 1)

 OIL RADIATOR

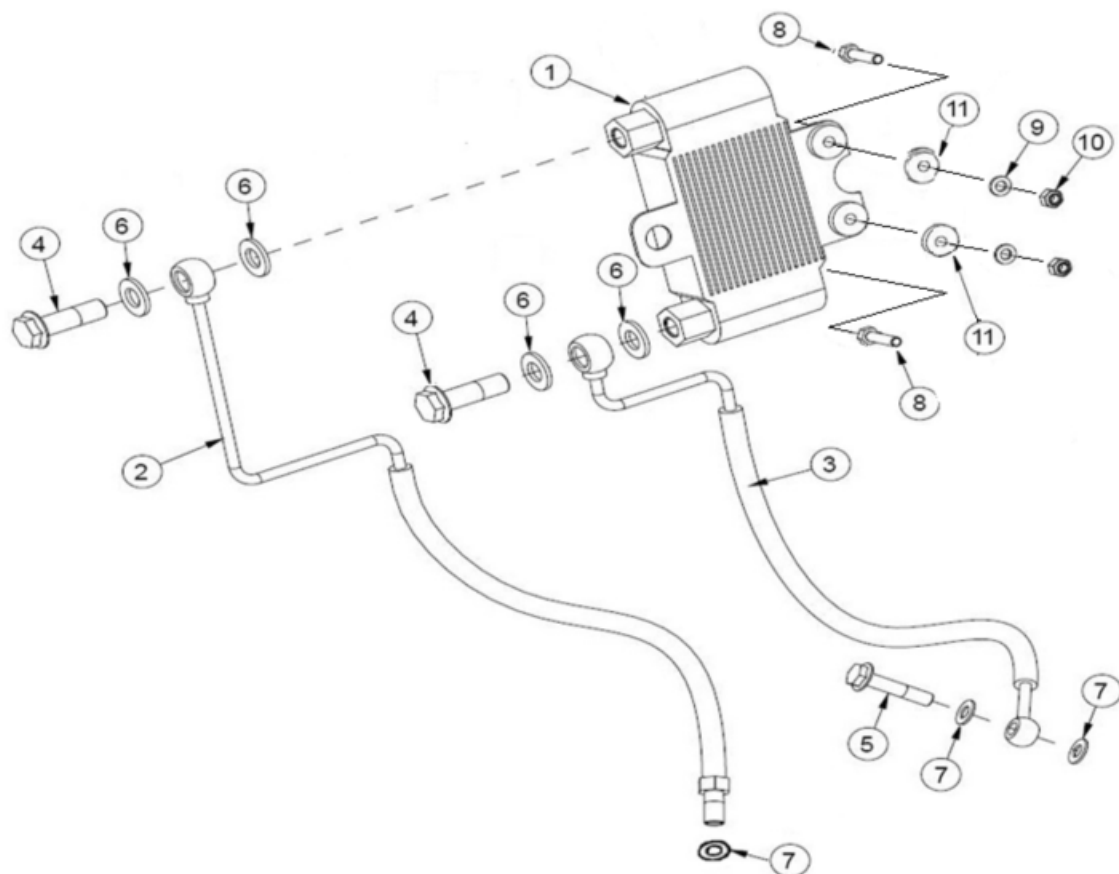

1 AJP-SCREW DIN912 M6X90
PF0912006090 (u. 1)

2 AJP-WASHER DIN9021 M6
AN9021006000 (u. 1)

3 AJP-AIR FILTER CAP
00MTS01A0034 (u. 1)

4 AJP-AIR FILTER PR3/PR4
00MTS01A0004 (u. 1)

 
5 AJP-AIR FILTER BRACKET
00MTS01A0005 (u. 1)

8 AJP-AIR FILTER BOX
00MTC01A0028 (u. 1)

9 AJP-CLAMP 32-50
00DES01A0018 (u. 2)

10 AJP-INTAKE HOSE
00MTS01A0027 (u. 1)

INTAKE

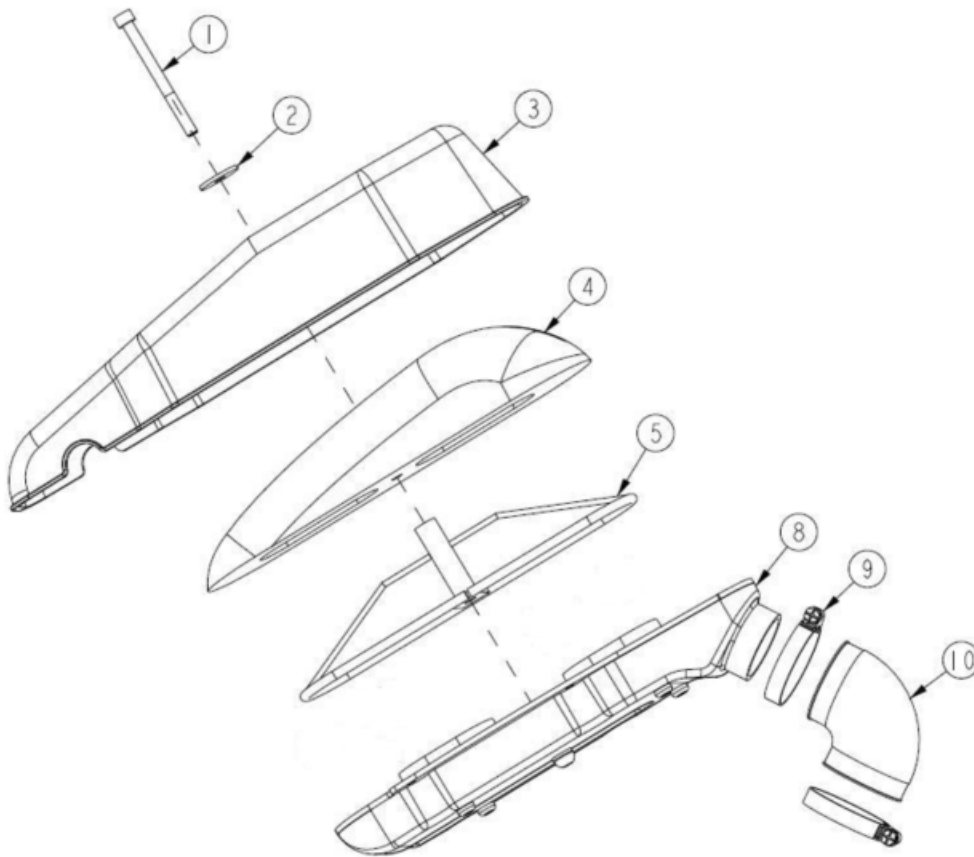

1 AJP-EXHAUST MUFFLER PR4 2012
00MTS01A0095 (u. 1)

2 AJP-EXHAUST MUFFLER END
00MTS01A0010 (u. 1)

3 AJP-NUT DIN985 M6
PC0985006000 (u. 1)

4 AJP-SPACER 22X11X6
00MTS07A0008 (u. 1)

5 AJP-WASHER DIN9021 M6
AN9021006000 (u. 1)

6 AJP-SCREW DIN912 M6X25
PF0912006025 (u. 1)

7 AJP-HOLDER ND30
00MTS01A0024 (u. 1)

8 AJP-WASHER DIN125 M6
AN0125006000 (u. 1)

9 AJP-SCREW DIN933 M6X16
PF0933006016 (u. 1)

 
10 AJP-EXHAUST PIPE PR3/PR4 2012
00MTS01A0096 (u. 1)

11 AJP-EXHAUST PIPE GASKET
00MTS01A0001 (u. 1)

12 AJP-WASHER DIN127 M6
AN0127006000 (u. 2)


13 AJP-SCREW DIN933 M6X25
PF0933006025 (u. 1)

EXHAUST SYSTEM

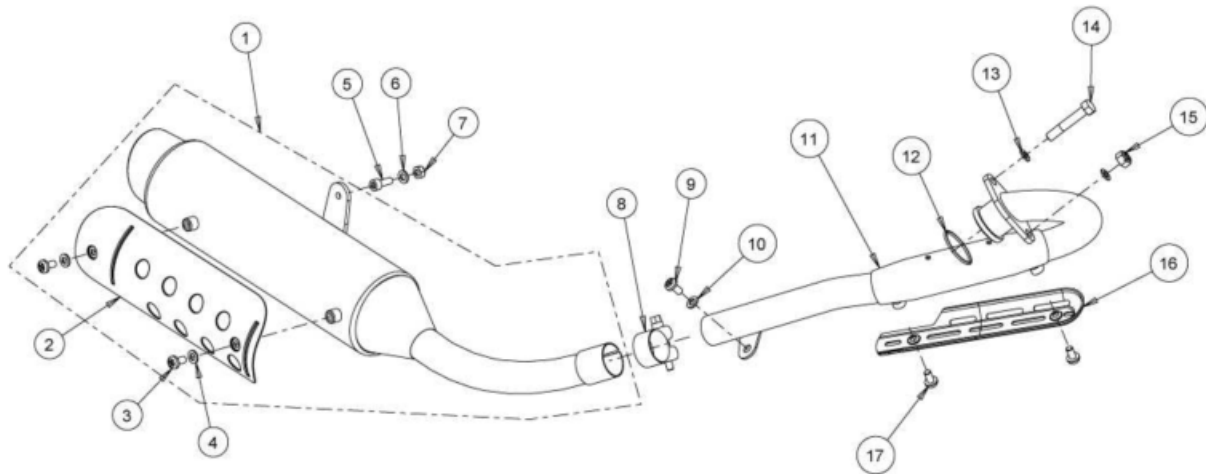

1	AJP-EXHAUST MUFFLER 00MTS04A0030 (u. 1)
2	AJP-EXHAUST MUFFLER PROTECTION 00MTS06A0031 (u. 1)
3	AJP-SCREW DIN7985 M6X12 PF7985006012 (u. 2)
4	AJP-WASHER DIN125 M6 AN0125006000 (u. 2)
5	AJP-SCREW DIN912 M6X25 PF0912006025 (u. 1)
6	AJP-WASHER DIN9021 M6 AN9021006000 (u. 1)
7	AJP-NUT DIN985 M6 PC0985006000 (u. 1)
8	AJP-HOLDER ND30 00MTS01A0024 (u. 1)
9	AJP-SCREW DIN933 M6X16 PF0933006016 (u. 1)
10	AJP-WASHER DIN125 M6 AN0125006000 (u. 1)
11	AJP-EXHAUST PIPE 00MTS06A0033 (u. 1)
12	AJP-EXHAUST PIPE GASKET 00MTS01A0001 (u. 1)
13	AJP-WASHER DIN127 M8 AN0127008000 (u. 2)
14	AJP-SCREW DIN933 M8X25 PF0933008025 (u. 1)
16	AJP-EXHAUST PIPE PROTECTION 00MTS06A0037 (u. 1)
17	AJP-SCREW ISO7380 M6X8 PF0738006008 (u. 2)

 
REAR SWING ARM

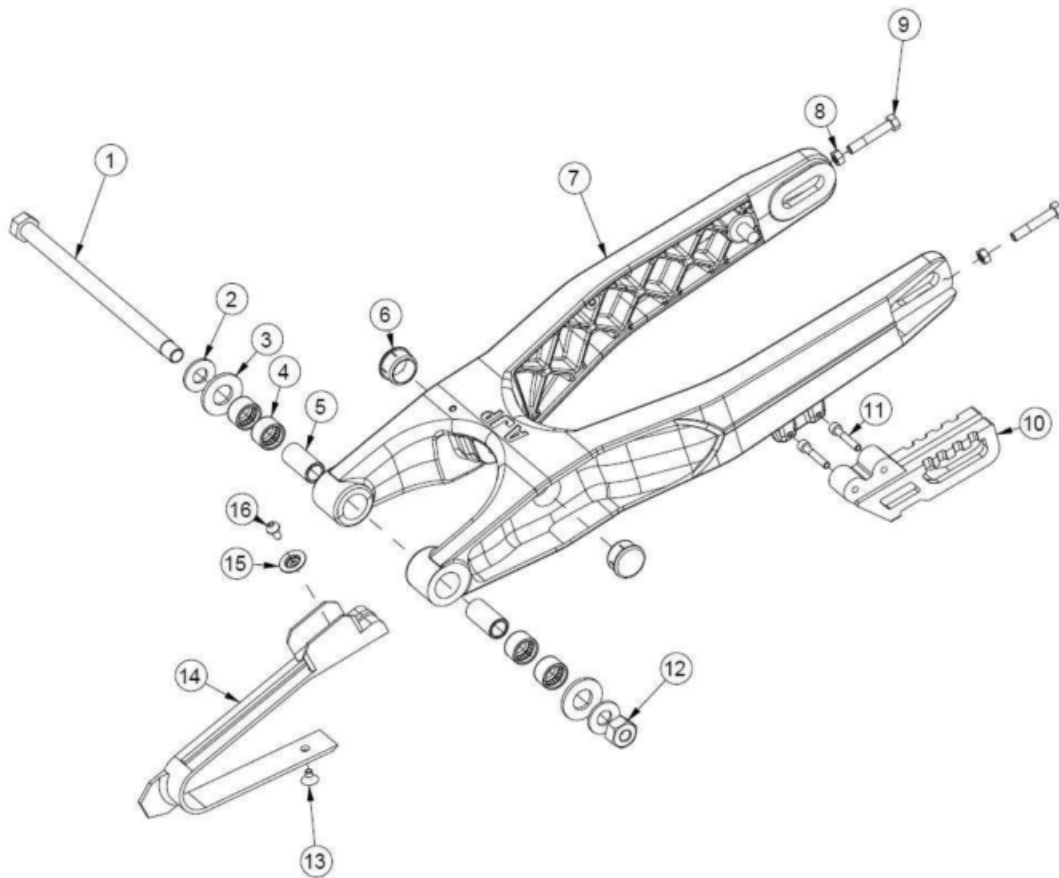

1	AJP-PIVOT SHAFT PR3/PR4 00STS07A0027 (u. 1)
2	AJP-WASHER DIN125 M15 AN0125015000 (u. 2)
3	AJP-WASHER 40X20X3 00STS01A0003 (u. 2)
4	AJP-BEARING HK2016 RS RL00HK2016RS (u. 4)
5	AJP-SPACER 15X20X40 00STS01A0002 (u. 2)
6	AJP-PLUG 00STS01A0004 (u. 2)
7	AJP-REAR SWING ARM 00STS02A0026 (u. 1) AJP-REAR SWING ARM TRAIL PR3 2013 00STS01A0091 (u. 1)
8	AJP-NUT DIN934 M8 PC0934008000 (u. 2)
9	AJP-SCREW DIN933 M8X35 PF0933008035 (u. 2)
10	AJP-CHAIN GUIDE 00STS01B0007 (u. 1)
11	AJP-SCREW DIN912 M6X35 PF0912006035 (u. 2)
12	AJP-NUT DIN934 M14 PC0934014000 (u. 1)
13	AJP-SCREW DIN7991 M6X10 PF7991006010 (u. 1)

14	AJP-CHAIN TOUCH DEFENSE BUFFER 00PLS01B0049 (u. 1)
	AJP-CHAIN TOUCH DEFENSE BUFFER 00PLS01A0049 (u. 1)
15	AJP-WASHER 00PLS07A0029 (u. 1)
16	AJP-SCREW DIN7380 M6X12 PF7380006012 (u. 1)

 
FRAME

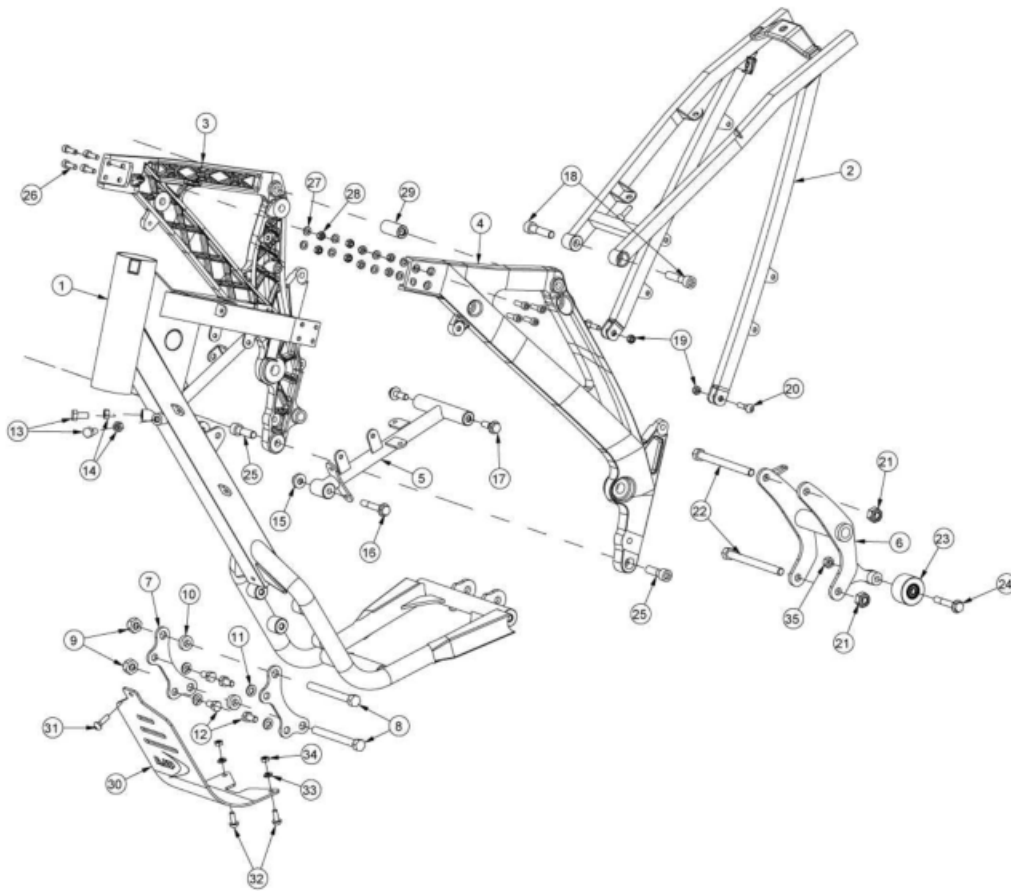

1	AJP-FRAME BLACK PR3 2013 00QUS04A0064 (u. 1)
2	AJP-REAR FRAME BLACK PR3/ PR4 2013 00QUS06A0062 (u. 1)
3	AJP-FRAME BEAM RH 00QUS01A0026 (u. 1)
4	AJP-FRAME BEAM LH 00QUS01A0025 (u. 1)
5	AJP-FRAME REINFORCEMENT PR3 GREEN 2013 00QUS04A0066 (u. 1)
	AJP-FRAME REINFORCEMENT PR3/PR4 PRETO 2013 00QUS04A0061 (u. 1)
6	AJP-REAR ENGINE MOUNT 00QUS07B0021 (u. 1)
7	AJP-FRONT ENGINE MOUNT 00QUS07A0020 (u. 2)
10	AJP-SPACER 20X6.5X10 00QUS07A0009 (u. 2)
11	AJP-WASHER DIN127 M8 AN0127008000 (u. 4)
12	AJP-SCREW DIN933 M8X16 PF0933008016 (u. 4)
13	AJP-SCREW DIN933 M8X20 PF0933008020 (u. 2)
14	AJP-NUT DIN934 M8 PC0934008000 (u. 2)
15	AJP-NUT DIN6923 M8 PC6923008000 (u. 1)

16	AJP-SCREW DIN6921 M8X50 PF6921008050 (u. 1)
17	AJP-SCREW DIN6921 M8X25 PF6921008025 (u. 2)
18	AJP-SCREW DIN912 M10X45 PF0912010045 (u. 2)
19	AJP-NUT DIN985 M8 PC0985008000 (u. 2)
20	AJP-SCREW DIN7380 M8X25 PF7380008025 (u. 2)
22	AJP-SCREW DIN931 M10X120 PF0931010120 (u. 2)
23	AJP-CHAIN ROLLER (40MM) 00QUS01A0022 (u. 1)
24	AJP-SCREW DIN6921 M8X50 PF6921008050 (u. 1)
25	AJP-SCREW DIN912 M10X35 PF0912010035 (u. 2)
26	AJP-SCREW DIN7380 M6X20 PF7380006020 (u. 8)
27	AJP-WASHER DIN125 M6 AN0125006000 (u. 8)
28	AJP-NUT DIN985 M6 PC0985006000 (u. 8)
29	AJP-SPACER 00QUS07A0029 (u. 1)
35	AJP-NUT DIN985 M8 PC0985008000 (u. 1)

 SIDE STAND - FOOTPEG

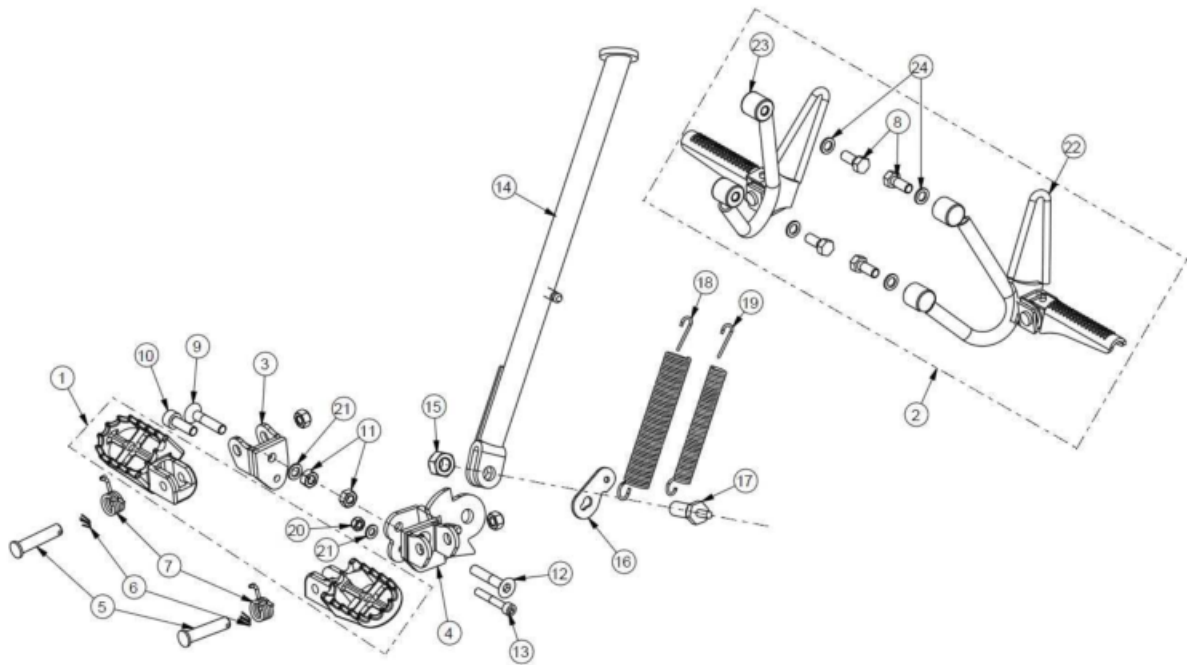

AJP-FRONT FOOTPEG LH/RH IN ALLOY EXTREME
00QUS03A0037 (u. 1)

1

AJP-FRONT FOOTPEG LH/RH IN STEEL
00QUS03A0038 (u. 1)

2

AJP-COMPLETE REAR FOOTPEG ASSEMBLY
00QUC01A0041 (u. 1)

3

AJP-FRONT FOOTPEG HOLDER RH EXTREME PR4
00QUS07A0067 (u. 1)

4

AJP-FRONT FOOTPEG HOLDER LH PR4 EXTREME
00QUS07A0066 (u. 1)

5

AJP-DOWEL FOR FOOTPEG RED EXTREME 2013
00QUS07A0064 (u. 2)

6

AJP-SCREW 2.5X20 DIN 94 FOR FOOTPEG EXTREME
00QUS07A0065 (u. 2)

7

AJP-FRONT FOOTPEG SPRING LH EXTREME PR4/PR5 2013
00QUS07A0061 (u. 2)

9

AJP-SCREW DIN7991 M8X35
PF7991008035 (u. 1)

10

AJP-SCREW DIN912 M6X25
PF0912006025 (u. 1)

11

AJP-NUT DIN985 M8
PC0985008000 (u. 2)

12

AJP-SCREW DIN7991 M8X40
PF7991008040 (u. 1)

13

AJP-SCREW DIN912 M6X35
PF0912006035 (u. 1)

14

AJP-SIDE STAND PR3 EN
00QUS04A0039 (u. 1)

15

AJP-NUT DIN985 M12
PC0985012000 (u. 1)

16


AJP-SPRING HOLDER
00QUS01A0017 (u. 1)

18

AJP-RESSORT BEQUILLE EXT.
00QUS01A0013 (u. 1)


19	AJP-INNER SPRING 00QUS01A0014 (u. 1)
20	AJP-NUT DIN985 M6 PC0985006000 (u. 1)
24	AJP-WASHER DIN125 M8 AN0125008000 (u. 4)

 REAR BRAKE PEDAL

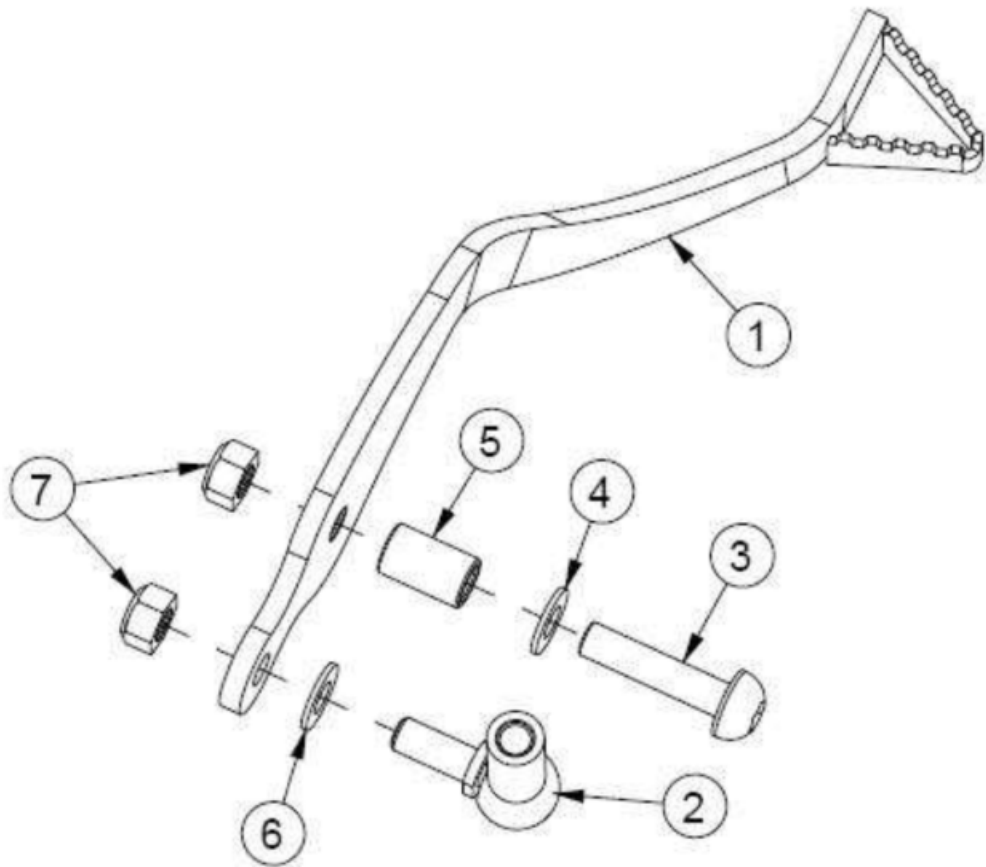

1	AJP-REAR BRAKE PEDAL PR3/PR4 00TRS07A0047 (u. 1)
2	AJP-PUSH ROD 00TRS06A0005 (u. 1)
3	AJP-SCREW DIN7380 M8X35 PF7380008035 (u. 1)
4	AJP-WASHER DIN125 M8 AN0125008000 (u. 1)
5	AJP-SPACE 00TRS07A0048 (u. 1)
6	AJP-PUSH ROD WASHER 00TRS07A0049 (u. 1)
7	AJP-NUT DIN985 M8 PC0985008000 (u. 2)

 
FUEL TANK

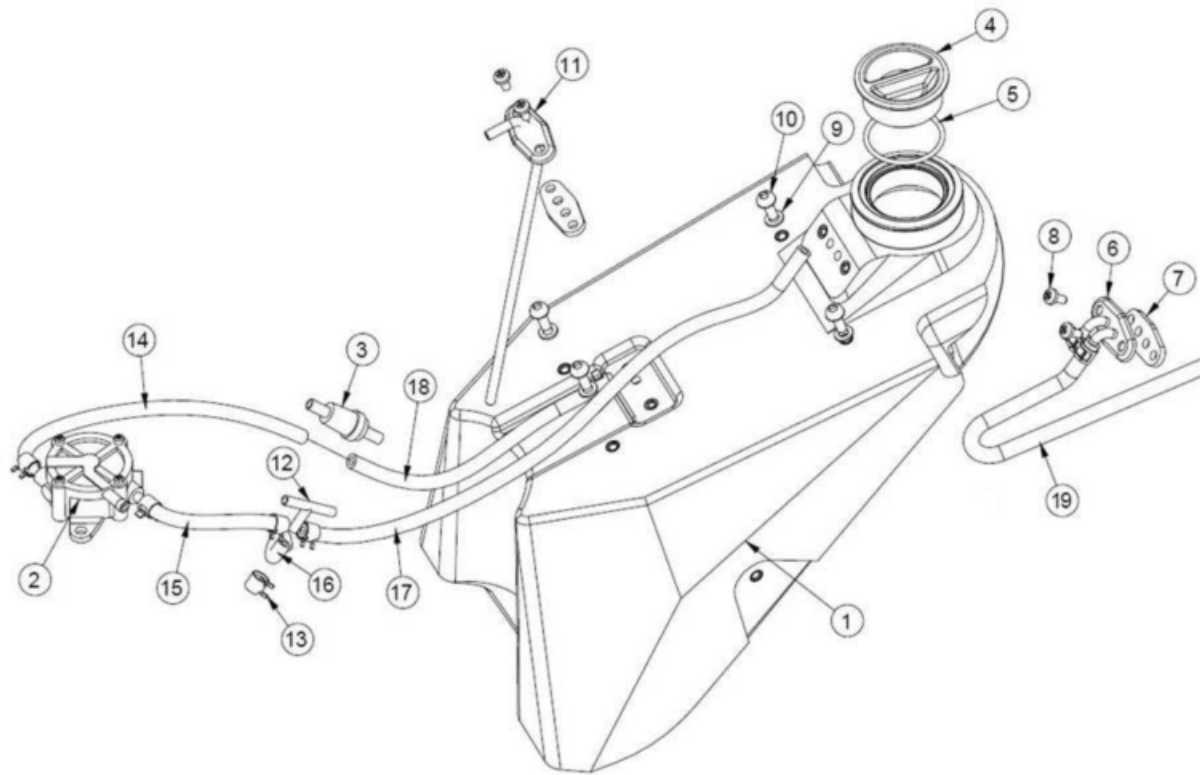

1	AJP-FUEL TANK 00DES01A0023 (u. 1)
2	AJP-FUEL PUMP PR3/PR4 00DES01A0006 (u. 1)
3	AJP-FUEL FILTER 00DES01A0007 (u. 1)
4	AJP-FUEL CAP 00DES02A0039 (u. 1)
5	AJP-GAS CAP O-RING 00DES01A0028 (u. 1)
6	AJP-BREATHER 00DES07A0025 (u. 1)
7	AJP-BREATHER GASKET 00DES01A0026 (u. 2)
8	AJP-SCREW DIN7985 M5X12 PF7985005012 (u. 4)
9	AJP-WASHER DIN125 M6 AN0125006000 (u. 4)
10	AJP-SCREW DIN7380 M6X12 PF7380006012 (u. 4)
11	AJP-FUEL FISHING TUBE UNTIL MAY 2015 00DES07A0024 (u. 1)
12	AJP-CONNECTOR 00DES01A0008 (u. 1)
13	AJP-BREATHER FILTER CLAMP 10MM 00DES01A0019 (u. 3)
14	AJP-FUEL TUBE 5X9X200 00DES01A0032 (u. 1)
15	AJP-FUEL TUBE 5X9X110 00DES01A0033 (u. 1)

16	AJP-FUEL TUBE 5X9X120 00DES01A0035 (u. 1)
17	AJP-FUEL TUBE 5X9X440 00DES01A0034 (u. 1)
18	AJP-FUEL TUBE 5X9X250 00DES01A0031 (u. 1)
19	AJP-FUEL TUBE 5X9X300 00DES01A0036 (u. 1)

 
FRONT SUSPENSION

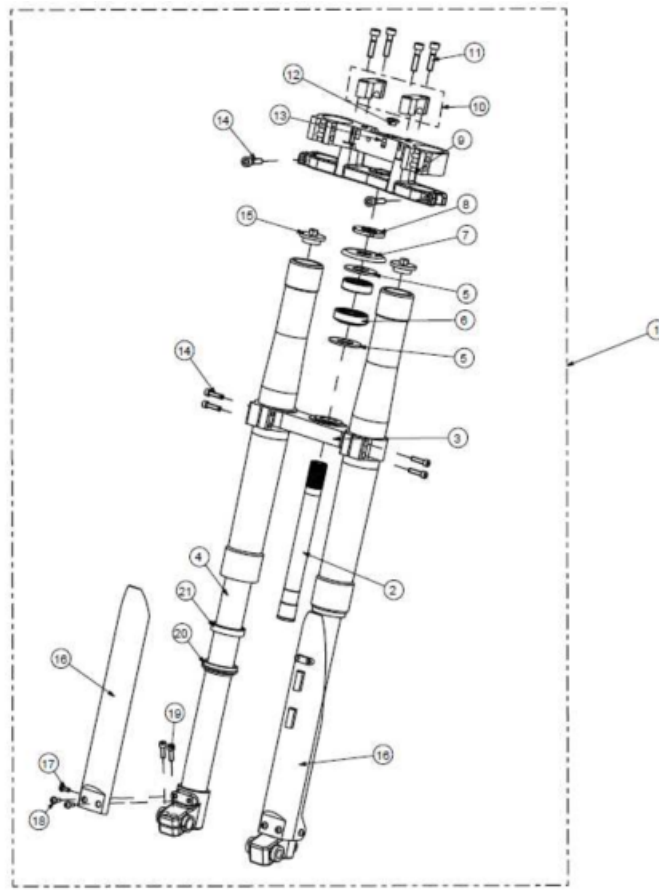

1	AJP-OIL FORK 5W 2013 00SFC01A0080 (u. 1)
2	AJP-STEERING STEM FASTACE 2012 00SFS01A0093 (u. 1)
3	AJP-LOWER BRACKET FASTACE 2012 00SFS01A0087 (u. 1)
4	AJP-FASTACE INNER TUBE PR3 00SFS01A0092 (u. 2)
5	AJP-SEAL 00SFS01A0071 (u. 2)
6	AJP-BEARING 30205C RL000032005C (u. 2)
7	AJP-SEAL COVER 00SFS01A0072 (u. 1)
8	AJP-STEERING NUT 00SFS01A0007 (u. 1)
9	AJP-UPPER BRACKET FASTACE 2012 00SFS01A0086 (u. 1)
10	AJP-HANDLEBAR HOLDER FORK FASTACE PR3 00SFC01A0077 (u. 1)
11	AJP-SCREW DIN 912 M8X35 PF0912008035 (u. 6)
12	AJP-PLUG FOR STEERING STEM FASTACE 2012 00SFS01A0088 (u. 1)
13	AJP-NUT M25X1 00SFS01A0006 (u. 1)
14	AJP-SCREW DIN 912 M8X35 PF0912008035 (u. 6)


15	AJP-CUPULA FASTACE 00SFS01A0091 (u. 2)
16	AJP-FORK PROTECTOR SET FASTACE WHITE 00PLC01A0072 (u. 1)
18	AJP-SCREW DIN738 M6X25 PF0738005016 (u. 4)
19	AJP-SCREW DIN912 M6X20 PF0912006020 (u. 2)
20	AJP-DUST SEAL FASTACE PR3 00SFS01A0089 (u. 2)
21	AJP-OIL SEAL 00SFS01A0090 (u. 2)

 FRONT WHEEL

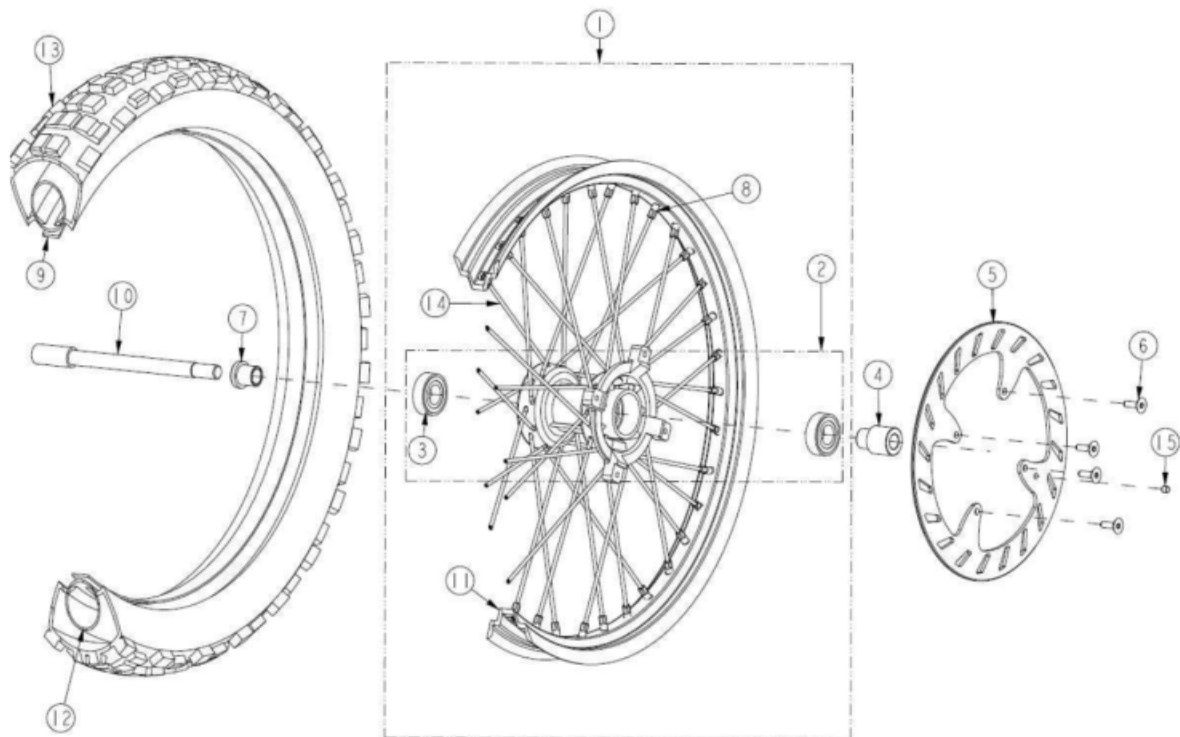

1	AJP-FRONT WHEEL BLACK RIM 1.40X19 PR3 2012 00RFC01A0003 (u. 1)
2	AJP-FRONT HUB PR3 00RFS01A0028 (u. 1)
3	AJP-BEARING 6004-2RS RL00060042RS (u. 2)
5	AJP-FRONT BRAKE DISC PR3 00RFS01A0034 (u. 1)
6	AJP-SCREW DIN7991 M6X16 PF7991006016 (u. 6)
7	AJP-SPACER FOR FRONT WHEEL LH FASTACE 13.5 2012 00RFS07A0052 (u. 1)
8	AJP-SPOKE NUT 3.8MM 2012 00RTS01A0031 (u. 32)
9	AJP-WHEEL RIM TAPE 19 00RFS01A0035 (u. 1)
10	AJP-FRONT AXLE PR3 00RFS07A0050 (u. 1)
11	AJP-RIM BLACK EN 1.40X19 00RFS01A0062 (u. 1)
13	AJP-FRONT TYRE MAXXIS 70/100-19 00RFS01A0050 (u. 1)
14	AJP-SPOKE FRONT WHEEL 235 END PR3 2012 00RFS01A0069 (u. 32)
15	AJP-FRONT DISC MAGNET 00RFS01A0042 (u. 1)

 
FRONT BRAKE

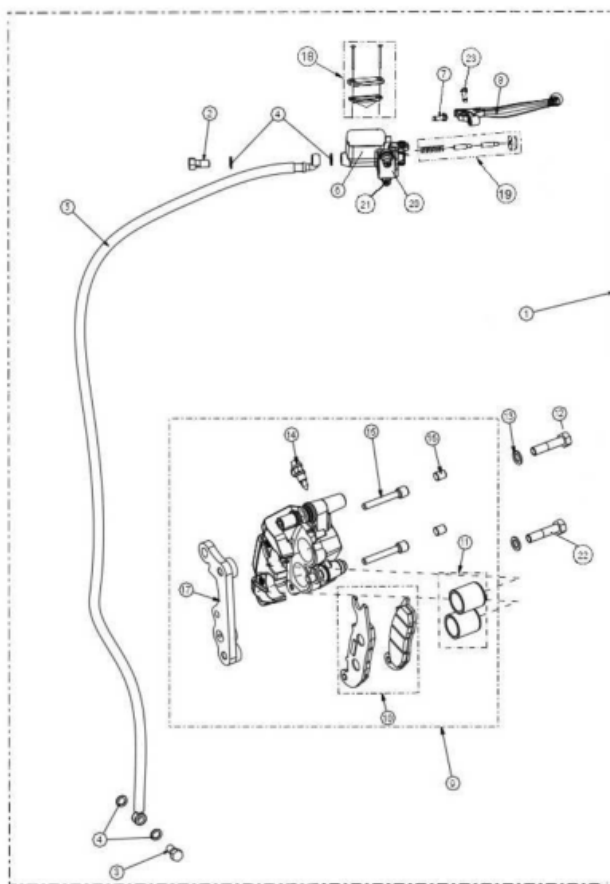

1	AJP-FRONT BRAKE ASSEMBLY 00TRC01A0010 (u. 1)
2	AJP-SCREW 1.25 PR3/PR4/PR5 00TRS01A0049 (u. 1)
3	AJP-SCREW M10X1 PR3/PR4/PR5 2012 00TRS01A0025 (u. 1)
4	AJP-WASHER FOR BRAKES 00TRS01A0010 (u. 4)
5	AJP-FRONT BRAKE HOSE PR3 2012 00TRS01A0002 (u. 1)
6	AJP-FRONT MASTER CYLINDER ASSEMBLY PR3 2012 00TRS01A0094 (u. 1)
7	AJP-STOP VALVE 00TRS01A0055 (u. 1)
8	AJP-BRAKE LEVER PR3 2012 00TRS01C0001 (u. 1)
9	AJP-FRONT CALIPER ASSEMBLY PR3/PR4/PR5 2012 00TRC01A0007 (u. 1)
10	AJP-FRONT PAD SET PR3/PR4/PR5 OUT. 2011 TO AUGUST 2014 00TRS01A0046 (u. 1)
11	AJP-FRONT PISTON SET PR3/PR4/PR5 2012 00TRS01A0069 (u. 1)
12	AJP-SCREW DIN933 M8X35 PF0933008035 (u. 1)
13	AJP-WASHER DIN127 M8 AN0127008000 (u. 2)
14	AJP-BLEEDER SCREW 00TRS01A0060 (u. 1)

15	AJP-FRONT PAD FIXATION SCREW PR3/PR4/PR5 2012 00TRS01A0064 (u. 2)
16	AJP-TAP FOR FRONT CALIPER 2012 00TRS01A0059 (u. 2)
17	AJP-FRONT MASTER CYLINDER BRACKET FASTACE 00TRS07A0078 (u. 1)
18	AJP-DIAPHRAGM SET PR3 2012 00TRS01A0051 (u. 1)
19	AJP-PISTON & CUP SET PR3 SINCE 4/10/2011 00TRS01C0013 (u. 1)
20	AJP-CLAMP PR3/PR4/PR5 2012 00TRS01A0050 (u. 1)
21	AJP-SCREW DIN912 M6X20 PF0912006020 (u. 2)
22	AJP-SCREW DIN933 M8X40 PF0933008040 (u. 1)
23	AJP-SCREW BRAKE LEVER 00TRS01A0054 (u. 1)

 SUSPENSION LINKS

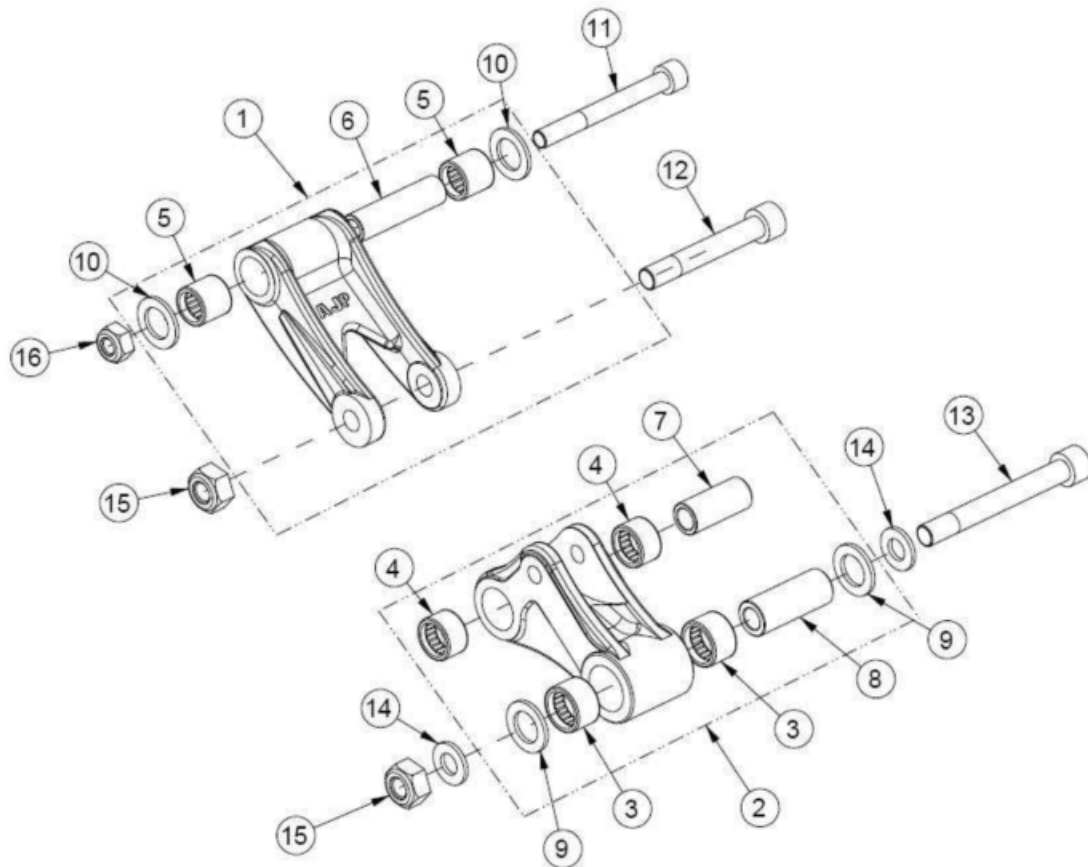

1 AJP-FRAME LINK ASSEMBLY
00STC07A0004 (u. 1)

2 AJP-REAR ARM LINK ASSEMBLY
00STC07A0005 (u. 1)

3 AJP-BEARING HK2016 RS
RL00HK2016RS (u. 2)

4 AJP-BEARING HK1814 RS
RL00HK1814RS (u. 2)

5 AJP-BEARING HK1620 RS
RL00HK1620RS (u. 2)

6 AJP-SPACER 10X16X65
00STS07A0025 (u. 1)

7 AJP-SPACER 12X18X41
00STS07A0022 (u. 1)

8 AJP-SPACER 12X20X50
00STS07A0021 (u. 1)

9 AJP-WASHER 30X16X2
00STS01B0020 (u. 2)

11 AJP-SCREW DIN912 M10X90
PF0912010090 (u. 1)

12 AJP-SCREW DIN912 M12X80
PF0912012080 (u. 1)


13 AJP-SCREW DIN912 M12X105
PF0912012105 (u. 1)

14 AJP-WASHER DIN125 M12
AN0125012000 (u. 2)

15 AJP-NUT DIN985 M12
PC0985012000 (u. 2)


16	AJP-NUT DIN982 M10 PC0982010000 (u. 1)
----	---

 SHOCK ABSORBER

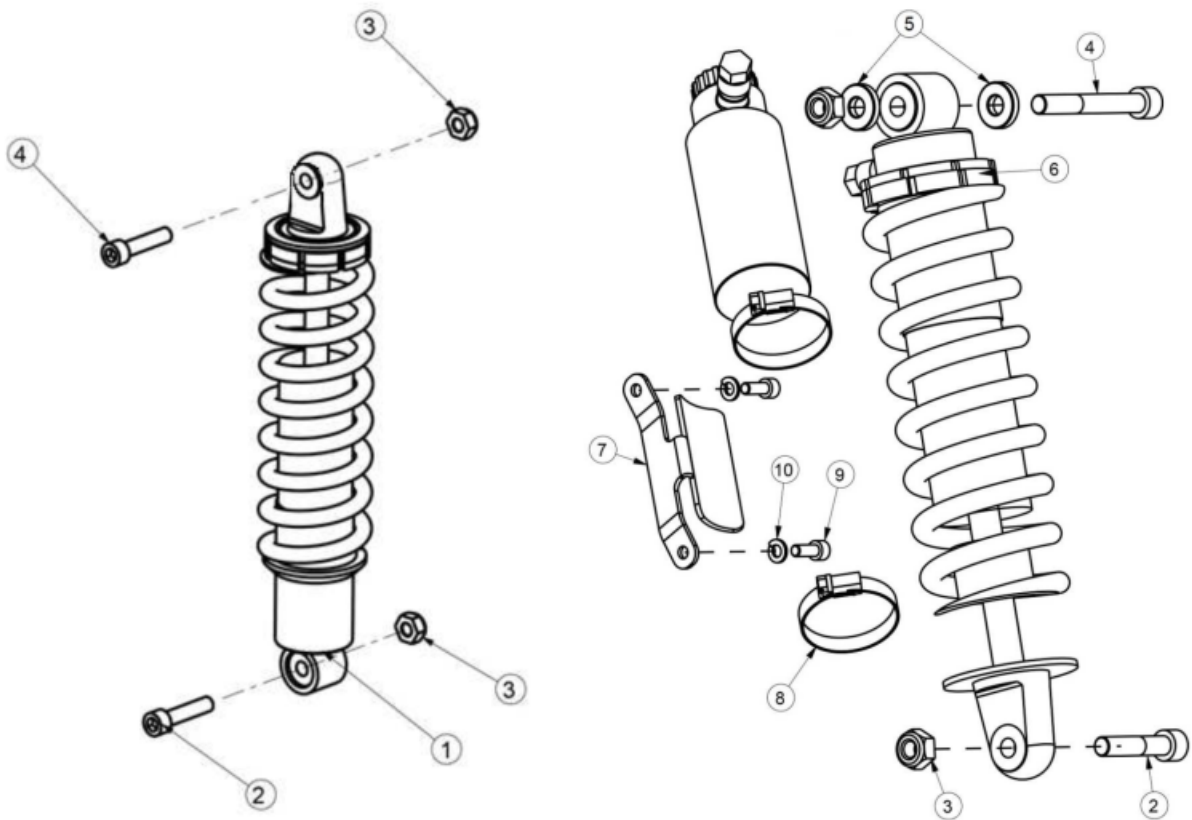

1	AJP-REAR SHOCK ABSORBER ASSEMBLY OLLÉ 00STC01A0029 (u. 1)
2	AJP-SCREW DIN912 M10X50 PF0912010050 (u. 1)
3	AJP-NUT DIN982 M10 PC0982010000 (u. 2)
4	AJP-SCREW DIN912 M10X80 PF0912010080 (u. 1)

 REAR WHEEL

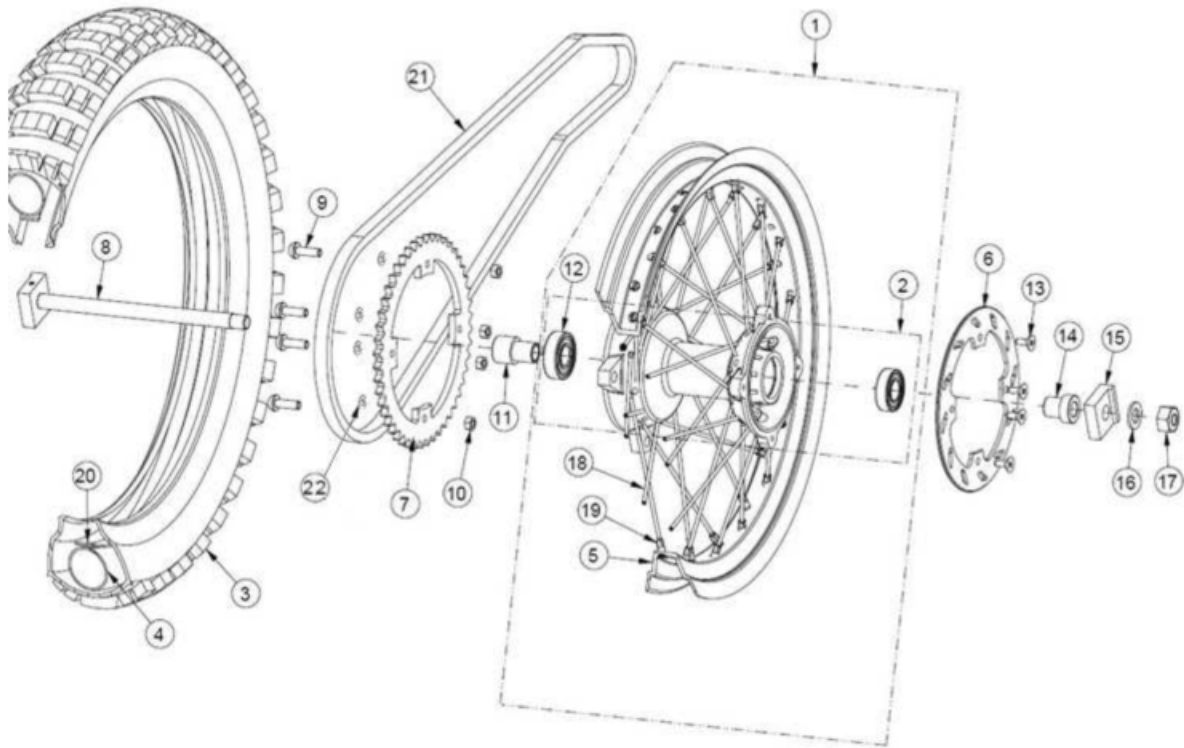

1 AJP-REAR WHEEL RIM BLACK 1.85X17 PR3 2012
00RTC01A0006 (u. 1)

2 AJP-REAR HUB PR3 4 HOLES
00RTS01A0029 (u. 1)

3 AJP-REAR TYRE MAXXIS 100/100-17
00RTS01A0061 (u. 1)

4 AJP-INNER TUBE EN 17"
00RTS01A0049 (u. 1)

5 AJP-REAR RIM BLACK PR3 EN 1.85X17
00RTS01A0082 (u. 1)

6 AJP-REAR BRAKE DISC 220MM PR3 2012
00RTS01A0098 (u. 1)

7 AJP-SPROCKET Z46
00RTS04A0031 (u. 1)

8 AJP-REAR SHAFT
00RTS07A0040 (u. 1)

9 AJP-SCREW DIN7991 M8X25
PF7991008025 (u. 4)
AJP-SCREW DIN933 M8X30
PF0933008030 (u. 4)

10 AJP-NUT DIN985 M8
PC0985008000 (u. 4)

11 AJP-SPACER LH
00RTS07A0037 (u. 1)

12 AJP-BEARING 6004-2RS
RL00060042RS (u. 2)


13 AJP-SCREW DIN7991 M6X20
PF7991006020 (u. 6)

14 AJP-SPACER RH
00RTS07A0038 (u. 1)

15 AJP-CHAIN ADJUSTER RH
00RTS02A0042 (u. 1)


16	AJP-WASHER DIN125 M15 AN0125015000 (u. 1)
17	AJP-NUT DIN934 M14 PC0934014000 (u. 1)
18	AJP-SPOKE REAR WHEEL LH 2012 PR3 215 00RTS01A0019 (u. 16)
	AJP-SPOKE REAR WHEEL RH 2012 PR3 212 00RTS01A0018 (u. 16)
19	AJP-SPOKE NUT 3.8MM 2012 00RTS01A0031 (u. 32)
20	AJP-WHEEL RIM TAPE 1.35/1.85X17" 00RFS01A0046 (u. 1)
21	AJP-CHAIN 428-124 00RTS01A0050 (u. 1)
22	AJP-WASHER DIN127B M8 AN127B008000 (u. 4)

 REAR BRAKE

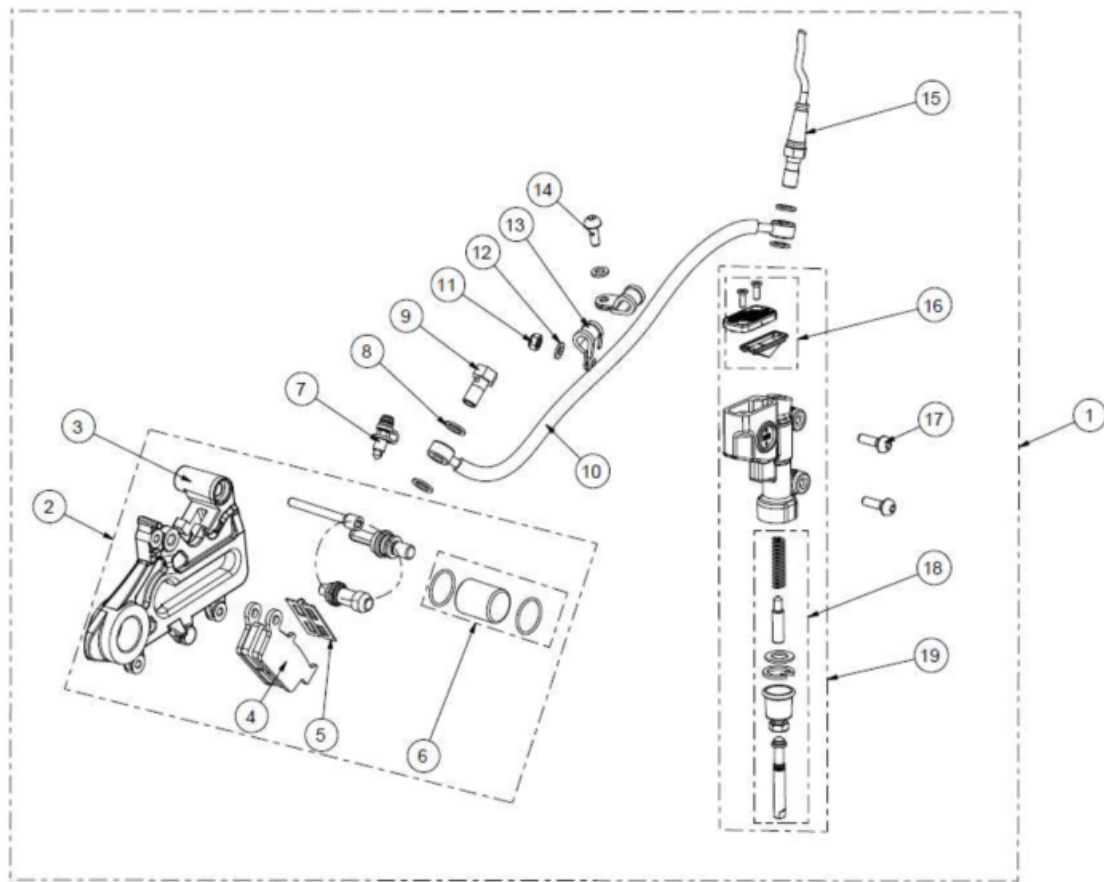


1	AJP-REAR BRAKE CALIPER COMPLETE 00TRC01A0011 (u. 1)
2	AJP-REAR CALIPER ASSEMBLY PR3 2012 00TRC01A0008 (u. 1)
3	AJP-REAR CALIPER BRACKET PR3/PR4 2012 00TRS01A0048 (u. 1)
4	AJP-REAR PAD SET PR3 2012 00TRS01A0058 (u. 1)
5	AJP-CLIP SUPPORT PR3/PR4/PR5 2012 00TRS01A0047 (u. 1)
6	AJP-REAR PISTON SET PR3 2012 00TRS01A0066 (u. 1)
7	AJP-BLEEDER SCREW 00TRS01A0060 (u. 1)
8	AJP-WASHER 00TRS01A0103 (u. 4)
9	AJP-SCREW M10X1 PR3/PR4/PR5 2012 00TRS01A0025 (u. 1)
10	AJP-REAR BRAKE HOSE PR3/PR5 2012 00TRS01A0005 (u. 2)
12	AJP-WASHER DIN125A M6 AN125A006000 (u. 2)
13	AJP-HOLDER 00TRS01A0037 (u. 2)
14	AJP-SCREW DIN7380 M6X12 PF7380006012 (u. 2)
15	AJP-DIAPHRAGM SET REAR PR3/PR4 E PR5 2012 00TRS01A0102 (u. 1)

16	AJP-STOP VALVE 00TRS01A0039 (u. 1)
17	AJP-SCREW DIN7380 M6X20 PF7380006020 (u. 2)
18	AJP-PISTON&CUP SET PR3/PR4/PR5 SINCE 04/10/2011 - 2014 00TRS01A0101 (u. 1)
19	AJP-REAR MASTER CYLINDER PR3/PR4/PR5 00TRS01A0095 (u. 1)

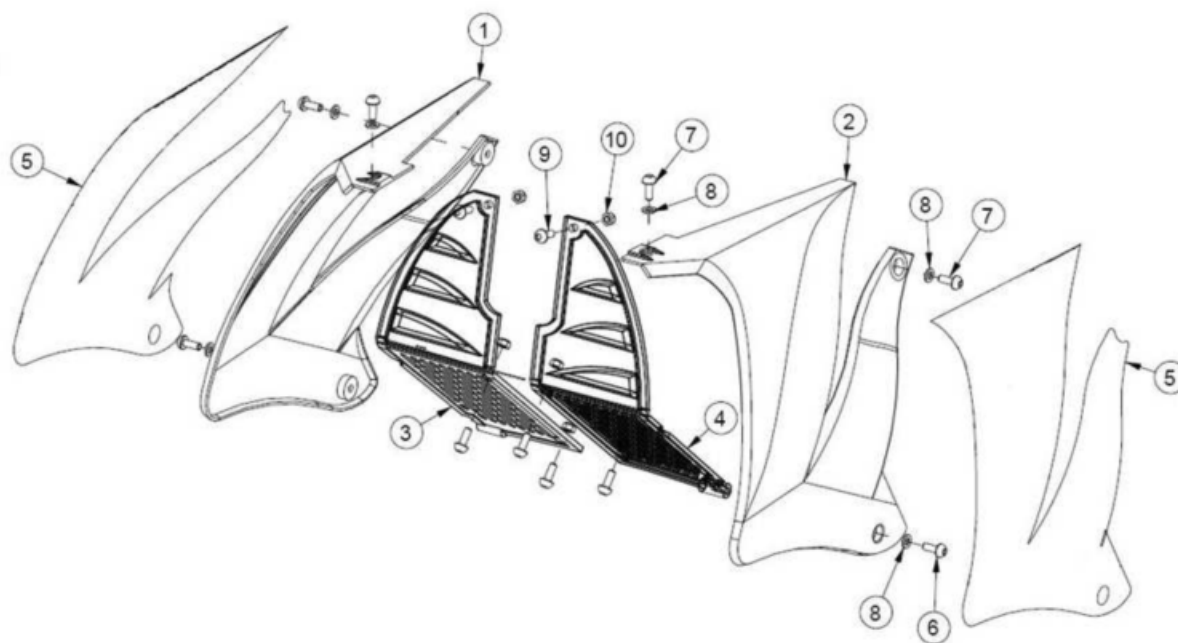 FRAME COVER

 
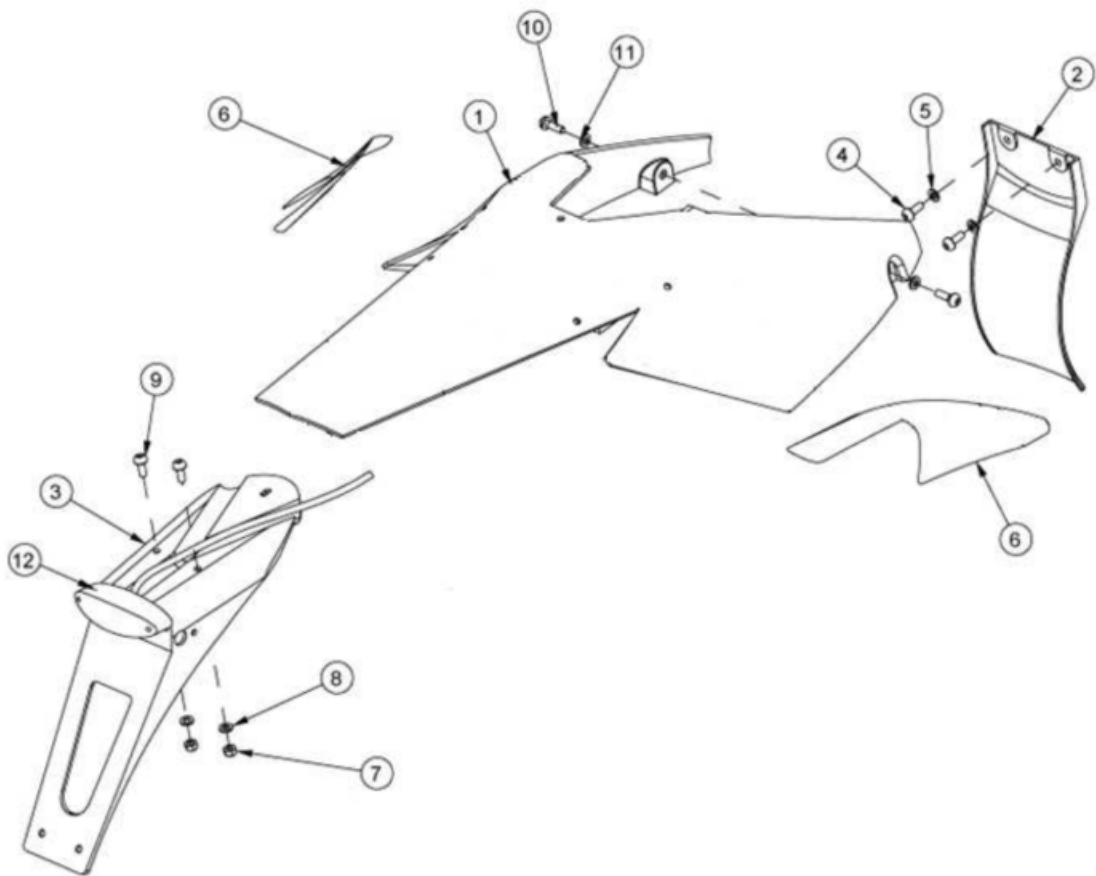 
1	AJP-RADIATOR COVER RH WHITE 00PLS01A0067 (u. 1)
2	AJP-RADIATOR COVER LH WHITE 00PLS01A0068 (u. 1)
3	AJP-FRONT FRAME COVER RH. 00PLS01A0055 (u. 1)
4	AJP-FRONT FRAME COVER RH. 00PLS01A0055 (u. 1)
5	AJP-KIT FRONT COVER STICKER LH/RH PR3/PR4 125/200/240 2013 00BAS01A0110 (u. 1)
6	AJP-SCREW DIN7380 M6X20 PF7380006020 (u. 2)
7	AJP-SCREW DIN7380 M6X16 PF7380006016 (u. 4)
8	AJP-WASHER DIN125 M6 AN0125006000 (u. 6)
9	AJP-SCREW DIN7380 M6X16 PF7380006016 (u. 6)
10	AJP-NUT DIN985 M6 PC0985006000 (u. 6)

FRONT PLASTICS

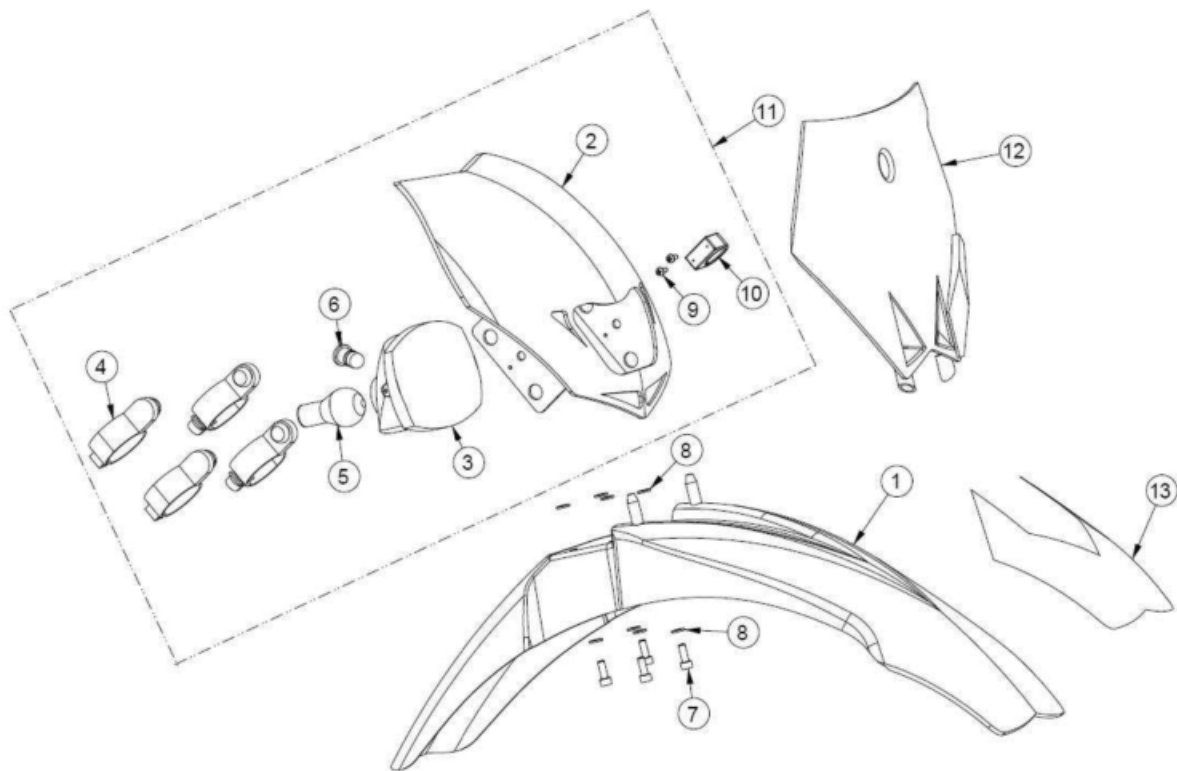


1	AJP-FRONT FENDER WHITE PR3 00PLS01A0069 (u. 1)
2	AJP-HEADLAMP COVER 00PLS01A0061 (u. 1)
3	AJP-HEADLAMP 00ELC01A0028 (u. 1)
4	AJP-BAND 00PLS01A0007 (u. 2)
5	AJP-FRONT FENDER BLUE SM/SM 00PLS01A0005 (u. 2)
7	AJP-SCREW DIN912 M6X20 PF0912006020 (u. 4)
8	AJP-WASHER DIN9021 M6 AN9021006000 (u. 8)
9	AJP-SCREW 3.5 PF7981003513 (u. 4)
10	AJP-BAND 00PLS01A0007 (u. 4)
11	AJP-HEADLAMP COVER ASSEMBLY WHITE 00PLC01A0071 (u. 1)
13	AJP-FRONT FENDER STICKER PR3 125/200 2012 00BAS01A0103 (u. 1)
14	AJP-HEAD LAMP STICKER PR3 125/200/240 2012 00BAS01A0102 (u. 1)

REAR FENDER




1	AJP-REAR FENDER WHITE 00PLS01A0074 (u. 1)
2	AJP-MUD GARD 00PLS01A0013 (u. 1)
4	AJP-SCREW DIN7380 M6X12 PF7380006012 (u. 2)
5	AJP-WASHER DIN125 M6 AN0125006000 (u. 2)
6	AJP-KIT REAR COVER STICKER LH/RH PR3/PR4 240 2013 00BAS01A0115 (u. 1)
	AJP-KIT REAR COVER STICKER LH/RH PR3/PR4 200 2012 00BAS01A0100 (u. 1)
	AJP-KIT REAR COVER STICKER LH/RH PR3/PR4 125 2012 00BAS01A0104 (u. 1)
10	AJP-SCREW DIN7380 M6X16 PF7380006016 (u. 2)
11	AJP-WASHER DIN9021 M6 AN9021006000 (u. 2)

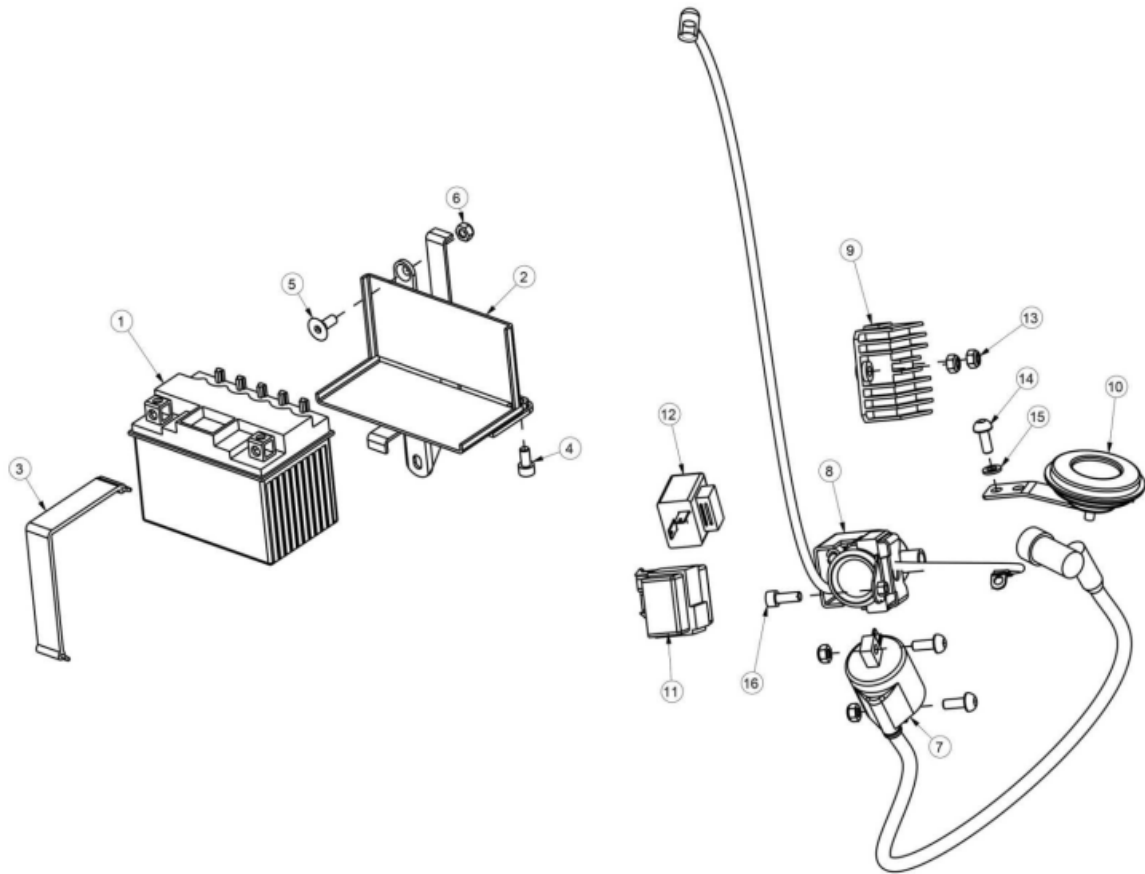 BATTERY – ELECTRIC SYSTEM

 
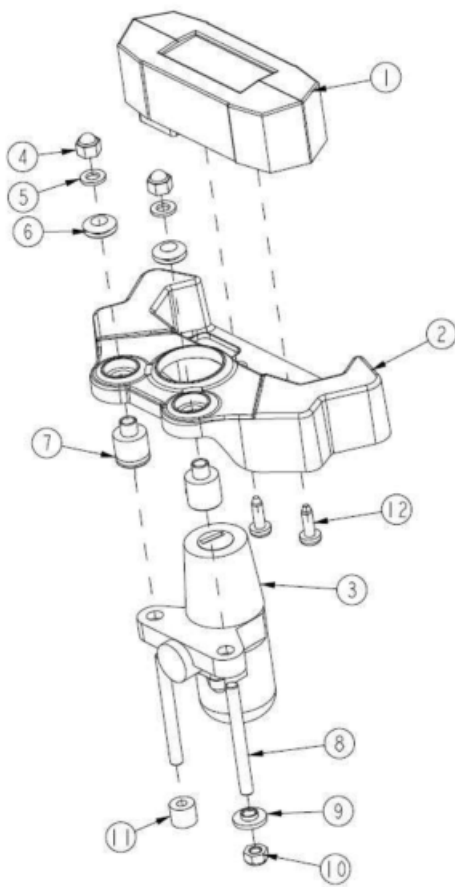 
1	AJP-BATTERY YTX5LBS 00ELS01B0001 (u. 1)
2	AJP-BATTERY HOLDER 00ELS04A0003 (u. 1)
3	AJP-BAND 00ELS01A0004 (u. 1)
4	AJP-SCREW DIN912 M6X16 PF0912006016 (u. 1)
5	AJP-SCREW DIN7991 M6X16 PF7991006016 (u. 1)
6	AJP-NUT DIN985 M6 PC0985006000 (u. 1)
7	AJP-IGNITION COIL ASSEMBLY 91A231400000 (u. 1)
8	AJP-STARTER RELAY 93A283100000 (u. 1)
9	AJP-RECTIFIER 94A213100000 (u. 1)
10	AJP-HORN 12V CC 00ELS01A0005 (u. 1)
11	AJP-CDI 93A231000000 (u. 1)
12	AJP-TURN LIGHTS RELAY 00ELS01A0006 (u. 1)
13	AJP-NUT DIN985 M6 PC0985006000 (u. 4)
14	AJP-SCREW DIN7380 M6X16 PF7380006016 (u. 3)

15	AJP-WASHER DIN125 M6 AN0125006000 (u. 1)
----	---

WIRE HARNESS

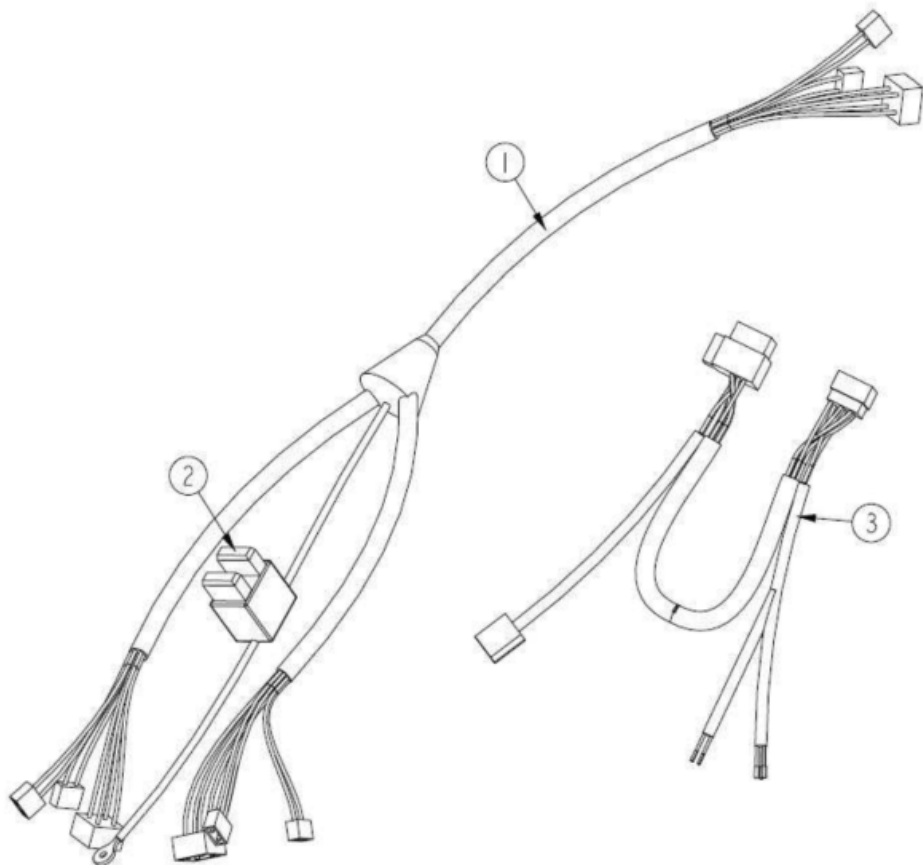


1	AJP-WIRING HARNESS PR3 00ELC01A0038 (u. 1)
2	AJP-FUSE 00ELS01A0017 (u. 2)
3	AJP-SPEEDOMETER WIRING 00ELS01A0037 (u. 1)

 COCKPIT


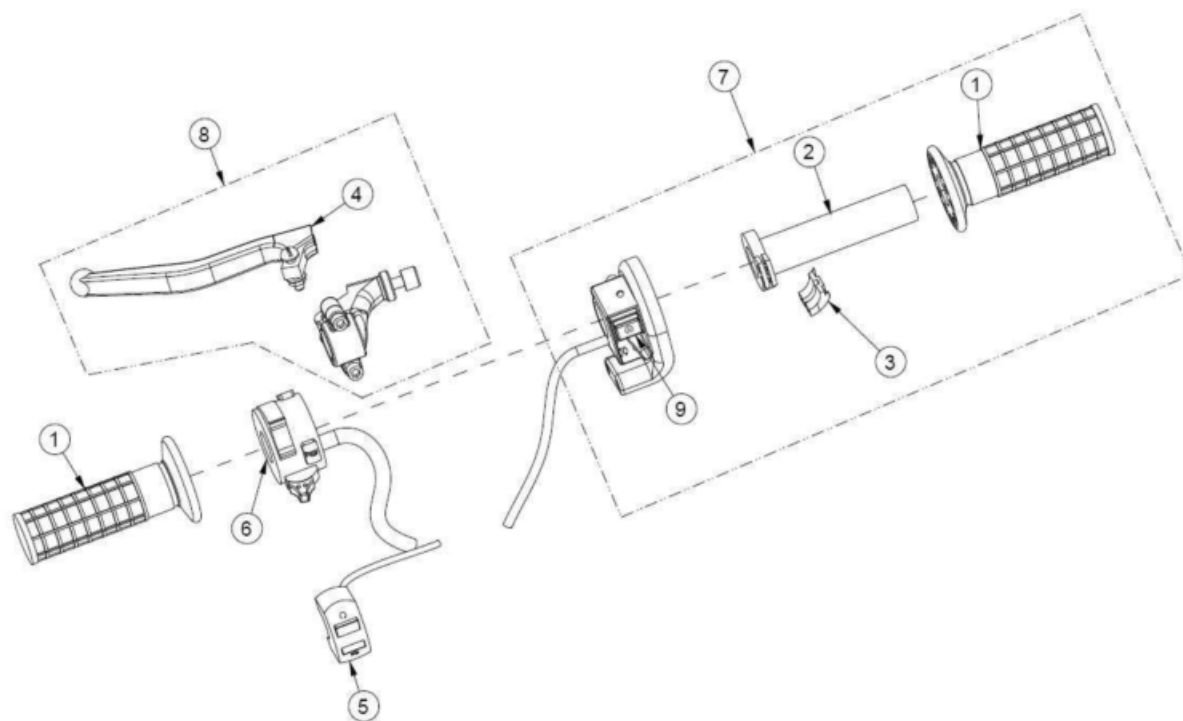 
1	AJP-SPEEDOMETER 00ELS01A0036 (u. 1)
2	AJP-SPEEDOMETER COVER 00ELS01A0035 (u. 1)
3	AJP-IGNITION SWITCH ASSEMBLY 00COS01A0018 (u. 1)
4	AJP-NUT DIN1587 M6 PC1587006000 (u. 2)
5	AJP-WASHER DIN125 M6 AN0125006000 (u. 2)
6	AJP-CUSHION 00COS01A0016 (u. 2)
7	AJP-SPACER 00COS07A0030 (u. 2)
8	AJP-STUD M6X60 00COS01A0022 (u. 2)
9	AJP-SPACER 16X4.4X6 00COS07A0015 (u. 2)
10	AJP-NUT DIN985 M6 PC0985006000 (u. 1)
11	AJP-NUT M6 FUSE 00COS01A0023 (u. 1)

TURN SIGNALS

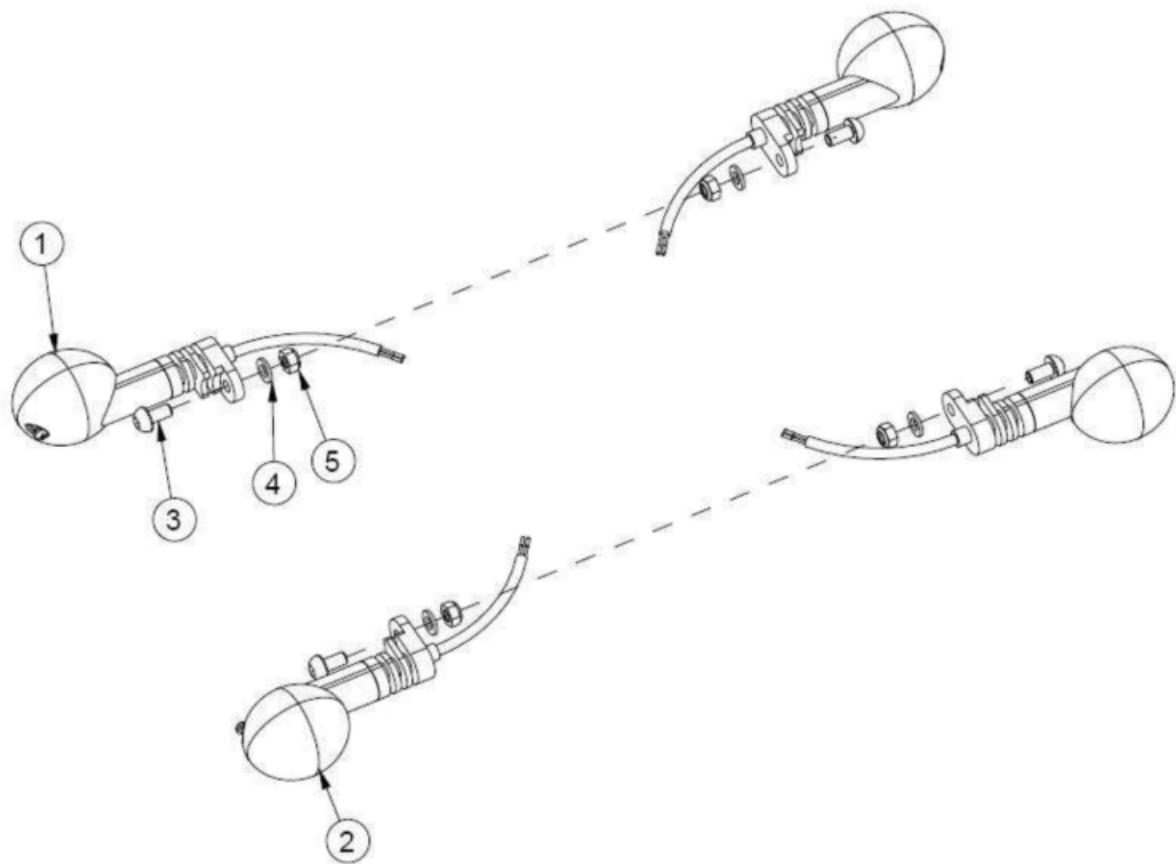


1	AJP-TURN LAMP ASSEMBLY LH 00ELC01A0002 (u. 0)
2	AJP-TURN LAMP ASSEMBLY RH 00ELC01A0001 (u. 0)
3	AJP-SCREW DIN7380 M6X16 PF7380006016 (u. 0)
4	AJP-WASHER DIN125 M6 AN0125006000 (u. 0)
5	AJP-NUT DIN985 M6 PC0985006000 (u. 0)

CONTROLS




- | | |
|---|--|
| 1 | AJP-SET OF GRIPS
00COC01A0003 (u. 1) |
| 2 | AJP-THROTTLE TUBE
00COS01A0003 (u. 1) |
| 3 | AJP-GUIDE THROTTLE CABLE
00COS01A0004 (u. 1) |
| 4 | AJP-CLUTCH LEVER
00COS01A0002 (u. 1) |
| 5 | AJP-ON/OFF SWITCH
00ELS01A0023 (u. 1) |
| 6 | AJP-COMMODO GAUCHE
00ELC01A0003 (u. 0) |
| 7 | AJP-THROTTLE CONTROL ASSEMBLY
00COC01A0002 (u. 1) |
| 8 | AJP-CLUTCH LEVER ASSEMBLY
00COC01A0001 (u. 1) |
| 9 | AJP-STARTING BUTTON
00COS01A0029 (u. 1) |

 HANDLEBAR

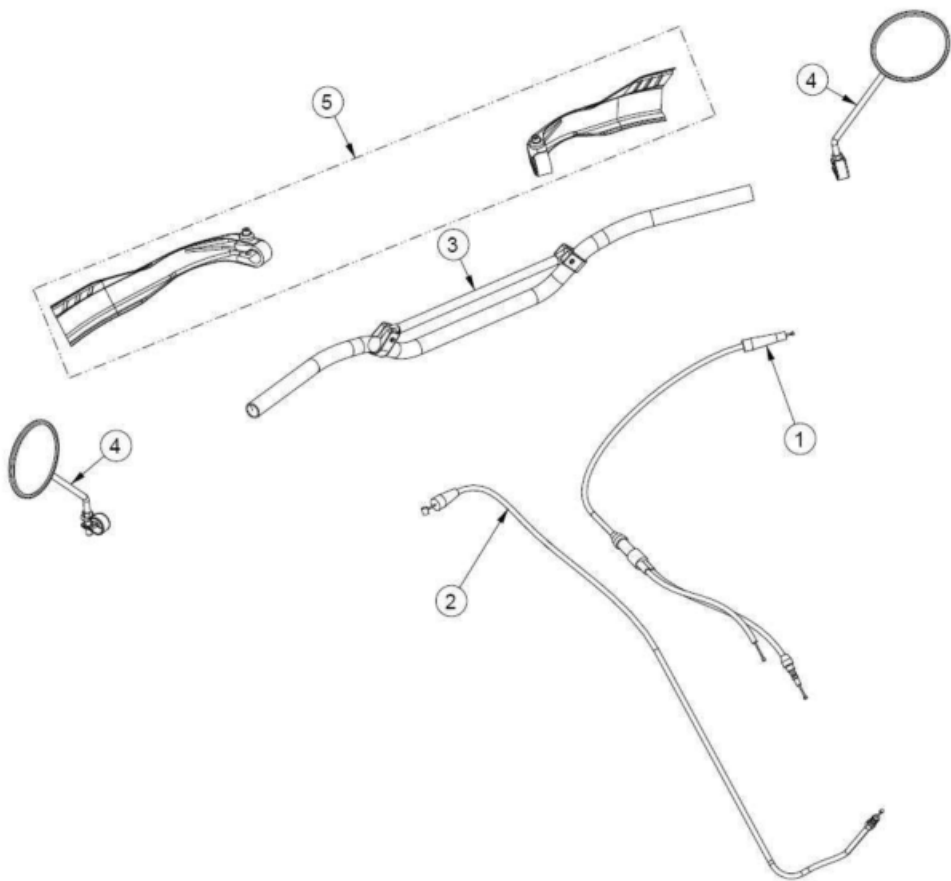

1	AJP-THROTTLE CABLE PR3/PR4 00COS01B0005 (u. 1)
3	AJP-HANDLEBAR PR3/PR4 REIKON 00COS01A0001 (u. 1) AJP-HANDLEBAR TRAIL PR3 2013 00COS01A0042 (u. 0)
4	AJP-REAR VIEW MIRROR 00COS01A0021 (u. 0)
5	AJP-HAND GARDS WHITE 00PLS01A0073 (u. 0)

 SEAT

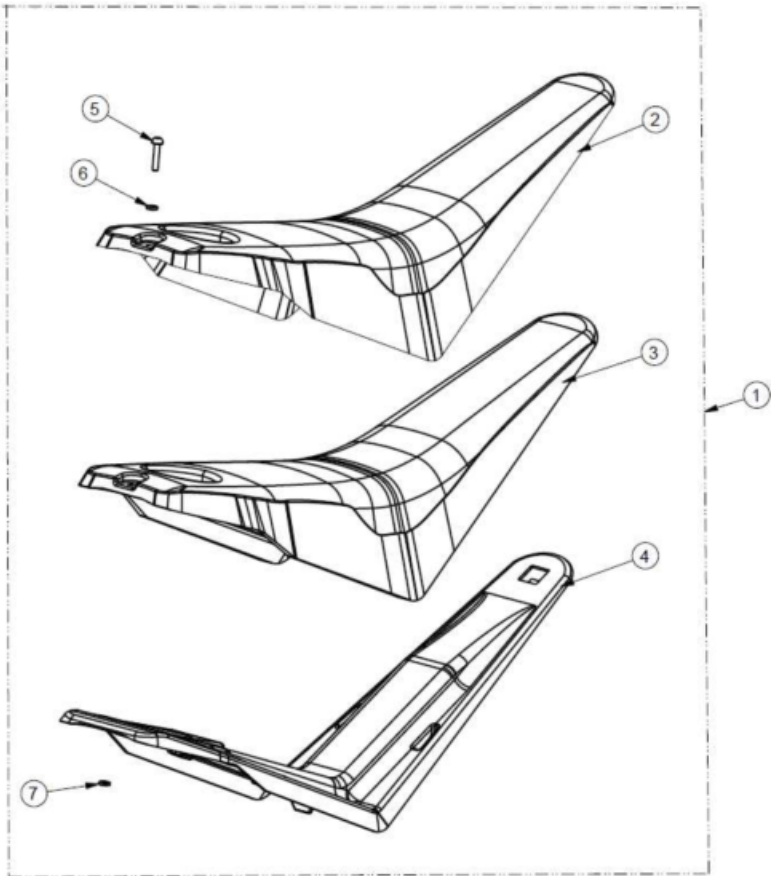

1	AJP-SEAT ASSEMBLY 00BAC01A0025 (u. 1)
2	AJP-SEAT COVER 00BAS01A0094 (u. 1)
3	AJP-FOAM SADDLE 00BAS01A0003 (u. 1)
4	AJP-SEAT BASE 00BAS01A0004 (u. 1)
5	AJP-SCREW DIN912 M6X30 PF0912006030 (u. 1)
6	AJP-WASHER DIN9021 M6 AN9021006000 (u. 1)
7	AJP-INNER WASHER 00BAS01A0028 (u. 1)