



PR4 125 Standard 2020


Exploded




CYLINDER HEAD ASSY




VALVE MECHANISM

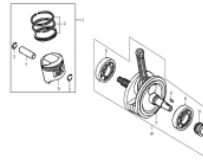


CRANKSHAFT - PISTON

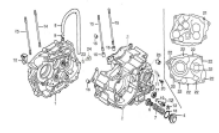


CRANKCASES

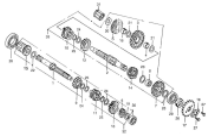


GEARBOX

 


KICKSTARTER SHAFT

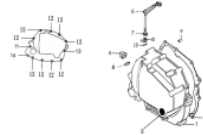


RIGHT CRANKCASE COVER

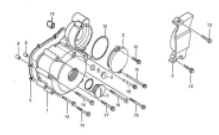


LEFT CRANKCASE COVER

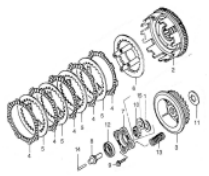


CLUTCH

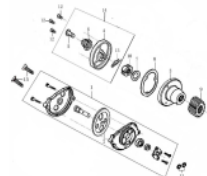

OIL PUMP

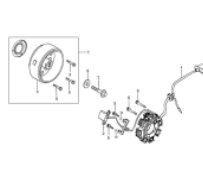


MAGNETO

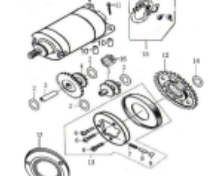

ELECTRIC STARTER




GEARSHIFT SHAFT

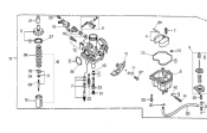


CARBURETTOR



INTAKE

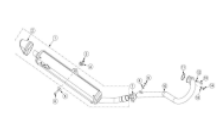

MX EXHAUST SYSTEM

 

EXHAUST SYSTEM




REAR SWING ARM




FRAME




SIDE STAND - FOOTPEG

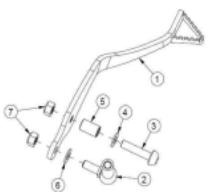


REAR BRAKE PEDAL

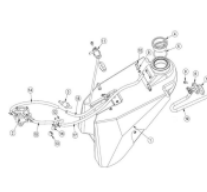

FUEL TANK

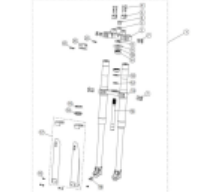


FRONT SUSPENSION

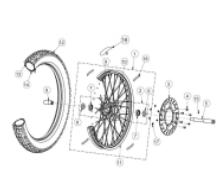


FRONT WHEEL




FRONT BRAKE

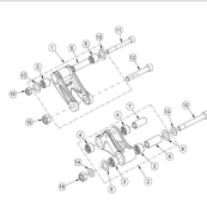


SUSPENSION LINKS

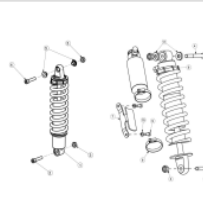


SHOCK ABSORBER

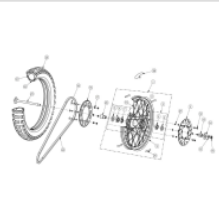


REAR WHEEL

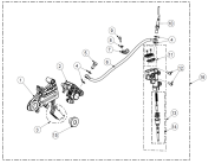


REAR BRAKE

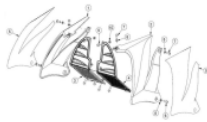


FRAME COVER

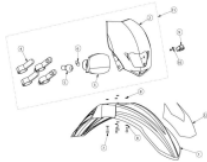

FRONT PLASTICS

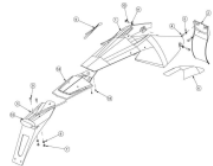

REAR FENDER

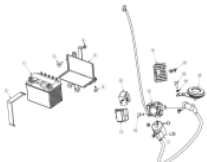


BATTERY – ELECTRIC SYSTEM



WIRE HARNESS



COCKPIT

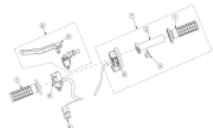

CONTROLS




HANDLEBAR



SEAT


CYLINDER HEAD ASSY

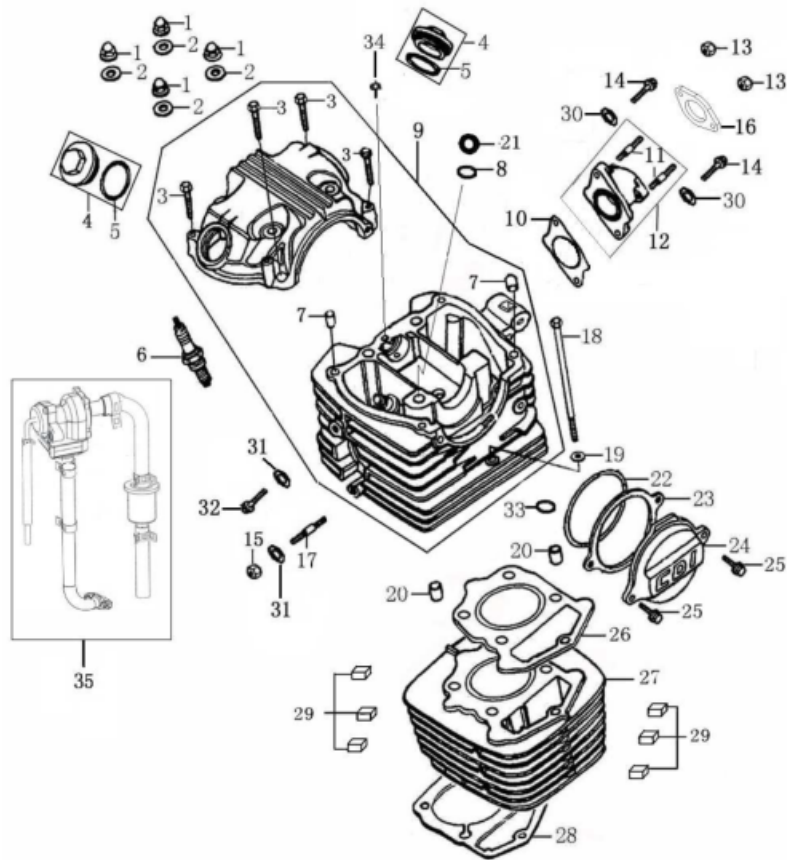

[illegible]

7	AJP-DOWEL PIN 8X14MM 91502I0060000 (u. 2)
9	AJP-CYLINDER HEAD 125 1122BI0490000 (u. 1)
10	AJP-200 INTAKE MANIFOLD GASKET 00MTS01A0021 (u. 1)
11	AJP-BOLT M6X26 125/200/240 91127L0440000 (u. 2)
12	AJP-CARBURETTOR INSULATOR 00MTS01A0098 (u. 1)
13	AJP-NUT DIN985 M6 PC0985006000 (u. 2)
14	AJP-SCREW DIN912 M6X20 PF0912006020 (u. 2)
15	AJP-NUT DIN980 M6 PC0980006000 (u. 1)
16	AJP-CARBURETOR INSULATOR 125 00MTS01A0094 (u. 1)
17	AJP-STUD BOLT M6X35MM 91138I0080000 (u. 1)
18	AJP-BOLT M6X110MM 125 91104I0060000 (u. 1)
19	AJP-SEAL WASHER 6.5X12.8X2MM 91307I0060000 (u. 1)
20	AJP-DOWEL PIN 10X20 91506I0080000 (u. 3)
22	AJP-O.-RING 75X2.65MM 90109I0060000 (u. 1)
23	AJP-CYLINDER HEAD SIDE COVER GASKET 11004I0060000 (u. 1)
24	AJP-CYLINDER HEAD SIDE COVER 11005I0060AJP (u. 1)
25	AJP-SCREW CDI COVER M6X20MM S701300000000 (u. 2)
26	AJP-CYLINDER HEAD GASKET 150 9022BJ0250000 (u. 1)
28	AJP-CYLINDER GASKET 150 90205J0250000 (u. 1)
	AJP-CYLINDER GASKET 125 90205I0060000 (u. 1)
30	AJP-WASHER DIN125 M6 AN0125006000 (u. 2)
31	AJP-WASHER DIN127 M6 AN0127006000 (u. 2)
	AJP-WASHER DIN127 M8 AN0127008000 (u. 2)
32	AJP-SCREW DIN933 M8X25 PF0933008025 (u. 1)
	AJP-SCREW DIN933 M6X25 PF0933006025 (u. 1)
33	AJP-O RING 10X1.6 11014I0060000 (u. 1)
34	AJP-RUBBER PIN 11015I0060000 (u. 1)


VALVE MECHANISM

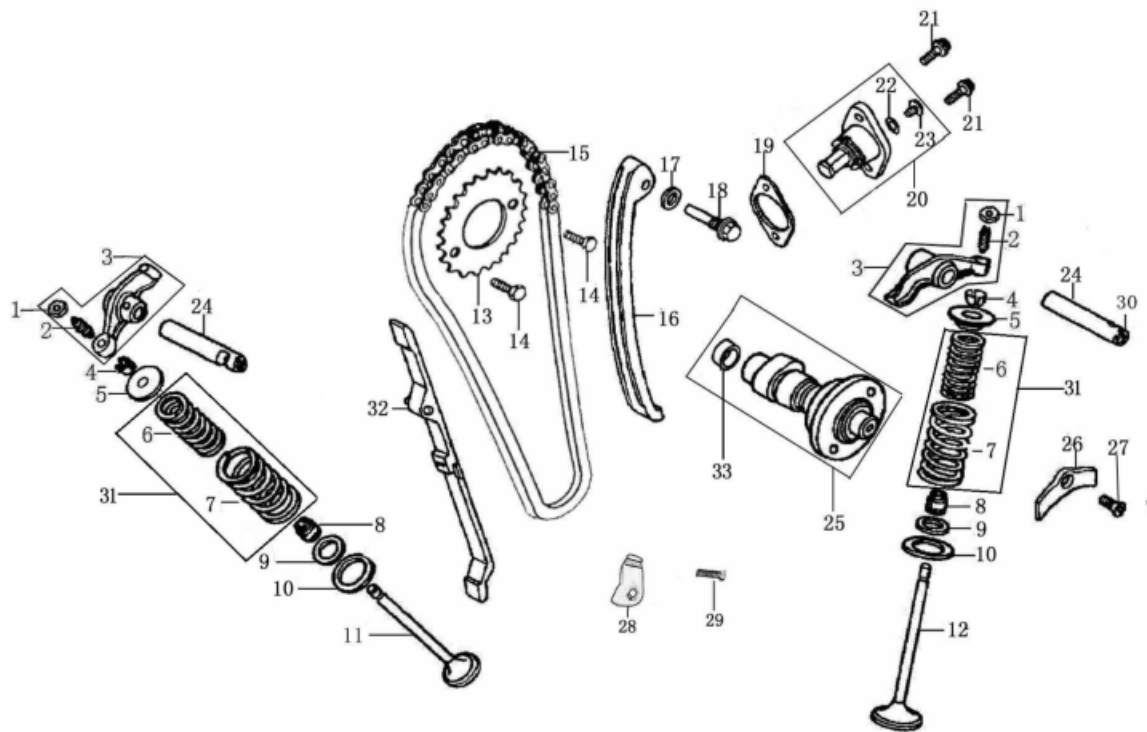

1	AJP-TAPPED ADJUST SCREW 15403I0060000 (u. 2)
2	AJP-AFINADOR VÁLVULA 15404I0060000 (u. 2)
3	AJP-VALVE ROCKER ARM. ASSY 125/200/240 1540AI0060000 (u. 1)
4	AJP-VALVE COTTER 125 15707I0060000 (u. 4)
5	AJP-VALVE SPRING CONTAINER 125 / 200 / 240 15705I0060000 (u. 2)
6	AJP-INNER VALVE SPRING 125/200/240 15704I0060000 (u. 2)
7	AJP-OUTER VALVE SPRING 125/200/240 15703I0060000 (u. 2)
12	AJP-INTAKE VALVE 125 15701I0060000 (u. 1)
13	AJP-SPROCKET 15301I0060000 (u. 1)
14	AJP-SCREW M6X10 S307300000000 (u. 2)
15	AJP-TIMING CHAIN 125 1532BI0060000 (u. 1)
16	AJP-TIMING CHAIN TENSIONER 125 1552AI0060000 (u. 1)
18	AJP-TIMING CHAIN TENSIONER PIVOT BOLT 91109I0060000 (u. 1)
19	AJP-TENSIONER ADJUSTER GASKET 90211I0490000 (u. 1)
20	AJP-TENSIONER ADJUSTER 1554BI0490000 (u. 1)
22	AJP-O-RING 1.5X9.6 Q500100000000 (u. 1)


23	AJP-BOLT M6X6 91120I0490000 (u. 1)
24	AJP-ROCKER ARM SHAFT IN/EX 15402I0060000 (u. 2)
25	AJP-CAMSHAFT 125 15100I0060000 (u. 1)
26	AJP-SHAFT HOLDER 11200I0060000 (u. 1)
27	AJP-BOLT M6X16MM 15403L0440002 (u. 1)
28	AJP-TIMING CHAIN PROTECTION PLATE 240 2143BL0440000 (u. 1)
29	AJP-SCREW DIN933 M6X16 PF0933006016 (u. 1)
32	AJP-TIMING CHAIN GUIDE 125 1553AI0060000 (u. 1)
33	AJP-CAMSHAFT DOWEL PIN 125 1512AI0060000 (u. 1)

CRANKSHAFT - PISTON

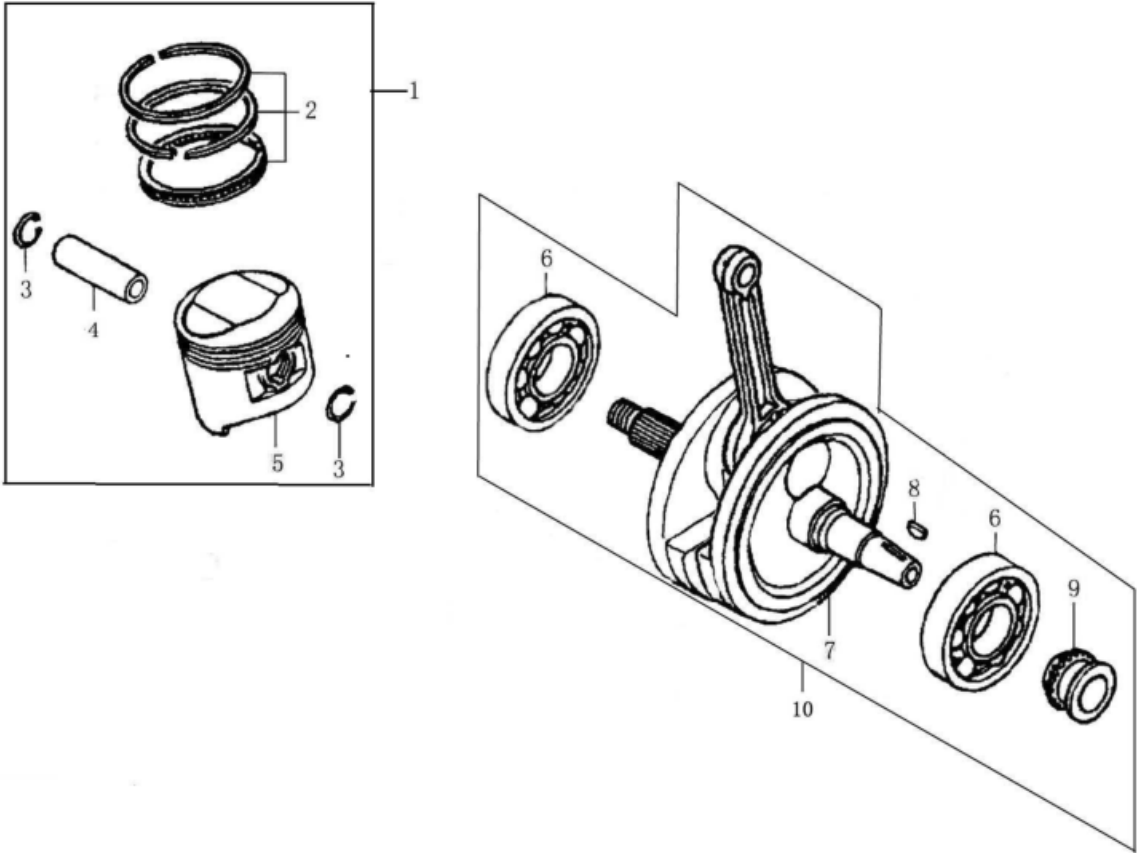

1	AJP-PISTON ASSY 150 00MTS01A0157 (u. 1)
	AJP-PISTON ASSEMBLY 125 13100I0060000 (u. 1)
2	AJP-PISTON RING SET 150 1310AJ0250000 (u. 1)
	AJP-PISTON RING SET 125 13103I0060000 (u. 1)
3	AJP-CIR-CLIP 15MM 91401I0060000 (u. 2)
4	AJP-PISTON PIN 150 13102J0250000 (u. 1)
	AJP-PISTON PIN 125 13102I0060000 (u. 1)
5	AJP-PISTON 200 13101J0250100 (u. 1)
	AJP-PISTON 125 13101I0060000 (u. 1)
7	AJP-CRANKSHAFT 125 13220I0060001 (u. 1)
	AJP-CRANKSHAFT 125 13220I0060001 (u. 1)
9	AJP-TIMING SPROCKET 125 13203I0060000 (u. 1)
10	AJP-CRANKSHAFT CONNECTING ROD ASSY 125 (Ø22 00MTS01A0158 (u. 1)
	AJP-CRANKSHAFT ASSEMBLY 125 1320BI0060000 (u. 1)


CRANKCASES

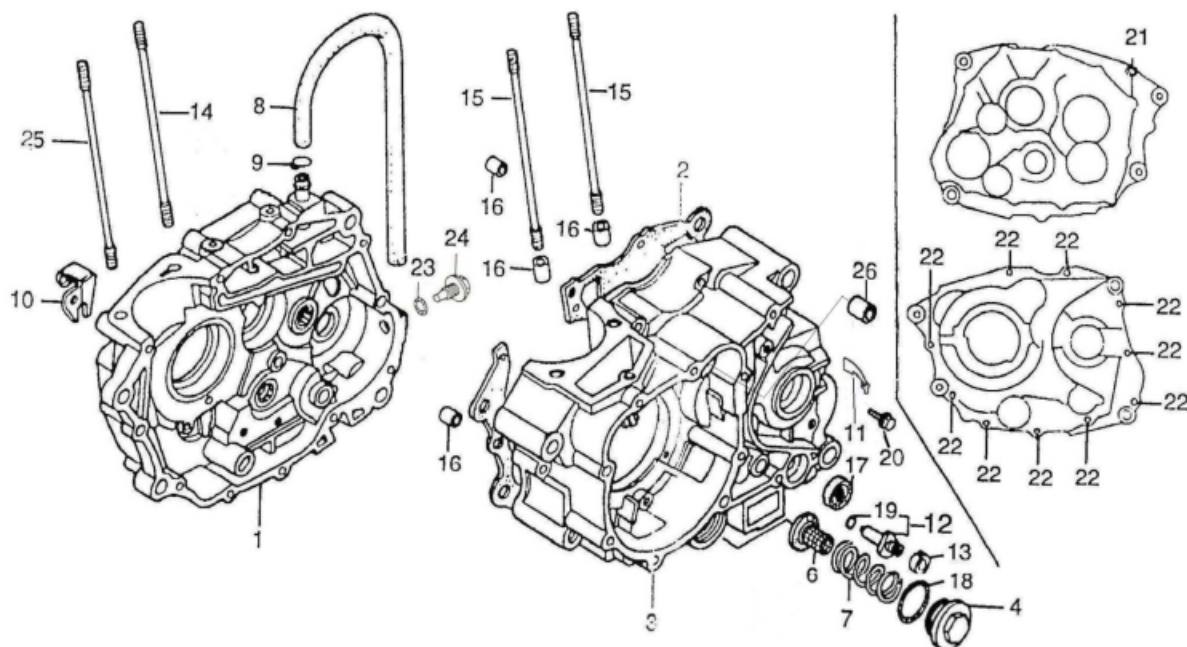

1	AJP-RIGHT CRANKCASE 12200I0490000 (u. 1)
2	AJP-CRANKCASE GASKET 90205I0490000 (u. 1)
3	AJP-LEFT CRANKCASE 12000I0490000 (u. 1)
4	AJP-OIL FILTER COVER 11229I0060000 (u. 1)
6	AJP-OIL FILTER 1413BI0490000 (u. 1)
7	AJP-OIL FILTER SPRING 14221I0490000 (u. 1)
8	AJP-BREATHER TUBE 12105I0060000 (u. 1)
10	AJP-CLUTCH WIRE HOLDER 22422I0490000 (u. 1)
11	AJP-GENERATOR WIRE HOLDER 12103I0080000 (u. 1)
12	AJP-NEUTRAL CONTACT 8802BD0020000 (u. 1)
13	AJP-NEUTRAL PIN 8801D0020000 (u. 1)
14	AJP-CYLINDER STUD BOLT M8X212 (6.5) 91102I0490000 (u. 1)
15	AJP-CYLINDER STUD BOLT M8X224 91101I0490000 (u. 2)
16	AJP-DOWEL PIN 10X14MM 91504I0490000 (u. 4)
17	AJP-GEAR OIL SEAL 90301I0060000 (u. 1)
18	AJP-O-RING 35X3MM 90104I0060000 (u. 1)
19	AJP-O RING 7X1.7 90133D0020000 (u. 2)

20	AJP-SCREW M6X14 L310200000000 (u. 1)
21	AJP-SCREW M6X60 S702000000000 (u. 1)
22	AJP-SCREW M6X50 S701900000000 (u. 10)
23	AJP-O.RING 11.8X2.65 9110110118000265 (u. 1)
24	AJP-SIDE SCREW 9110810060000 (u. 1)
25	AJP-CYLINDER STUD BOLT 125 (M8X212) 9110110060100 (u. 1)
26	AJP-BEARING HK1010 Z303900000000 (u. 1)


GEARBOX

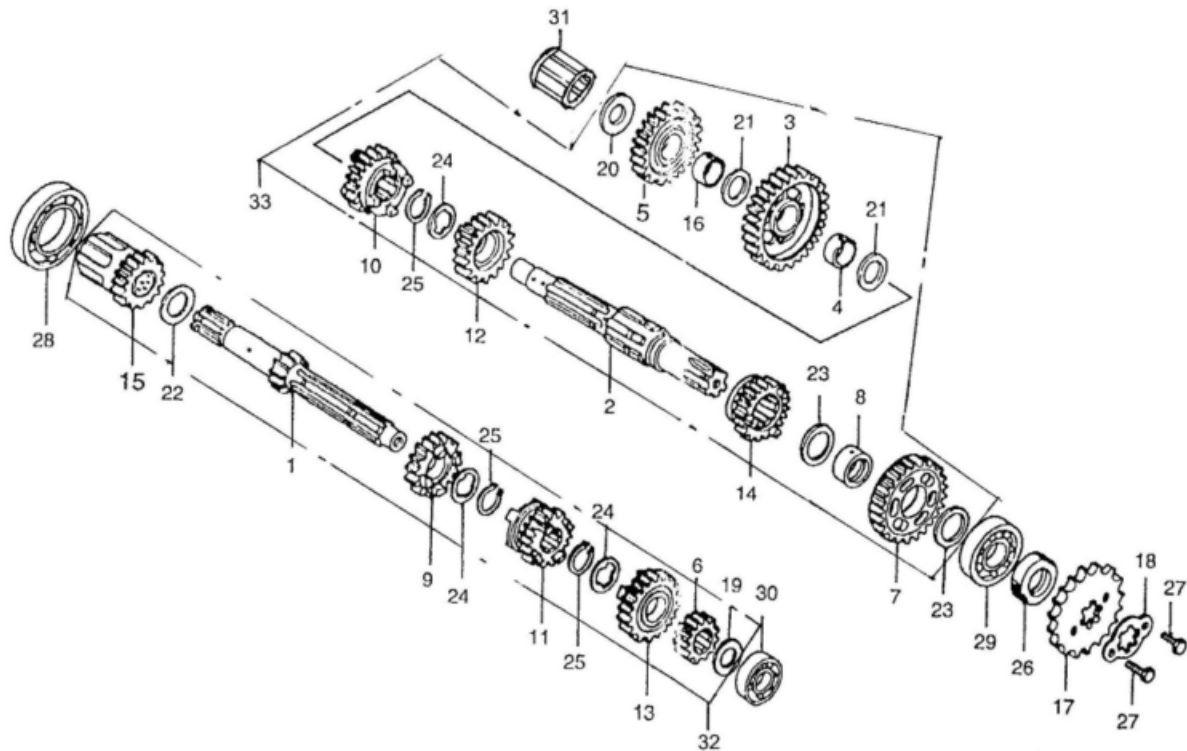


1	AJP-MAIN SHAFT (Z13) 23221I0060000 (u. 1)
2	AJP-SECONDARY SHAFT 23241I0060000 (u. 1)
3	AJP-1ST GEAR. SECONDARY SHAFT (Z26) 23242I0060001 (u. 1)
4	AJP-DOWEL PIN 23203I0060001 (u. 1)
5	AJP-SECONDARY STARTING GEAR (Z28) 23248I0060000 (u. 1)
6	AJP-2ND GEAR. MAIN SHAFT (Z17) 23222I0060002 (u. 1)
7	AJP-2ND GEAR. SECONDARY SHAFT (Z32) 23242I0060002 (u. 1)
8	AJP-DOWEL PIN 20X23X9 23203I0060002 (u. 1)
9	AJP-3RD GEAR. MAIN SHAFT (Z20) 23222I0060003 (u. 1)
10	AJP-3RD GEAR. SECONDARY SHAFT (Z28) 23242I0060003 (u. 1)
11	AJP-4RD GEAR. MAIN SHAFT(Z23) 23222I0060004 (u. 1)
12	AJP-4RD GEAR. SECONDARY SHAFT (Z26) 23242I0060004 (u. 1)
13	AJP-5TH GEAR. MAIN SHAFT (Z25) 23222I0060005 (u. 1)
14	AJP-5TH GEAR. SECONDARY SHAFT (Z24) 23242I0060005 (u. 1)
15	AJP-MAIN STARTER GEAR (Z19) 23231I0060000 (u. 1)
16	AJP-DOWEL PIN 23203I0060003 (u. 1)

17	AJP-DRIVE SPROCKET (Z15) 23401I0060000 (u. 1)
	AJP-DRIVE SPROCKET (Z16) 00MTS01A0018 (u. 1)
	AJP-DRIVE SPROCKET (Z13) 00MTS01A0035 (u. 1)
	AJP-DRIVE SPROCKET (17T) 00MTS01B0018 (u. 1)
	AJP-DRIVE SPROCKET (Z14) 00MTS01A0036 (u. 1)
18	AJP-SPROCKET FIXING PLATE 23402I0060000 (u. 1)
20	AJP-WASHER 15 MM 240 9330161521030000 (u. 1)
24	AJP-WASHER 20 MM 23223I0060000 (u. 3)
26	AJP-SEAL 20X34X7 90303I0060000 (u. 1)
27	AJP-SCREW M6X12 B05783000600107 (u. 2)
28	AJP-BEARING 6006 9210200000006006 (u. 1)
32	AJP-MAIN SHAFT ASSEMBLY 23220I0060000 (u. 1)
33	AJP-SECONDARY SHAFT ASSEMBLY 23240I0060000 (u. 1)

KICKSTARTER SHAFT

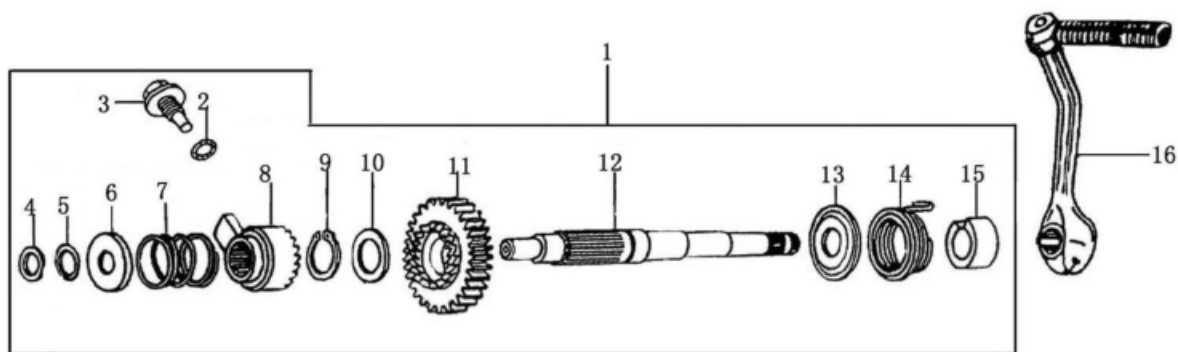


1	AJP-KICK STARTING SHAFT ASSEMBLY 21100I0060000 (u. 1)
2	AJP-Ó-RING 11.8X2.65 9010110118000265 (u. 1)
3	AJP-BOLT M12×25 91108I00600000X (u. 1)
5	AJP-STOPPER RING 16MM B00804116000000C (u. 1)
6	AJP-GUIDE PLATE 125/200/240 21123I00600000 (u. 1)
7	AJP-SPRING. KICK STARTING RATCHET WHEEL 125/200/240 21119I00600000 (u. 1)
8	AJP-STARTING RATCHET 125/200/240 21118I00600000 (u. 1)
9	AJP-CIRCLIP Ø18.5×1.2× Ø 22.4 91402I00800000 (u. 1)
10	AJP-WASHER 20×0.5×27 (125/200/240) 9330152020527000 (u. 1)
11	AJP-GEAR. KICK STARTER 125/200/240 21117I00600000 (u. 1)
12	AJP-PIVOT. KICK STARTING SHAFT 125/200/240 21107I00600000 (u. 1)
13	AJP-WASHER KICKS 125/200 21104I00600000 (u. 1)
14	AJP-RETURN SPRING. KICK STARTING SHAFT 21106I00600000 (u. 1)
15	AJP-SLEEVE KICKSTARTER SHAFT 21102I00600000 (u. 1)
16	AJP-KICKSTARTER 21200I1110000 (u. 1)

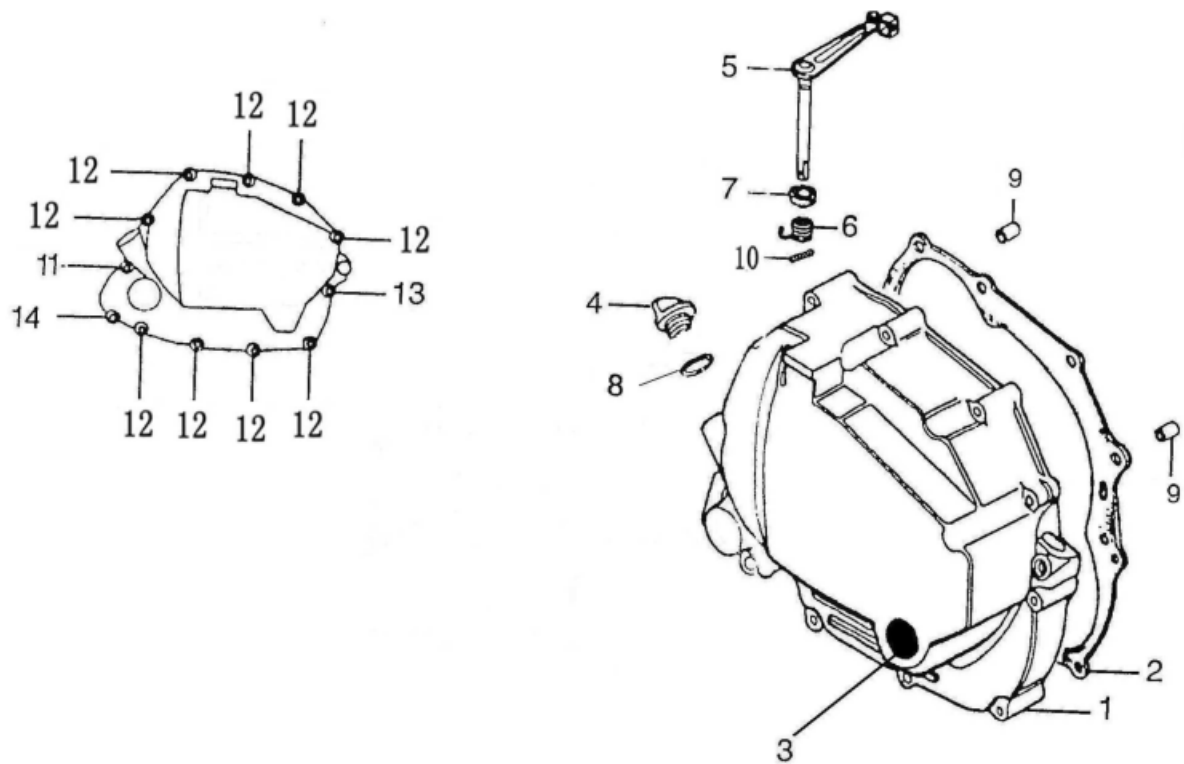RIGHT CRANKCASE COVER


1	AJP-RIGHT CRANKCASE COVER 1242150490AJP (u. 1)
2	AJP-RIGHT CRANKCASE COVER GASKET 9020610060000 (u. 1)
3	AJP-OIL LEVEL VIEW-FINDER 1242610080000 (u. 1)
4	AJP-OIL LEVEL GAUGE 1430110060000 (u. 1)
5	AJP-CLUTCH LEVER 2242A10060000 (u. 1) AJP-CLUTCH LEVER 00MTS01A0007 (u. 1)
6	AJP-CLUTCH LEVER SPRING 2242710060000 (u. 1)
8	AJP-O RING 18X3 90106D0020000 (u. 1)
9	AJP-DOWEL PIN 8X14 91502D0020000 (u. 2)
10	AJP-RING 3X12 XA00100000000 (u. 1)
11	AJP-CYLINDER HEAD BOLT M6X35MM S701600000000 (u. 1)
12	AJP-SCREW M6X40 S701700000000 (u. 9)
13	AJP-SCREW M6X50 S701900000000 (u. 1)
14	AJP-SCREW M6X25 S701400000000 (u. 1)


LEFT CRANKCASE COVER

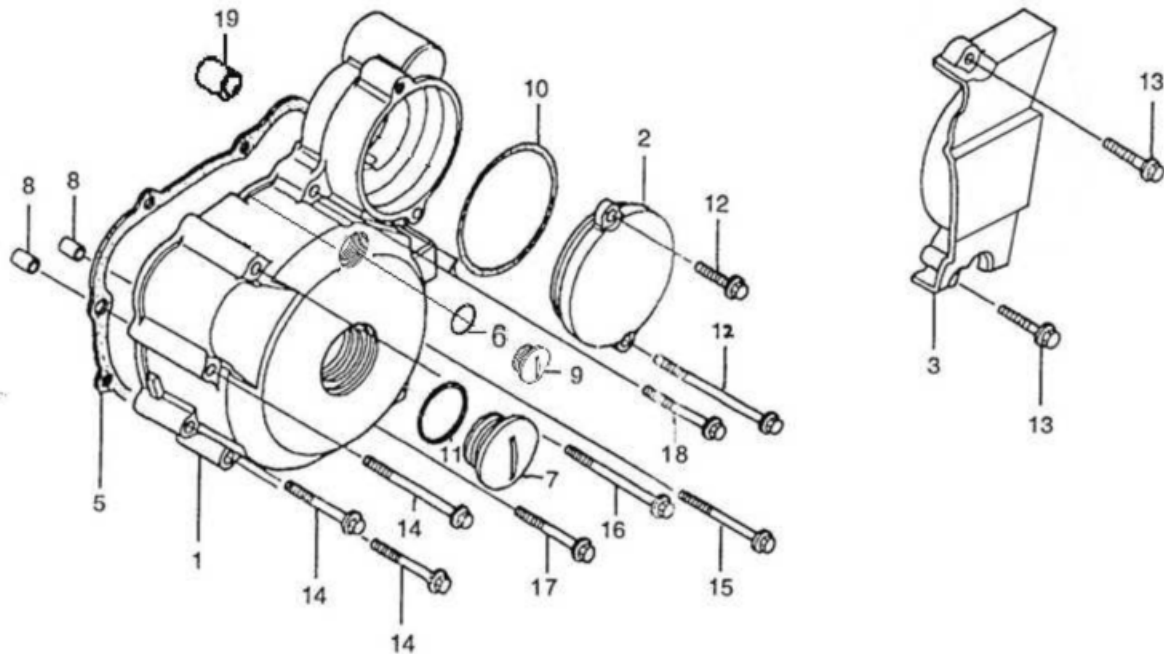

1	AJP-LEFT CRANKCASE COVER 125/200/240CC 1230110490AJP (u. 1)
2	AJP-REDUCTION GEAR COVER 1230810490AJP (u. 1)
3	AJP-LEFT CRANKCASE RR COVER 1230210490AJP (u. 1)
5	AJP-LEFT CRANKCASE COVER GASKET 1200110490000 (u. 1)
6	AJP-TOP SIGHT HOLE CAP 12303G0110AJP (u. 1)
7	AJP-SIGHT HOLE CAP 12304G0110AJP (u. 1)
8	AJP-DOWEL PIN 8X14MM 9150210060000 (u. 1)
9	AJP-O-RING 13.8X2.5 1230610060000 (u. 1)
10	AJP-O-RING 63X3 FOR REDUCTION GEAR COVER 1230910490000 (u. 1)
11	AJP-O-RING 27.4X2.4 1230710060000 (u. 1)
12	AJP-SCREW M6X20 S701310060000 (u. 2)
13	AJP-SCREW M6X25 S701400000000 (u. 2)
14	AJP-SCREW M6X25 S701400000000 (u. 3)
15	AJP-SCREW M6X60 S701000000000 (u. 1)
16	AJP-CYLINDER HEAD BOLT M6X35MM S701600000000 (u. 1)
17	AJP-SCREW M6X40 S701700000000 (u. 1)
18	AJP-SCREW M6X75 S706400000000 (u. 2)

19	AJP-BEARING HK1010 Z303900000000 (u. 1)
----	--


CLUTCH

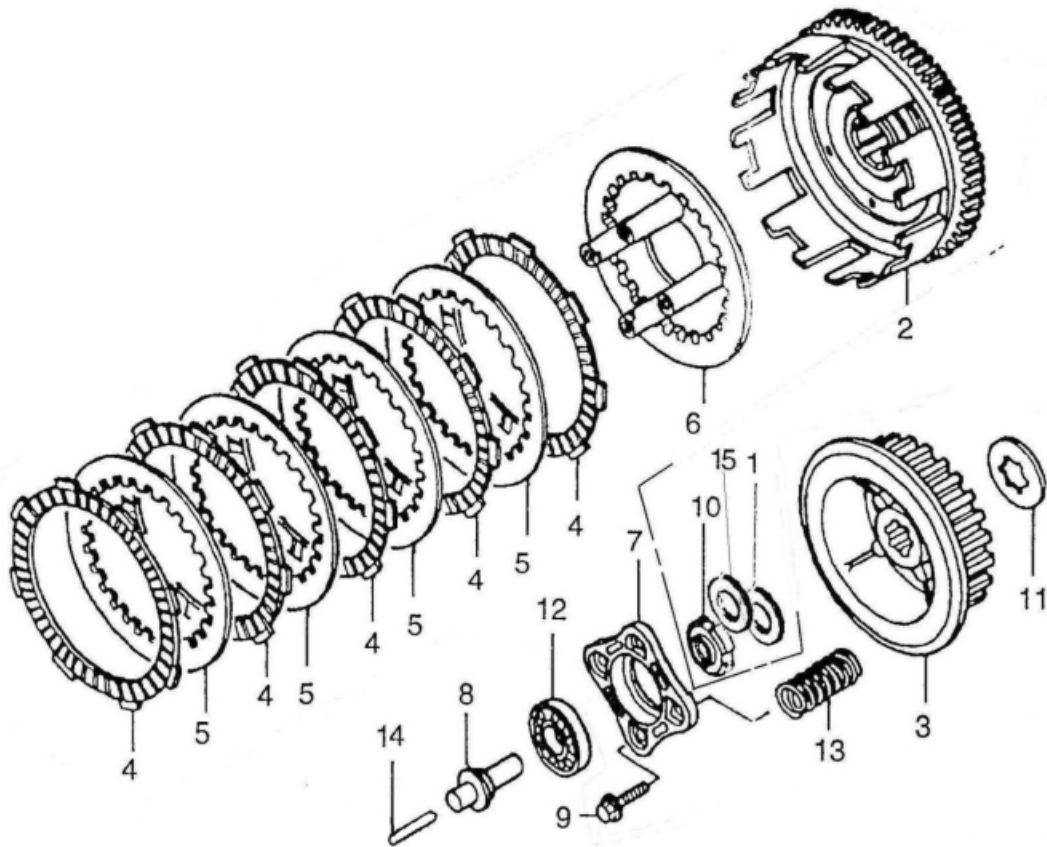

2	AJP-PRIMARY DRIVEN GEAR (Z70) 22150L0440000 (u. 1)
	AJP-PRIMARY DRIVEN GEAR Z73 22305I0060000 (u. 1)
3	AJP-HUB. CLUCH SLEEVE 22202I0060000 (u. 1)
	AJP-HUB. CLUCH SLEEVE 22130I0060000 (u. 1)
4	AJP-DRIVE PLATE CLUTCH 2223AI0060000 (u. 5)
5	AJP-DRIVEN PLATE. CLUTCH 125/200/240 22201I0060000 (u. 4)
6	AJP-PRESSURE DISC. CLUTCH 22105I0080000 (u. 1)
	AJP-PRESSURE DISC. CLUTCH 5 SPRINGS 22122I0060000 (u. 1)
7	AJP-END PLATE. CLUTCH 22203I0060000 (u. 1)
	AJP-END PLATE. CLUTCH 22121I0060000 (u. 1)
8	AJP-PUSH ROD CLUTCH 22404I0060000 (u. 1)
	AJP-PUSH ROD. CLUTCH 22403I0060000 (u. 1)
9	AJP-SCREW CLUTCH PLATE 91110I0060000 (u. 1)
10	AJP-NUT M16 14206I0060000 (u. 1)

11	AJP-WASHER B. 20MM 22205I0060000 (u. 1)
12	AJP-BEARING 16003 125/200 Z009800000000 (u. 1)
13	AJP-PUSH ROD. CLUTCH. PIN 22405I0060000 (u. 5)
	AJP-CLUTCH SPRING 22204I0060000 (u. 4)


OIL PUMP

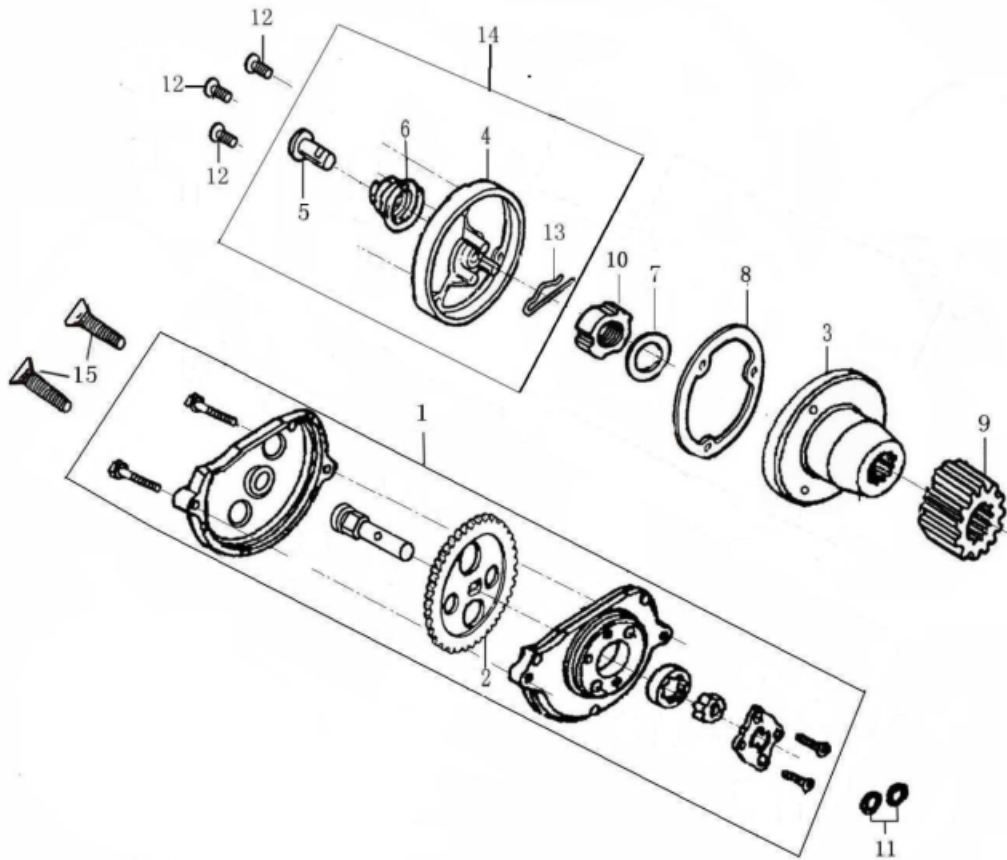

1	AJP-OIL PUMP ASSEMBLY 125 14100I0060000 (u. 1)
	AJP-OIL PUMP ASSEMBLY (Z39) 14100I0060001 (u. 1)
2	AJP-OIL PUMP DRIVE GEAR (Z37) 14122I0060000 (u. 1)
	AJP-OIL PUMP DRIVE GEAR (Z39) 14102L0440000 (u. 1)
3	AJP-OIL FILTER ROTOR 1422AI0060000 (u. 1)
4	AJP-OIL FILTER ROTOR CAP 14201I0060000 (u. 1)
5	AJP-OIL THROUGH 14202I0060000 (u. 1)
6	AJP-OIL THROUGH SPRING 14203I0060000 (u. 1)
7	AJP-CONIC WASHER 22004I0060000 (u. 1)
8	AJP-OIL FILTER ROTOR GASKET 90208I0060000 (u. 1)
9	AJP-PRIMARY DRIVE GEAR (Z18) 23101I0060000 (u. 1)
10	AJP-NUT M16 14206I0060000 (u. 1)
11	AJP-O RING 24X3 90108I0060000 (u. 2)
12	AJP-SCREW M5X12 125/200/240 L605200000000 (u. 3)

13	AJP-CIR-CLIP 8MM 91505I0060000 (u. 1)
14	AJP-OIL FILTER ROTOR CAP ASSEMBLY 14210I0060000 (u. 1)
15	AJP-SCREW 6X30 125/200/240 B08190106003020B (u. 2)

MAGNETO

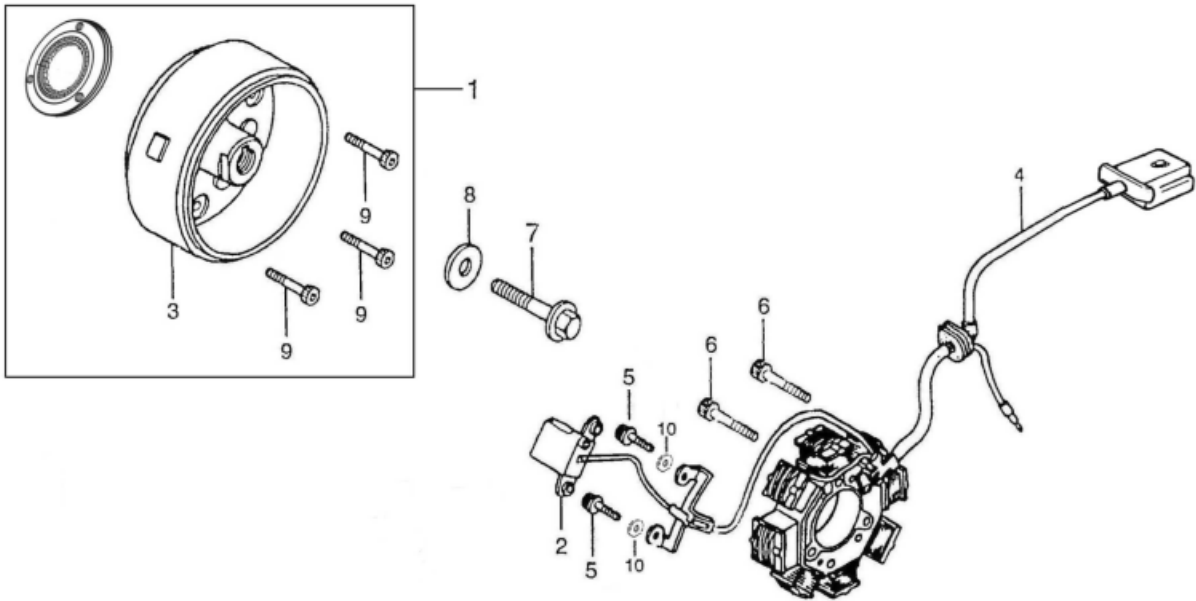

1

AJP-FLY WHEEL ASSEMBLY
82130L0440000 (u. 1)

2

AJP-PULSE GENERATOR
8210500000000 (u. 1)

3

AJP-FLY WHEEL 20MM
82101I0490AJP (u. 1)
AJP-FLY WHEEL 22MM
82101I0490AJP100 (u. 1)

4

AJP-STATOR
82120L0440000 (u. 1)

5

AJP-SCREW
L304200000000 (u. 2)


7

AJP-SCREW M10X36
91106I0080000 (u. 1)
AJP-HEX BOLT M8X33
91106I0060000 (u. 1)

8

AJP-WASHER 8X24
91313I0060000 (u. 1)
AJP-WASHER 10X24X2.5
91313I0060100 (u. 1)


ELECTRIC STARTER

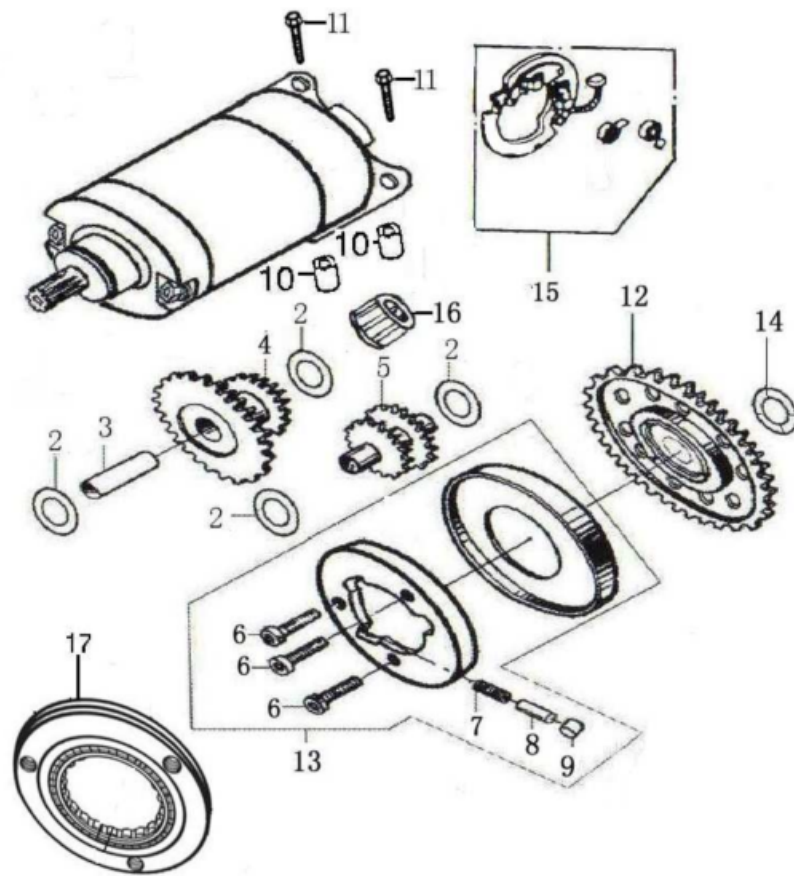

1	AJP-STARTING MOTOR 82200I0490AJP (u. 1)
3	AJP-STARTER REDUCTION GEAR SPACER 21402I0490000 (u. 1)
4	AJP-STARTER REDUCTION GEAR 61/21 21421I0490000 (u. 1)
5	AJP-STATOR GEAR 15/16 21401I0490000 (u. 1)
6	AJP-SCREW M8X18 B0070010800187 (u. 3)
7	AJP-CLUTCH SPRING 21303I0490000 (u. 3)
8	AJP-SPRING CAP 21305I0490000 (u. 3)
9	AJP-ROLL 10.2X11.6 21304I0490000 (u. 3)
12	AJP-STARTER DRIVE GEAR 22MM 125/200 CC 2142AI0490100 (u. 1) AJP-STARTER DRIVE GEAR 2142AI0490000 (u. 1)
13	AJP-STARTER DRIVE GEAR ASSEMBLY 21300I0490000 (u. 1)
14	AJP-STARTING MOTOR WASHER 22X34X3.5 240CC 2013 93301E2203534000 (u. 1) AJP-STARTER REDUCTION GEAR 61/21 21421I0490000 (u. 1)
15	AJP-STARTER MOTOR BRUSH HOLDER 125/200CC 82228I0490000 (u. 1)

16	AJP-BEARING HK1010 Z303900000000 (u. 2)
17	AJP-STARTING MOTOR CABLE 8223110490000 (u. 1)


GEARSHIFT SHAFT

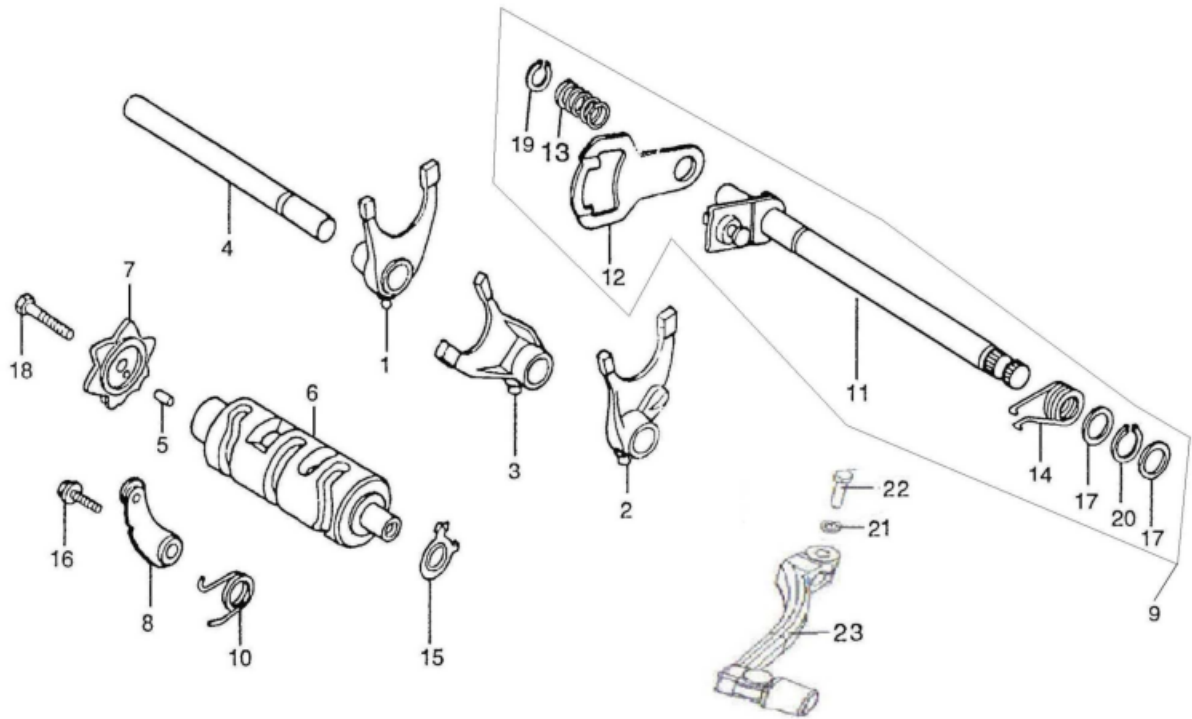

1	AJP-RIGHT GEAR SHIFT FORK 24101I0060000 (u. 1)
2	AJP-LEFT GEAR SHIFT FORK 24102I0060000 (u. 1)
3	AJP-CENTRAL GEAR SHIFT FORK 24103I0060000 (u. 1)
4	AJP-GEAR SHIFT FORK GUIDE 24104I0060000 (u. 1)
5	AJP-PIN 4X10 X306200000000 (u. 1)
6	AJP-GEAR SHIFT DRUM 24201I0060000 (u. 1)
7	AJP-GEAR SHIFT CAM 24202I0060000 (u. 1)
8	AJP-GEAR SHIFT DRUM STOPER 24221I0060000 (u. 1)
9	AJP-GEAR SHIFT SPINDLE ASSEMBLY 24300I0060000 (u. 1)
10	AJP-GEAR DRUM STOPPER SPRING 125/200/240 24302I0060000 (u. 1)
11	AJP-GEAR SHIFT SPINDLE 2432AI0060000 (u. 1)
12	AJP-GEAR SHIFT PLATE 24301I0060000 (u. 1)
13	AJP-GEAR SHIFT PLATE SPRING 24303I0080000 (u. 1)
14	AJP-GEAR SHIFT RETURN SPRING 24303I0060000 (u. 1)
15	AJP-NEUTRAL SWITCH ROTOR 88002I0060000 (u. 1)
16	AJP-SCREW M6X22 S7060000000000 (u. 1)

17	AJP-WASHER 14MM 24304I0060000 (u. 2)
18	AJP-BOLT M6X25 S303100000000 (u. 1)
19	AJP-STOPPER RING 12MM D200300000000 (u. 1)
20	AJP-STOPPER RING 14 MM D200500000000 (u. 1)
21	AJP-WASHER DIN125 M6 AN0125006000 (u. 1)
22	AJP-SCREW DIN933 M6X25 PF0933006025 (u. 1)
23	AJP-GEAR SELECTOR PR3 00MTS01B0016 (u. 1)


CARBURETTOR

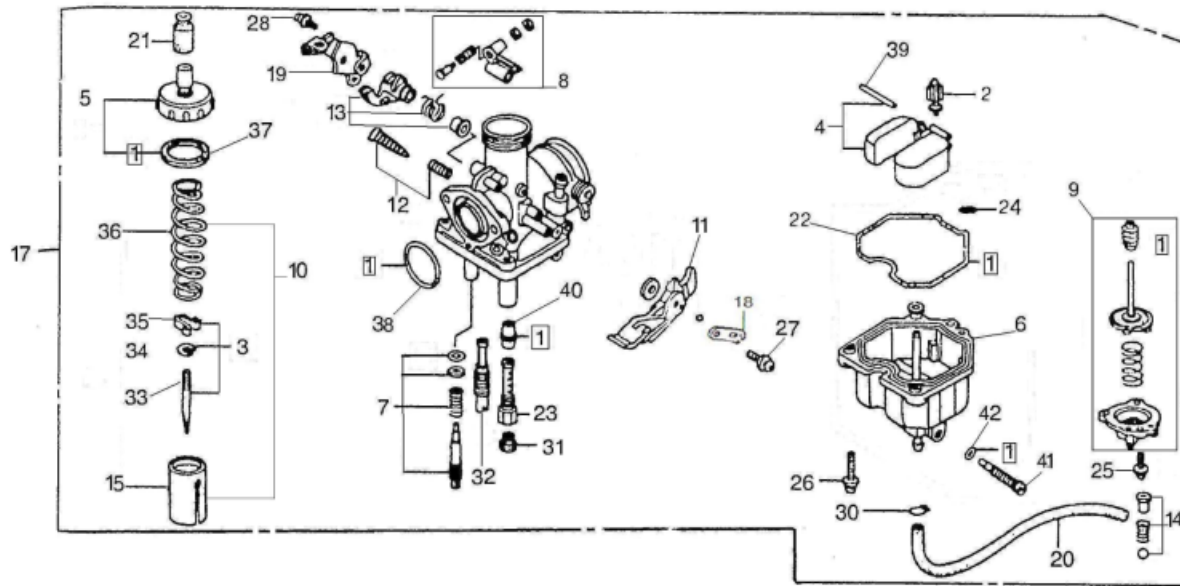

1	AJP-GASKET SET CARBURETOR 17101I0060000 (u. 1)
2	AJP-CONIC VALVE 17102I0060000 (u. 1)
3	AJP-NEEDLE WITH CIR-CLIP 17103I0060000 (u. 1)
4	AJP-FLOAT 17104I0060000 (u. 1)
5	AJP-PISTON CAP 125CC 17105I0060000 (u. 1)
6	AJP-FLOAT CAMARA S/POWER JET 17106I0060100 (u. 1)
	AJP-FLOAT CAMARA 17106I0060000 (u. 1)
7	AJP-ADJUSTING SCREW SET 17107I0060000 (u. 1)
8	AJP-PUMP ARM 17108I0060000 (u. 1)
9	AJP-POWER JET 17109I0060000 (u. 1)
11	AJP-CHOKE CABLE BRACKET 17112I0060000 (u. 1)
12	AJP-ADJUSTING SCREW 17113I0060000 (u. 1)
13	AJP-PUMP ARM 17108I0060000 (u. 1)
14	AJP-CHECK VALVE 17115I0060000 (u. 1)
15	AJP-CARBURETTOR PISTON 17105L0440000 (u. 1)
17	AJP-CARBURETTOR PZ27 17100I0060000 (u. 1)
	AJP-CARBURETTOR 2013 WITHOUT POWER JET 00MTS01A0119 (u. 1)
19	AJP-LINK PLATE. PUMP ARM 17119I0060000 (u. 1)

20	AJP-FUEL TUBE 17121I0060000 (u. 1)
21	AJP-DUST CAP 17122I0060000 (u. 1)
22	AJP-FLOAT CHAMBER GASKET 17123I0060000 (u. 1)
23	AJP-NEEDLE DIFFUSER PZ30 171A2L0440000 (u. 1)
	AJP-NEEDLE DIFFUSER PZ26 17124I0060000 (u. 1)
24	AJP-O-RING 3.5X2 S13052003500 (u. 1)
	AJP-O-RING 4.5X1.6 S13051604500 (u. 1)
25	AJP-SCREW L304200000000 (u. 3)
26	AJP-SCREW M4X16MM L304300000000 (u. 3)
27	AJP-SCREW 5X12 L305200000000 (u. 1)
28	AJP-SCREW 5X14 L309400000000 (u. 1)
30	AJP-CLAMP FOR B86.5 PR3 1712900000000 (u. 1)
31	AJP-MAIN JET 105 00MTS01A0093 (u. 1)
32	AJP-IDLE JET 48 00MTS01A0092 (u. 1)
33	AJP-NEEDLE 17156L0440000 (u. 1)
34	AJP-NEEDLE CIR-CLIP 17106L0440000 (u. 1)
35	AJP-V-CLIP 17104L0440000 (u. 1)
36	AJP-AIR THROTTLE RETURN SPRING 17165L0440000 (u. 1)
37	AJP-TOP CAP GASKET 17147L0440000 (u. 1)
38	AJP-O-RING 30X2.5 91A094390000 (u. 1)
	AJP-O-RING 34X2.5 9010110300000150 (u. 1)
39	AJP-FLOAT PIN 17144L0440000 (u. 1)
40	AJP-MAIN JET 17151L0440000 (u. 1)
41	AJP-DRAIN SCREW 171A5L0440000 (u. 1)
42	AJP-O-RING DRAIN SCREW 4.5X1 9010110045000100 (u. 1)

INTAKE

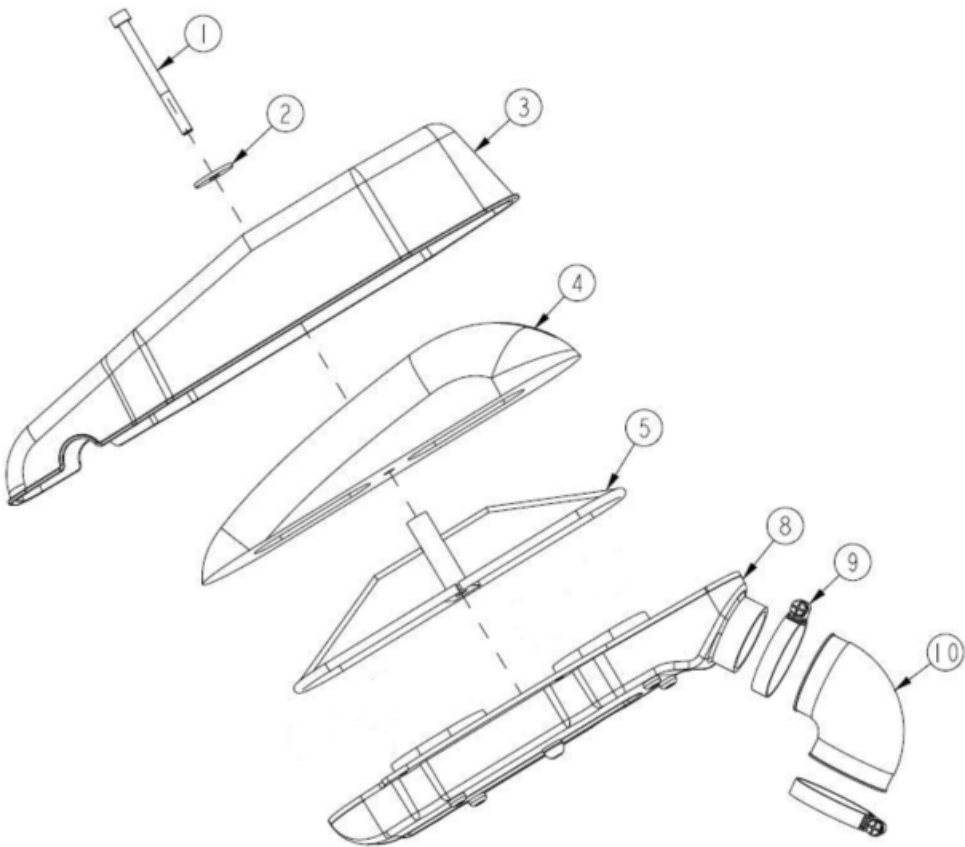

1 AJP-SCREW DIN912 M6X90
PF0912006090 (u. 1)

2 AJP-WASHER DIN9021 M6
AN9021006000 (u. 1)

3 AJP-AIR FILTER CAP
00MTS01A0034 (u. 1)


4 AJP-AIR FILTER PR3/PR4
00MTS01A0004 (u. 1)

5 AJP-AIR FILTER BRACKET
00MTS01A0005 (u. 1)

8 AJP-AIR FILTER BOX
00MTC01A0028 (u. 1)


9 AJP-CLAMP 32-50
00DES01A0018 (u. 2)

10 AJP-INTAKE HOSE
00MTS01A0027 (u. 1)

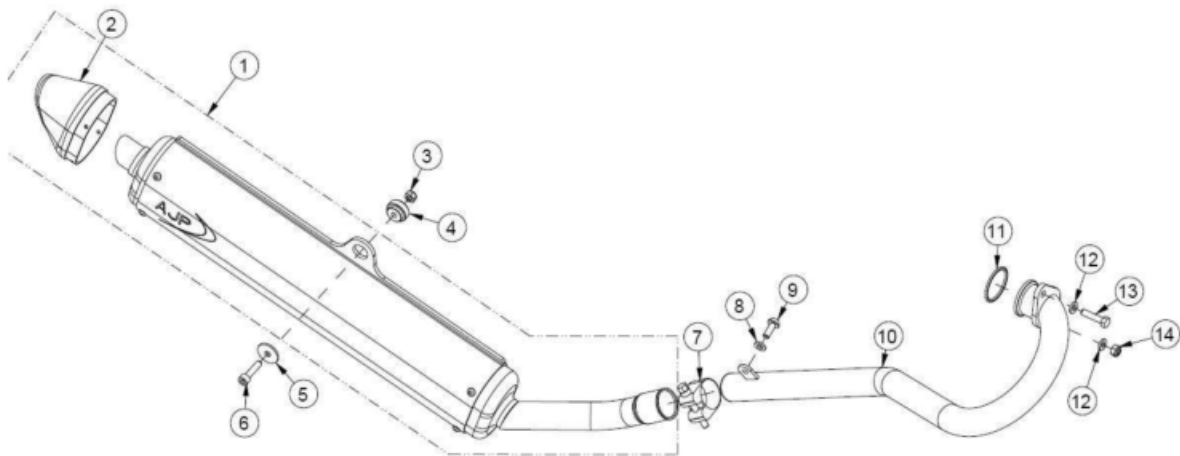MX EXHAUST SYSTEM


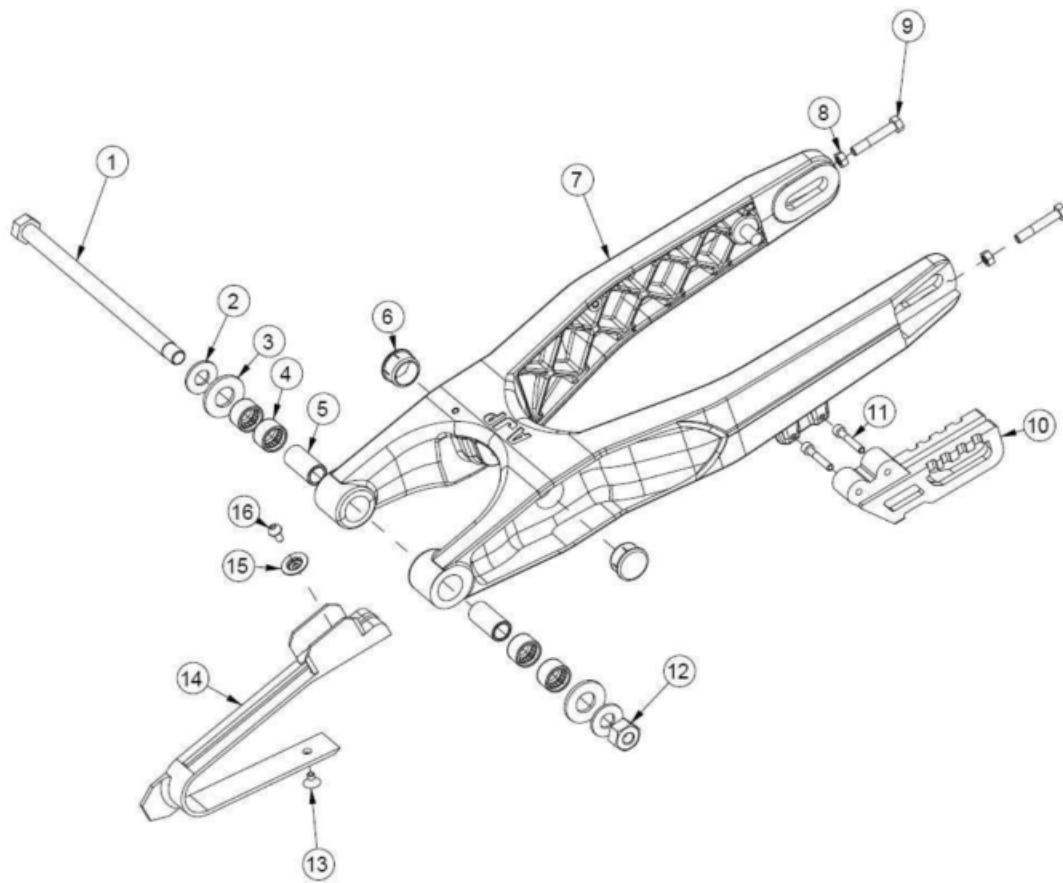
1	AJP-EXHAUST MUFFLER PR4 2012 00MTS01A0095 (u. 1)
2	AJP-EXHAUST MUFFLER END 00MTS01A0010 (u. 1)
3	AJP-NUT DIN985 M6 PC0985006000 (u. 1)
4	AJP-SPACER 22X11X6 00MTS07A0008 (u. 1)
5	AJP-WASHER DIN9021 M6 AN9021006000 (u. 1)
6	AJP-SCREW DIN912 M6X25 PF0912006025 (u. 1)
7	AJP-HOLDER ND30 00MTS01A0024 (u. 1)
8	AJP-WASHER DIN125 M6 AN0125006000 (u. 1)
9	AJP-SCREW DIN933 M6X16 PF0933006016 (u. 1)
10	AJP-EXHAUST PIPE PR3/PR4 2012 00MTS01A0096 (u. 1)
11	AJP-EXHAUST PIPE GASKET 00MTS01A0001 (u. 1)
12	AJP-WASHER DIN127 M6 AN0127006000 (u. 2)
13	AJP-SCREW DIN933 M6X25 PF0933006025 (u. 1)

EXHAUST SYSTEM

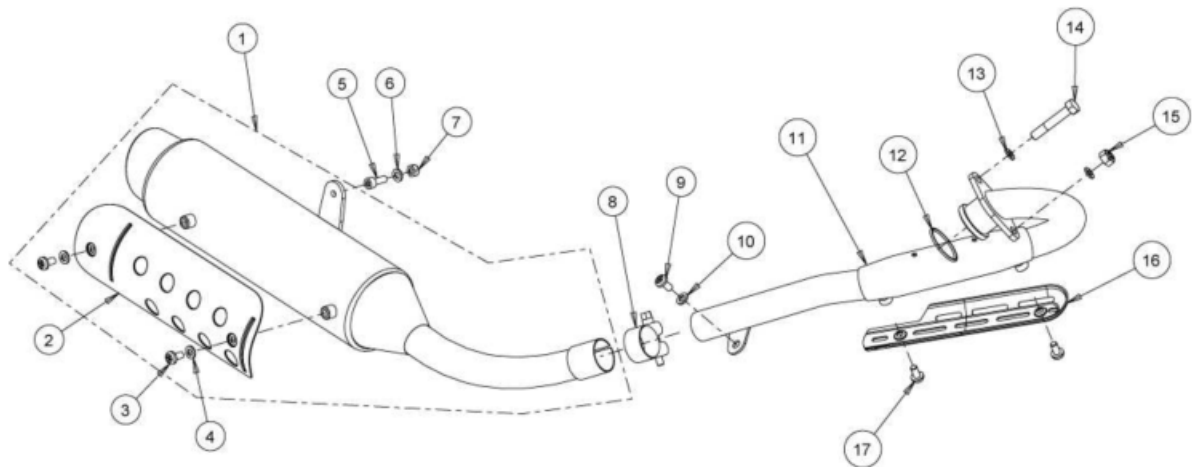

1	AJP-EXHAUST MUFFLER 00MTS04A0030 (u. 1)
2	AJP-EXHAUST MUFFLER PROTECTION 00MTS06A0031 (u. 1)
3	AJP-SCREW DIN7985 M6X12 PF7985006012 (u. 2)
4	AJP-WASHER DIN125 M6 AN0125006000 (u. 2)
5	AJP-SCREW DIN912 M6X25 PF0912006025 (u. 1)
6	AJP-WASHER DIN9021 M6 AN9021006000 (u. 1)
7	AJP-NUT DIN985 M6 PC0985006000 (u. 1)
8	AJP-HOLDER ND30 00MTS01A0024 (u. 1)
9	AJP-SCREW DIN933 M6X16 PF0933006016 (u. 1)
10	AJP-WASHER DIN125 M6 AN0125006000 (u. 1)
11	AJP-EXHAUST PIPE 00MTS06A0033 (u. 1)
12	AJP-EXHAUST PIPE GASKET 00MTS01A0001 (u. 1)
13	AJP-WASHER DIN127 M8 AN0127008000 (u. 2)
14	AJP-SCREW DIN933 M8X25 PF0933008025 (u. 1)
16	AJP-EXHAUST PIPE PROTECTION 00MTS06A0037 (u. 1)
17	AJP-SCREW ISO7380 M6X8 PF0738006008 (u. 2)


REAR SWING ARM



1	AJP-PIVOT SHAFT PR3/PR4 00STS07A0027 (u. 1)
2	AJP-WASHER DIN125 M15 AN0125015000 (u. 2)
3	AJP-WASHER 40X20X3 00STS01A0003 (u. 2)
4	AJP-BEARING HK2016 RS RL00HK2016RS (u. 4)
5	AJP-SPACER 15X20X40 00STS01A0002 (u. 2)
6	AJP-PLUG 00STS01A0004 (u. 2)
7	AJP-SUPPORT FOR CHAIN GUIDE 00STS01A0090 (u. 1) AJP-REAR SWING ARM 00STS02A0026 (u. 1)
8	AJP-NUT DIN934 M8 PC0934008000 (u. 2)
9	AJP-SCREW DIN933 M8X35 PF0933008035 (u. 2)
10	AJP-CHAIN GUIDE 00STS01B0007 (u. 1)
11	AJP-SCREW DIN912 M6X35 PF0912006035 (u. 2)
12	AJP-NUT DIN934 M14 PC0934014000 (u. 1)
13	AJP-SCREW DIN7991 M6X10 PF7991006010 (u. 1)

14	AJP-CHAIN TOUCH DEFENSE BUFFER 00PLS01A0049 (u. 1)
15	AJP-WASHER 00PLS07A0029 (u. 1)
16	AJP-SCREW DIN7380 M6X12 PF7380006012 (u. 1)

FRAME

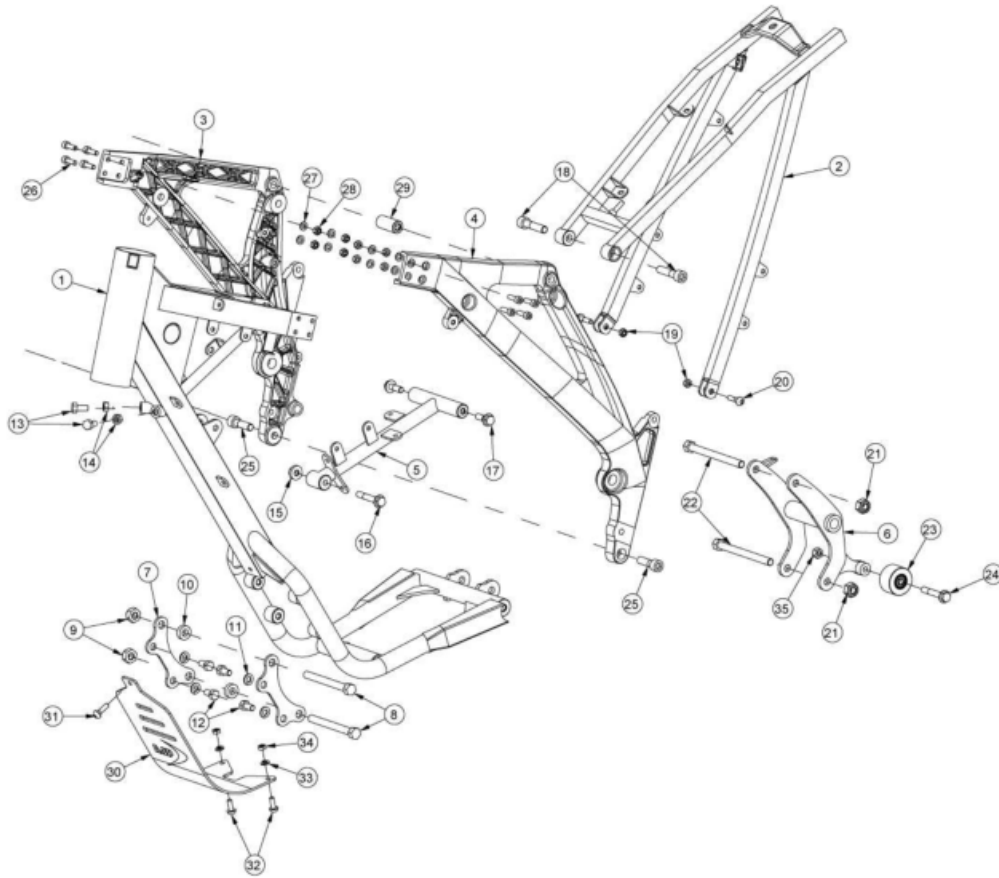

AJP-FRAME PR4EXTREME 2013
00QUS04A0060 (u. 1)

1 AJP-FRAME PR4 RED PRO 2013
00QUS04A0059 (u. 1)

AJP-FRAME PR4 BLACK 2013
00QUS04A0058 (u. 1)

2 AJP-REAR FRAME BLACK PR3/ PR4 2013
00QUS06A0062 (u. 1)

AJP-REAR FRAME RED PRO PR3/PR4 2013
00QUS06A0063 (u. 1)

3 AJP-FRAME BEAM RH
00QUS01A0026 (u. 1)

4 AJP-FRAME BEAM LH
00QUS01A0025 (u. 1)

5 AJP-FRAME REINFORCEMENT PR3/PR4 RED PRO 2013
00QUS04A0062 (u. 1)

AJP-FRAME REINFORCEMENT PR3/PR4 PRETO 2013
00QUS04A0061 (u. 1)

6 AJP-REAR ENGINE MOUNT
00QUS07B0021 (u. 1)

7 AJP-FRONT ENGINE MOUNT
00QUS07A0020 (u. 2)


10 AJP-SPACER 20X6.5X10
00QUS07A0009 (u. 2)

11 AJP-WASHER DIN127 M8
AN0127008000 (u. 4)

12 AJP-SCREW DIN933 M8X16
PF0933008016 (u. 4)

13	AJP-SCREW DIN933 M8X20 PF0933008020 (u. 2)
14	AJP-NUT DIN934 M8 PC0934008000 (u. 2)
15	AJP-NUT DIN6923 M8 PC6923008000 (u. 1)
16	AJP-SCREW DIN6921 M8X50 PF6921008050 (u. 1)
17	AJP-SCREW DIN6921 M8X25 PF6921008025 (u. 2)
18	AJP-SCREW DIN912 M10X45 PF0912010045 (u. 2)
19	AJP-NUT DIN985 M8 PC0985008000 (u. 2)
20	AJP-SCREW DIN7380 M8X25 PF7380008025 (u. 2)
22	AJP-SCREW DIN931 M10X120 PF0931010120 (u. 2)
23	AJP-CHAIN ROLLER (40MM) 00QUS01A0022 (u. 1)
24	AJP-SCREW DIN6921 M8X50 PF6921008050 (u. 1)
25	AJP-SCREW DIN912 M10X35 PF0912010035 (u. 2)
26	AJP-SCREW DIN7380 M6X20 PF7380006020 (u. 8)
27	AJP-WASHER DIN125 M6 AN0125006000 (u. 8)
28	AJP-NUT DIN985 M6 PC0985006000 (u. 8)
29	AJP-SPACER 00QUS07A0029 (u. 1)
30	AJP-FRAME COVER PR3/PR 00QUS03A0036 (u. 1)
31	AJP-SCREW DIN738 M6X20 PF0738006020 (u. 1)
32	AJP-SCREW DIN738 M6X16 PF0738006016 (u. 2)
33	AJP-WASHER DIN125 M6 AN0125006000 (u. 2)
34	AJP-NUT DIN985 M6 PC0985006000 (u. 2)
35	AJP-NUT DIN985 M8 PC0985008000 (u. 1)

SIDE STAND - FOOTPEG

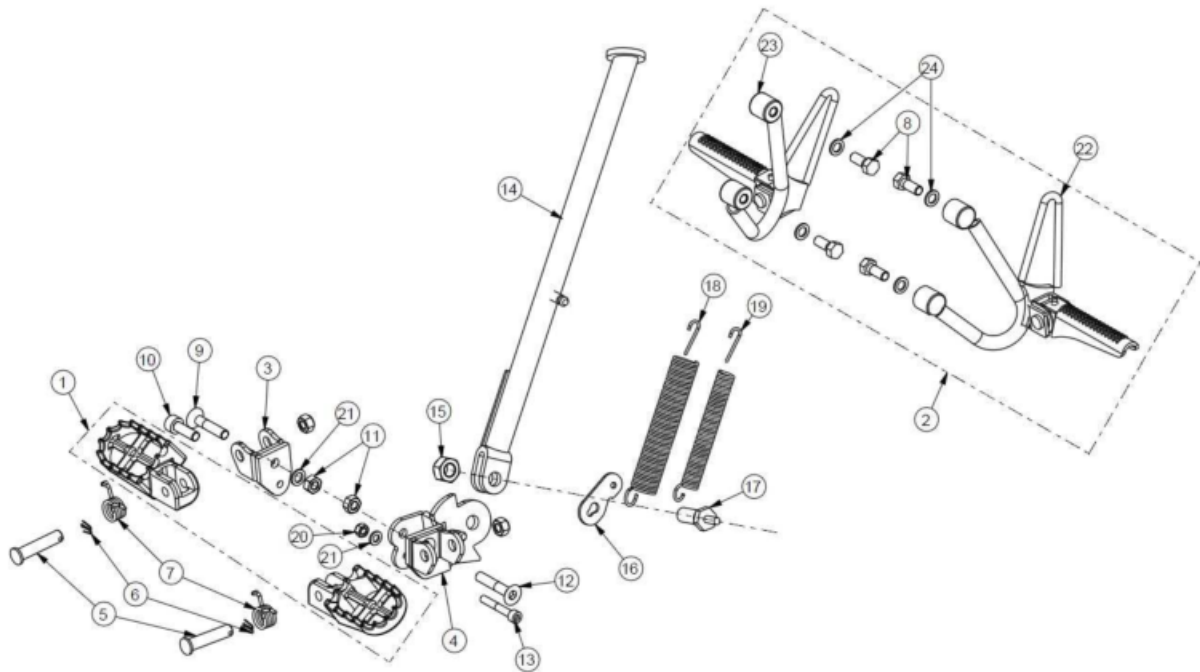

AJP-FRONT FOOTPEG LH/RH IN ALLOY EXTREME
00QUS03A0037 (u. 1)

1

AJP-FRONT FOOTPEG LH/RH IN STEEL
00QUS03A0038 (u. 1)

2

AJP-COMPLETE REAR FOOTPEG ASSEMBLY
00QUC01A0041 (u. 1)

3

AJP-FRONT FOOTPEG HOLDER RH EXTREME PR4
00QUS07A0067 (u. 1)

4

AJP-FRONT FOOTPEG HOLDER LH PR4 EXTREME
00QUS07A0066 (u. 1)

5

AJP-DOWEL FOR FOOTPEG RED EXTREME 2013
00QUS07A0064 (u. 2)

6

AJP-SCREW 2.5X20 DIN 94 FOR FOOTPEG EXTREME
00QUS07A0065 (u. 2)

7

AJP-FRONT FOOTPEG SPRING LH EXTREME PR4/PR5 2013
00QUS07A0061 (u. 2)

8

AJP-SCREW DIN933 M8X16
PF0933008016 (u. 4)

9

AJP-SCREW DIN7991 M8X35
PF7991008035 (u. 1)

10

AJP-SCREW DIN912 M6X25
PF0912006025 (u. 1)

11

AJP-NUT DIN985 M8
PC0985008000 (u. 2)

12

AJP-SCREW DIN7991 M8X40
PF7991008040 (u. 1)

13

AJP-SCREW DIN912 M6X35
PF0912006035 (u. 1)

14

AJP-SIDE STAND EN PR5 AND SM PR4
00QUS04A0012 (u. 1)


AJP-SIDE STAND PR4 EN
00QUS04A0043 (u. 1)

15

AJP-NUT DIN985 M12
PC0985012000 (u. 1)

16	AJP-SPRING HOLDER 00QUS01A0017 (u. 1)
18	AJP-RESSORT BEQUILLE EXT. 00QUS01A0013 (u. 1)
19	AJP-INNER SPRING 00QUS01A0014 (u. 1)
20	AJP-NUT DIN985 M6 PC0985006000 (u. 1)
24	AJP-WASHER DIN125 M8 AN0125008000 (u. 4)

REAR BRAKE PEDAL

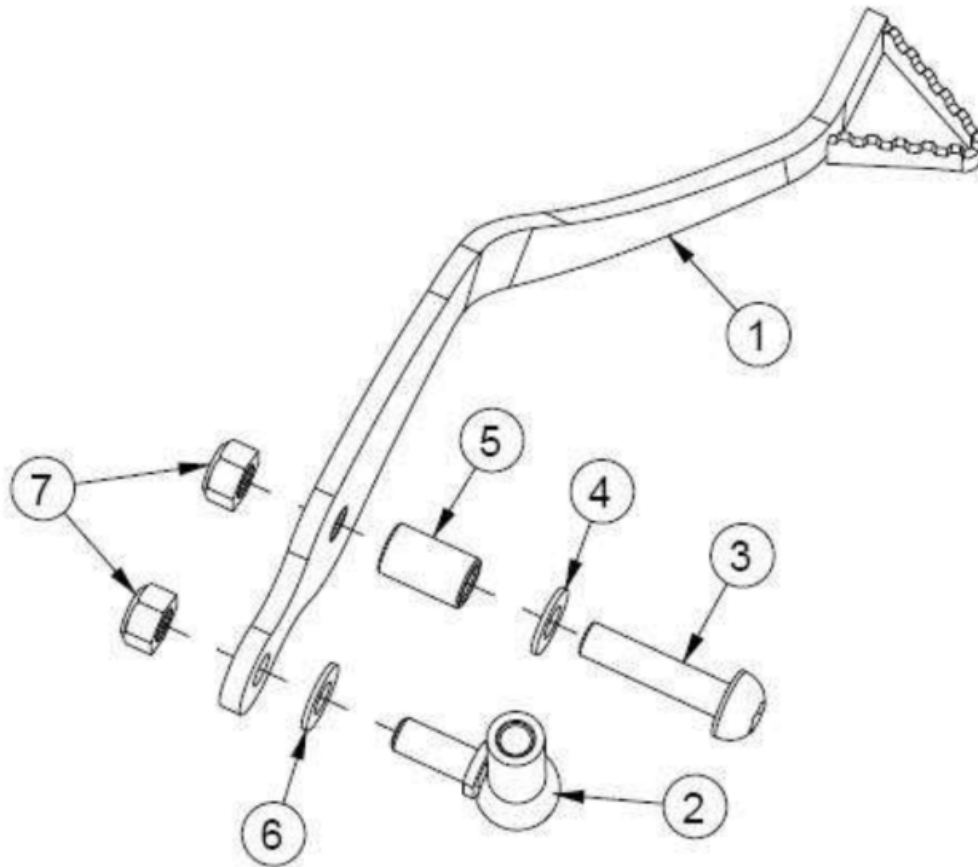

1 AJP-REAR BRAKE PEDAL PR3/PR4
00TRS07A0047 (u. 1)

2 AJP-PUSH ROD
00TRS06A0005 (u. 1)

3 AJP-SCREW DIN7380 M8X35
PF7380008035 (u. 1)


4 AJP-WASHER DIN125 M8
AN0125008000 (u. 1)

5 AJP-SPACE
00TRS07A0048 (u. 1)

6 AJP-PUSH ROD WASHER
00TRS07A0049 (u. 1)

7 AJP-NUT DIN985 M8
PC0985008000 (u. 2)


FUEL TANK

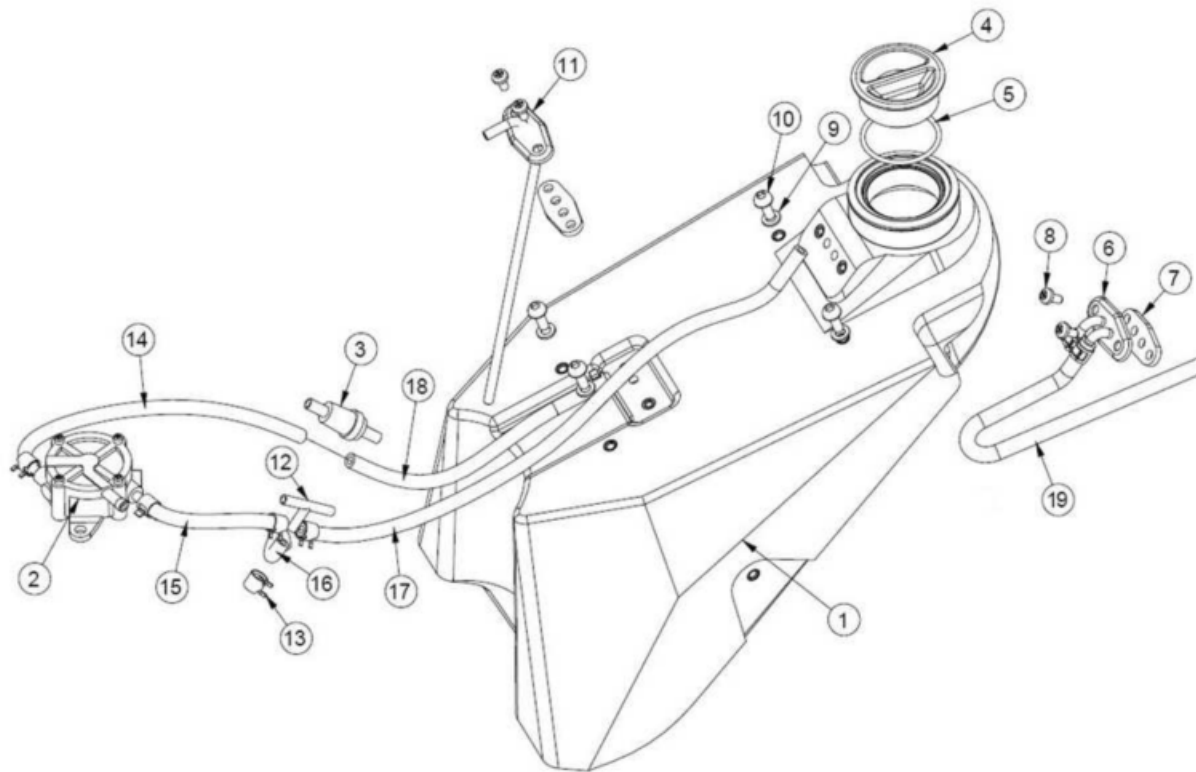

1	AJP-FUEL TANK 00DES01A0023 (u. 1)
2	AJP-FUEL PUMP PR3/PR4 00DES01A0006 (u. 1)
3	AJP-FUEL FILTER 00DES01A0007 (u. 1)
4	AJP-FUEL CAP 00DES02A0039 (u. 1)
5	AJP-GAS CAP O-RING 00DES01A0028 (u. 1)
6	AJP-BREATHER 00DES07A0025 (u. 1)
7	AJP-BREATHER GASKET 00DES01A0026 (u. 2)
8	AJP-SCREW DIN7985 M5X12 PF7985005012 (u. 4)
9	AJP-WASHER DIN125 M6 AN0125006000 (u. 4)
10	AJP-SCREW DIN7380 M6X12 PF7380006012 (u. 4)
11	AJP-FUEL FISHING TUBE UNTIL MAY 2015 00DES07A0024 (u. 1)
12	AJP-CONNECTOR 00DES01A0008 (u. 1)
13	AJP-BREATHER FILTER CLAMP 10MM 00DES01A0019 (u. 3)
14	AJP-FUEL TUBE 5X9X200 00DES01A0032 (u. 1)
15	AJP-FUEL TUBE 5X9X110 00DES01A0033 (u. 1)

16	AJP-FUEL TUBE 5X9X120 00DES01A0035 (u. 1)
17	AJP-FUEL TUBE 5X9X440 00DES01A0034 (u. 1)
18	AJP-FUEL TUBE 5X9X250 00DES01A0031 (u. 1)
19	AJP-FUEL TUBE 5X9X300 00DES01A0036 (u. 1)


FRONT SUSPENSION

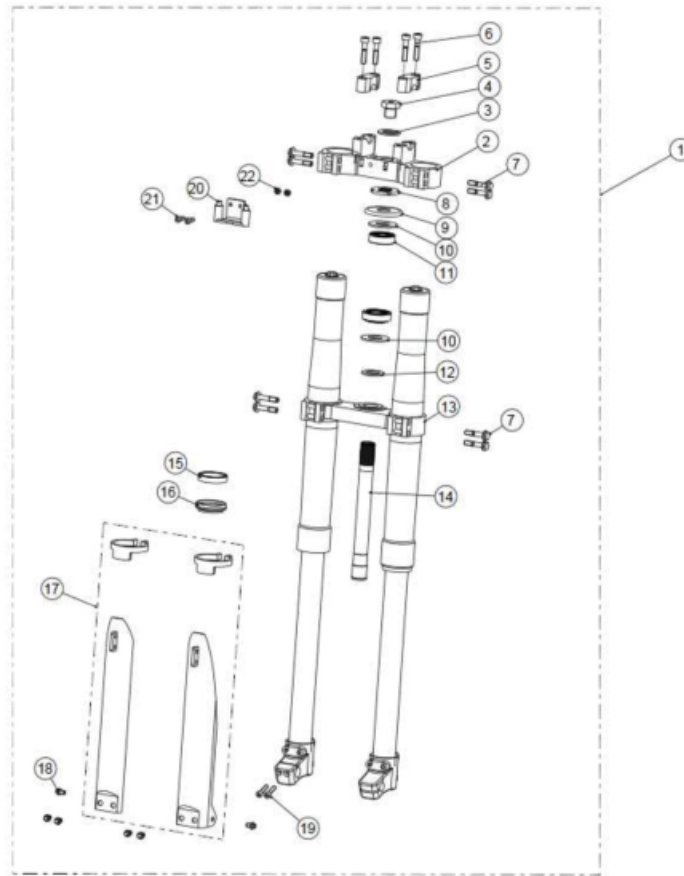

1	AJP-FRONT FORK ASSEMBLY 40MM 00SFC01A0075 (u. 1)
5	AJP-HANDLEBAR HOLDER 00SFS01A0073 (u. 1)
6	AJP-SCREW DIN912 M8X30 PF0912008030 (u. 4)
7	AJP-SCREW DIN6921 M8X40 PF6921008040 (u. 8)
8	AJP-STEERING NUT 00SFS01A0007 (u. 1)
9	AJP-SEAL COVER 00SFS01A0072 (u. 1)
10	AJP-SEAL 00SFS01A0071 (u. 2)
11	AJP-BEARING 30205C RL000032005C (u. 2)
12	AJP-WASHER DIN988 25X35X1.5 AN9880253515 (u. 1)
13	AJP-UPPER/LOWER STEER SEAL 00SFS01A0065 (u. 1)
14	AJP-STEERING STEM MARZOCCHI PR4 2012 00SFS01A0095 (u. 1)
15	AJP-DUST SEAL 00SFS01A0084 (u. 2)
16	AJP-OIL SEAL 00SFS01A0085 (u. 2)
17	AJP-FORK PROTECTOR SET MARZOCCHI 00SFS01A0076 (u. 1)

18	AJP-SCREW DIN6921 M6X25 PF6921005010 (u. 6)
19	AJP-SCREW DIN912 M6X25 PF0912006025 (u. 4)
20	AJP-SUPPORT SPEEDOMETER 2012 00COS01A0041 (u. 1)
21	AJP-SCREW DIN738 M6X16 PF0738006016 (u. 2)
22	AJP-NUT M6 S40010600001 (u. 2)

FRONT WHEEL

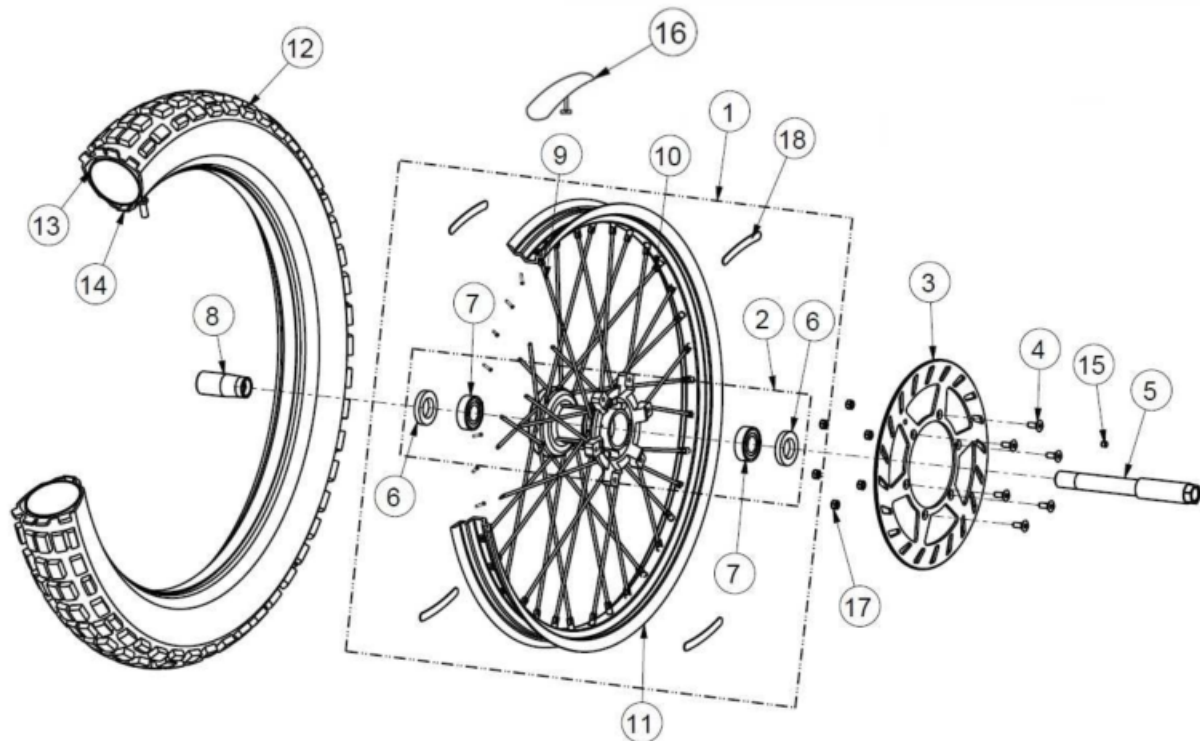

AJP-FRONT WHEEL SM PR3/PR4/PR5 2.50X17 2012
 00RFC01A0060 (u. 1)

1

AJP-FRONT WHEEL BLACK RIM 1.60X21 PR4/PR5 2012
 00RFC01A0009 (u. 1)

2

AJP-HUB FOR PR4/PR5 2012
 00RFS01A0075 (u. 1)

3

AJP-FRONT BRAKE DISC 260MM PR4/PR5 2012
 00RFS01A0067 (u. 1)

4

AJP-SCREW DIN7991 M6X20
 PF7991006020 (u. 6)

5

AJP-FRONT AXLE PR4 2012
 00RFS07A0019 (u. 1)

6

AJP-DUST SEAL 25X42X7
 00RFS01A0057 (u. 2)

7

AJP-BEARING 6004-2RS
 RL00060042RS (u. 2)

8

AJP-SPACER FRONT WHEEL RH PR4 2012
 00RFS01A0073 (u. 1)
 AJP-SPACER FRONT WHEEL LH PR4 2012
 00RFS01A0072 (u. 1)

9

AJP-SPOKE SM PR4/PR5 2013 192X3.8
 00RFS01A0077 (u. 36)

10

AJP-SPOKE NUT 3.8MM 2012
 00RTS01A0031 (u. 36)

11


AJP-RIM EN BLACK 1.60"X21" 2012 PR4/PR5
 00RFS01A0068 (u. 1)
 AJP-RIM BLACK SM 2.50-17 36T 2012
 00RFS01A0021 (u. 1)

12

AJP-TIRE MICHELIN EN 90/90-21"
 00RFS01A0002 (u. 1)
 AJP-TIRE MICHELIN SM 100/80-17"
 00RFS01A0003 (u. 1)

13	AJP-INNER TUBE SM 00RFS01A0006 (u. 1)
	AJP-INNER TUBE EN 00RFS01A0005 (u. 1)
14	AJP-WHEEL RIM TAPE 21" 00RFS01A0023 (u. 1)
	AJP-WHEEL RIM TAPE 1.35/1.85X17" 00RFS01A0046 (u. 1)
15	AJP-FRONT DISC MAGNET 00RFS01A0042 (u. 1)
17	AJP-NUT M6 S40010600001 (u. 6)
18	AJP-STICKER RIM END 00BAS01A0083 (u. 4)


FRONT BRAKE

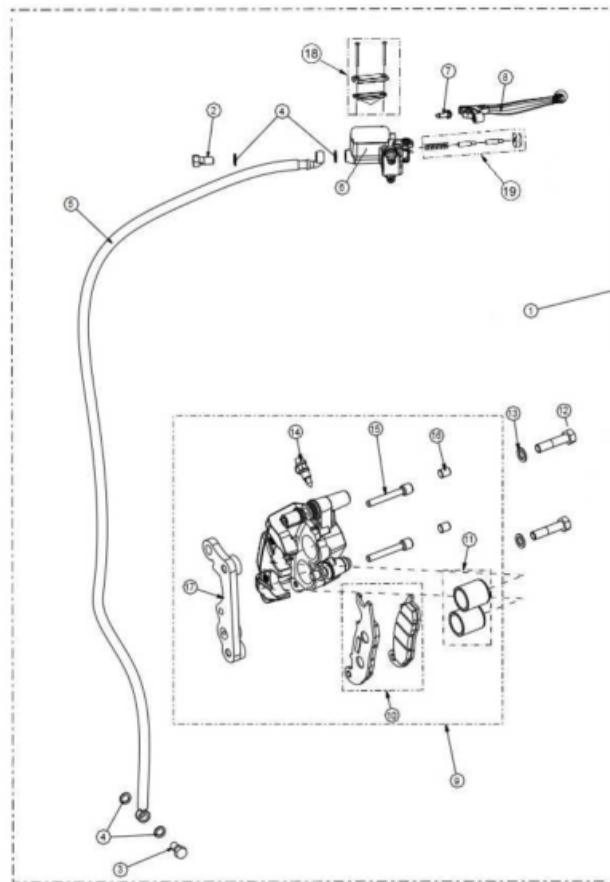

1	AJP-FRONT BRAKE ASSEMBLY COMPLETE PR5 2012 00TRC01A0097 (u. 1)
2	AJP-SCREW 1.25 PR3/PR4/PR5 00TRS01A0049 (u. 1)
3	AJP-SCREW M10X1 PR3/PR4/PR5 2012 00TRS01A0025 (u. 1)
4	AJP-WASHER 00TRS01A0103 (u. 4)
5	AJP-FRONT BRAKE HOSE PR4 2012 00TRS01A0021 (u. 1)
6	AJP-FRONT MASTER CYLINDER ASSEMBLY PR4/PR5 2012 00TRS01A0098 (u. 1)
7	AJP-STOP VALVE 00TRS01A0055 (u. 1)
8	AJP-BRAKE LEVER PR4/PR5 2012 00TRS01D0001 (u. 1)
9	AJP-FRONT CALIPER ASSEMBLY PR3/PR4/PR5 2012 00TRC01A0007 (u. 1)
10	AJP-FRONT PAD SET PR3/PR4/PR5 OUT. 2011 TO AUGUST 2014 00TRS01A0046 (u. 1)
11	AJP-FRONT PISTON SET PR3/PR4/PR5 2012 00TRS01A0069 (u. 1)
12	AJP-SCREW DIN933 M8X35 PF0933008035 (u. 2)
13	AJP-WASHER DIN127 M8 AN0127008000 (u. 2)
14	AJP-BLEEDER SCREW 00TRS01A0060 (u. 1)

15	AJP-FRONT PAD FIXATION SCREW PR3/PR4/PR5 2012 00TRS01A0064 (u. 2)
16	AJP-TAP FOR FRONT CALIPER 2012 00TRS01A0059 (u. 2)
17	AJP-SUPPORT OF FRONT CALIPER PR5 2010-2013 00TRS01A0077 (u. 1)
	AJP-FRONT MASTER CYLINDER BRACKET FORK MARZOCCHI 00TRS01A0097 (u. 1)
18	AJP-DIAPHRAGM SET PR4/PR5 BRAKING 2012 00TRS01A0104 (u. 1)


SUSPENSION LINKS

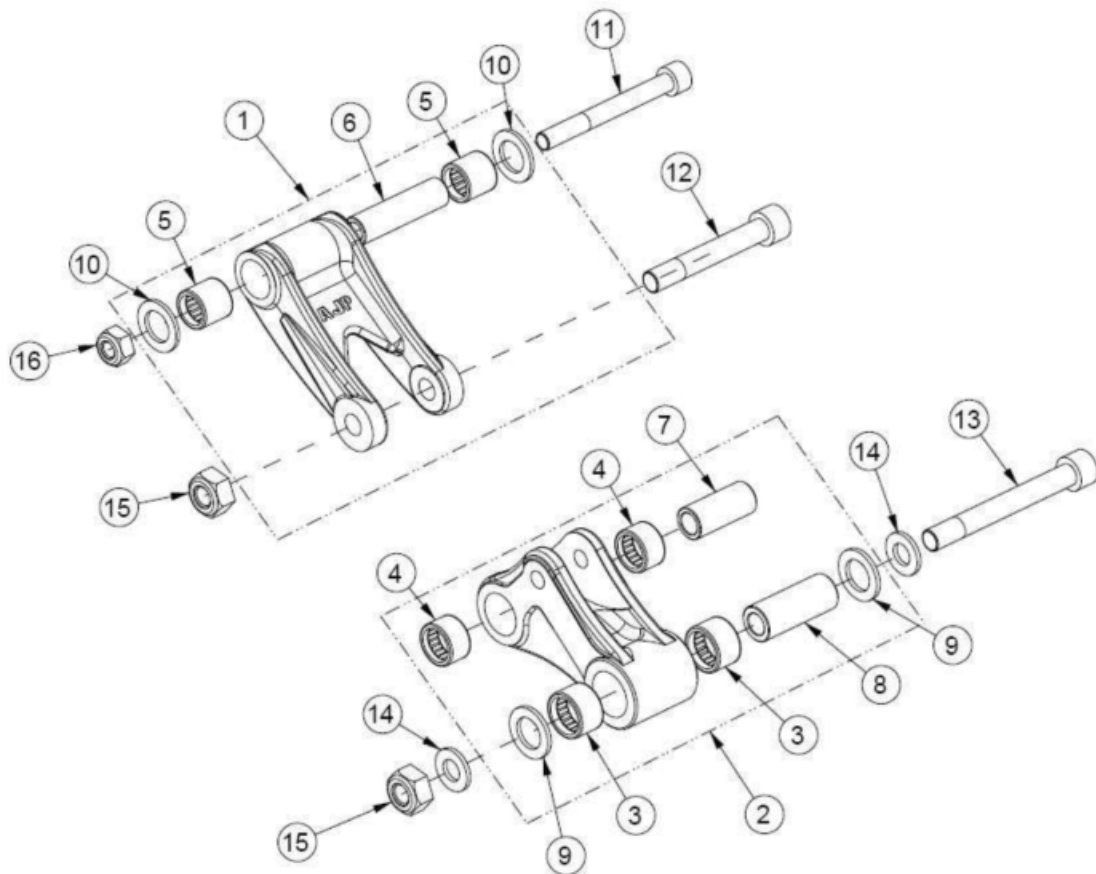

1	AJP-FRAME LINK ASSEMBLY 00STC07A0004 (u. 1)
2	AJP-REAR ARM LINK ASSEMBLY 00STC07A0005 (u. 1)
3	AJP-BEARING HK2016 RS RL00HK2016RS (u. 2)
4	AJP-BEARING HK1814 RS RL00HK1814RS (u. 2)
5	AJP-BEARING HK1620 RS RL00HK1620RS (u. 2)
6	AJP-SPACER 10X16X65 00STS07A0025 (u. 1)
7	AJP-SPACER 12X18X41 00STS07A0022 (u. 1)
8	AJP-SPACER 12X20X50 00STS07A0021 (u. 1)
9	AJP-WASHER 30X16X2 00STS01B0020 (u. 2)
11	AJP-SCREW DIN912 M10X90 PF0912010090 (u. 1)
12	AJP-SCREW DIN912 M12X80 PF0912012080 (u. 1)
13	AJP-SCREW DIN912 M12X105 PF0912012105 (u. 1)
14	AJP-WASHER DIN125 M12 AN0125012000 (u. 2)
15	AJP-NUT DIN985 M12 PC0985012000 (u. 2)


16	AJP-NUT DIN982 M10 PC0982010000 (u. 1)
----	---

SHOCK ABSORBER

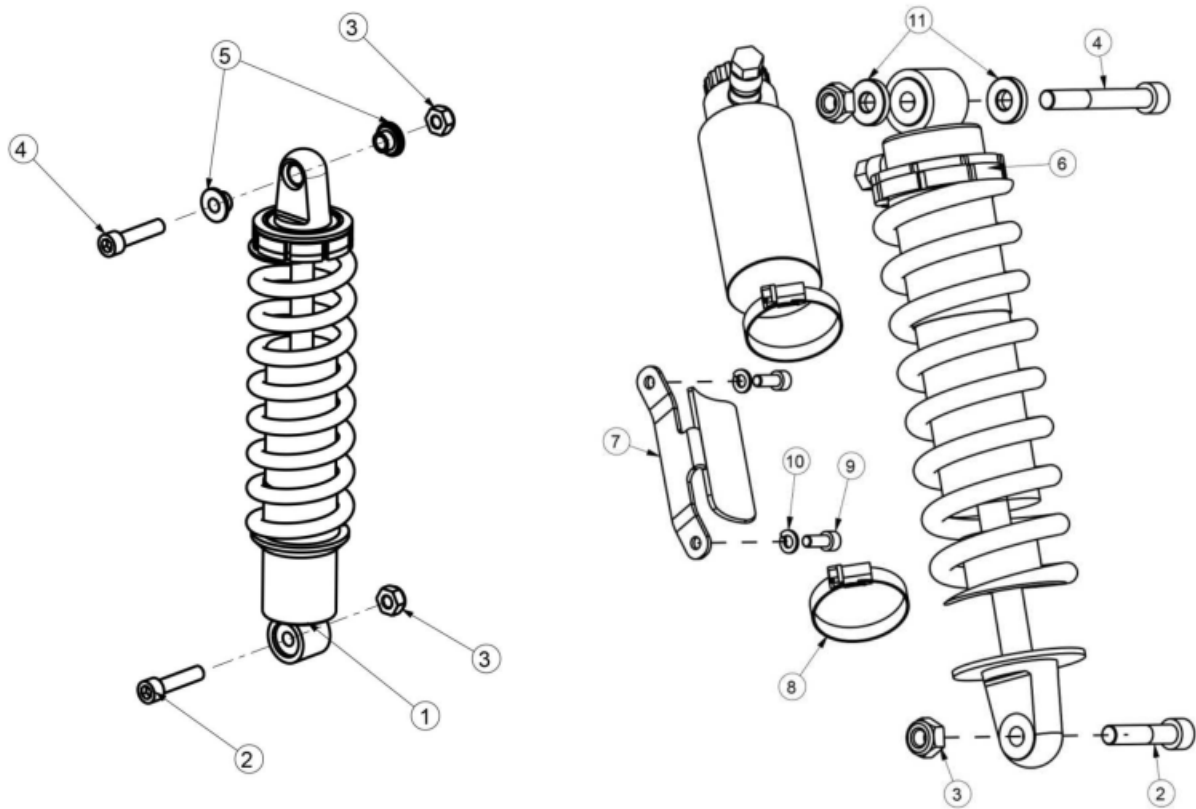

1	AJP-REAR SHOCK ABSORBER PR4 SACHS 00STC01A0072 (u. 1)
2	AJP-SCREW DIN912 M10X50 PF0912010050 (u. 1)
3	AJP-NUT DIN982 M10 PC0982010000 (u. 2)
4	AJP-SCREW DIN912 M10X80 PF0912010080 (u. 1)
5	AJP-SPACER 8X22X10 00STS07A0087 (u. 2)
6	AJP-REAR SHOCK ABSORBER PR4 PRO SACHS 00STC01A0073 (u. 1)
7	AJP-RESERVOIR BRACKET 00QUS07A0035 (u. 1)
8	AJP-RESERVOIR CLAMP 00STS01A0036 (u. 2)
9	AJP-SCREW DIN933 M6X16 PF0933006016 (u. 2)
10	AJP-WASHER DIN125 M6 AN0125006000 (u. 2)
11	AJP-SPACER 5X10X24 00STS07A0030 (u. 2)

REAR WHEEL

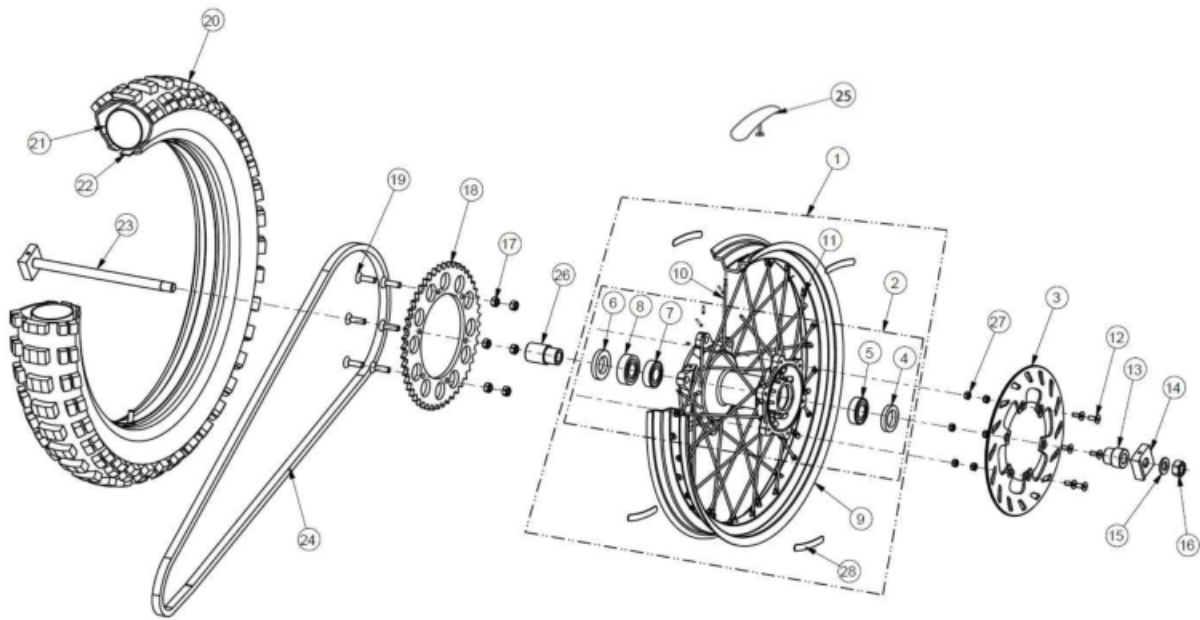

AJP-REAR WHEEL SM PR3/PR4/PR5
00RTC01A0076 (u. 1)

1

AJP-REAR WHEEL RIM BLACK 2.15X18 PR4/PR5 2012
00RTC01A0010 (u. 1)

2

AJP-REAR HUB PR5 2012
00RTS01A0100 (u. 1)

3

AJP-REAR BRAKE DISC 220MM PR4/PR5 2012
00RTS01A0097 (u. 1)

4

AJP-DUST SEAL 47X7X30
00RTS01A0022 (u. 2)

5

AJP-BEARING 6005 2RS
RL00060052RS (u. 1)

AJP-BEARING 6204 2RS
RL00062042RS (u. 1)

6

AJP-DUST SEAL 28X42X7
00RTS01A0024 (u. 1)

AJP-DUST SEAL 47X7X30
00RTS01A0022 (u. 1)

7

AJP-BEARING 6005 2RS
RL00060052RS (u. 1)

8

AJP-BEARING 6005 2RS
RL00060052RS (u. 1)

9

AJP-WHEEL RIM BLACK EN 2.15X18 PR4/PR5 2012
00RTS01A0075 (u. 1)

AJP-RIM BLACK SM 3.50-17 36T PR4/PR5 2012
00RTS01A0026 (u. 1)

AJP-WHEEL RIM BLACK EN 2.15X18 EXTREME
00RTS01A0074 (u. 1)

10

AJP-SPOKE EN LH 207X3.8 2011-2013
00RTS01A0112 (u. 18)

AJP-SPOKE REAR SM PR4/PR5 2012 189X3.8
00RTS01A0104 (u. 18)

11


AJP-SPROCKET Z46
00RTS01A0077 (u. 18)

12

AJP-SCREW DIN7991 M6X16
PF7991006016 (u. 6)

13	AJP-SPACER REAR WHEEL RH 2012 PR4/PR5 (2015) 00RTS07A0076 (u. 1)
14	AJP-CHAIN ADJUSTER RH 00RTS02A0042 (u. 1)
15	AJP-WASHER DIN125A M14 AN125A014000 (u. 1)
16	AJP-NUT DIN934 M14 PC0934014000 (u. 1)
17	AJP-NUT DIN985 M8 PC0985008000 (u. 6)
18	AJP-SPROCKET Z48 PR4 2012 00RTS01A0017 (u. 1)
	AJP-SPROCKET Z50 PR4 2012 00RTS01A0096 (u. 1)
19	AJP-SCREW DIN7380 M8X25 PF7380008025 (u. 6)
20	AJP-TYRE MICHELIN 120/90-18 00RTS01A0002 (u. 1)
	AJP-TYRE MICHELIN 130/70-17" 00RTS01A0003 (u. 1)
	AJP-TIRE MICHELIN 120/80-18 T63 00RTS01A0001 (u. 1)
21	AJP-INNER TUBE TR 120/90-18 00RTS01A0005 (u. 1)
	AJP-INNER TUBE SM 17" 00RTS01A0006 (u. 1)
22	AJP-WHEEL RIM TAPE 1.60/2.00X 18/19 00RTS01A0025 (u. 1)
	AJP-WHEEL RIM TAPE 2.15/3.00-17" 00RTS01A0060 (u. 1)
23	AJP-REAR SHAFT 00RTS07A0040 (u. 1)
24	AJP-CHAIN RK 482-132 00MTS01A0019 (u. 1)
25	AJP-RIM LOCK 2.15 00RTS01A0052 (u. 1)
27	AJP-NUT M6 S40010600001 (u. 6)
28	AJP-STICKER RIM END 00BAS01A0083 (u. 4)


REAR BRAKE

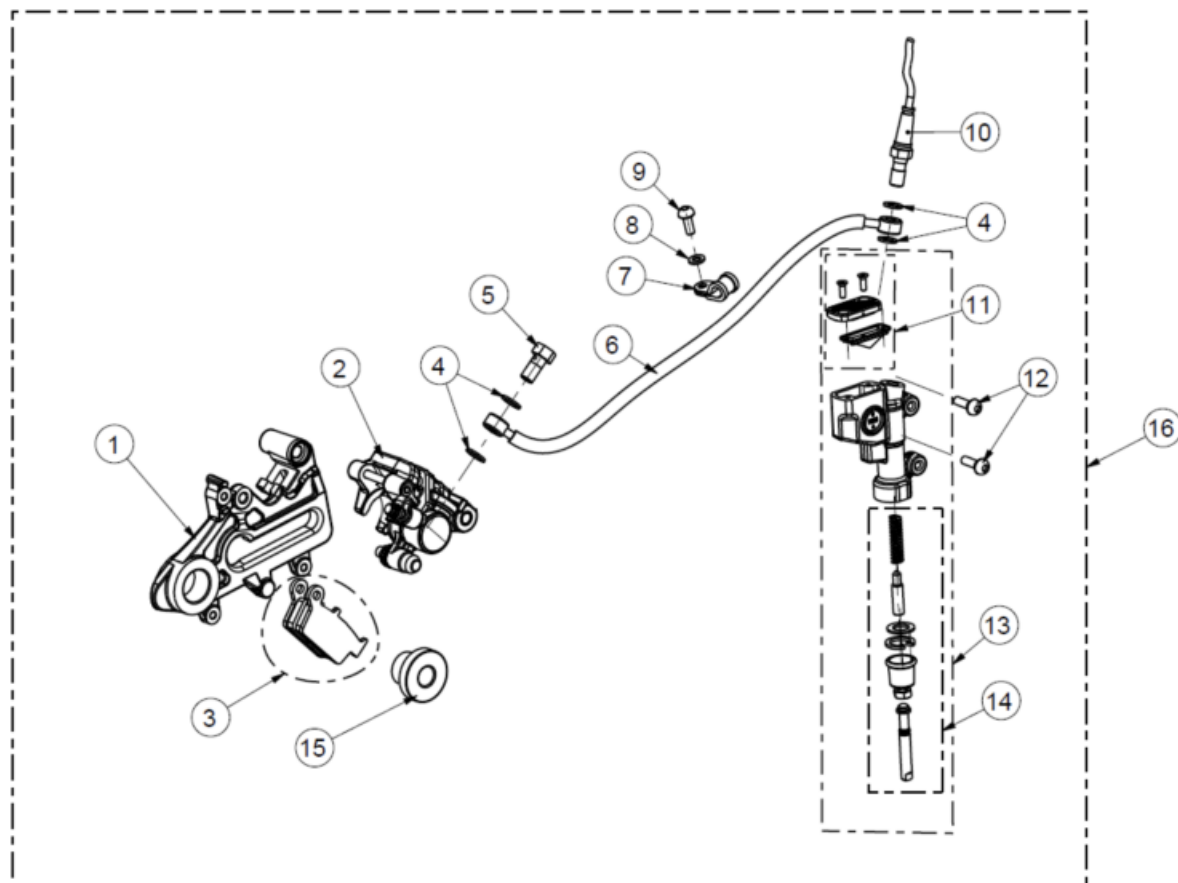

1	AJP-SUPPORT OF REAR CALIPER PR4 2012 BRAKING 00TRS01A0031 (u. 1)
2	AJP-REAR CALIPER ASSEMBLY PR4/PR5 2012 00TRC01A0099 (u. 1)
3	AJP-REAR PAD SET PR4/PR5 2012 00TRS01A0100 (u. 1)
4	AJP-WASHER 00TRS01A0103 (u. 4)
5	AJP-SCREW 1.25 PR3/PR4/PR5 00TRS01A0049 (u. 1)
6	AJP-REAR BRAKE HOSE PR4 2012 00TRS01A0022 (u. 1)
7	AJP-HOLDER 00TRS01A0037 (u. 1)
8	AJP-WASHER DIN125A M6 AN125A006000 (u. 1)
9	AJP-SCREW DIN7380 M6X12 PF7380006012 (u. 1)
10	AJP-STOP VALVE 00TRS01A0039 (u. 1)
11	AJP-DIAPHRAGM SET REAR PR3/PR4 E PR5 2012 00TRS01A0102 (u. 1)
12	AJP-SCREW DIN7380 M6X20 PF7380006020 (u. 2)
13	AJP-REAR MASTER CYLINDER PR3/PR4/PR5 00TRS01A0095 (u. 1)
14	AJP-PISTON&CUP SET PR3/PR4/PR5 SINCE 04/10/2011 - 2014 00TRS01A0101 (u. 1)


15	AJP-SPACER SUPPORT OF REAR CALIPER PR4 2012/2013 00TRS07A0080 (u. 1)
16	AJP-REAR BRAKE CALIPER COMPLETE 00TRC01A0098 (u. 1)

FRAME COVER

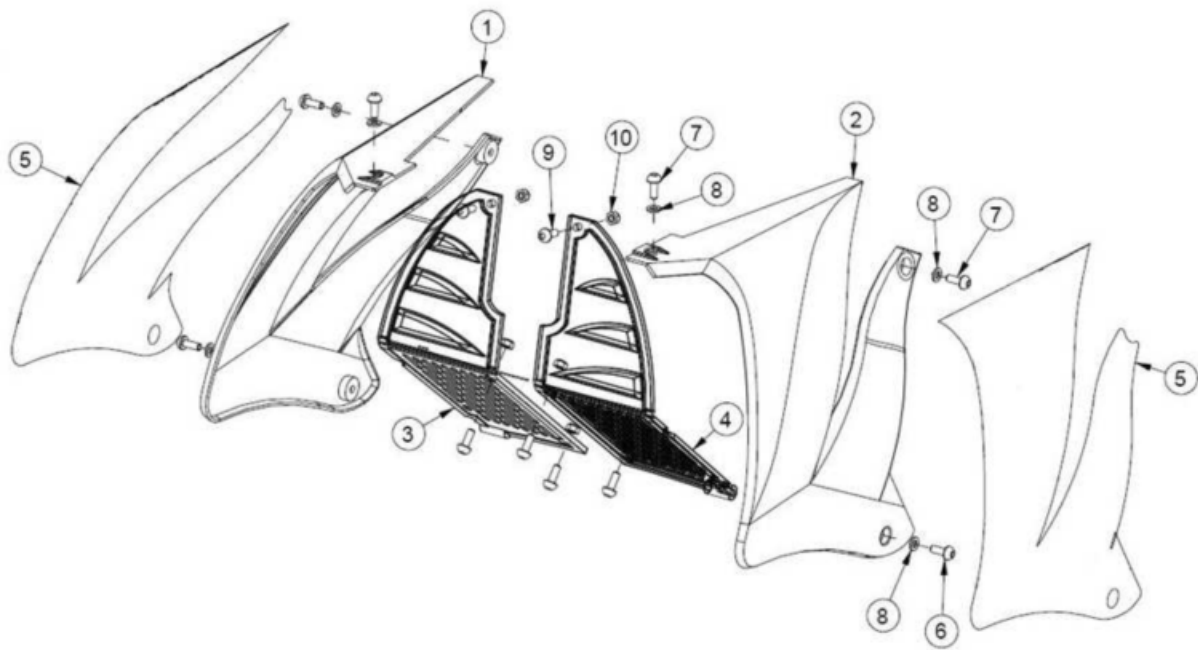


1	AJP-RADIATOR COVER RH WHITE 00PLS01A0067 (u. 1)
2	AJP-RADIATOR COVER LH WHITE 00PLS01A0068 (u. 1)
3	AJP-FRONT FRAME COVER RH. 00PLS01A0055 (u. 1)
4	AJP-FRONT FRAME COVER RH. 00PLS01A0055 (u. 1)
5	AJP-KIT FRONT COVER STICKER LH/RH PR3/PR4 125/200/240 2013 00BAS01A0110 (u. 1)
6	AJP-SCREW DIN7380 M6X20 PF7380006020 (u. 2)
7	AJP-SCREW DIN7380 M6X16 PF7380006016 (u. 4)
8	AJP-WASHER DIN125 M6 AN0125006000 (u. 6)
9	AJP-SCREW DIN7380 M6X16 PF7380006016 (u. 6)
10	AJP-NUT DIN985 M6 PC0985006000 (u. 6)

FRONT PLASTICS

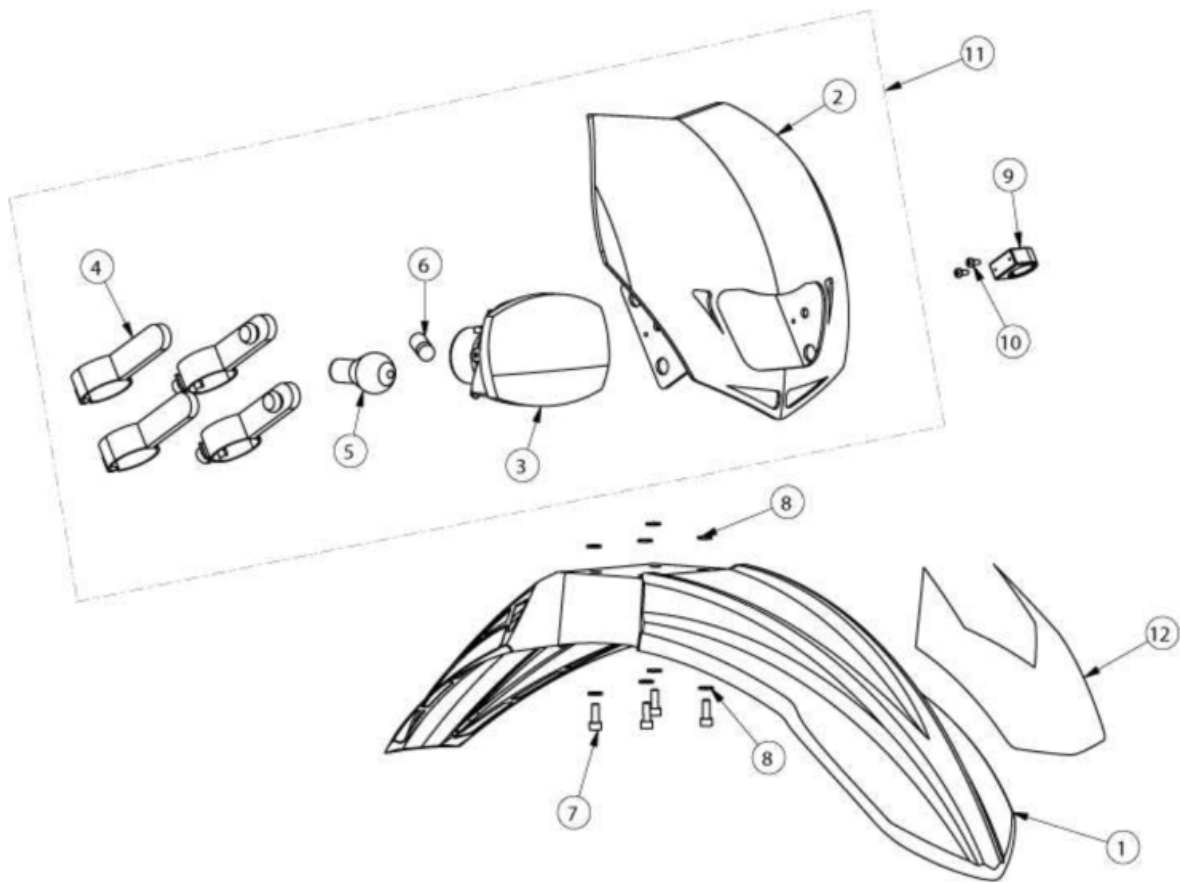

1	AJP-FRONT FENDER EN WHITE PR4 00PLS01A0070 (u. 1)
	AJP-FRONT FENDER SM WHITE 00PLS01A0072 (u. 1)
2	AJP-HEADLAMP COVER 00PLS01A0061 (u. 1)
3	AJP-HEADLAMP 00ELC01A0028 (u. 1)
4	AJP-BAND 00PLS01A0007 (u. 4)
5	AJP-FRONT FENDER BLUE SM/SM 00PLS01A0005 (u. 1)
7	AJP-SCREW DIN912 M6X20 PF0912006020 (u. 4)
8	AJP-WASHER DIN9021 M6 AN9021006000 (u. 8)
9	AJP-HOLDER 00PLS01A0042 (u. 1)
10	AJP-SCREW 3.5 PF7981003513 (u. 2)
11	AJP-HEADLAMP COVER ASSEMBLY WHITE 00PLC01A0071 (u. 1)
	AJP-HEAD LAMP STICKER PR4 2013 00BAS01A0117 (u. 1)
12	AJP-FRONT FENDER STICKER PR4 2013 EXTREME 00BAS01A0129 (u. 1)
	AJP-FRONT FENDER STICKER PR4 2013 00BAS01A0111 (u. 1)

REAR FENDER

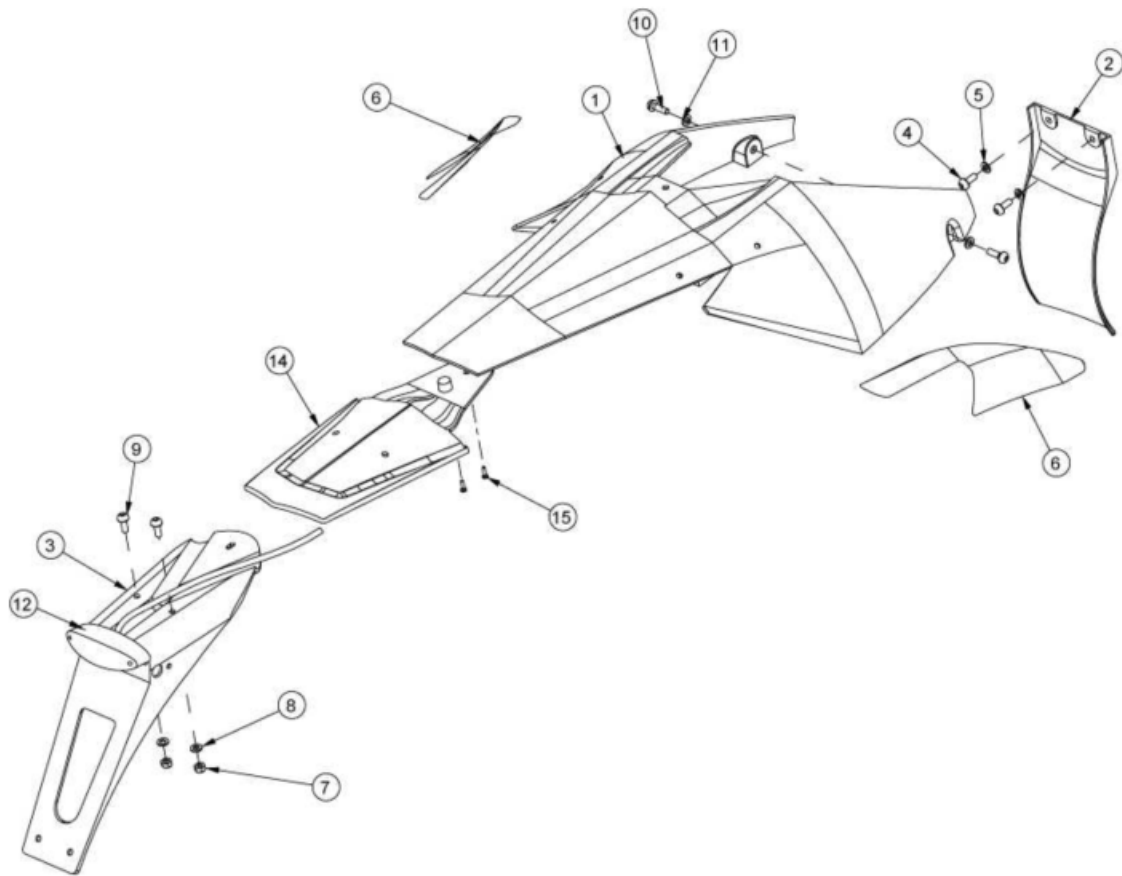

1 AJP-REAR FENDER WHITE
00PLS01A0074 (u. 1)

2 AJP-MUD GARD
00PLS01A0013 (u. 1)

3 AJP-REAR FENDER SPOILER
00PLC01A0006 (u. 1)

4 AJP-SCREW DIN7380 M6X12
PF7380006012 (u. 2)

5 AJP-WASHER DIN125 M6
AN0125006000 (u. 2)

6 AJP-KIT REAR COVER STICKER LH/RH PR3/PR4 200 2012
00BAS01A0100 (u. 1)

AJP-KIT REAR COVER STICKER LH/RH PR3/PR4 240 2013
00BAS01A0115 (u. 1)

AJP-KIT REAR COVER STICKER LH/RH PR3/PR4 125 2012
00BAS01A0104 (u. 1)

7 AJP-NUT DIN985 M6
PC0985006000 (u. 2)

8 AJP-WASHER DIN125 M6
AN0125006000 (u. 2)


9 AJP-SCREW DIN7380 M6X20
PF7380006020 (u. 2)

10 AJP-SCREW DIN7380 M6X16
PF7380006016 (u. 2)

11 AJP-WASHER DIN9021 M6
AN9021006000 (u. 2)

12 AJP-REAR LED SPOILER
00PLS01A0065 (u. 1)


14	AJP-REAR FENDER SUPPLEMENT 00PLS01A0063 (u. 1)
15	AJP-SCREW FOR REAR FENDER PR3/PR4 4.8X16 PF6928004816 (u. 2)

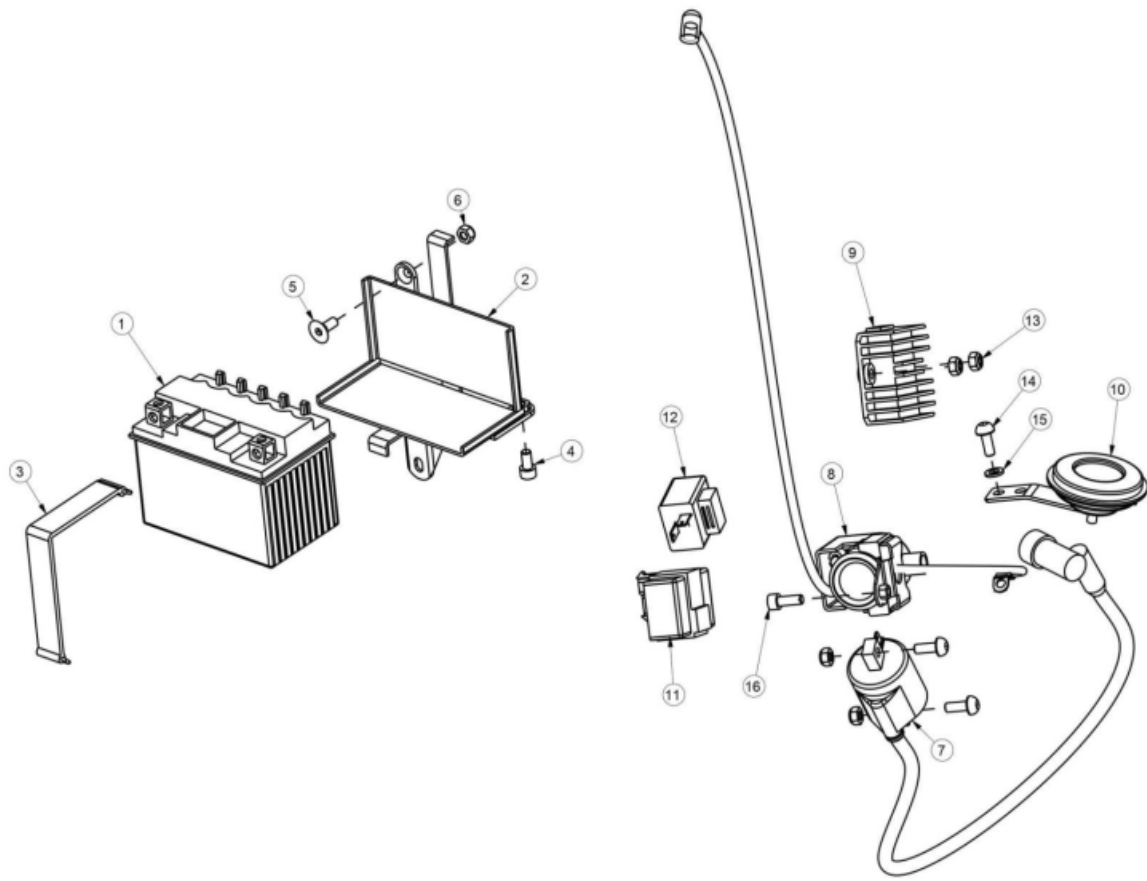BATTERY – ELECTRIC SYSTEM


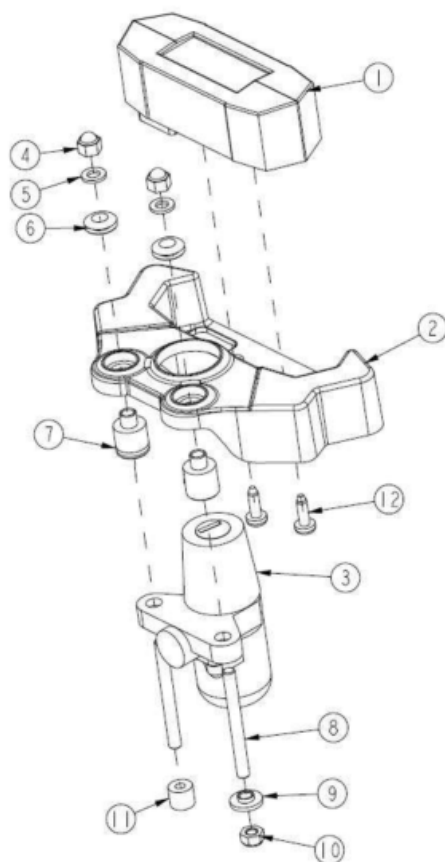
1	AJP-BATTERY YTX5LBS 00ELS01B0001 (u. 1)
2	AJP-BATTERY HOLDER 00ELS04A0003 (u. 1)
3	AJP-BAND 00ELS01A0004 (u. 1)
4	AJP-SCREW DIN912 M6X16 PF0912006016 (u. 1)
5	AJP-SCREW DIN7991 M6X16 PF7991006016 (u. 1)
6	AJP-NUT DIN985 M6 PC0985006000 (u. 1)
7	AJP-IGNITION COIL ASSEMBLY 91A231400000 (u. 1)
8	AJP-STARTER RELAY 93A283100000 (u. 1)
9	AJP-RECTIFIER 94A213100000 (u. 1)
10	AJP-HORN 12V CC 00ELS01A0005 (u. 1)
11	AJP-CDI 93A231000000 (u. 1)
12	AJP-TURN LIGHTS RELAY 00ELS01A0006 (u. 1)
13	AJP-NUT DIN985 M6 PC0985006000 (u. 4)
14	AJP-SCREW DIN7380 M6X16 PF7380006016 (u. 2)

15	AJP-WASHER DIN125 M6 AN0125006000 (u. 1)
----	---

WIRE HARNESS

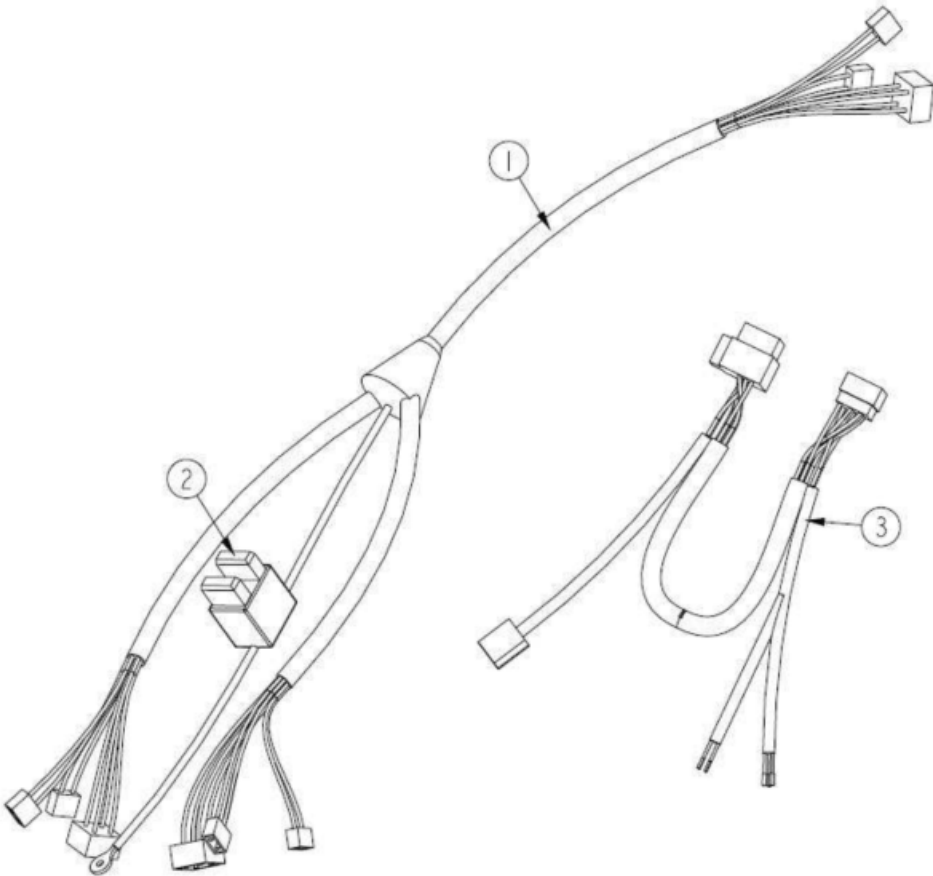


1	AJP-WIRING HARNESS PR3 00ELC01A0038 (u. 1)
2	AJP-FUSE 00ELS01A0017 (u. 1)
3	AJP-SPEEDOMETER WIRING 00ELS01A0037 (u. 1)

COCKPIT


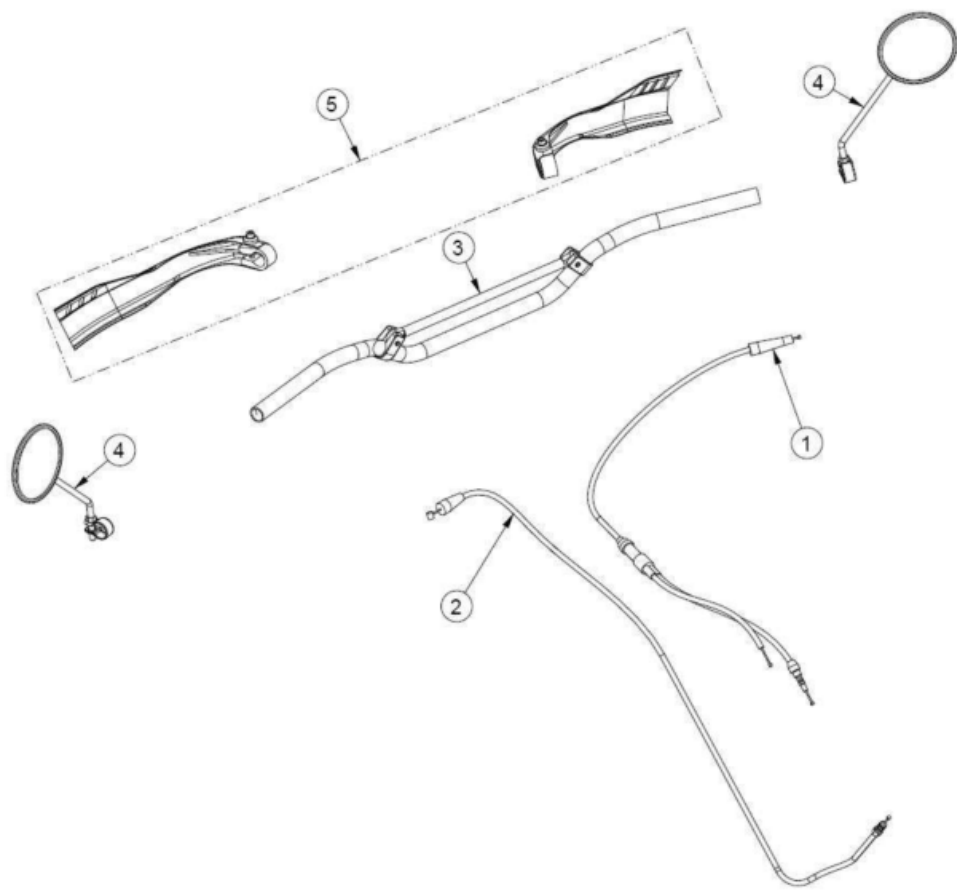
1	AJP-SPEEDOMETER 00ELS01A0036 (u. 1)
2	AJP-SPEEDOMETER COVER 00ELS01A0035 (u. 1)
3	AJP-IGNITION SWITCH ASSEMBLY 00COS01A0018 (u. 1)
4	AJP-NUT DIN1587 M6 PC1587006000 (u. 2)
5	AJP-WASHER DIN125 M6 AN0125006000 (u. 2)
6	AJP-CUSHION 00COS01A0016 (u. 2)
7	AJP-SPACER 00COS07A0030 (u. 2)
8	AJP-STUD M6X60 00COS01A0022 (u. 2)
9	AJP-SPACER 16X4.4X6 00COS07A0015 (u. 2)
10	AJP-NUT DIN985 M6 PC0985006000 (u. 1)
11	AJP-NUT M6 FUSE 00COS01A0023 (u. 1)

CONTROLS

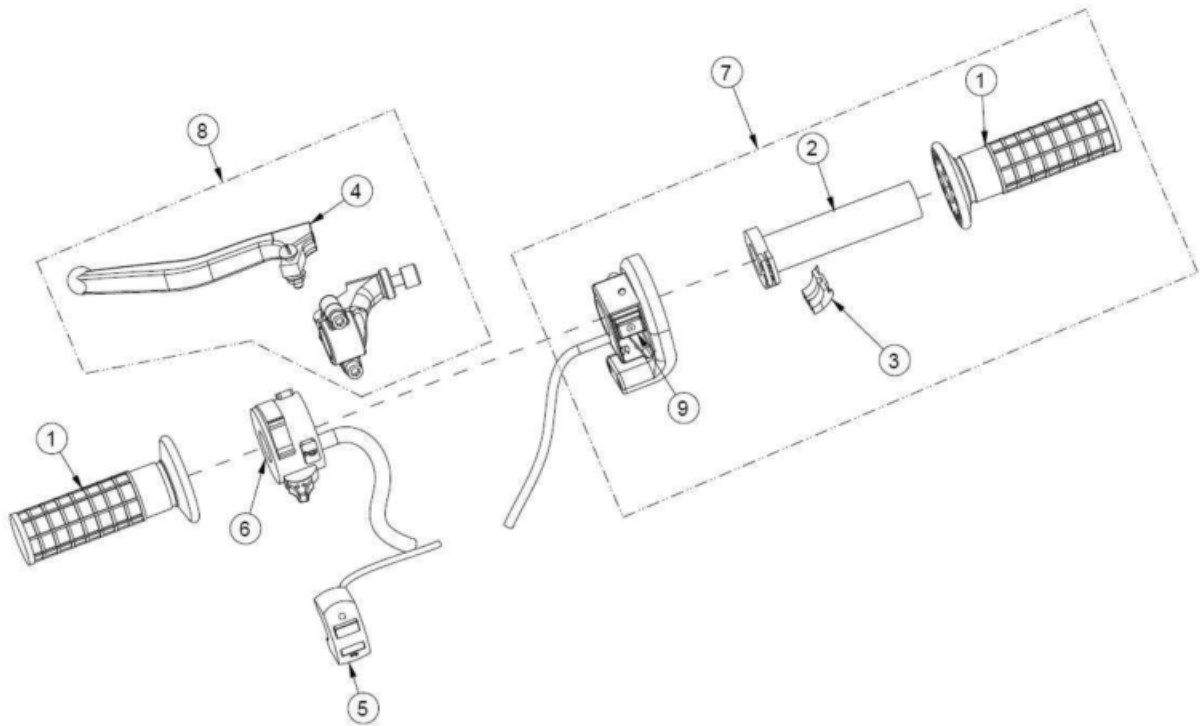


1	AJP-SET OF GRIPS 00COC01A0003 (u. 1)
2	AJP-THROTTLE TUBE 00COS01A0003 (u. 1)
3	AJP-GUIDE THROTTLE CABLE 00COS01A0004 (u. 1)
4	AJP-CLUTCH LEVER 00COS01A0002 (u. 1) AJP-CLUTCH LEVER 2013 (OCTOBER) 00COS01A0043 (u. 1)
5	AJP-ON/OFF SWITCH 00ELS01A0023 (u. 1)
6	AJP-COMMODO GAUCHE 00ELC01A0003 (u. 1)
7	AJP-THROTTLE CONTROL ASSEMBLY 00COC01A0002 (u. 1)
8	AJP-CLUTCH LEVER ASSEMBLY 2013 00COC01A0044 (u. 1) AJP-CLUTCH LEVER ASSEMBLY 00COC01A0001 (u. 1)
9	AJP-STARTING BUTTON 00COS01A0029 (u. 1)

HANDLEBAR



- | | |
|---|---|
| 1 | AJP-THROTTLE CABLE PR3/PR4
00COS01B0005 (u. 1) |
| 3 | AJP-HANDLEBAR PR3/PR4 REIKON
00COS01A0001 (u. 1) |
| 4 | AJP-REAR VIEW MIRROR
00COS01A0021 (u. 2) |
| 5 | AJP-HAND GARDS WHITE
00PLS01A0073 (u. 1) |

SEAT

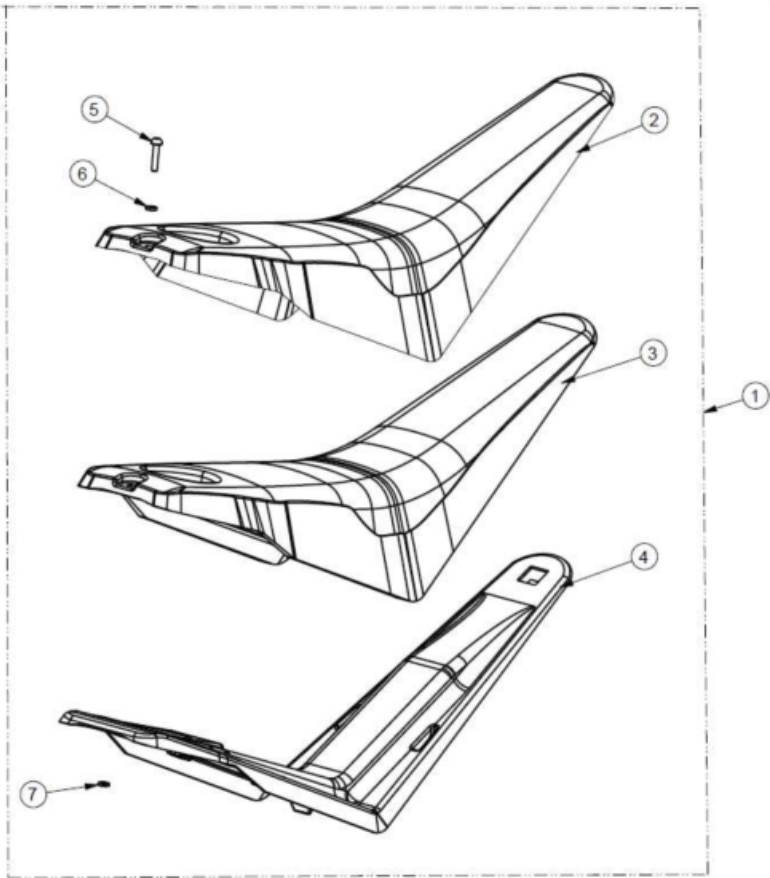

1	AJP-SEAT ASSEMBLY 00BAC01A0025 (u. 1)
2	AJP-SEAT COVER 00BAS01A0094 (u. 1)
3	AJP-FOAM SADDLE 00BAS01A0003 (u. 1)
4	AJP-SEAT BASE 00BAS01A0004 (u. 1)
5	AJP-SCREW DIN912 M6X30 PF0912006030 (u. 1)
6	AJP-WASHER DIN9021 M6 AN9021006000 (u. 1)
7	AJP-INNER WASHER 00BAS01A0028 (u. 1)