



PR4 240 E Extrem 2020


Exploded




CYLINDER HEAD ASSY




VALVE MECHANISM

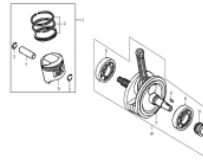


CRANKSHAFT - PISTON

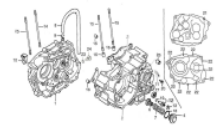


CRANKCASES

 


GEARBOX

 


KICKSTARTER SHAFT

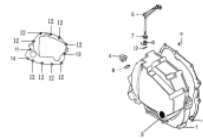


RIGHT CRANKCASE COVER

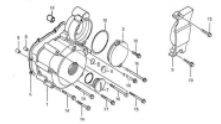


LEFT CRANKCASE COVER

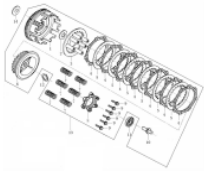


CLUTCH

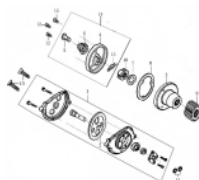

OIL PUMP

 


MAGNETO

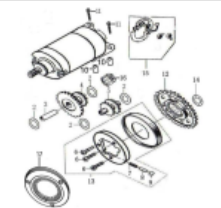


ELECTRIC STARTER



 
GEARSHIFT SHAFT



CARBURETTOR

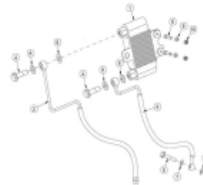


OIL RADIATOR

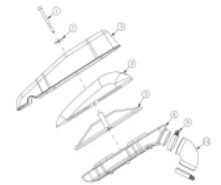


INTAKE



 
MX EXHAUST SYSTEM



EXHAUST SYSTEM

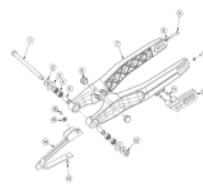


REAR SWING ARM

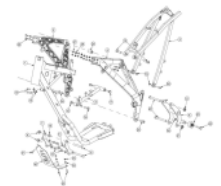

FRAME




SIDE STAND - FOOTPEG

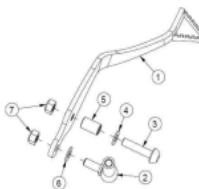


REAR BRAKE PEDAL



FUEL TANK

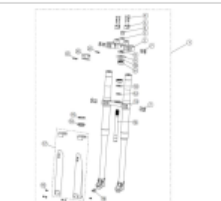


FRONT SUSPENSION

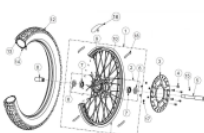


FRONT WHEEL




FRONT BRAKE

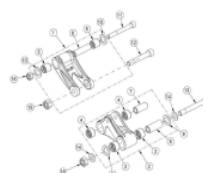


SUSPENSION LINKS

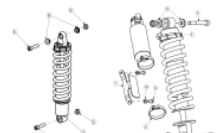


SHOCK ABSORBER

 


REAR WHEEL

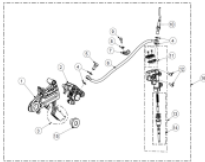


REAR BRAKE

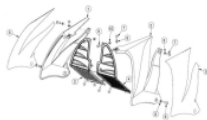


FRAME COVER

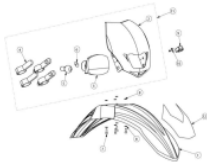


FRONT PLASTICS

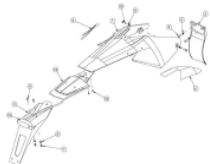

REAR FENDER

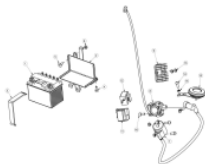

BATTERY – ELECTRIC SYSTEM

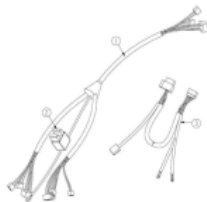


WIRE HARNESS



COCKPIT




TURN SIGNALS

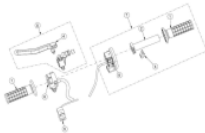

CONTROLS




HANDLEBAR

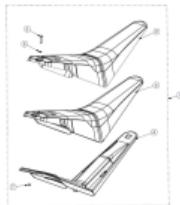

SEAT


CYLINDER HEAD ASSY

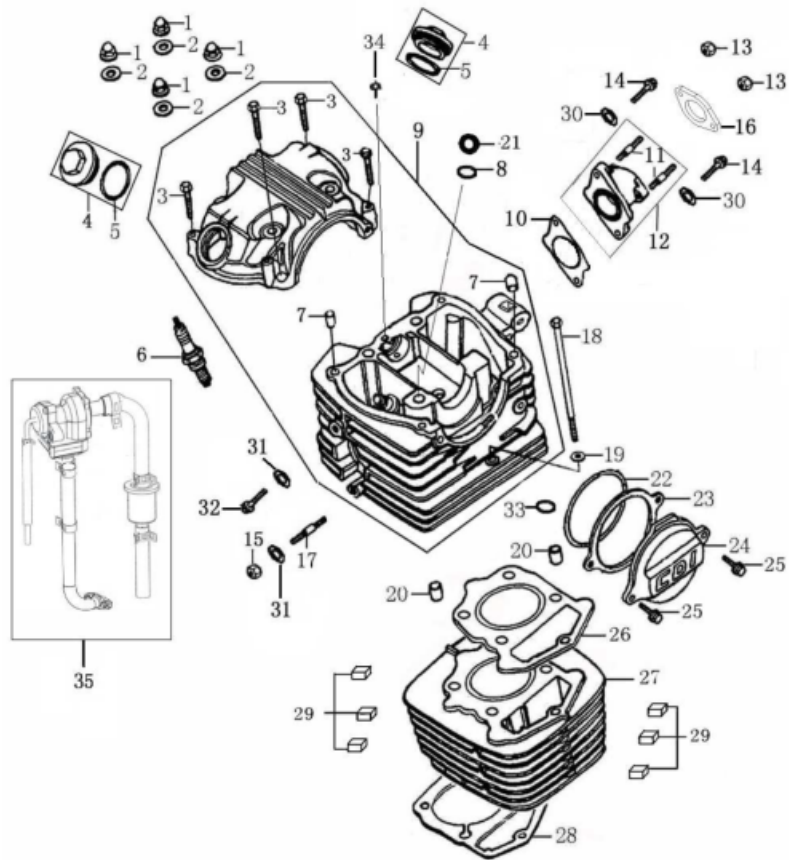

[illegible]

8	AJP-WASHER (8X14X2.5) 200/240 00MTS01A0154 (u. 1)
	AJP-RUBBER SEAL WASHER 90102L0440000 (u. 1)
9	AJP-CYLINDER HEAD 200 1122BLA010000 (u. 1)
10	AJP-200 INTAKE MANIFOLD GASKET 00MTS01A0021 (u. 1)
11	AJP-BOLT M6X26 125/200/240 91127L0440000 (u. 2)
12	AJP-CARBURETTOR INSULATOR 00MTS01A0098 (u. 1)
13	AJP-NUT DIN985 M6 PC0985006000 (u. 2)
14	AJP-SCREW DIN912 M6X20 PF0912006020 (u. 2)
15	AJP-NUT DIN980 M6 PC0980006000 (u. 1)
17	AJP-STUD BOLT M6X35MM 91138I0080000 (u. 1)
18	AJP-SCREW 240(M6X119) 91165IA2000000X (u. 1)
19	AJP-SEAL WASHER 6.5X12.8X2MM 91307I0060000 (u. 1)
20	AJP-DOWEL PIN 10X20 91506I0080000 (u. 2)
21	AJP-WASHER (8.5X15.5X2.3) 200/240 00MTS01A0155 (u. 1)
22	AJP-O.-RING 75X2.65MM 90109I0060000 (u. 1)
23	AJP-CYLINDER HEAD SIDE COVER GASKET 11004I0060000 (u. 1)
24	AJP-CYLINDER HEAD SIDE COVER 11005I0060AJP (u. 1)
25	AJP-SCREW CDI COVER M6X20MM S701300000000 (u. 2)
26	AJP-CYLINDER HEAD GASKET 200/240CC 9022BL0440000 (u. 1)
27	AJP-CYLINDER 240 1110BMA96000086 (u. 1)
28	AJP-CYLINDER GASKET 200/240CC 90205L0440000 (u. 1)
29	AJP-TACO CALCO CILINDRO 200 11211L0440001 (u. 27)
30	AJP-WASHER DIN125 M6 AN0125006000 (u. 2)
31	AJP-WASHER DIN127 M6 AN0127006000 (u. 2)
	AJP-WASHER DIN127 M8 AN0127008000 (u. 2)
32	AJP-SCREW DIN933 M8X25 PF0933008025 (u. 1)
	AJP-SCREW DIN933 M6X25 PF0933006025 (u. 1)


VALVE MECHANISM

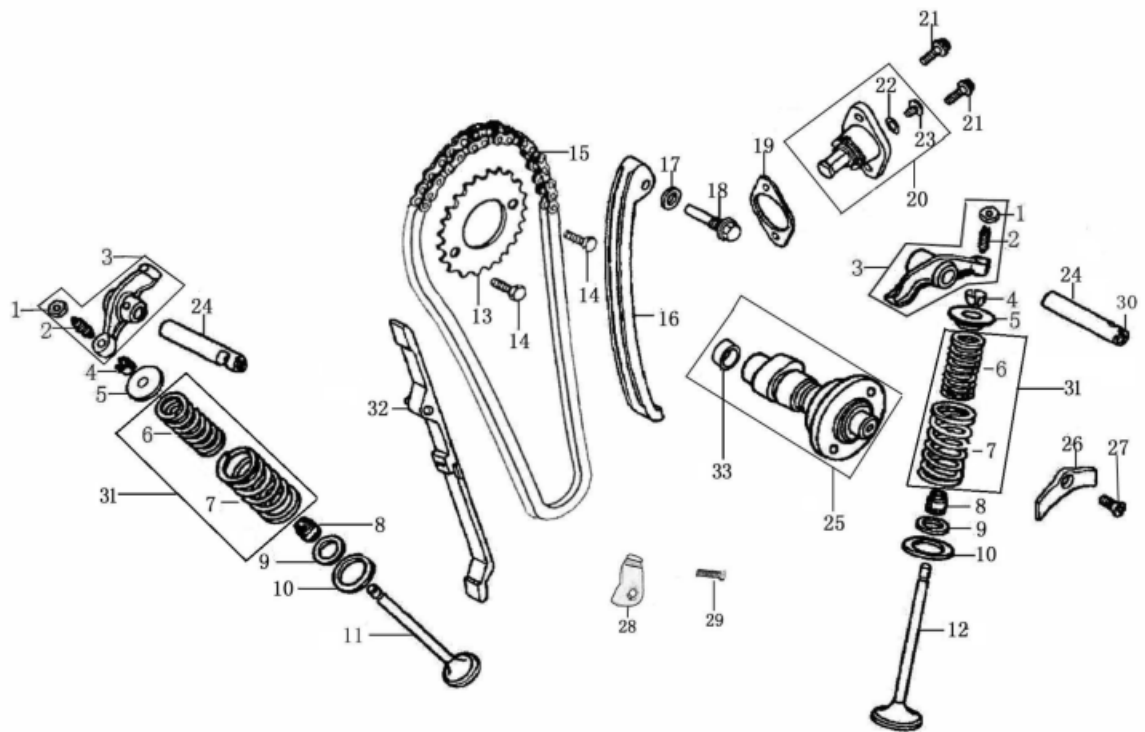

1	AJP-TAPPED ADJUST SCREW 15403I0060000 (u. 2)
2	AJP-AFINADOR VÁLVULA 15404I0060000 (u. 2)
3	AJP-VALVE ROCKER ARM. ASSY 125/200/240 1540AI0060000 (u. 1)
4	AJP-VALVE COTTER 125 / 200 / 240 15707I0080000 (u. 4)
5	AJP-VALVE SPRING CONTAINER 125 / 200 / 240 15705I0060000 (u. 2)
13	AJP-SPROCKET 15301L0440000 (u. 1)
14	AJP-SCREW M6X12 B05783000600107 (u. 2)
15	AJP-TIMING CHAIN 240 102L 1532BLA740000 (u. 1)
16	AJP-TIMING CHAIN TENSIONER 240 1552ALA740000 (u. 1)
18	AJP-TIMING CHAIN TENSIONER PIVOT BOLT 91109I0060000 (u. 1)
19	AJP-TENSIONER ADJUSTER GASKET 90211I0490000 (u. 1)
20	AJP-TENSIONER ADJUSTER 1554BI0490000 (u. 1)
22	AJP-O-RING 1.5X9.6 Q500100000000 (u. 1)
23	AJP-BOLT M6X6 91120I0490000 (u. 1)
24	AJP-ROCKER ARM SHAFT EX 15402L0440000 (u. 1)
26	AJP-SHAFT HOLDER 11200I0060000 (u. 1)


27	AJP-BOLT M6X16MM 15403L0440002 (u. 1)
28	AJP-TIMING CHAIN PROTECTION PLATE 240 2143BL0440000 (u. 1)
29	AJP-SCREW DIN933 M6X16 PF0933006016 (u. 1)
30	AJP-ROCKER ARM SHAFT IN 15402L0440002 (u. 1)
32	AJP-TIMING CHAIN GUIDE 200 1553ALA740000 (u. 1)

CRANKSHAFT - PISTON

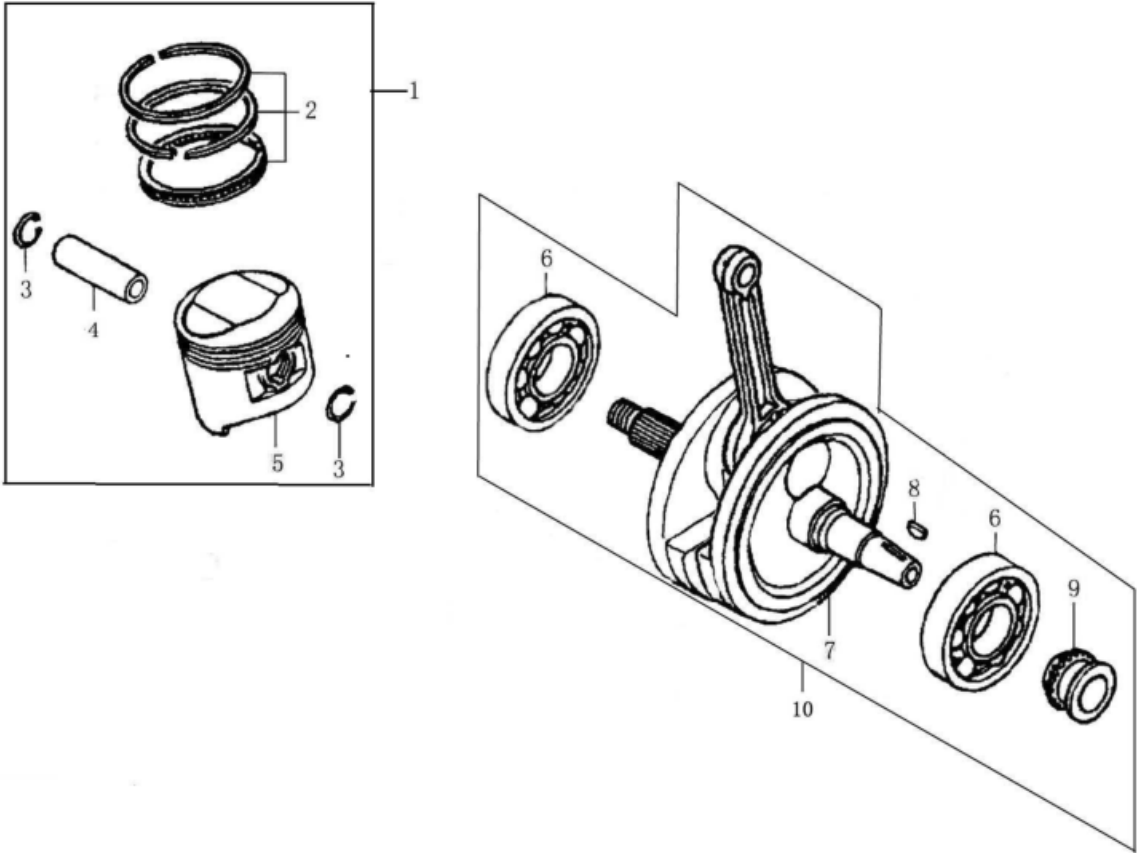

1	AJP-PISTON ASSY 240 00MTS01A0153 (u. 1)
2	AJP-PISTON RING SET 240 1310AMA960000 (u. 1)
3	AJP-CIR-CLIP 17MM 200/240 91401LA010000 (u. 2)
4	AJP-PISTON PIN D17 13102LA010000 (u. 1)
5	AJP-PISTON 240 13101MA960000 (u. 1)
10	AJP-CRANKSHAFT ASSEMBLY 240 1320BMA960100 (u. 1)


CRANKCASES

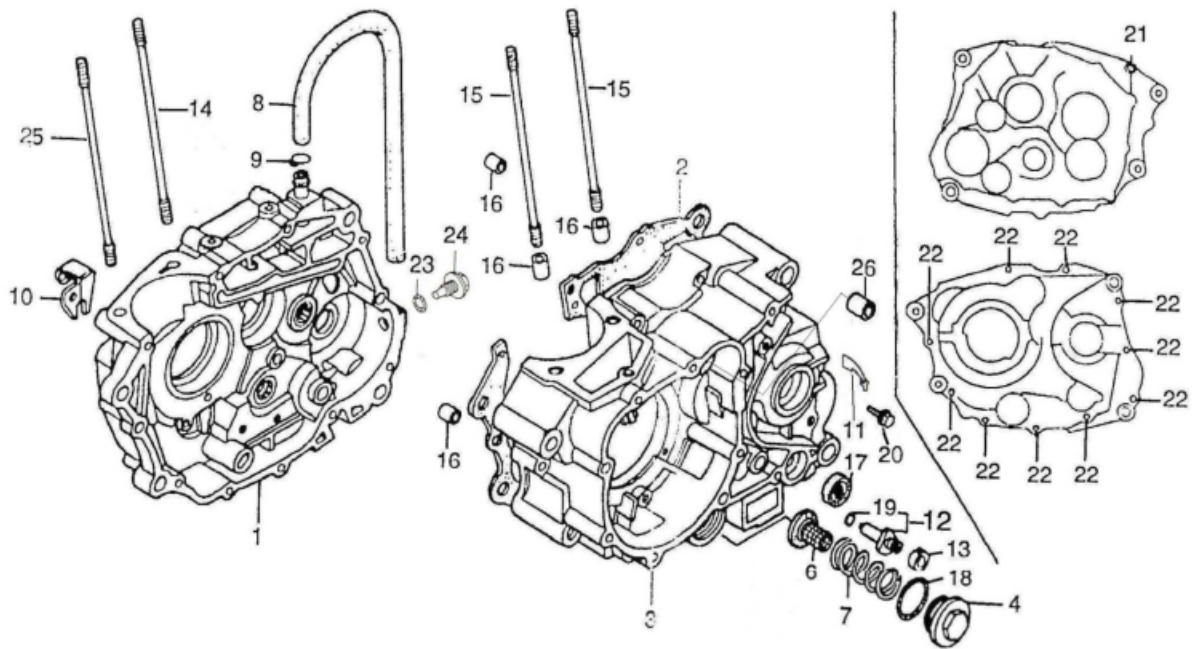

1	AJP-RIGHT CRANKCASE 1222BLA220000 (u. 1)
2	AJP-CRANKCASE GASKET 90208L0440000 (u. 1)
3	AJP-LEFT CRANKCASE 1212BL0440000 (u. 1)
4	AJP-OIL FILTER COVER 11229I0060000 (u. 1)
6	AJP-OIL FILTER 1413BI0490000 (u. 1)
7	AJP-OIL FILTER SPRING 14221I0490000 (u. 1)
8	AJP-BREATHER TUBE 12105I0060000 (u. 1)
10	AJP-CLUTCH WIRE HOLDER 22422I0490000 (u. 1)
11	AJP-GENERATOR WIRE HOLDER 12103I0080000 (u. 1)
12	AJP-NEUTRAL CONTACT 8802BD0020000 (u. 1)
13	AJP-NEUTRAL PIN 8801D0020000 (u. 1)
14	AJP-CYLINDER STUD BOLT 240 (M8X222) 91101LA740000 (u. 1)
15	AJP-CYLINDER STUD BOLT 240 (M8X235) 91102LA740100 (u. 2)
16	AJP-DOWEL PIN 10X14MM 91504I0490000 (u. 4)
17	AJP-GEAR OIL SEAL 90301I0060000 (u. 1)
18	AJP-O-RING 35X3MM 90104I0060000 (u. 1)
19	AJP-O RING 7X1.7 90133D0020000 (u. 2)

20	AJP-SCREW M6X14 L310200000000 (u. 1)
21	AJP-SCREW M6X60 S702000000000 (u. 1)
22	AJP-SCREW M6X50 S701900000000 (u. 10)
23	AJP-O.RING 11.8X2.65 9110110118000265 (u. 1)
24	AJP-SIDE SCREW 9110810060000 (u. 1)
25	AJP-CYLINDER STUD BOLT 240 (M8X222) 91101LA740100 (u. 1)
26	AJP-BEARING HK1010 Z303900000000 (u. 1)


GEARBOX

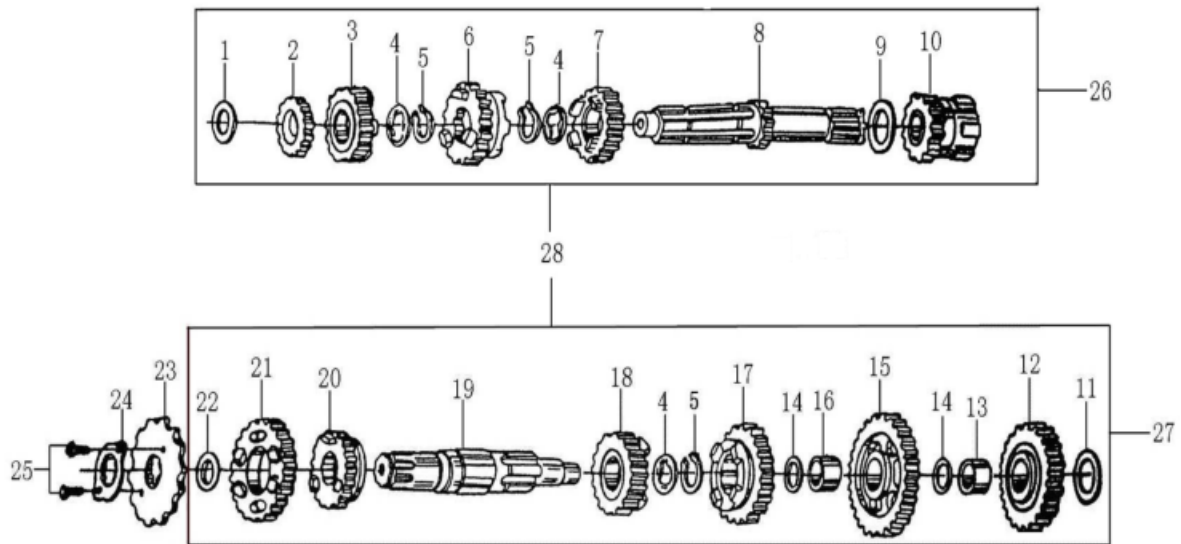


2	AJP-GEAR M-2 240 23222LA730002 (u. 1)
3	AJP-GEAR M-5 240 23222LA730005 (u. 1)
4	AJP-WASHER 20 MM 23223I0060000 (u. 3)
6	AJP-GEAR M-4 240 23222LA730004 (u. 1)
7	AJP-GEAR M-3 240 23222LA730003 (u. 1)
8	AJP-TRANSMISSION MAIN SHAFT 23221LA730000 (u. 1)
10	AJP-MAIN STARTER GEAR (Z19) 23231I0060000 (u. 1)
11	AJP-WASHER 15 MM 240 9330161521030000 (u. 1)
12	AJP-SECONDARY STARTING GEAR (Z28) 23248I0060000 (u. 1)
13	AJP-DOWEL PIN 23203I0060003 (u. 1)
15	AJP-GEAR C-1 23242LA730001 (u. 1)
16	AJP-DOWEL PIN 23203I0060001 (u. 1)
17	AJP-GEAR C-3 23242LA730003 (u. 1)
18	AJP-GEAR C-4 23242LA730004 (u. 1)
19	AJP-SECUNDARY SHAFT 240 23241I0080000 (u. 1)
20	AJP-GEAR C-5 23242LA730005 (u. 1)
21	AJP-GEAR C-2 23242LA730002 (u. 1)

23	AJP-DRIVE SPROCKET (17T) 00MTS01B0018 (u. 1)
	AJP-DRIVE SPROCKET (Z15) 23401I0060000 (u. 1)
	AJP-DRIVE SPROCKET (Z14) 00MTS01A0036 (u. 1)
	AJP-DRIVE SPROCKET (Z13) 00MTS01A0084 (u. 1)
	AJP-DRIVE SPROCKET (Z13) 00MTS01A0035 (u. 1)
	AJP-DRIVE SPROCKET (Z16) 00MTS01A0018 (u. 1)
24	AJP-SPROCKET FIXING PLATE 23402I0060000 (u. 1)
25	AJP-SCREW M6X12 B05783000600107 (u. 2)
26	AJP-MAIN SHAFT. TRANSMISSION 240 23220LA730000 (u. 1)
27	AJP-COUTERSHAFT 240 23240LA730000 (u. 1)
28	AJP-COMPLETE TRANSMISSION 240 23200LA730100 (u. 1)

KICKSTARTER SHAFT

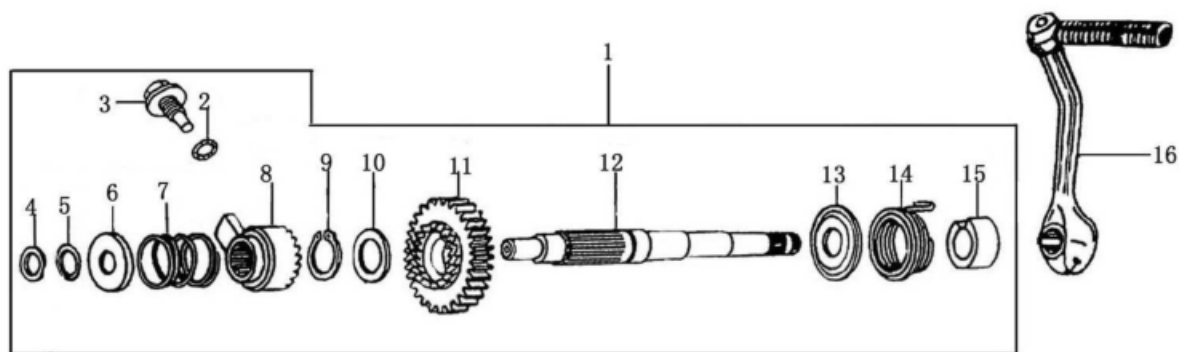

1	AJP-KICK STARTING SHAFT ASSEMBLY 21100I0060000 (u. 1)
2	AJP-Ó-RING 11.8X2.65 9010110118000265 (u. 1)
3	AJP-BOLT M12×25 91108I00600000X (u. 1)
5	AJP-STOPPER RING 16MM B00804116000000C (u. 1)
6	AJP-GUIDE PLATE 125/200/240 21123I0060000 (u. 1)
7	AJP-SPRING. KICK STARTING RATCHET WHEEL 125/200/240 21119I0060000 (u. 1)
8	AJP-STARTING RATCHET 125/200/240 21118I0060000 (u. 1)
9	AJP-CIRCLIP Ø18.5×1.2× Ø 22.4 91402I0080000 (u. 1)
10	AJP-WASHER 20×0.5×27 (125/200/240) 9330152020527000 (u. 1)
11	AJP-GEAR. KICK STARTER 125/200/240 21117I0060000 (u. 1)
12	AJP-PIVOT. KICK STARTING SHAFT 125/200/240 21107I0060000 (u. 1)
13	AJP-WASHER KICKS 125/200 21104I0060000 (u. 1)
14	AJP-RETURN SPRING. KICK STARTING SHAFT 21106I0060000 (u. 1)
15	AJP-SLEEVE KICKSTARTER SHAFT 21102I0060000 (u. 1)
16	AJP-KICKSTARTER 21200I1110000 (u. 1)

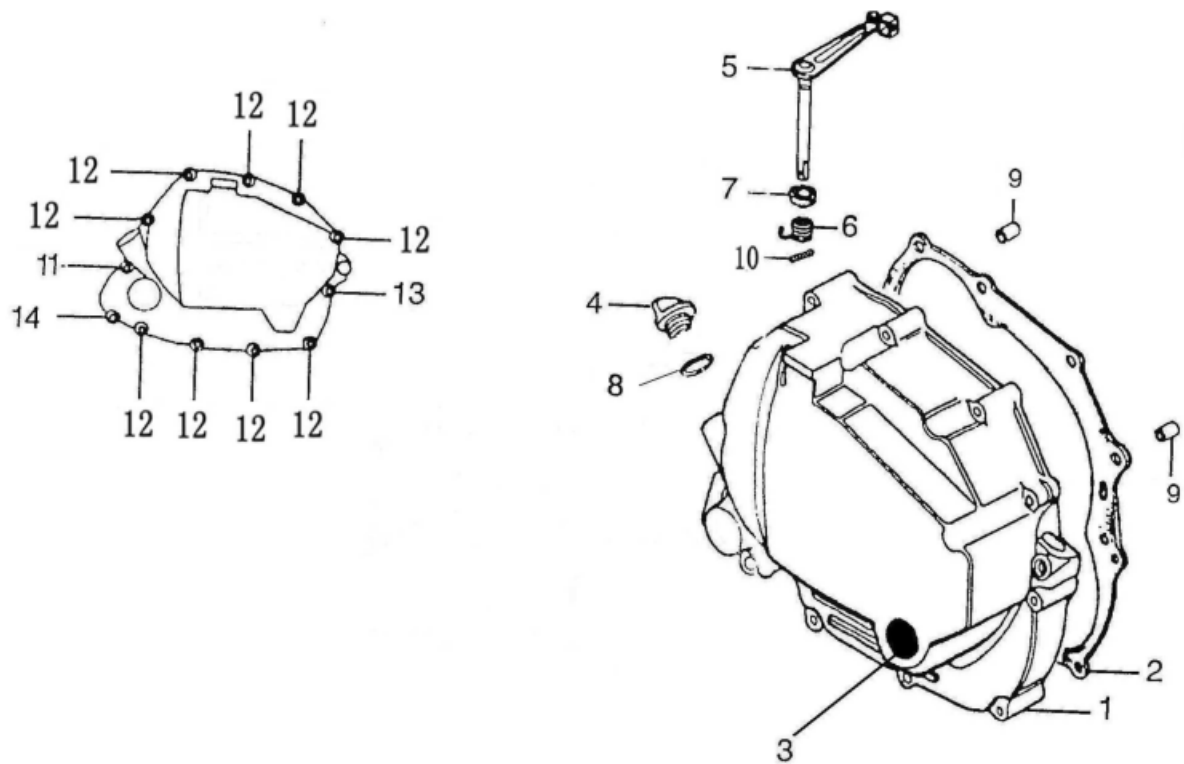RIGHT CRANKCASE COVER


2 AJP-RIGHT CRANKCASE COVER GASKET
90206I0060000 (u. 1)

3 AJP-OIL LEVEL VIEW-FINDER
12426I0080000 (u. 1)

4 AJP-OIL LEVEL GAUGE
14301I0060000 (u. 1)

5 AJP-CLUTCH LEVER
2242AI0060000 (u. 1)

AJP-CLUTCH LEVER
00MTS01A0007 (u. 1)

6 AJP-CLUTCH LEVER SPRING
22427I0060000 (u. 1)

8 AJP-O RING 18X3
90106D0020000 (u. 1)

9 AJP-DOWEL PIN 8X14
91502D0020000 (u. 2)

10 AJP-RING 3X12
XA00100000000 (u. 1)


11 AJP-CYLINDER HEAD BOLT M6X35MM
S701600000000 (u. 1)

12 AJP-SCREW M6X40
S701700000000 (u. 9)

13 AJP-SCREW M6X50
S701900000000 (u. 1)

14 AJP-SCREW M6X25
S701400000000 (u. 1)


LEFT CRANKCASE COVER

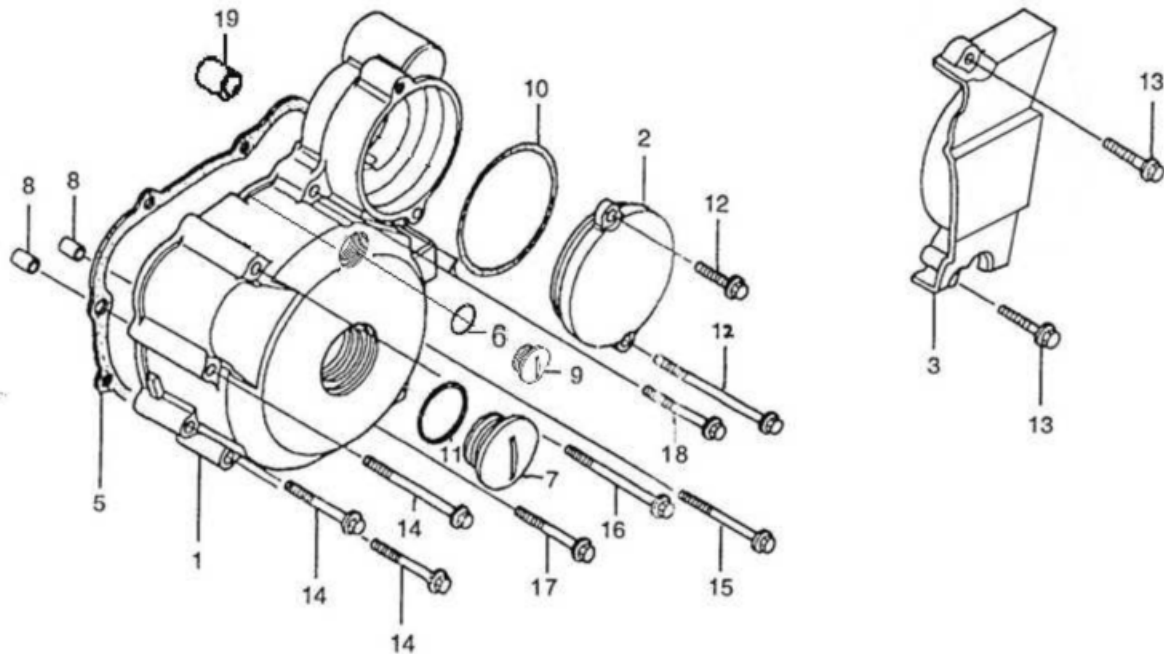

1	AJP-LEFT CRANKCASE COVER 125/200/240CC 1230110490AJP (u. 1)
2	AJP-REDUCTION GEAR COVER 1230810490AJP (u. 1)
3	AJP-LEFT CRANKCASE RR COVER 1230210490AJP (u. 1)
5	AJP-LEFT CRANKCASE COVER GASKET 1200110490000 (u. 1)
6	AJP-TOP SIGHT HOLE CAP 12303G0110AJP (u. 1)
7	AJP-SIGHT HOLE CAP 12304G0110AJP (u. 1)
8	AJP-DOWEL PIN 8X14MM 9150210060000 (u. 1)
9	AJP-O-RING 13.8X2.5 1230610060000 (u. 1)
10	AJP-O-RING 63X3 FOR REDUCTION GEAR COVER 1230910490000 (u. 1)
11	AJP-O-RING 27.4X2.4 1230710060000 (u. 1)
12	AJP-SCREW M6X20 S701310060000 (u. 2)
13	AJP-SCREW M6X25 S701400000000 (u. 2)
14	AJP-SCREW M6X25 S701400000000 (u. 3)
15	AJP-SCREW M6X60 S701000000000 (u. 1)
16	AJP-CYLINDER HEAD BOLT M6X35MM S701600000000 (u. 1)
17	AJP-SCREW M6X40 S701700000000 (u. 1)
18	AJP-SCREW M6X75 S706400000000 (u. 2)


19	AJP-BEARING HK1010 Z303900000000 (u. 1)
----	--

CLUTCH

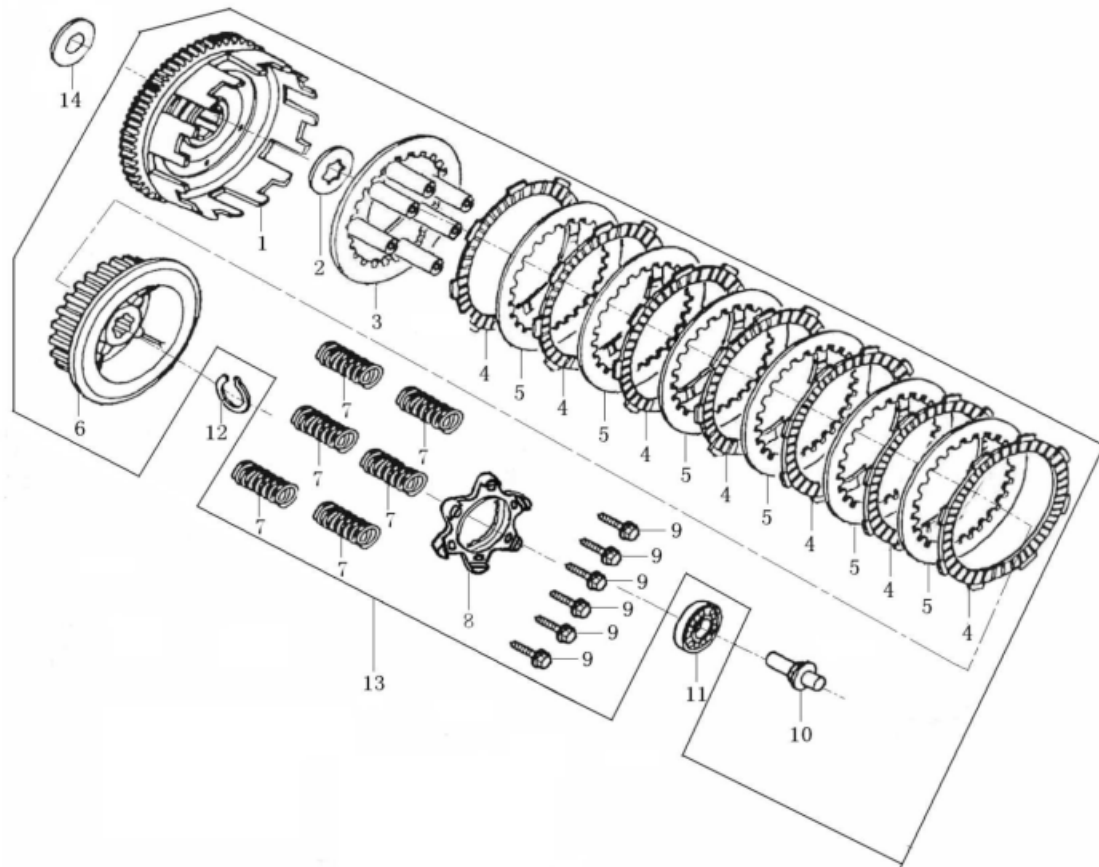


1	AJP-PRIMARY DRIVEN GEAR 240 (Z70) 22150LA730100 (u. 1)
3	AJP-PRESSURE DISC. CLUTCH 240 22122LA730000 (u. 1)
4	AJP-DRIVE PLATE CLUTCH 240 22214LA730000 (u. 7)
5	AJP-DRIVEN PLATE. CLUTCH 240 22215J0340000 (u. 6)
6	AJP-HUB. CLUCH SLEEVE 240CC 22105LA730100 (u. 1)
7	AJP-CLUTCH SPRING 240 22142LA730000 (u. 6)
8	AJP-END COVER CLUTCH 22121LA120000 (u. 1)
9	AJP-BOLT M5x20 240 91129J03400000B (u. 6)
10	AJP-PUSH ROD. CLUTCH 22403I0060000 (u. 1)
12	AJP-ELASTIC CHECK RING 18MM 240CC 91403I0080000 (u. 1)
13	AJP-CLUTC ASSY 240CC 22000LA730906 (u. 1)
14	AJP-WASHER 30.2X1X40 PR5 LC 2013 9330153021040000 (u. 1)

OIL PUMP

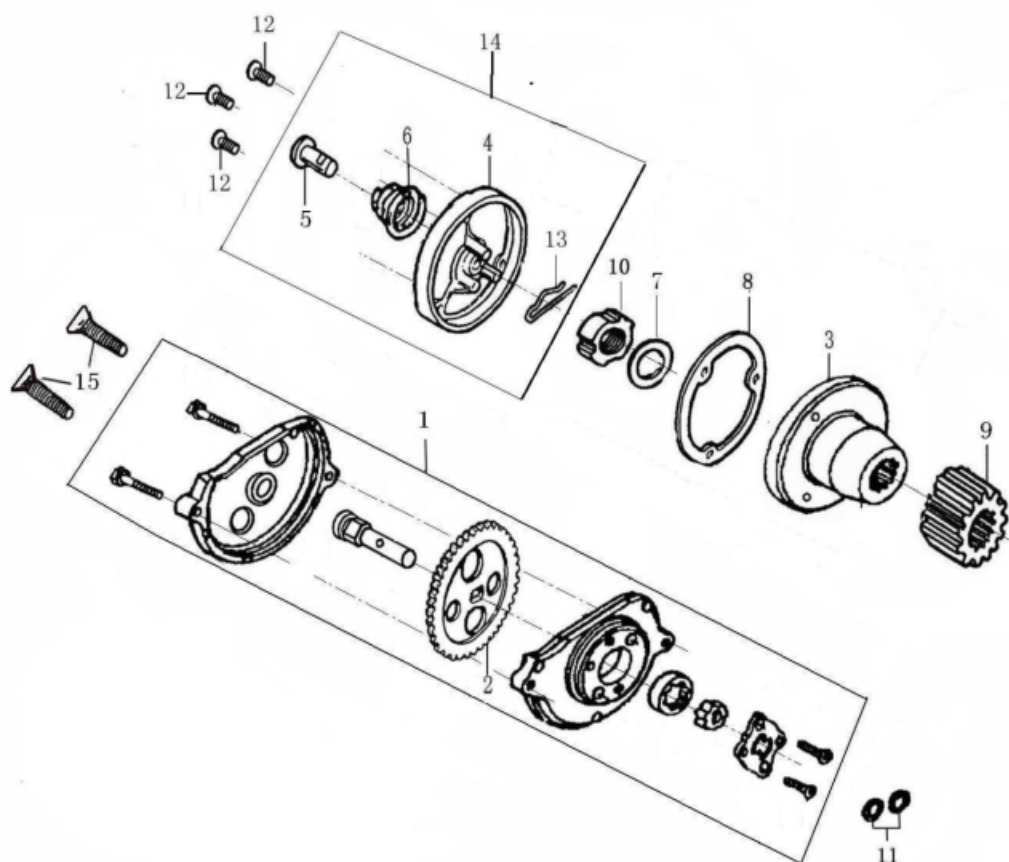


3	AJP-OIL FILTER ROTOR 240 14203IA200100 (u. 1)
4	AJP-OIL FILTER ROTOR CAP 14207IA2000000W (u. 1)
5	AJP-OIL THROUGH 14202I0060000 (u. 1)
6	AJP-OIL THROUGH SPRING 14203I0060000 (u. 1)
7	AJP-CONIC WASHER 22004I0060000 (u. 1)
8	AJP-OIL FILTER ROTOR GASKET 90208I0060000 (u. 1) AJP-OIL FILTER ROTOR GASKET 240 90209IA200000 (u. 1)
9	AJP-PRIMARY DRIVE GEAR (Z21) 23101L0440000 (u. 1)
10	AJP-NUT 240 91203IA200000 (u. 1)
11	AJP-O RING 24X3 90108I0060000 (u. 2)
12	AJP-SCREW M5X12 125/200/240 L605200000000 (u. 3)
13	AJP-CIR-CLIP 8MM 91505I0060000 (u. 1)
15	AJP-SCREW 6X30 125/200/240 B08190106003020B (u. 2)

MAGNETO

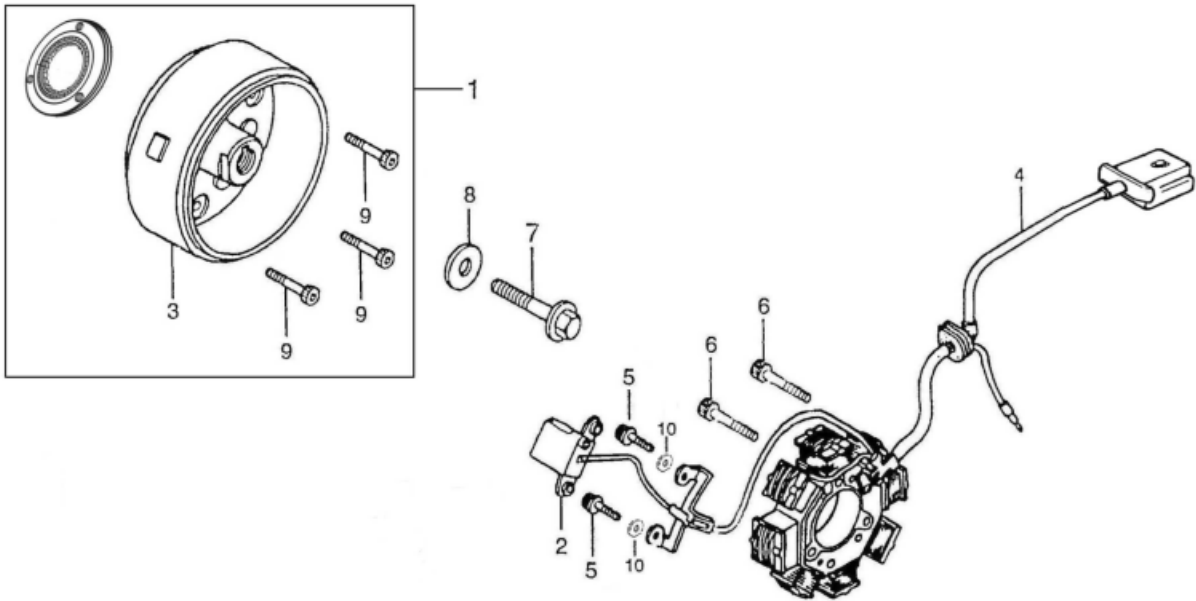


1	AJP-FLY WHEEL ASSEMBLY 22MM 82130L0440100 (u. 1)
2	AJP-PULSE GENERATOR 8210500000000 (u. 1)
3	AJP-FLY WHEEL 22MM 8210110490AJP100 (u. 1)
4	AJP-STATOR 82120L0440000 (u. 1)
5	AJP-SCREW L304200000000 (u. 2)
7	AJP-SCREW M10X36 91106I0080000 (u. 1)
8	AJP-WASHER 10X24X2.5 91313I0060100 (u. 1)

ELECTRIC STARTER

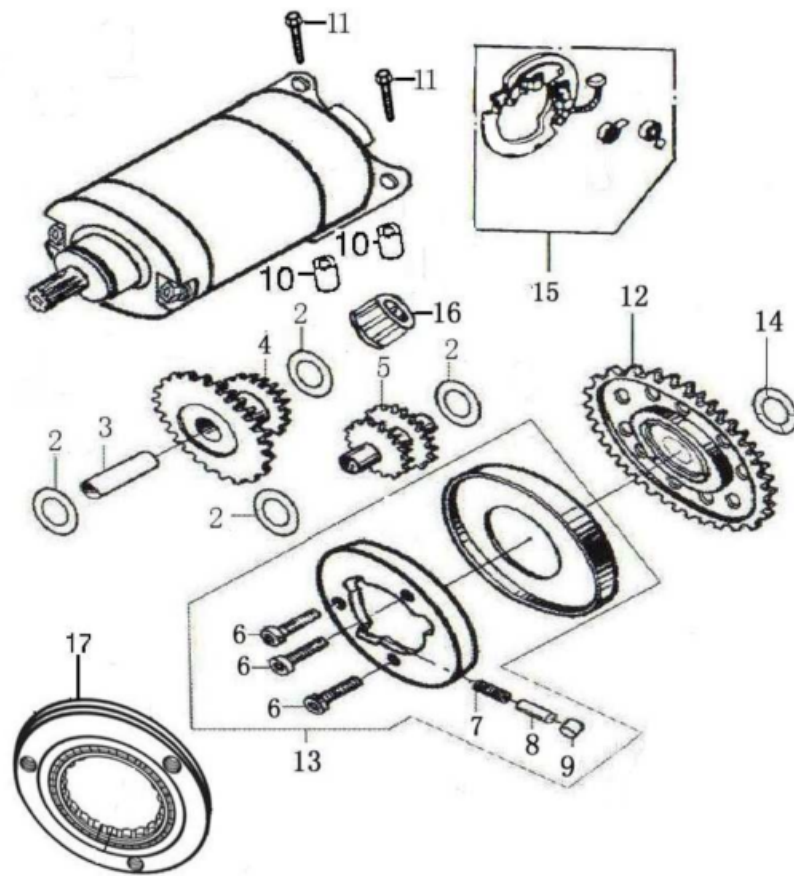


1	AJP-STARTING MOTOR 240 82200L044210251 (u. 1)
3	AJP-STARTER REDUCTION GEAR SPACER 21402I0490000 (u. 1)
4	AJP-STARTER REDUCTION GEAR 60/24 240CC 2013 2140AL0440100 (u. 1)
5	AJP-STARTER GEAR 15/22 240CC 2013 21401L0440000 (u. 1)
6	AJP-SCREW M8X18 B0070010800187 (u. 3)
12	AJP-STARTER DRIVE GEAR 240 (Z56) 2142AI0270000 (u. 1)
13	AJP-STARTER DRIVE GEAR ASSEMBLY 240 21300LA730000 (u. 1)
14	AJP-STARTING MOTOR WASHER 22X34X3.5 240CC 2013 93301E2203534000 (u. 1)
16	AJP-BEARING HK1010 Z303900000000 (u. 2)
17	AJP-STARTING MOTOR CABLE 82231I0490000 (u. 1)

GEARSHIFT SHAFT

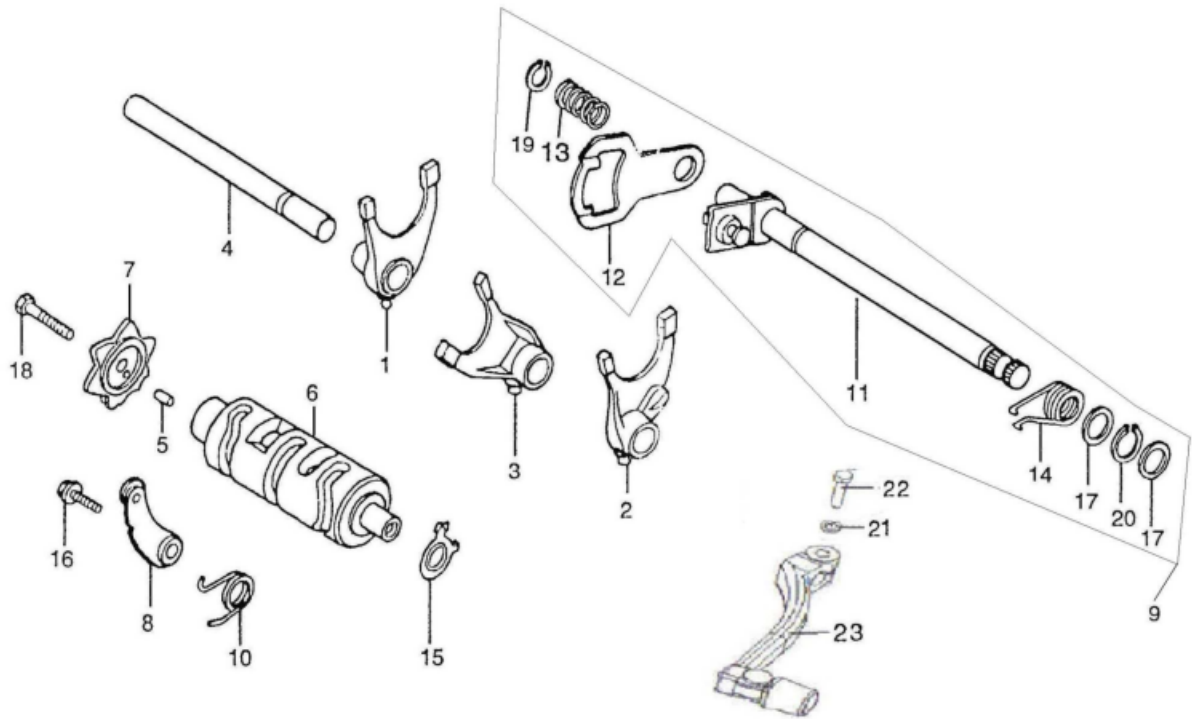

1	AJP-RIGHT GEAR SHIFT FORK 24101I0060000 (u. 1)
2	AJP-LEFT GEAR SHIFT FORK 24102I0060000 (u. 1)
3	AJP-CENTRAL GEAR SHIFT FORK 24103I0060000 (u. 1)
4	AJP-GEAR SHIFT FORK GUIDE 24104I0060000 (u. 1)
5	AJP-PIN 4X10 X306200000000 (u. 1)
6	AJP-GEAR SHIFT DRUM 24201I0060000 (u. 1)
7	AJP-GEAR SHIFT CAM 24202I0060000 (u. 1)
8	AJP-GEAR SHIFT DRUM STOPER 24221I0060000 (u. 1)
9	AJP-GEAR SHIFT SPINDLE ASSEMBLY 24300I0060000 (u. 1)
10	AJP-GEAR DRUM STOPPER SPRING 125/200/240 24302I0060000 (u. 1)
11	AJP-GEAR SHIFT SPINDLE 2432AI0060000 (u. 1)
12	AJP-GEAR SHIFT PLATE 24301I0060000 (u. 1)
13	AJP-GEAR SHIFT PLATE SPRING 24303I0080000 (u. 1)
14	AJP-GEAR SHIFT RETURN SPRING 24303I0060000 (u. 1)
15	AJP-NEUTRAL SWITCH ROTOR 88002I0060000 (u. 1)
16	AJP-SCREW M6X22 S7060000000000 (u. 1)

17	AJP-WASHER 14MM 24304I0060000 (u. 2)
18	AJP-BOLT M6X25 S303100000000 (u. 1)
19	AJP-STOPPER RING 12MM D200300000000 (u. 1)
20	AJP-STOPPER RING 14 MM D200500000000 (u. 1)
21	AJP-WASHER DIN125 M6 AN0125006000 (u. 1)
22	AJP-SCREW DIN933 M6X25 PF0933006025 (u. 1)
23	AJP-GEAR SELECTOR PR3 00MTS01B0016 (u. 1)

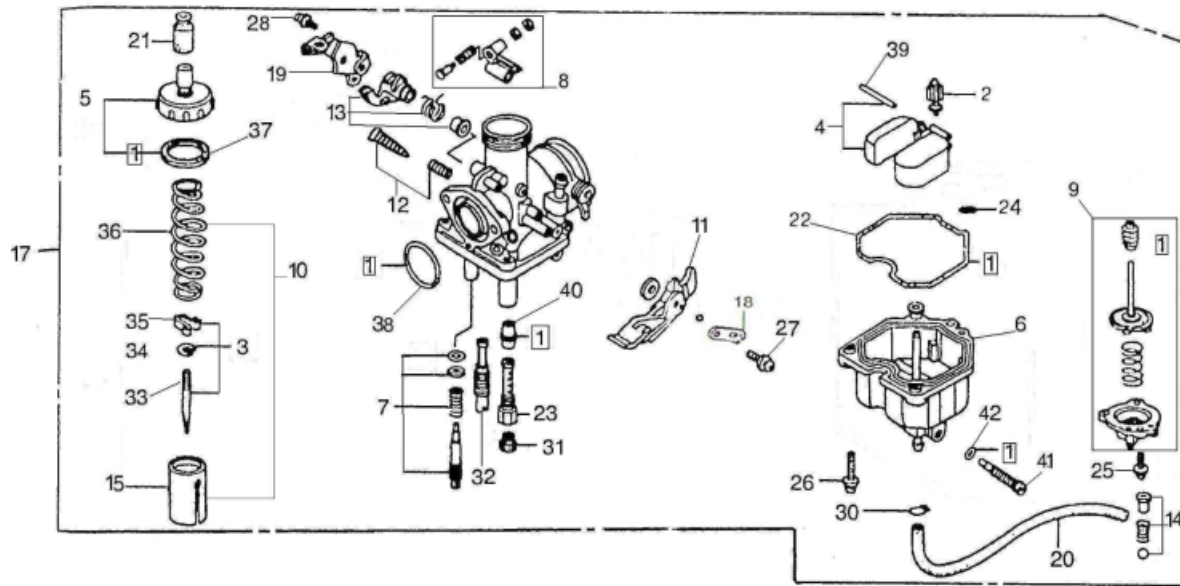CARBURETTOR


1 AJP-GASKET SET CARBURETOR
17101I0060000 (u. 1)

2 AJP-CONIC VALVE
17102I0060000 (u. 1)

3 AJP-NEEDLE WITH CIR-CLIP
17103I0060000 (u. 1)

4 AJP-FLOAT
17104I0060000 (u. 1)

5 AJP-PISTON CAP 125CC
17105I0060000 (u. 1)

6 AJP-FLOAT CAMARA
17106I0060000 (u. 1)

7 AJP-ADJUSTING SCREW SET
17107I0060000 (u. 1)

8 AJP-PUMP ARM
17108I0060000 (u. 1)

9 AJP-POWER JET
17109I0060000 (u. 1)

11 AJP-CHOKE CABLE BRACKET
17112I0060000 (u. 1)

12 AJP-ADJUSTING SCREW
17113I0060000 (u. 1)

13 AJP-PUMP ARM
17108I0060000 (u. 1)

14 AJP-CHECK VALVE
17115I0060000 (u. 1)

15 AJP-CARBURETTOR PISTON
17105L0440000 (u. 1)

19 AJP-LINK PLATE, PUMP ARM
17119I0060000 (u. 1)


20 AJP-FUEL TUBE
17121I0060000 (u. 1)

21 AJP-DUST CAP
17122I0060000 (u. 1)


22 AJP-FLOAT CHAMBER GASKET
17123I0060000 (u. 1)

23	AJP-NEEDLE DIFFUSER PZ30 171A2L0440000 (u. 1)
24	AJP-O-RING 4.5X1.6 S13051604500 (u. 1)
25	AJP-SCREW L304200000000 (u. 3)
26	AJP-SCREW M4X16MM L304300000000 (u. 3)
27	AJP-SCREW 5X12 L305200000000 (u. 1)
28	AJP-SCREW 5X14 L309400000000 (u. 1)
30	AJP-CLAMP FOR B86.5 PR3 1712900000000 (u. 1)
31	AJP-MAIN JET 105 00MTS01A0093 (u. 1)
32	AJP-IDLE JET 48 00MTS01A0092 (u. 1)
33	AJP-NEEDLE 17156L0440000 (u. 1)
34	AJP-NEEDLE CIR-CLIP 17106L0440000 (u. 1)
35	AJP-V-CLIP 17104L0440000 (u. 1)
36	AJP-AIR THROTTLE RETURN SPRING 17165L0440000 (u. 1)
37	AJP-TOP CAP GASKET 17147L0440000 (u. 1)
38	AJP-O-RING 34X2.5 9010110300000150 (u. 1)
39	AJP-FLOAT PIN 17144L0440000 (u. 1)
40	AJP-MAIN JET 17151L0440000 (u. 1)
41	AJP-DRAIN SCREW 171A5L0440000 (u. 1)
42	AJP-O-RING DRAIN SCREW 4.5X1 9010110045000100 (u. 1)

OIL RADIATOR

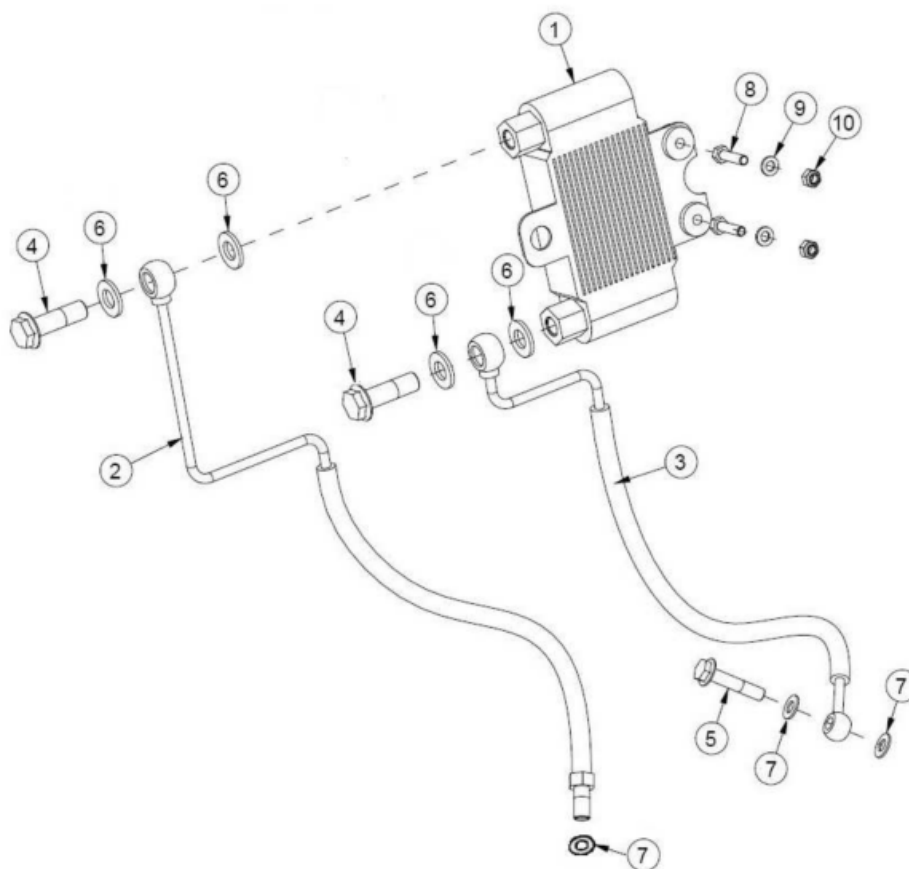

- | | |
|----|--|
| 1 | AJP-RIGHT GEAR SHIFT FORK
2410110060000 (u. 1) |
| 2 | AJP-OIL COOLER LONG TUBE PR3
00MTS01A0032 (u. 1) |
| 3 | AJP-OIL COOLER SHORT TUBE PR3
00MTS01A0031 (u. 1) |
| 4 | AJP-SCREW M12X1.25
9110710060AJP (u. 2) |
| 5 | AJP-SCREW M10X1.25
9110710060100 (u. 1) |
| 8 | AJP-SCREW DIN933 M6X25
PF0933006025 (u. 2) |
| 9 | AJP-WASHER DIN125 M6
AN0125006000 (u. 2) |
| 10 | AJP-NUT DIN985 M6
PC0985006000 (u. 2) |

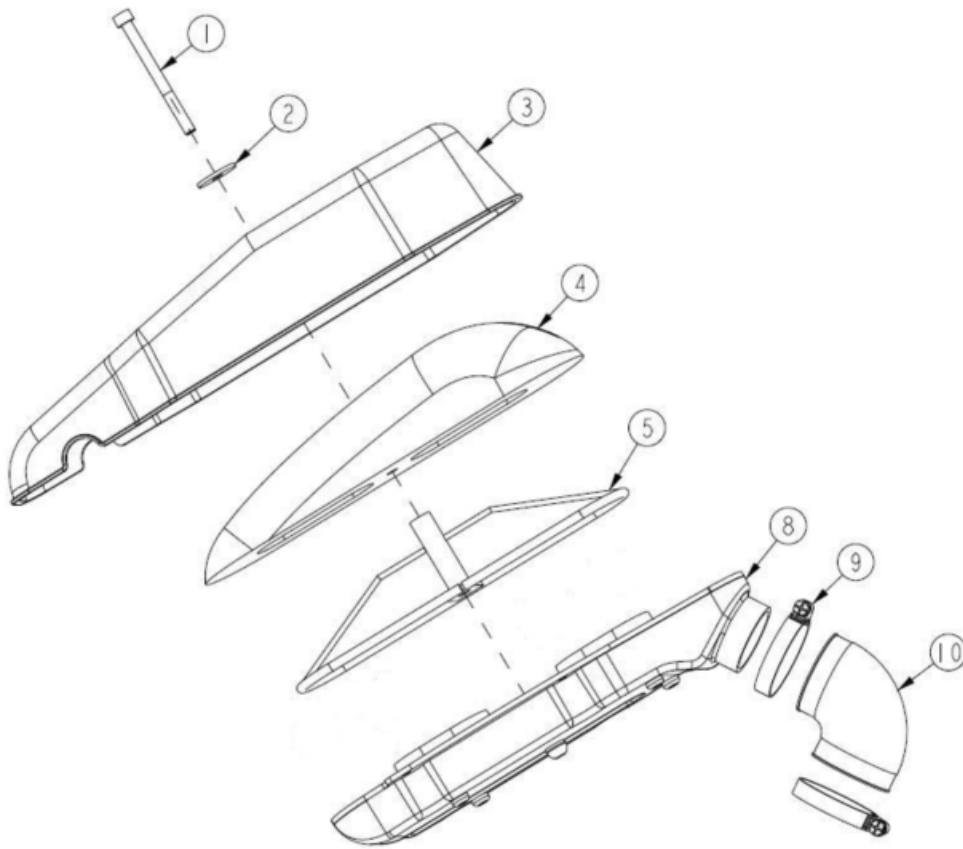INTAKE


1 AJP-SCREW DIN912 M6X90
PF0912006090 (u. 1)

2 AJP-WASHER DIN9021 M6
AN9021006000 (u. 1)

3 AJP-AIR FILTER CAP
00MTS01A0034 (u. 1)


4 AJP-AIR FILTER PR3/PR4
00MTS01A0004 (u. 1)

5 AJP-AIR FILTER BRACKET
00MTS01A0005 (u. 1)

8 AJP-AIR FILTER BOX
00MTC01A0028 (u. 1)

9 AJP-CLAMP 32-50
00DES01A0018 (u. 2)

10 AJP-INTAKE HOSE
00MTS01A0027 (u. 1)

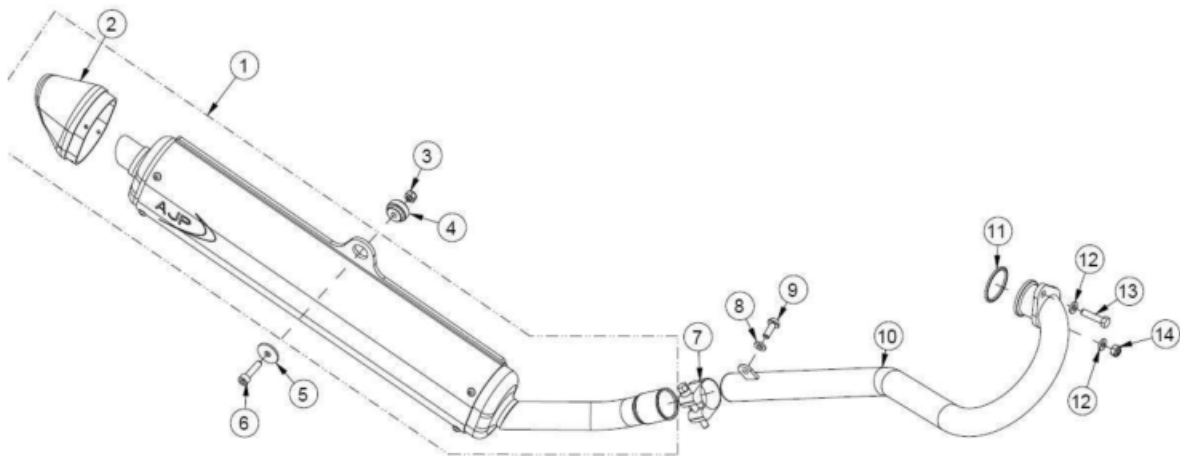MX EXHAUST SYSTEM


1 AJP-EXHAUST MUFFLER PR4 2012
00MTS01A0095 (u. 1)

2 AJP-EXHAUST MUFFLER END
00MTS01A0010 (u. 1)

3 AJP-NUT DIN985 M6
PC0985006000 (u. 1)

4 AJP-SPACER 22X11X6
00MTS07A0008 (u. 1)

5 AJP-WASHER DIN9021 M6
AN9021006000 (u. 1)

6 AJP-SCREW DIN912 M6X25
PF0912006025 (u. 1)

7 AJP-HOLDER ND30
00MTS01A0024 (u. 1)

8 AJP-WASHER DIN125 M6
AN0125006000 (u. 1)


9 AJP-SCREW DIN933 M6X16
PF0933006016 (u. 1)

10 AJP-EXHAUST PIPE PR3/PR4 2012
00MTS01A0096 (u. 1)

11 AJP-EXHAUST PIPE GASKET
00MTS01A0001 (u. 1)


12 AJP-WASHER DIN127 M6
AN0127006000 (u. 2)

13 AJP-SCREW DIN933 M6X25
PF0933006025 (u. 1)

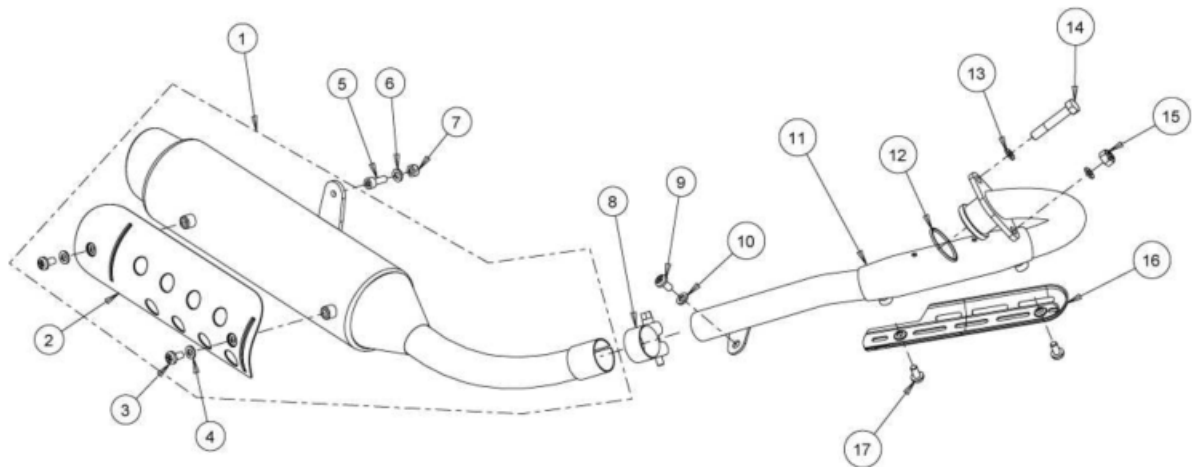EXHAUST SYSTEM


1	AJP-EXHAUST MUFFLER 00MTS04A0030 (u. 1)
2	AJP-EXHAUST MUFFLER PROTECTION 00MTS06A0031 (u. 1)
3	AJP-SCREW DIN7985 M6X12 PF7985006012 (u. 2)
4	AJP-WASHER DIN125 M6 AN0125006000 (u. 2)
5	AJP-SCREW DIN912 M6X25 PF0912006025 (u. 1)
6	AJP-WASHER DIN9021 M6 AN9021006000 (u. 1)
7	AJP-NUT DIN985 M6 PC0985006000 (u. 1)
8	AJP-HOLDER ND30 00MTS01A0024 (u. 1)
9	AJP-SCREW DIN933 M6X16 PF0933006016 (u. 1)
10	AJP-WASHER DIN125 M6 AN0125006000 (u. 1)
11	AJP-EXHAUST PIPE 00MTS06A0033 (u. 1)
12	AJP-EXHAUST PIPE GASKET 00MTS01A0001 (u. 1)
13	AJP-WASHER DIN127 M8 AN0127008000 (u. 2)
14	AJP-SCREW DIN933 M8X25 PF0933008025 (u. 1)
16	AJP-EXHAUST PIPE PROTECTION 00MTS06A0037 (u. 1)
17	AJP-SCREW ISO7380 M6X8 PF0738006008 (u. 2)


REAR SWING ARM

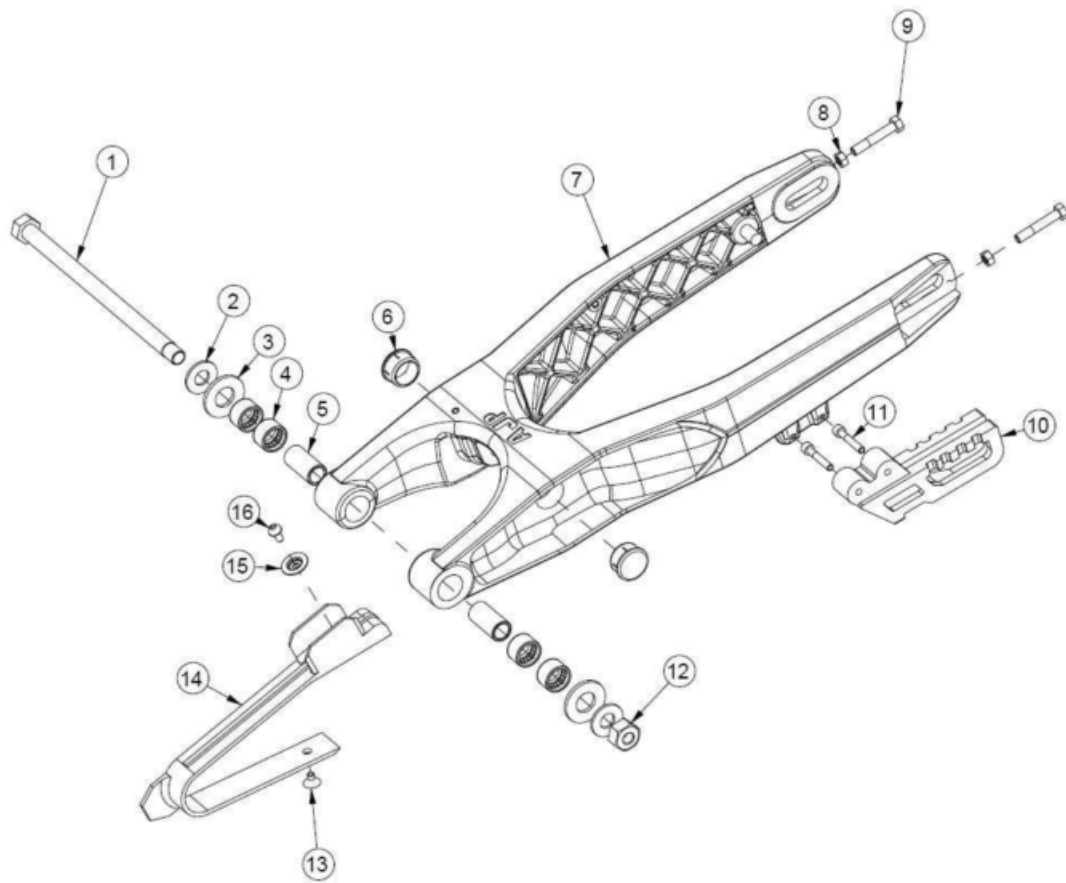

1	AJP-PIVOT SHAFT PR3/PR4 00STS07A0027 (u. 1)
2	AJP-WASHER DIN125 M15 AN0125015000 (u. 2)
3	AJP-WASHER 40X20X3 00STS01A0003 (u. 2)
4	AJP-BEARING HK2016 RS RL00HK2016RS (u. 4)
5	AJP-SPACER 15X20X40 00STS01A0002 (u. 2)
6	AJP-PLUG 00STS01A0004 (u. 2)
7	AJP-SUPPORT FOR CHAIN GUIDE 00STS01A0090 (u. 1) AJP-REAR SWING ARM 00STS02A0026 (u. 1)
8	AJP-NUT DIN934 M8 PC0934008000 (u. 2)
9	AJP-SCREW DIN933 M8X35 PF0933008035 (u. 2)
10	AJP-CHAIN GUIDE 00STS01B0007 (u. 1)
11	AJP-SCREW DIN912 M6X35 PF0912006035 (u. 2)
12	AJP-NUT DIN934 M14 PC0934014000 (u. 1)
13	AJP-SCREW DIN7991 M6X10 PF7991006010 (u. 1)

14	AJP-CHAIN TOUCH DEFENSE BUFFER 00PLS01A0049 (u. 1)
15	AJP-WASHER 00PLS07A0029 (u. 1)
16	AJP-SCREW DIN7380 M6X12 PF7380006012 (u. 1)


FRAME

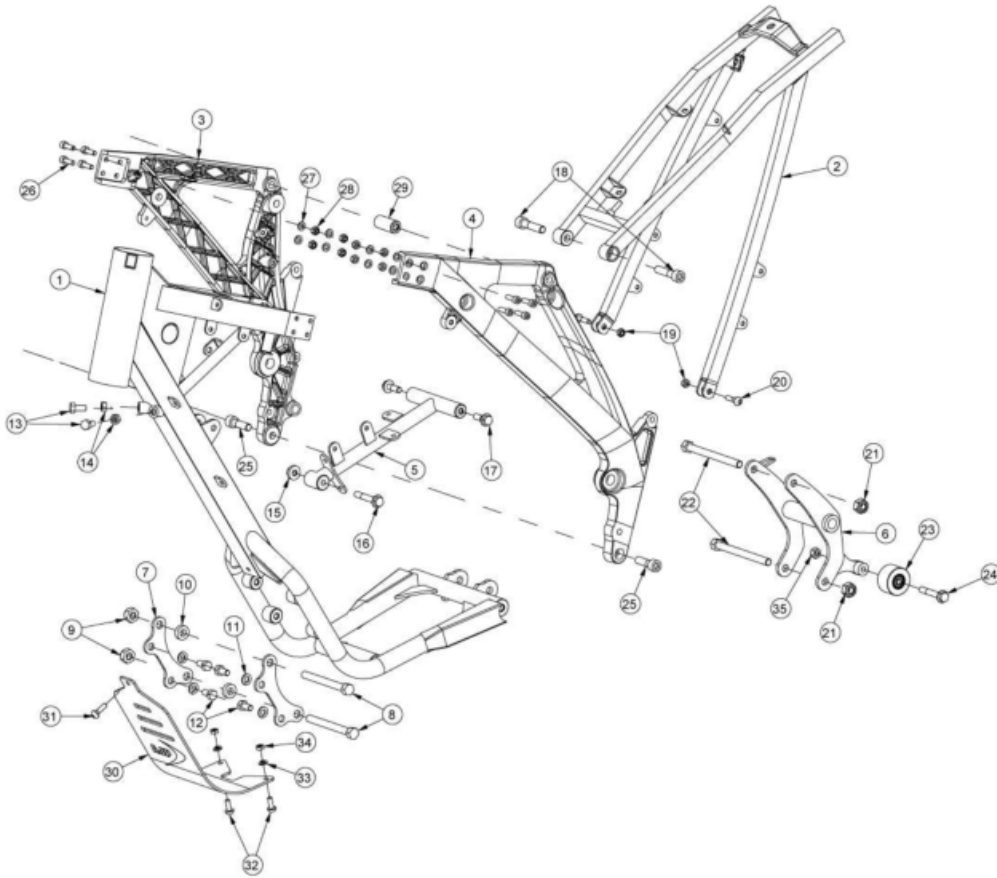

1	AJP-FRAME PR4 RED PRO 2013 00QUS04A0059 (u. 1)
	AJP-FRAME PR4EXTREME 2013 00QUS04A0060 (u. 1)
2	AJP-REAR FRAME RED PRO PR3/PR4 2013 00QUS06A0063 (u. 1)
	AJP-REAR FRAME EXTREME PR4 2013 00QUS06A0064 (u. 1)
3	AJP-FRAME BEAM RH 00QUS01A0026 (u. 1)
4	AJP-FRAME BEAM LH 00QUS01A0025 (u. 1)
5	AJP-FRAME REINFORCEMENT PR4 EXTREME 2013 00QUS04A0063 (u. 1)
	AJP-FRAME REINFORCEMENT PR3/PR4 RED PRO 2013 00QUS04A0062 (u. 1)
6	AJP-REAR ENGINE MOUNT 00QUS07B0021 (u. 1)
7	AJP-FRONT ENGINE MOUNT 00QUS07A0020 (u. 2)
10	AJP-SPACER 20X6.5X10 00QUS07A0009 (u. 2)
11	AJP-WASHER DIN127 M8 AN0127008000 (u. 4)
12	AJP-SCREW DIN933 M8X16 PF0933008016 (u. 4)
13	AJP-SCREW DIN933 M8X20 PF0933008020 (u. 2)

14	AJP-NUT DIN934 M8 PC0934008000 (u. 2)
15	AJP-NUT DIN6923 M8 PC6923008000 (u. 1)
16	AJP-SCREW DIN6921 M8X50 PF6921008050 (u. 1)
17	AJP-SCREW DIN6921 M8X25 PF6921008025 (u. 2)
18	AJP-SCREW DIN912 M10X45 PF0912010045 (u. 2)
19	AJP-NUT DIN985 M8 PC0985008000 (u. 2)
20	AJP-SCREW DIN7380 M8X25 PF7380008025 (u. 2)
22	AJP-SCREW DIN931 M10X120 PF0931010120 (u. 2)
23	AJP-CHAIN ROLLER (40MM) 00QUS01A0022 (u. 1)
24	AJP-SCREW DIN6921 M8X50 PF6921008050 (u. 1)
25	AJP-SCREW DIN912 M10X35 PF0912010035 (u. 2)
26	AJP-SCREW DIN7380 M6X20 PF7380006020 (u. 8)
27	AJP-WASHER DIN125 M6 AN0125006000 (u. 8)
28	AJP-NUT DIN985 M6 PC0985006000 (u. 8)
29	AJP-SPACER 00QUS07A0029 (u. 1)
30	AJP-FRAME COVER PR4 EXTREME ALLUMINUM 00MTS01A0124 (u. 1)
	AJP-FRAME COVER PR4 EXTREME PLASTIC 00MTS01A0106 (u. 1)
31	AJP-SCREW DIN738 M6X20 PF0738006020 (u. 1)
32	AJP-SCREW DIN738 M6X16 PF0738006016 (u. 2)
33	AJP-WASHER DIN125 M6 AN0125006000 (u. 2)
34	AJP-NUT DIN985 M6 PC0985006000 (u. 2)
35	AJP-NUT DIN985 M8 PC0985008000 (u. 1)

SIDE STAND - FOOTPEG

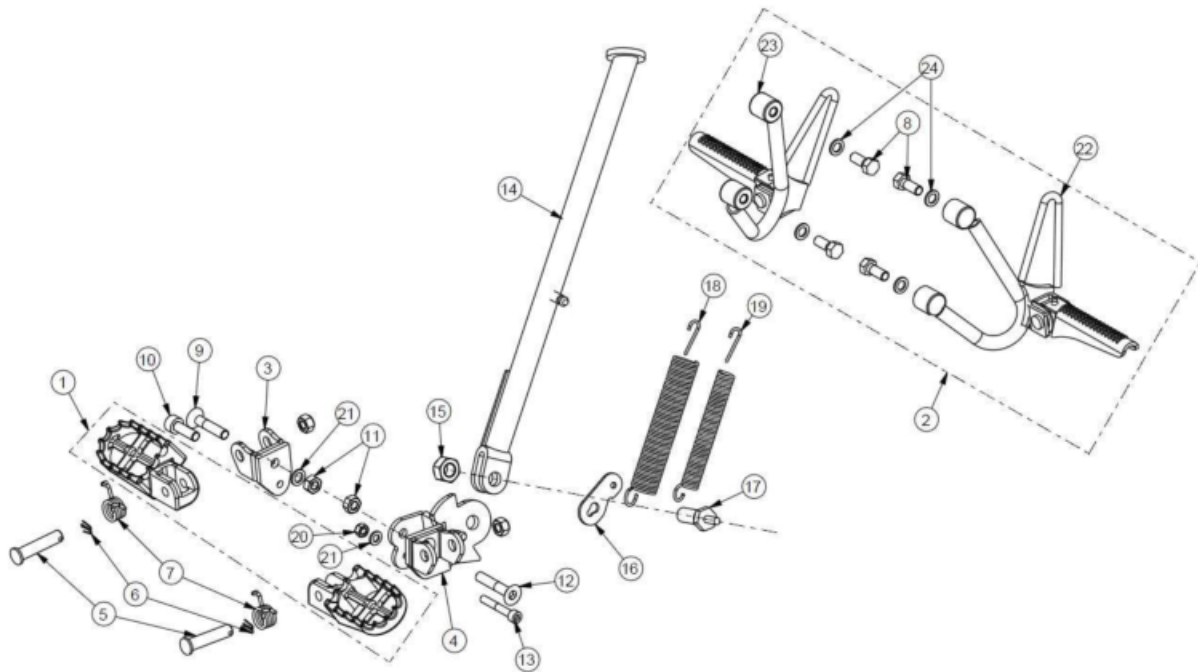


- | | |
|----|---|
| 1 | AJP-FRONT FOOTPEG LH/RH IN ALLOY EXTREME
00QUS03A0037 (u. 1) |
| 2 | AJP-COMPLETE REAR FOOTPEG ASSEMBLY
00QUC01A0041 (u. 1) |
| 3 | AJP-FRONT FOOTPEG HOLDER RH EXTREME PR4
00QUS07A0067 (u. 1) |
| 4 | AJP-FRONT FOOTPEG HOLDER LH PR4 EXTREME
00QUS07A0066 (u. 1) |
| 5 | AJP-DOWEL FOR FOOTPEG RED EXTREME 2013
00QUS07A0064 (u. 2) |
| 6 | AJP-SCREW 2.5X20 DIN 94 FOR FOOTPEG EXTREME
00QUS07A0065 (u. 2) |
| 7 | AJP-FRONT FOOTPEG SPRING LH EXTREME PR4/PR5 2013
00QUS07A0061 (u. 2) |
| 8 | AJP-SCREW DIN933 M8X16
PF0933008016 (u. 4) |
| 9 | AJP-SCREW DIN7991 M8X35
PF7991008035 (u. 1) |
| 10 | AJP-SCREW DIN912 M6X25
PF0912006025 (u. 1) |
| 11 | AJP-NUT DIN985 M8
PC0985008000 (u. 2) |
| 12 | AJP-SCREW DIN7991 M8X40
PF7991008040 (u. 1) |
| 13 | AJP-SCREW DIN912 M6X35
PF0912006035 (u. 1) |
| 14 | AJP-SIDE STAND PR4 EN
00QUS04A0043 (u. 1)

AJP-SIDE STAND EN PR5 AND SM PR4
00QUS04A0012 (u. 1) |
| 15 | AJP-NUT DIN985 M12
PC0985012000 (u. 1) |
| 16 | AJP-SPRING HOLDER
00QUS01A0017 (u. 1) |

18	AJP-RESSORT BEQUILLE EXT. 00QUS01A0013 (u. 1)
19	AJP-INNER SPRING 00QUS01A0014 (u. 1)
20	AJP-NUT DIN985 M6 PC0985006000 (u. 1)
24	AJP-WASHER DIN125 M8 AN0125008000 (u. 4)

REAR BRAKE PEDAL

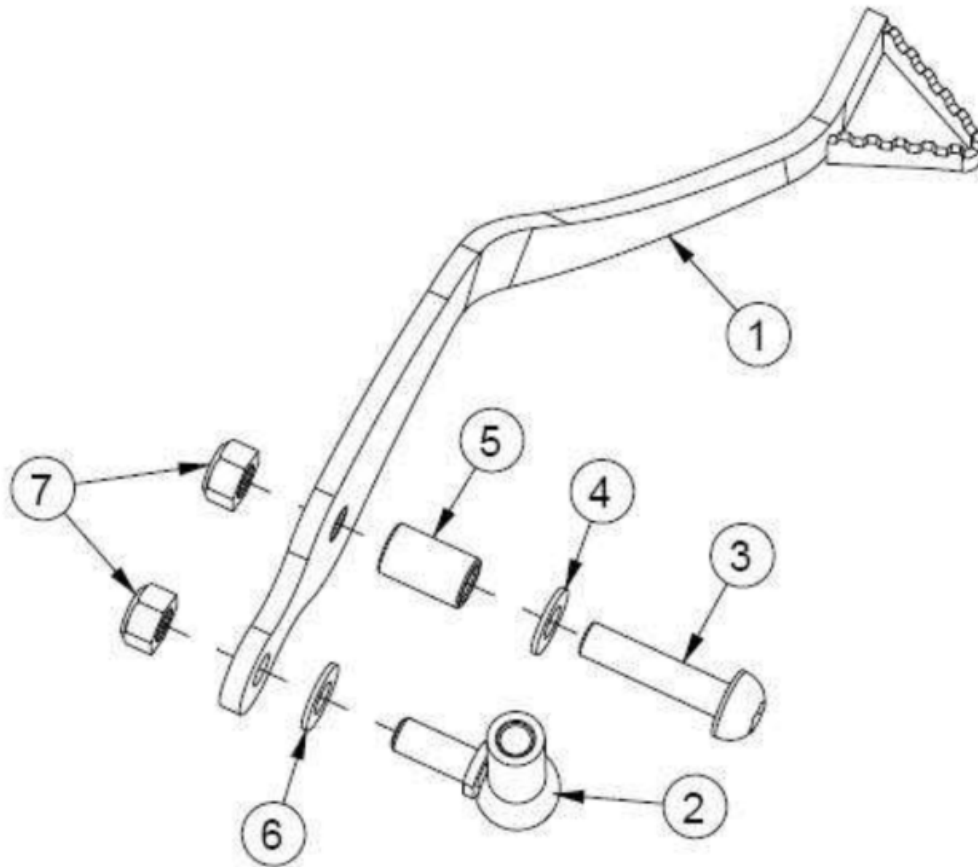

1 AJP-REAR BRAKE PEDAL PR3/PR4
00TRS07A0047 (u. 1)

2 AJP-PUSH ROD
00TRS06A0005 (u. 1)

3 AJP-SCREW DIN7380 M8X35
PF7380008035 (u. 1)


4 AJP-WASHER DIN125 M8
AN0125008000 (u. 1)

5 AJP-SPACE
00TRS07A0048 (u. 1)

6 AJP-PUSH ROD WASHER
00TRS07A0049 (u. 1)

7 AJP-NUT DIN985 M8
PC0985008000 (u. 2)


FUEL TANK

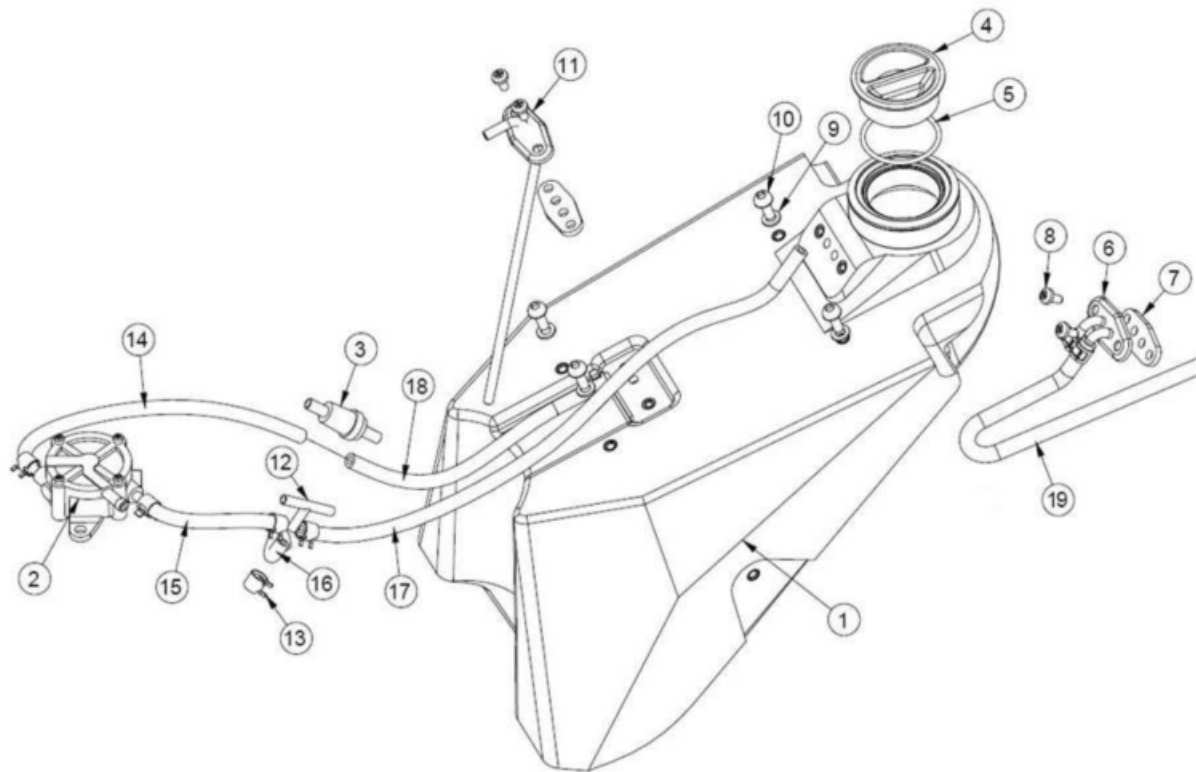

1	AJP-FUEL TANK 00DES01A0023 (u. 1)
2	AJP-FUEL PUMP PR3/PR4 00DES01A0006 (u. 1)
3	AJP-FUEL FILTER 00DES01A0007 (u. 1)
4	AJP-FUEL CAP 00DES02A0039 (u. 1)
5	AJP-GAS CAP O-RING 00DES01A0028 (u. 1)
6	AJP-BREATHER 00DES07A0025 (u. 1)
7	AJP-BREATHER GASKET 00DES01A0026 (u. 2)
8	AJP-SCREW DIN7985 M5X12 PF7985005012 (u. 4)
9	AJP-WASHER DIN125 M6 AN0125006000 (u. 4)
10	AJP-SCREW DIN7380 M6X12 PF7380006012 (u. 4)
11	AJP-FUEL FISHING TUBE UNTIL MAY 2015 00DES07A0024 (u. 1)
12	AJP-CONNECTOR 00DES01A0008 (u. 1)
13	AJP-BREATHER FILTER CLAMP 10MM 00DES01A0019 (u. 3)
14	AJP-FUEL TUBE 5X9X200 00DES01A0032 (u. 1)
15	AJP-FUEL TUBE 5X9X110 00DES01A0033 (u. 1)

16	AJP-FUEL TUBE 5X9X120 00DES01A0035 (u. 1)
17	AJP-FUEL TUBE 5X9X440 00DES01A0034 (u. 1)
18	AJP-FUEL TUBE 5X9X250 00DES01A0031 (u. 1)
19	AJP-FUEL TUBE 5X9X300 00DES01A0036 (u. 1)

FRONT SUSPENSION

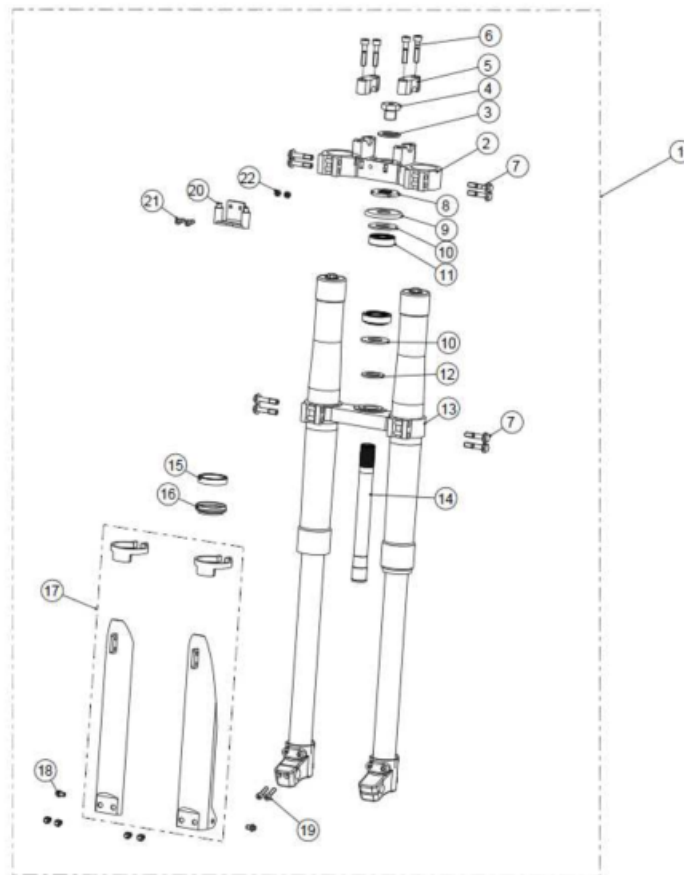

1 AJP-FRONT FORK ASSEMBLY MARZOCCHI EXTREME
00SFC01A0078 (u. 1)

2 AJP-UPPER BRACKET
00SFS01A0062 (u. 1)

3 AJP-PLUG FOR STEERING STEM FASTACE 2012
00SFS01A0088 (u. 1)

4 AJP-NUT M25X1
00SFS01A0006 (u. 1)

5 AJP-BAR MOUNT PR5
00SFS01A0061 (u. 1)

8 AJP-STEERING NUT
00SFS01A0007 (u. 1)

9 AJP-SEAL COVER
00SFS01A0064 (u. 1)

10 AJP-SEAL
00SFS01A0071 (u. 2)

11 AJP-BEARING 30205C
RL000032005C (u. 2)

12 AJP-WASHER DIN988 25X35X1.5
AN9880253515 (u. 1)

13 AJP-LOWER BRACKET
00SFS01A0067 (u. 1)


14 AJP-STEERING STEM PR4 ED. ESP E EXTREME
00SFS01A0080 (u. 1)

15 AJP-DUST SEAL
00SFS01A0069 (u. 2)

16 AJP-OIL SEAL
00SFS01A0070 (u. 2)

17	AJP-FORK PROTECTOR SET 00PLS01A0077 (u. 1)
18	AJP-UPPER BRACKET PR3 00SFS01A0055 (u. 6)

FRONT WHEEL

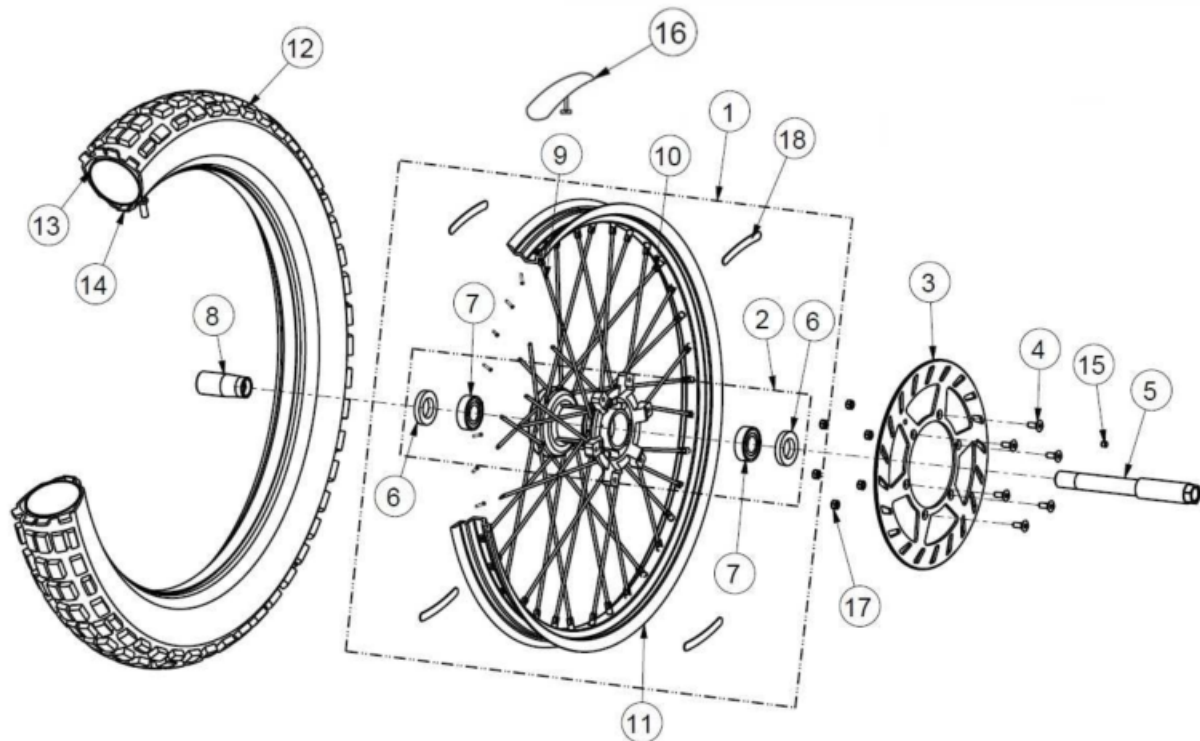

1 AJP-FRONT WHEEL BLACK RIM 1.60X21 PR4/PR5 EXTREME 2012
00RFC01A0061 (u. 1)

2 AJP-HUB RED PR4/PR5 2013
00RFS07A0053 (u. 1)

3 AJP-SPECIAL DISC FOR FRONT GALFER PR4/PR5 2013
00RFS01A0078 (u. 1)

4 AJP-SCREW DIN7991 M6X16
PF7991006016 (u. 6)

5 AJP-FRONT AXLE LH
00RFS05A0055 (u. 1)

6 AJP-DUST SEAL 25X42X7
00RFS01A0057 (u. 2)

7 AJP-BEARING 6004-2RS
RL00060042RS (u. 2)

8 AJP-SPACER FRONT AXLE RH
00RFS05A0057 (u. 1)

9 AJP-SPOKE EN 21" 245 X 3.8 PR4/PR5 2013 EXTREME
00RFS01A0082 (u. 36)

10 AJP-INNER TUBE 2.50/2.75-19
00RFS01A0051 (u. 36)

11 AJP-RIM EN BLACK 1.60"X21" EXTREME
00RFS01A0056 (u. 1)

12 AJP-TIRE MICHELIN EN 90/90-21"
00RFS01A0002 (u. 1)

13 AJP-INNER TUBE EN
00RFS01A0005 (u. 1)


14 AJP-WHEEL RIM TAPE 21"
00RFS01A0023 (u. 1)

15 AJP-FRONT DISC MAGNET
00RFS01A0042 (u. 1)

17 AJP-NUT M6
S40010600001 (u. 6)

18	AJP-STICKER RIM END 00BAS01A0083 (u. 4)
----	--


FRONT BRAKE

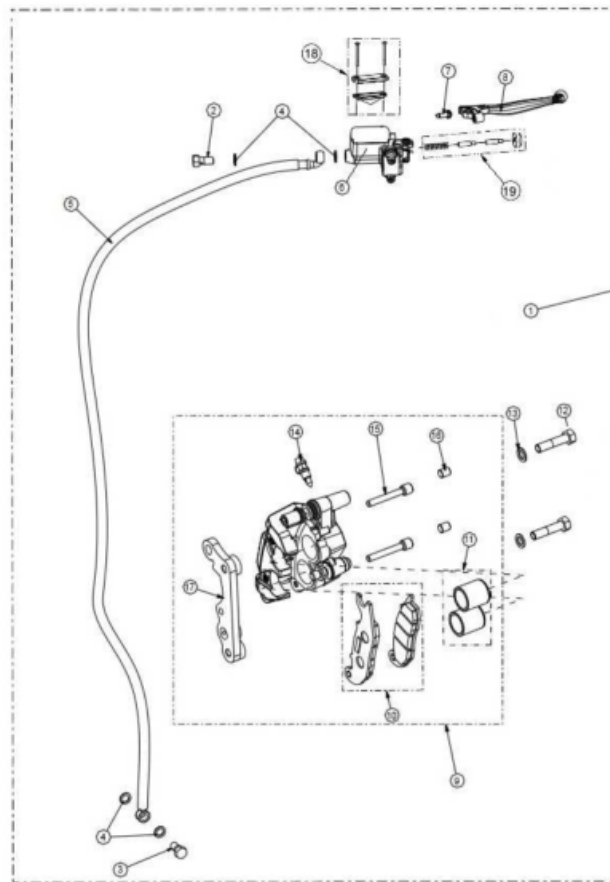

1	AJP-FRONT BRAKE ASSEMBLY COMPLETE PR5 2012 00TRC01A0097 (u. 1)
2	AJP-SCREW 1.25 PR3/PR4/PR5 00TRS01A0049 (u. 1)
3	AJP-SCREW M10X1 PR3/PR4/PR5 2012 00TRS01A0025 (u. 1)
4	AJP-WASHER 00TRS01A0103 (u. 4)
5	AJP-FRONT BRAKE HOSE PR4 2012 00TRS01A0021 (u. 1)
6	AJP-FRONT MASTER CYLINDER ASSEMBLY PR4/PR5 2012 00TRS01A0098 (u. 1)
7	AJP-STOP VALVE 00TRS01A0055 (u. 1)
8	AJP-BRAKE LEVER PR4/PR5 2012 00TRS01D0001 (u. 1)
9	AJP-FRONT CALIPER ASSEMBLY PR3/PR4/PR5 2012 00TRC01A0007 (u. 1)
10	AJP-FRONT PAD SET PR3/PR4/PR5 OUT. 2011 TO AUGUST 2014 00TRS01A0046 (u. 1)
11	AJP-FRONT PISTON SET PR3/PR4/PR5 2012 00TRS01A0069 (u. 1)
12	AJP-SCREW DIN933 M8X35 PF0933008035 (u. 2)
13	AJP-WASHER DIN127 M8 AN0127008000 (u. 2)
14	AJP-BLEEDER SCREW 00TRS01A0060 (u. 1)

15	AJP-FRONT PAD FIXATION SCREW PR3/PR4/PR5 2012 00TRS01A0064 (u. 2)
16	AJP-TAP FOR FRONT CALIPER 2012 00TRS01A0059 (u. 2)
17	AJP-SUPPORT OF FRONT CALIPER EXTREME PR5 00TRS07A0083 (u. 1)
	AJP-SUPPORT OF FRONT CALIPER PR5 2010-2013 00TRS01A0077 (u. 1)
18	AJP-DIAPHRAGM SET PR4/PR5 BRAKING 2012 00TRS01A0104 (u. 1)


SUSPENSION LINKS

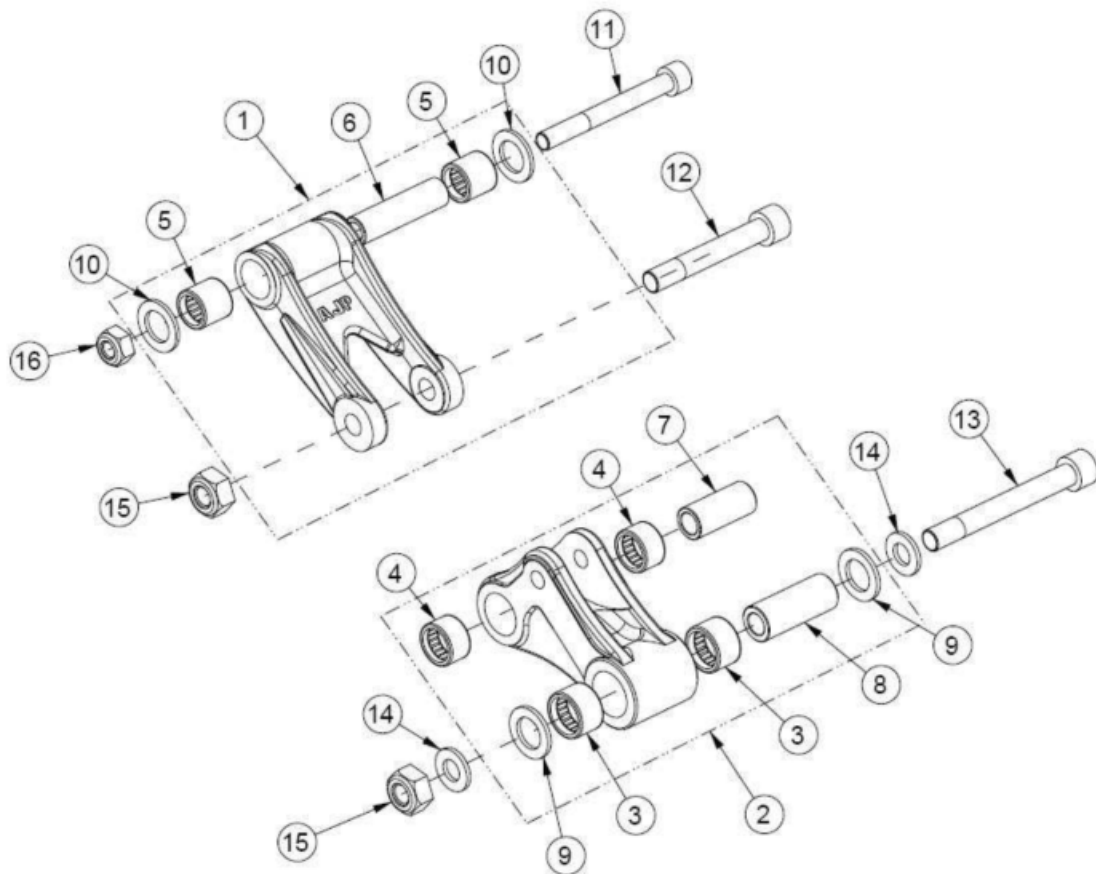

1	AJP-FRAME LINK ASSEMBLY 00STC07A0004 (u. 1)
2	AJP-REAR ARM LINK ASSEMBLY 00STC07A0005 (u. 1)
3	AJP-BEARING HK2016 RS RL00HK2016RS (u. 2)
4	AJP-BEARING HK1814 RS RL00HK1814RS (u. 2)
5	AJP-BEARING HK1620 RS RL00HK1620RS (u. 2)
6	AJP-SPACER 10X16X65 00STS07A0025 (u. 1)
7	AJP-SPACER 12X18X41 00STS07A0022 (u. 1)
8	AJP-SPACER 12X20X50 00STS07A0021 (u. 1)
9	AJP-WASHER 30X16X2 00STS01B0020 (u. 2)
11	AJP-SCREW DIN912 M10X90 PF0912010090 (u. 1)
12	AJP-SCREW DIN912 M12X80 PF0912012080 (u. 1)
13	AJP-SCREW DIN912 M12X105 PF0912012105 (u. 1)
14	AJP-WASHER DIN125 M12 AN0125012000 (u. 2)
15	AJP-NUT DIN985 M12 PC0985012000 (u. 2)


16	AJP-NUT DIN982 M10 PC0982010000 (u. 1)
----	---

SHOCK ABSORBER

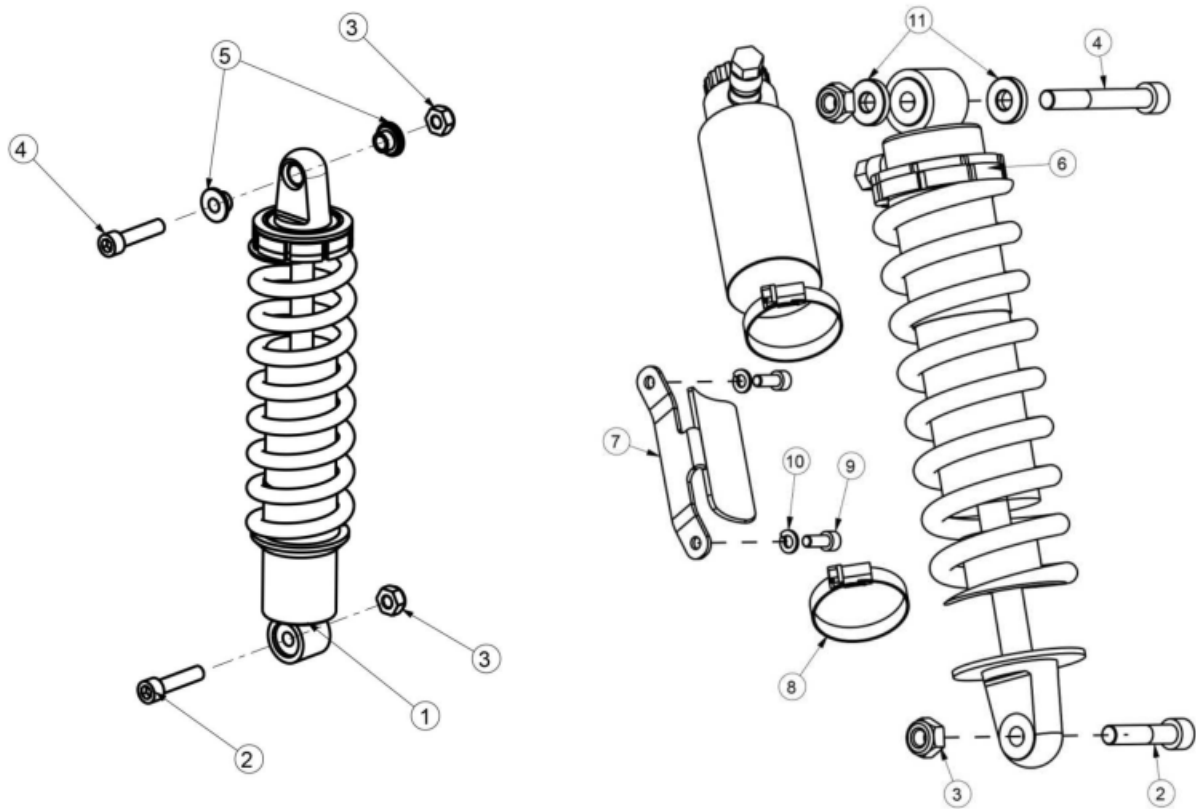

1	AJP-REAR SHOCK ABSORBER PR4 SACHS 00STC01A0072 (u. 1)
2	AJP-SCREW DIN912 M10X50 PF0912010050 (u. 1)
3	AJP-NUT DIN982 M10 PC0982010000 (u. 2)
4	AJP-SCREW DIN912 M10X80 PF0912010080 (u. 1)
5	AJP-SPACER 8X22X10 00STS07A0087 (u. 2)
6	AJP-REAR SHOCK ABSORBER PR4 PRO SACHS 00STC01A0073 (u. 1)
7	AJP-RESERVOIR BRACKET 00QUS07A0035 (u. 1)
8	AJP-RESERVOIR CLAMP 00STS01A0036 (u. 2)
9	AJP-SCREW DIN933 M6X16 PF0933006016 (u. 2)
10	AJP-WASHER DIN125 M6 AN0125006000 (u. 2)
11	AJP-SPACER 5X10X24 00STS07A0030 (u. 2)

REAR WHEEL

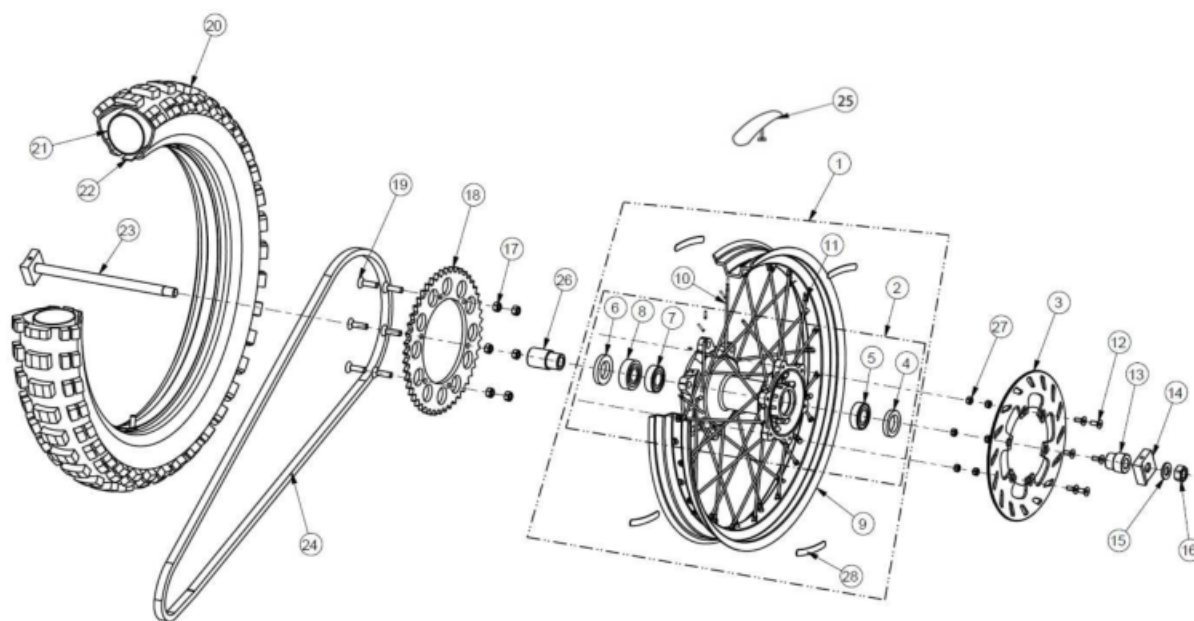

1 AJP-REAR WHEEL RIM BLACK 2.15X18 PR4/PR5 EXTREME 2012
00RTC01A0077 (u. 1)

2 AJP-REAR HUB RED PR4 /PR5 2013
00RTS07A0078 (u. 1)

3 AJP-SPECIAL DISC FOR REAR PR4/PR5 2013
00RTS01A0105 (u. 1)

4 AJP-DUST SEAL 47X7X30
00RTS01A0022 (u. 2)

5 AJP-BEARING 6204 2RS
RL00062042RS (u. 1)

AJP-BEARING 6005 2RS
RL00060052RS (u. 1)

6 AJP-DUST SEAL 47X7X30
00RTS01A0022 (u. 1)

AJP-DUST SEAL 28X42X7
00RTS01A0024 (u. 1)

7 AJP-BEARING 6005 2RS
RL00060052RS (u. 1)

AJP-BEARING 6005 2RS
RL00060052RS (u. 1)

8 AJP-BEARING 6204 2RS
RL00062042RS (u. 1)

9 AJP-WHEEL RIM BLACK EN 2.15X18 PR4/PR5 2012
00RTS01A0075 (u. 0)

AJP-WHEEL RIM BLACK EN 2.15X18 EXTREME
00RTS01A0074 (u. 1)

10 AJP-SPOKE EN RH 198X3.8 PR4/PR5 EXTREME
00RTS01A0115 (u. 18)

11 AJP-SPROCKET Z46
00RTS01A0077 (u. 18)


12 AJP-SCREW DIN7991 M6X20
PF7991006020 (u. 6)

13 AJP-SPACER REAR WHEEL RH PR4 EXTREME
00RTS07A0081 (u. 1)

14 AJP-CHAIN ADJUSTER RH
00RTS02A0042 (u. 1)

15	AJP-WASHER DIN125A M14 AN125A014000 (u. 1)
16	AJP-NUT DIN934 M14 PC0934014000 (u. 1)
17	AJP-NUT DIN985 M8 PC0985008000 (u. 6)
18	AJP-SPROCKET BRAZIL 00RTS01A0106 (u. 1)
19	AJP-SCREW DIN7991 M8X25 PF7991008025 (u. 6)
20	AJP-TYRE MICHELIN 120/90-18 00RTS01A0002 (u. 1)
21	AJP-INNER TUBE TR 120/90-18 00RTS01A0005 (u. 1)
22	AJP-WHEEL RIM TAPE 1.60/2.00X 18/19 00RTS01A0025 (u. 1)
23	AJP-REAR SHAFT 00RTS07A0040 (u. 1)
24	AJP-CHAIN 520H -112 WITHOUT ORING 00RTS01A0090 (u. 1)
25	AJP-RIM LOCK 2.15 00RTS01A0052 (u. 1)
26	AJP-SPACER REAR WHEEL RH PR4 EXTREME 00RTS07A0082 (u. 1)
27	AJP-NUT M6 S40010600001 (u. 6)
28	AJP-STICKER RIM END 00BAS01A0083 (u. 4)


REAR BRAKE

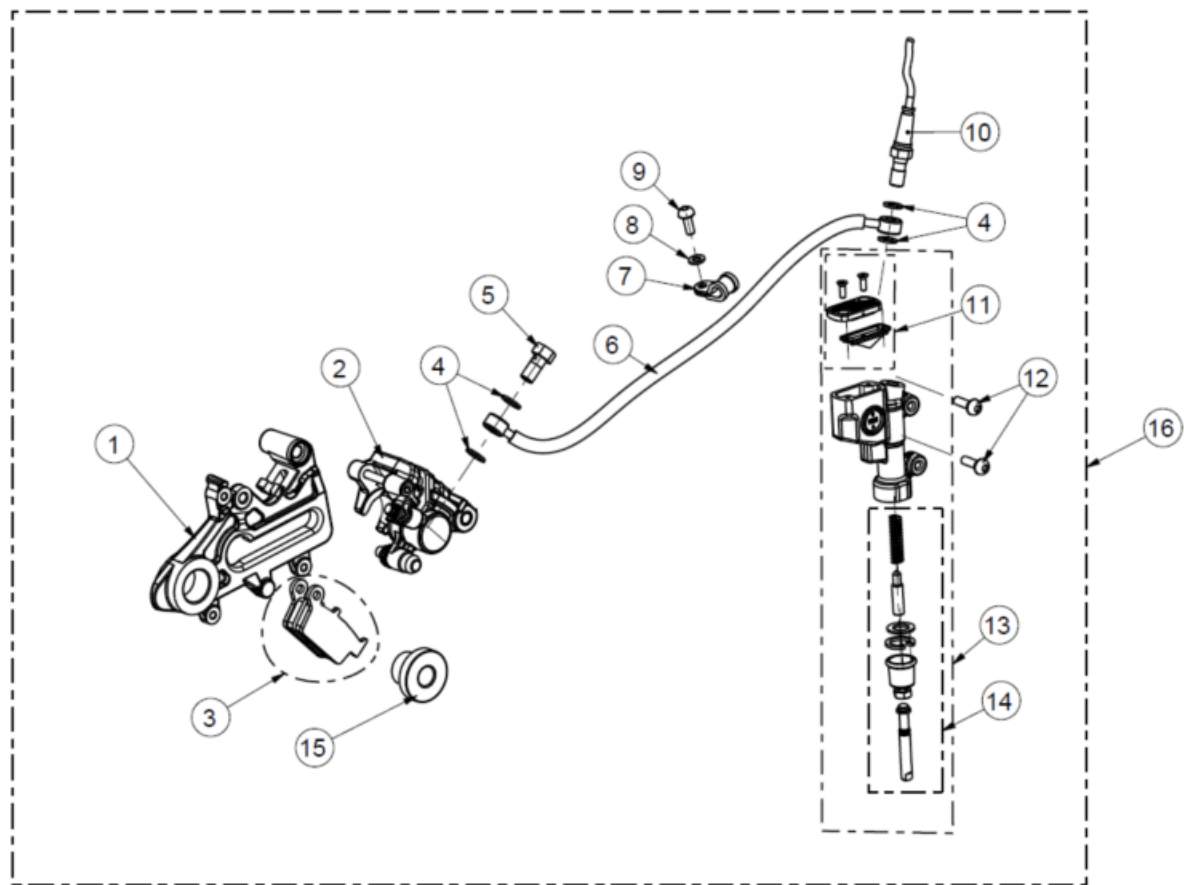

1	AJP-SUPPORT OF REAR CALIPER PR4 2012 BRAKING 00TRS01A0031 (u. 1)
2	AJP-REAR CALIPER ASSEMBLY PR4/PR5 2012 00TRC01A0099 (u. 1)
3	AJP-REAR PAD SET PR4/PR5 2012 00TRS01A0100 (u. 1)
4	AJP-WASHER 00TRS01A0103 (u. 4)
5	AJP-SCREW 1.25 PR3/PR4/PR5 00TRS01A0049 (u. 1)
6	AJP-REAR BRAKE HOSE PR4 2012 00TRS01A0022 (u. 1)
7	AJP-HOLDER 00TRS01A0037 (u. 1)
8	AJP-WASHER DIN125A M6 AN125A006000 (u. 1)
9	AJP-SCREW DIN7380 M6X12 PF7380006012 (u. 1)
10	AJP-STOP VALVE 00TRS01A0039 (u. 1)
11	AJP-DIAPHRAGM SET REAR PR3/PR4 E PR5 2012 00TRS01A0102 (u. 1)
12	AJP-SCREW DIN7380 M6X20 PF7380006020 (u. 2)
13	AJP-REAR MASTER CYLINDER PR3/PR4/PR5 00TRS01A0095 (u. 1)
14	AJP-PISTON&CUP SET PR3/PR4/PR5 SINCE 04/10/2011 - 2014 00TRS01A0101 (u. 1)


15	AJP-SPACER SUPPORT OF REAR CALIPER PR4 2012/2013 00TRS07A0080 (u. 1)
16	AJP-REAR BRAKE CALIPER COMPLETE 00TRC01A0098 (u. 1)

FRAME COVER

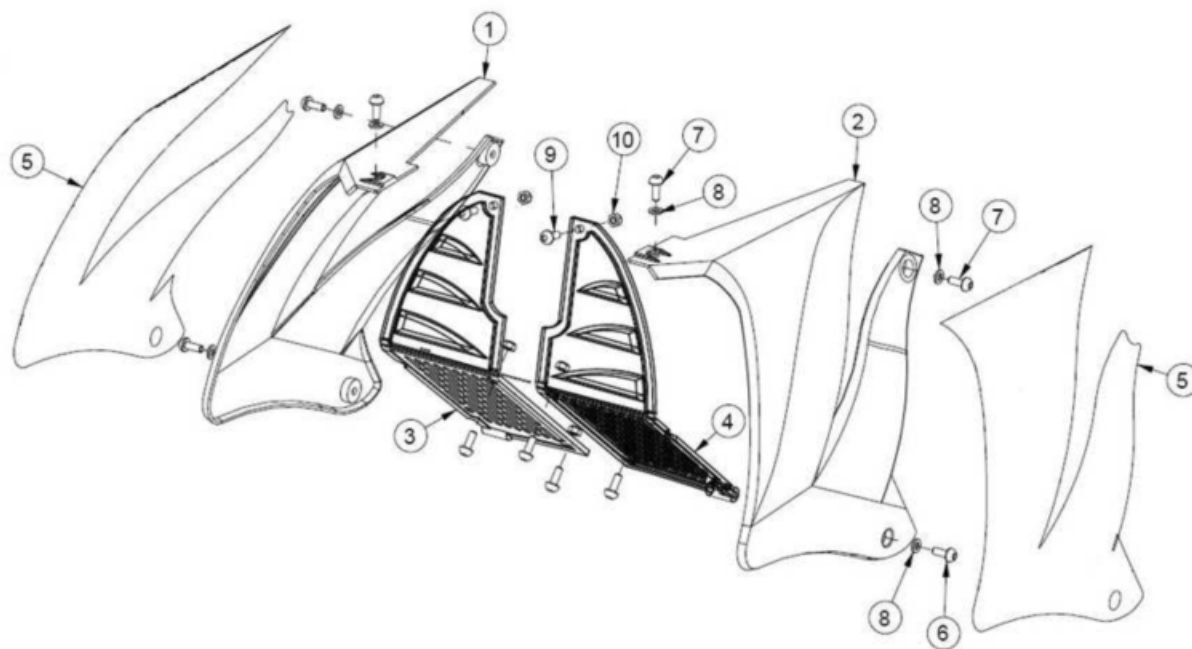


1	AJP-RADIATOR COVER RH WHITE 00PLS01A0067 (u. 1)
2	AJP-RADIATOR COVER LH WHITE 00PLS01A0068 (u. 1)
3	AJP-FRONT FRAME COVER RH. 00PLS01A0055 (u. 1)
4	AJP-FRONT FRAME COVER RH. 00PLS01A0055 (u. 1)
5	AJP-KIT FRONT COVER STICKER LH/RH PR3/PR4 125/200/240 2013 00BAS01A0110 (u. 1)
6	AJP-SCREW DIN7380 M6X20 PF7380006020 (u. 2)
7	AJP-SCREW DIN7380 M6X16 PF7380006016 (u. 4)
8	AJP-WASHER DIN125 M6 AN0125006000 (u. 6)
9	AJP-SCREW DIN7380 M6X16 PF7380006016 (u. 6)
10	AJP-NUT DIN985 M6 PC0985006000 (u. 6)

FRONT PLASTICS

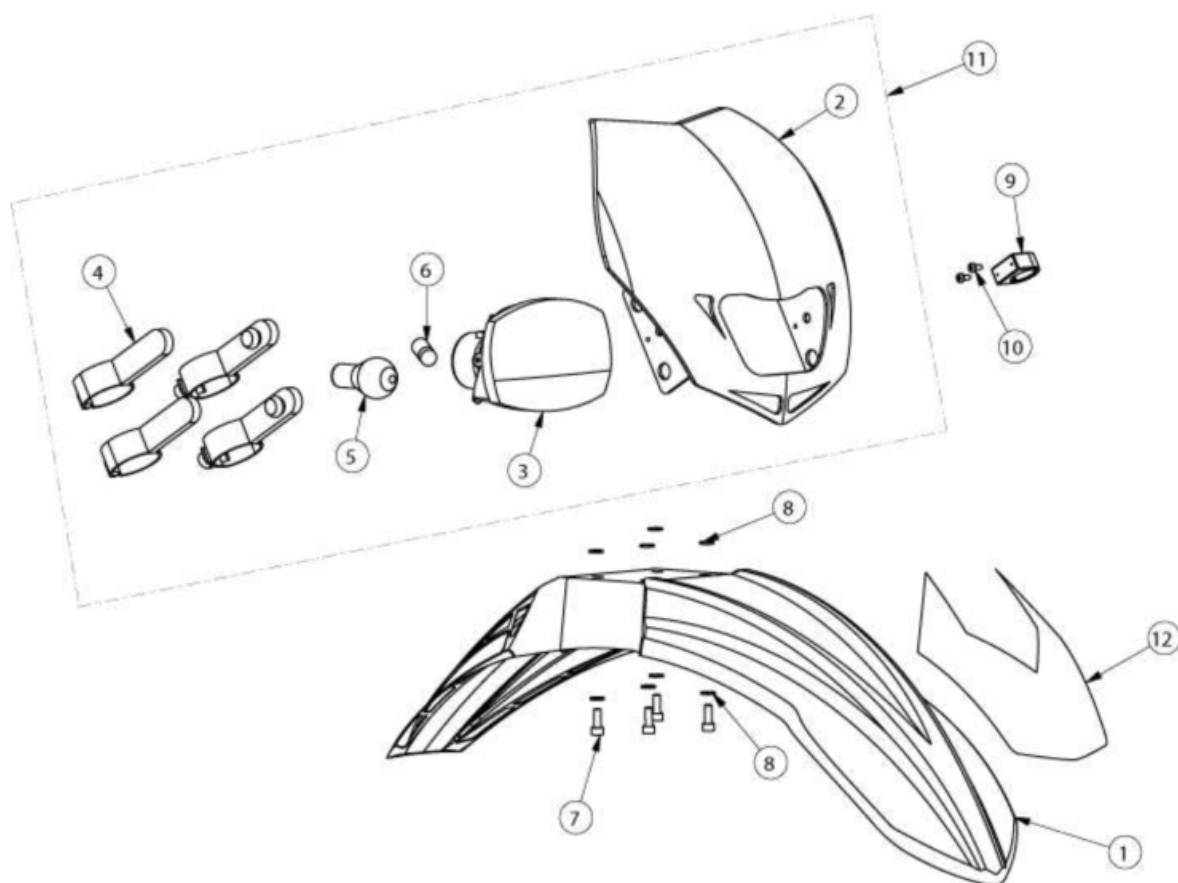


1	AJP-FRONT FENDER SM WHITE 00PLS01A0072 (u. 0)
	AJP-FRONT FENDER EN WHITE PR4 00PLS01A0070 (u. 0)
2	AJP-HEADLAMP COVER 00PLS01A0061 (u. 0)
3	AJP-HEADLAMP 00ELC01A0028 (u. 0)
4	AJP-BAND 00PLS01A0007 (u. 0)
5	AJP-FRONT FENDER BLUE SM/SM 00PLS01A0005 (u. 0)
7	AJP-SCREW DIN912 M6X20 PF0912006020 (u. 0)
8	AJP-WASHER DIN9021 M6 AN9021006000 (u. 0)
9	AJP-HOLDER 00PLS01A0042 (u. 0)
10	AJP-SCREW 3.5 PF7981003513 (u. 0)
11	AJP-HEAD LAMP STICKER PR4 2013 00BAS01A0117 (u. 0)
	AJP-HEADLAMP COVER ASSEMBLY WHITE 00PLC01A0071 (u. 0)
12	AJP-FRONT FENDER STICKER PR4 2013 EXTREME 00BAS01A0129 (u. 0)

REAR FENDER

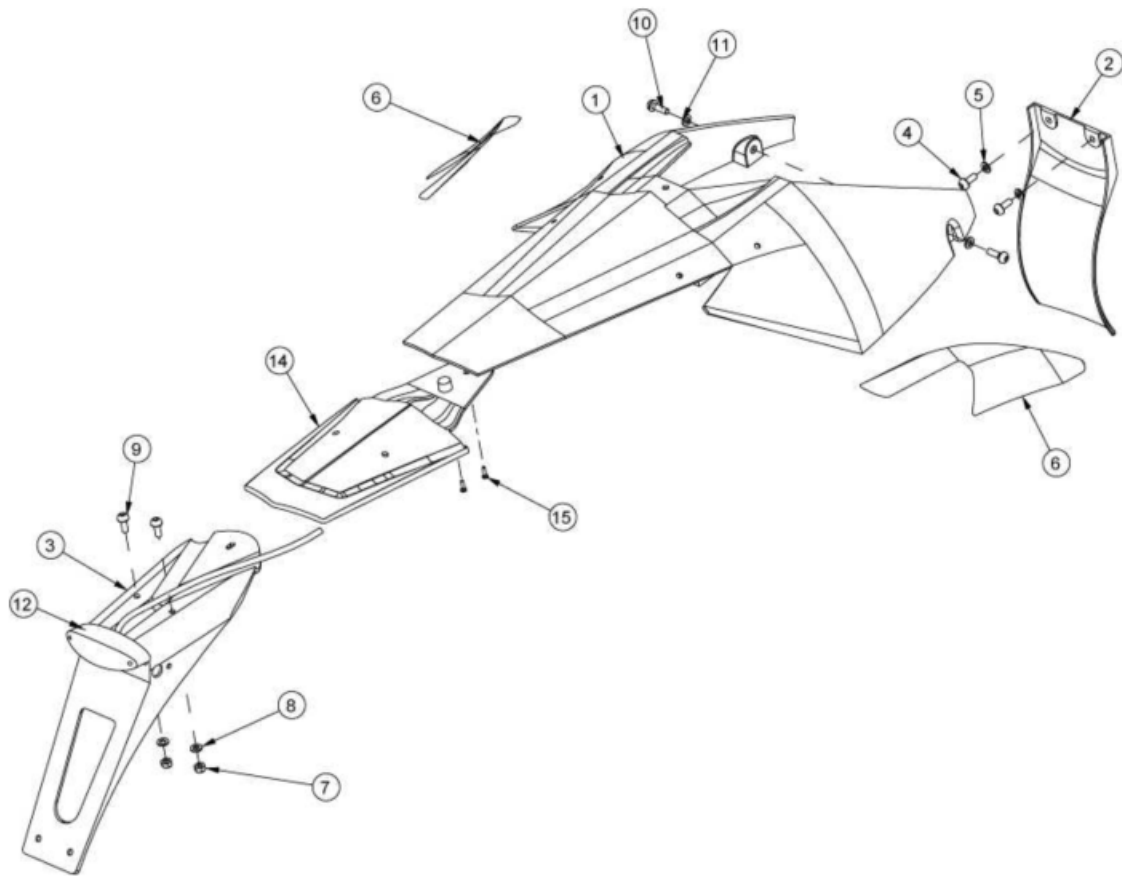


1	AJP-REAR FENDER WHITE 00PLS01A0074 (u. 1)
2	AJP-MUD GARD 00PLS01A0013 (u. 1)
3	AJP-SPOILER EXTREME 00PLC01A0008 (u. 1)
4	AJP-SCREW DIN7380 M6X12 PF7380006012 (u. 2)
5	AJP-WASHER DIN125 M6 AN0125006000 (u. 2)
6	AJP-KIT REAR COVER STICKER LH/RH PR3/PR4 240 2013 00BAS01A0115 (u. 1)
7	AJP-NUT DIN985 M6 PC0985006000 (u. 2)
8	AJP-WASHER DIN125 M6 AN0125006000 (u. 2)
9	AJP-SCREW DIN7380 M6X20 PF7380006020 (u. 2)
10	AJP-SCREW DIN7380 M6X16 PF7380006016 (u. 2)
11	AJP-WASHER DIN9021 M6 AN9021006000 (u. 2)
12	AJP-REAR LED SPOILER 00PLS01A0065 (u. 1)
14	AJP-REAR FENDER SUPLEMENT 00PLS01A0063 (u. 1)
15	AJP-SCREW FOR REAR FENDER PR3/PR4 4.8X16 PF6928004816 (u. 2)

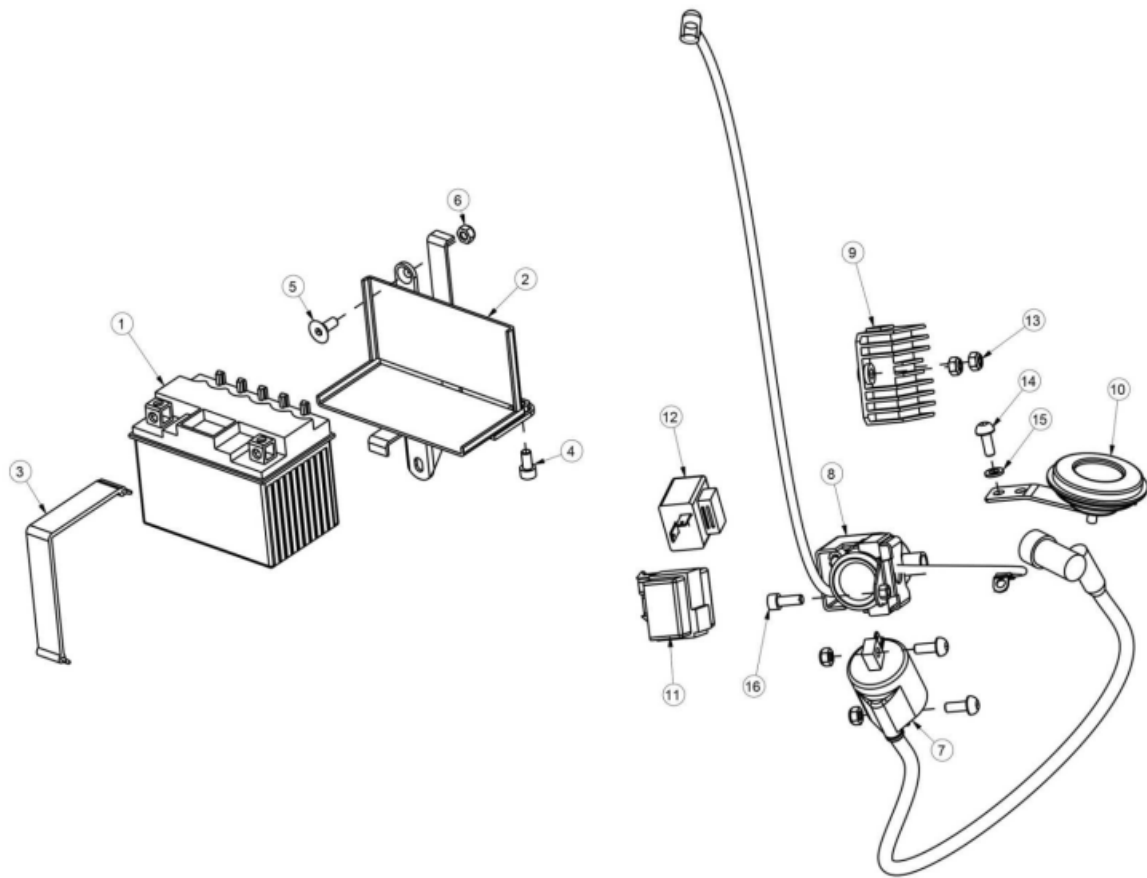BATTERY – ELECTRIC SYSTEM


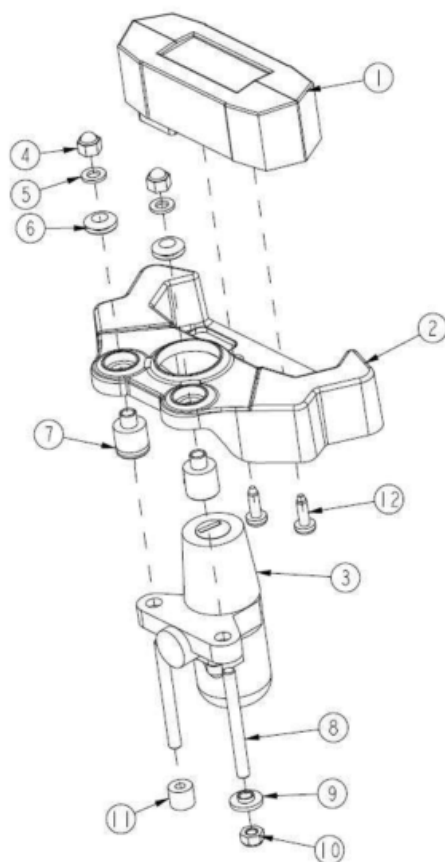
1	AJP-BATTERY YTX5LBS 00ELS01B0001 (u. 1)
2	AJP-BATTERY HOLDER 00ELS04A0003 (u. 1)
3	AJP-BAND 00ELS01A0004 (u. 1)
4	AJP-SCREW DIN912 M6X16 PF0912006016 (u. 1)
5	AJP-SCREW DIN7991 M6X16 PF7991006016 (u. 1)
6	AJP-NUT DIN985 M6 PC0985006000 (u. 1)
7	AJP-IGNITION COIL ASSEMBLY 91A231400000 (u. 1)
8	AJP-STARTER RELAY 93A283100000 (u. 1)
9	AJP-RECTIFIER 94A213100000 (u. 1)
10	AJP-HORN 12V CC 00ELS01A0005 (u. 1)
11	AJP-CDI 93A231000000 (u. 1)
12	AJP-TURN LIGHTS RELAY 00ELS01A0006 (u. 1)
13	AJP-NUT DIN985 M6 PC0985006000 (u. 4)
14	AJP-SCREW DIN7380 M6X16 PF7380006016 (u. 2)

15	AJP-WASHER DIN125 M6 AN0125006000 (u. 1)
----	---

WIRE HARNESS

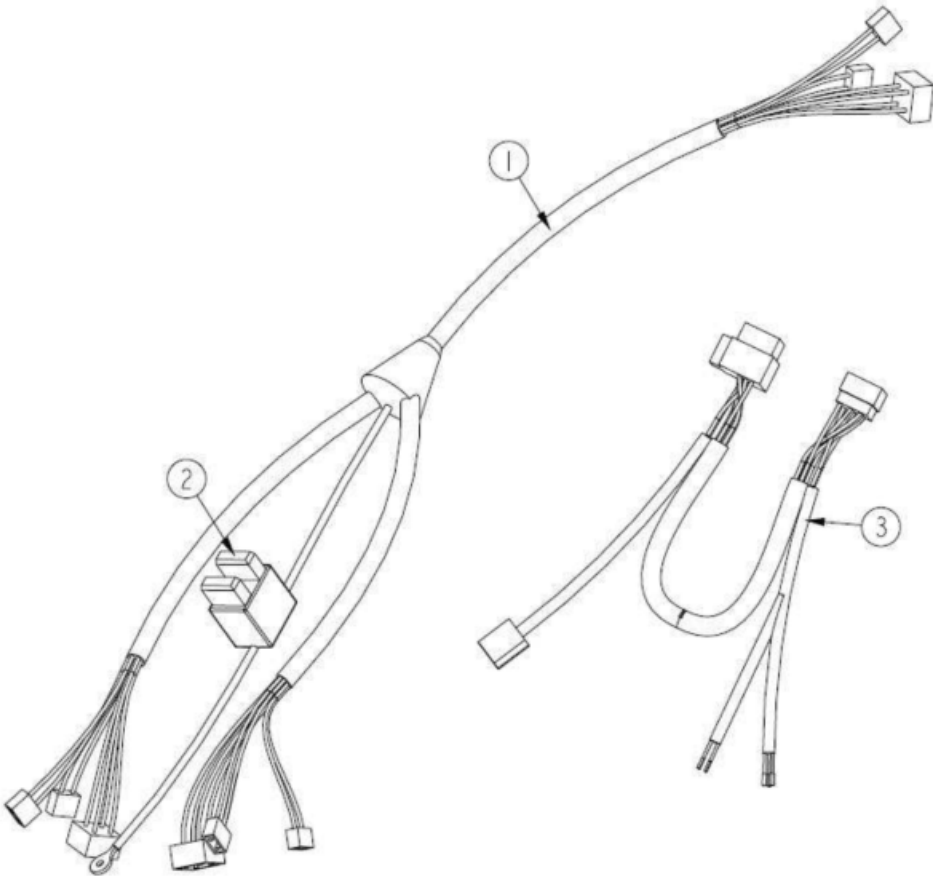


1	AJP-WIRING HARNESS PR3 00ELC01A0038 (u. 1)
2	AJP-FUSE 00ELS01A0017 (u. 1)
3	AJP-SPEEDOMETER WIRING 00ELS01A0037 (u. 1)

COCKPIT


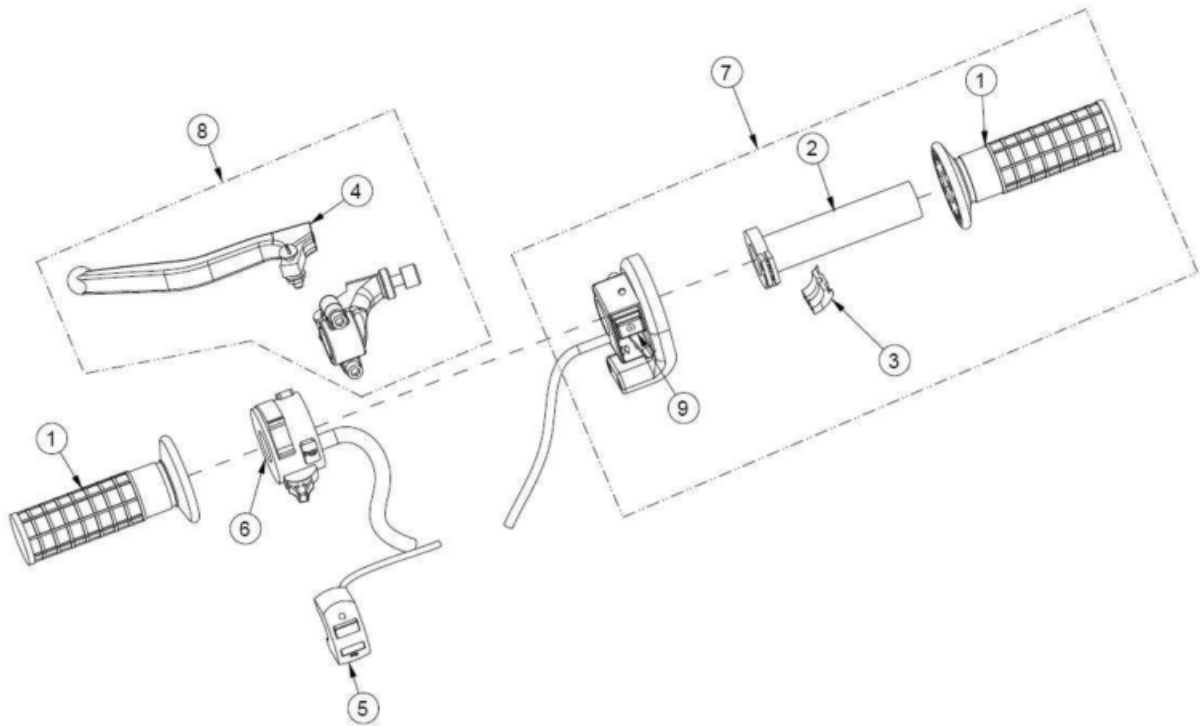
1	AJP-SPEEDOMETER 00ELS01A0036 (u. 1)
2	AJP-SPEEDOMETER COVER 00ELS01A0035 (u. 1)
3	AJP-IGNITION SWITCH ASSEMBLY 00COS01A0018 (u. 1)
4	AJP-NUT DIN1587 M6 PC1587006000 (u. 2)
5	AJP-WASHER DIN125 M6 AN0125006000 (u. 2)
6	AJP-CUSHION 00COS01A0016 (u. 2)
7	AJP-SPACER 00COS07A0030 (u. 2)
8	AJP-STUD M6X60 00COS01A0022 (u. 2)
9	AJP-SPACER 16X4.4X6 00COS07A0015 (u. 2)
10	AJP-NUT DIN985 M6 PC0985006000 (u. 1)
11	AJP-NUT M6 FUSE 00COS01A0023 (u. 1)

TURN SIGNALS

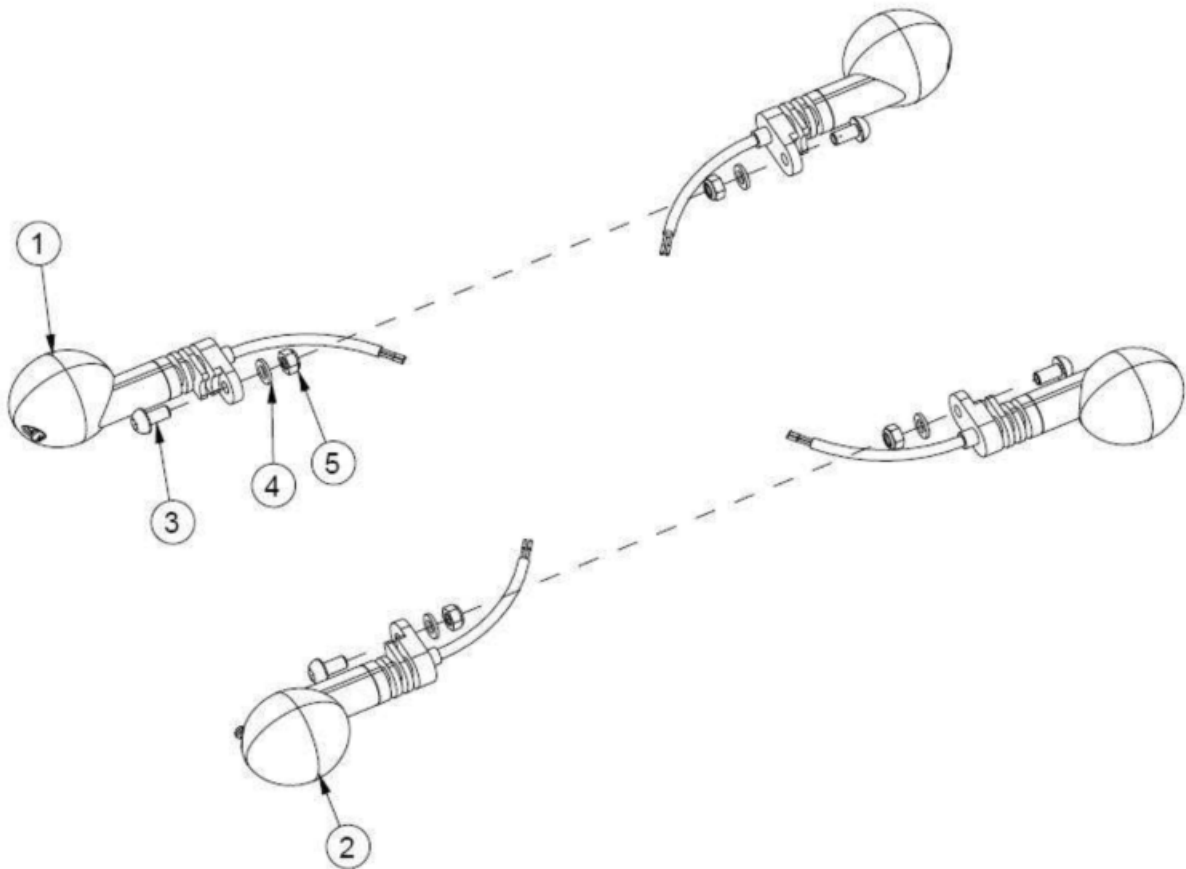


1	AJP-TURN LAMP ASSEMBLY LH 00ELC01A0002 (u. 0)
2	AJP-TURN LAMP ASSEMBLY RH 00ELC01A0001 (u. 0)
3	AJP-SCREW DIN7380 M6X16 PF7380006016 (u. 0)
4	AJP-WASHER DIN125 M6 AN0125006000 (u. 0)
5	AJP-NUT DIN985 M6 PC0985006000 (u. 0)

CONTROLS




1	AJP-SET OF GRIPS 00COC01A0003 (u. 1)
2	AJP-THROTTLE TUBE 00COS01A0003 (u. 1)
3	AJP-GUIDE THROTTLE CABLE 00COS01A0004 (u. 1)
4	AJP-CLUTCH LEVER SPECIAL REIKON 00COC01A0028 (u. 1)
5	AJP-ON/OFF SWITCH 00ELS01A0023 (u. 1)
6	AJP-COMMODO GAUCHE 00ELC01A0003 (u. 1)
7	AJP-THROTTLE CONTROL ASSEMBLY 00COC01A0002 (u. 1)
8	AJP-CLUTCH LEVER ASSEMBLY REIKON 00COC01A0027 (u. 1)
9	AJP-STARTING BUTTON 00COS01A0029 (u. 1)

HANDLEBAR

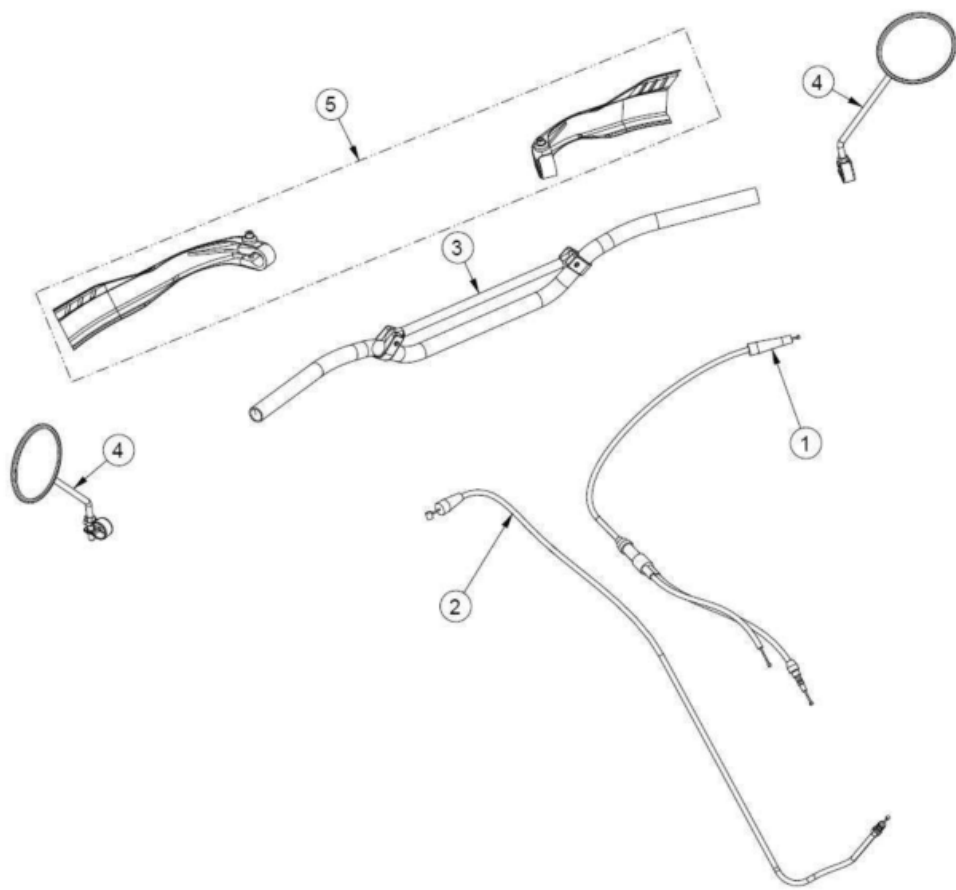

1	AJP-THROTTLE CABLE PR3/PR4 00COS01B0005 (u. 1)
3	AJP-HANDLEBAR PR3/PR4 REIKON 00COS01A0001 (u. 1)
4	AJP-REAR VIEW MIRROR 00COS01A0021 (u. 2)
5	AJP-HAND GARDS WHITE 00PLS01A0073 (u. 1)

SEAT

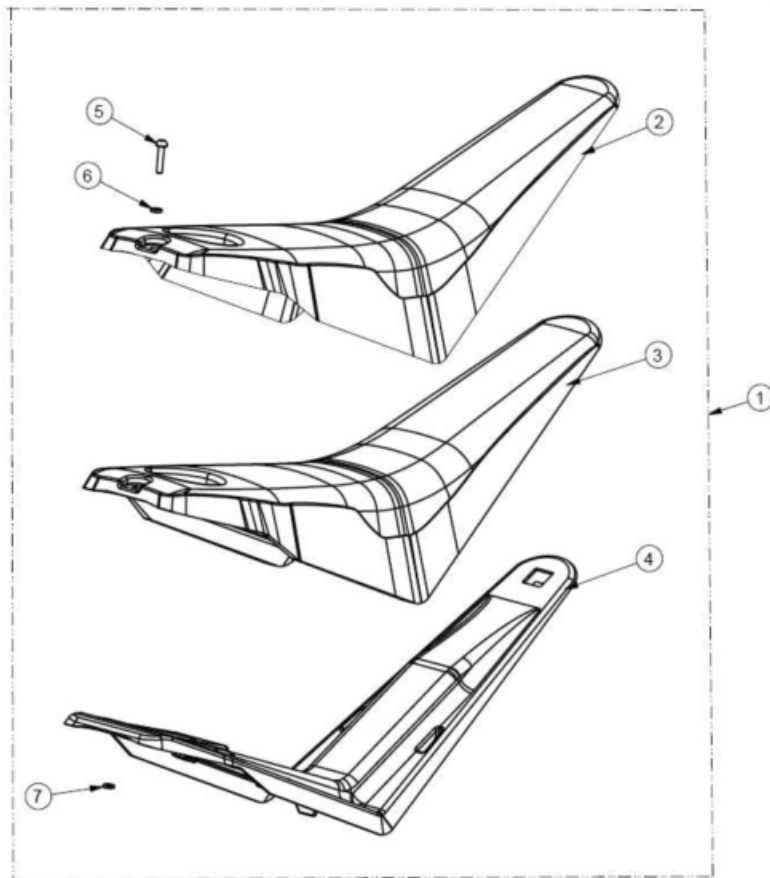

1	AJP-SEAT ASSEMBLY 00BAC01A0025 (u. 1)
2	AJP-SEAT COVER 00BAS01A0094 (u. 1)
3	AJP-FOAM SADDLE 00BAS01A0003 (u. 1)
4	AJP-SEAT BASE 00BAS01A0004 (u. 1)
5	AJP-SCREW DIN912 M6X30 PF0912006030 (u. 1)
6	AJP-WASHER DIN9021 M6 AN9021006000 (u. 1)
7	AJP-INNER WASHER 00BAS01A0028 (u. 1)