





PR5 250 LC 2023

Exploded

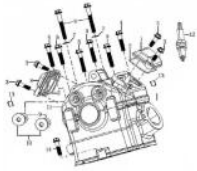

CYLINDER HEAD ASSY

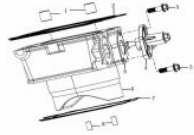

CYLINDER ASSEMBLY




VALVE MECHANISM




RIGHT CRANKCASE COVER




LEFT CRANKCASE COVER

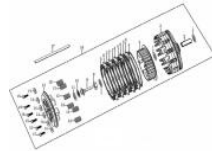


CLUTCH

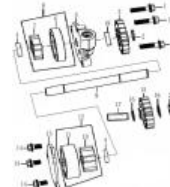


OIL PUMP

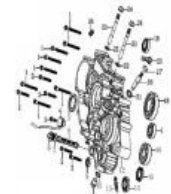


LEFT CRANKCASE

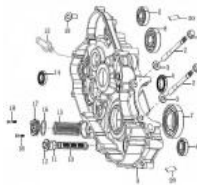


RIGHT CRANKCASE

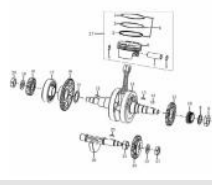


**CRANKSHAFT CONNECTING-ROD
ASSY, PISTON**

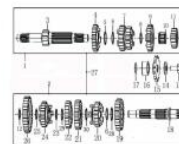


GEARBOX

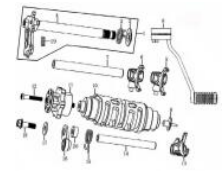


GEARSHIFT MECHANISM

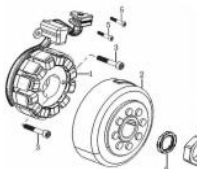

MAGNETO

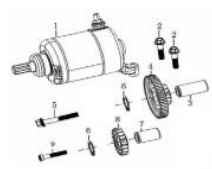


ELECTRIC STARTER

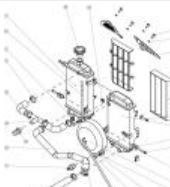


WATER RADIATOR




AIR FILTER

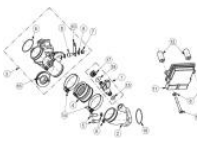


INJECTION SYSTEM

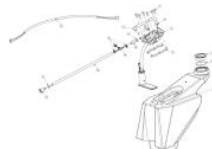


FUEL TANK

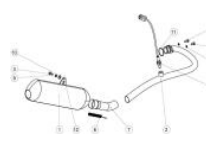


EXHAUST SYSTEM

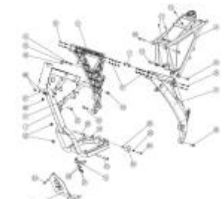


FRAME

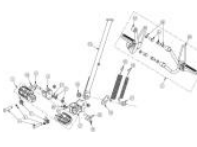


SIDE STAND FOOTPEG

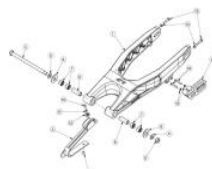

REAR SWING ARM

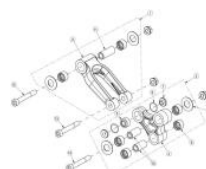


SUSPENSION LINKS

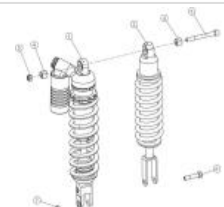


REAR SHOCK ABSORBER



FRONT SUSPENSION

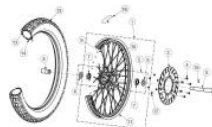


FRONT WHEEL

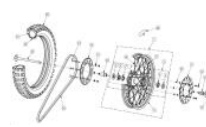


REAR WHEEL



FRONT BRAKE

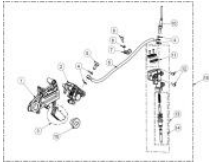


REAR BRAKE

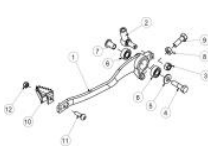


REAR BRAKE PEDAL



 HANDLEBAR




MAIN CONTROLS

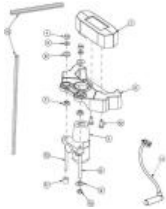

COCKPIT



ELECTRICAL SYSTEM

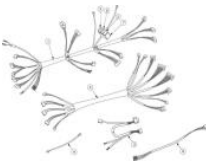

WIRING HARNESS



TURN SIGNAL




FRONT PLASTICS



REAR FENDER




FRAME COVER

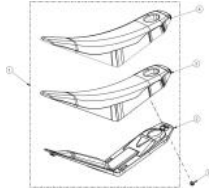

SEAT


CYLINDER HEAD ASSY

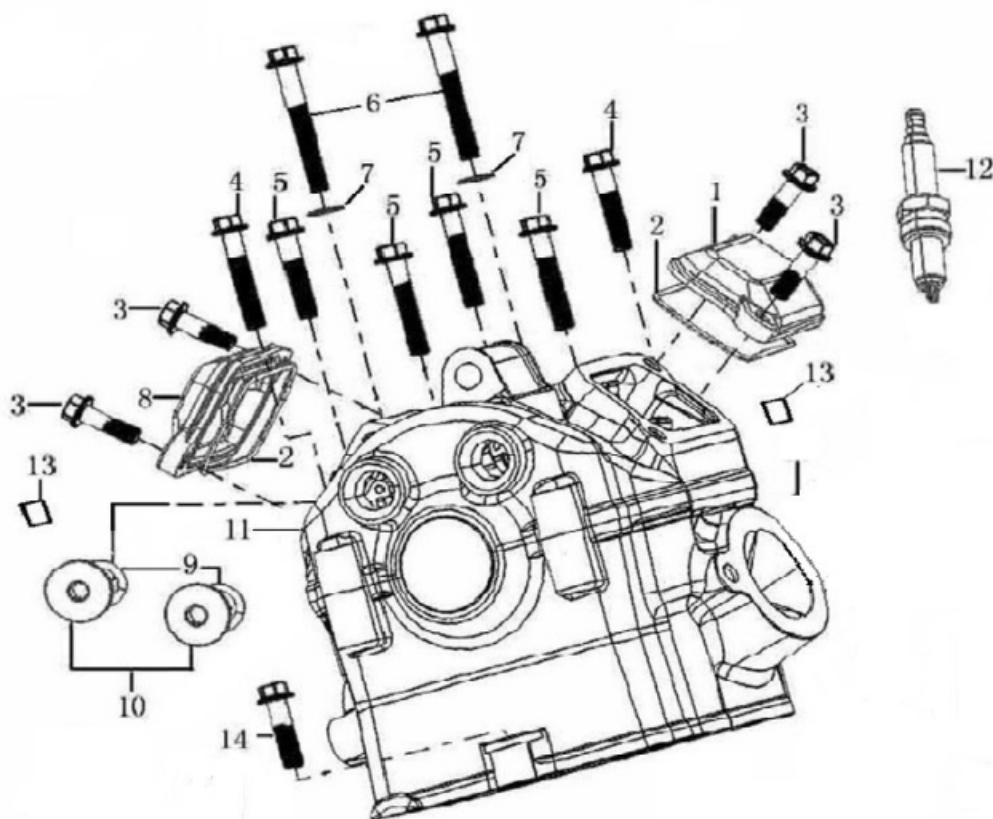


1	AJP-COVER. VALVE CHAMBER PR5 2013 11230ME3000000W (u. 1)
2	AJP-RING PR5 2013 90104ME300000 (u. 2)
3	AJP-BOLT M6×20 PR5 2013 B166740A06002070X (u. 4)
4	AJP-BOLT M6×35 PR5 2013 B166740A06003570X (u. 2)
5	AJP-BOLT M6×30 PR5 2013 B166740A06003070X (u. 4)
6	AJP-BOLT M6×60 LC ATE FEV 2015 91119ME300000X (u. 2)
7	AJP-WASHER 6.5×1.5×12 PR5 2013 9330180651512000 (u. 2)
8	AJP-COVER. VALVE CHAMBER PR5 2013 11230ME3001000W (u. 1)
9	AJP-O-RING 11.8×2.6 PR5 2013 9010130118000260 (u. 2)
10	AJP-BOLT PR5 2013 15415ME300000 (u. 2)
11	AJP-CYLINDER HEAD 250CC PR5 2013 1122BME3000000W (u. 1)
	AJP-CYLINDER HEAD MODIFY BY ROBBY MOTO PR5 2013 00MTS01A0099 (u. 1)
12	AJP-SPARK PLUG NGK CR8 EH-9 PR5 2013 00ELS01A0058 (u. 1)
	AJP-SPARK PLUG PR5 2013 81300BA810200 (u. 1)

13	AJP-DOWEL PIN 8X12X6.3 PR5 2013 9152108001200000 (u. 0)
14	AJP-BOLT M6x25 PR5 2013 B166740A06002570X (u. 1)

CYLINDER ASSEMBLY

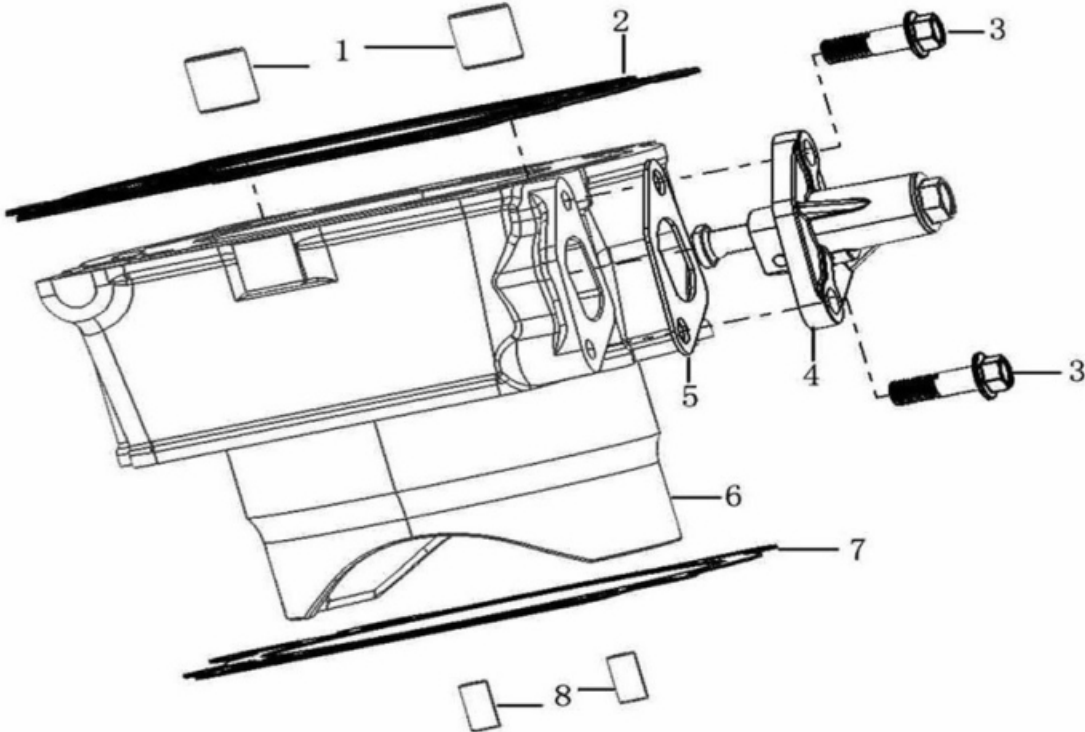

1	AJP-PIN 13×14 PR5 2013 9152113001400000 (u. 2)
2	AJP-GASKET ASSY.CYLINDER HEAD PR5 2013 9022BME300000 (u. 1)
3	AJP-BOLT M6×25 PR5 2013 B166740A06002570X (u. 2)
4	AJP-PLUG OF TIGHTENER PR5 2013 1554BME3000000W (u. 1)
5	AJP-GASKET.TENSIONER PR5 2013 90211BA810000 (u. 1)
6	AJP-CYLINDER PR5 2013 1110BME3000000W (u. 1)
7	AJP-GASKET CYLINDER PR5 2013 90205ME300000 (u. 1)
8	AJP-PIN 6×12 PR5 2013 9152206001200000 (u. 2)

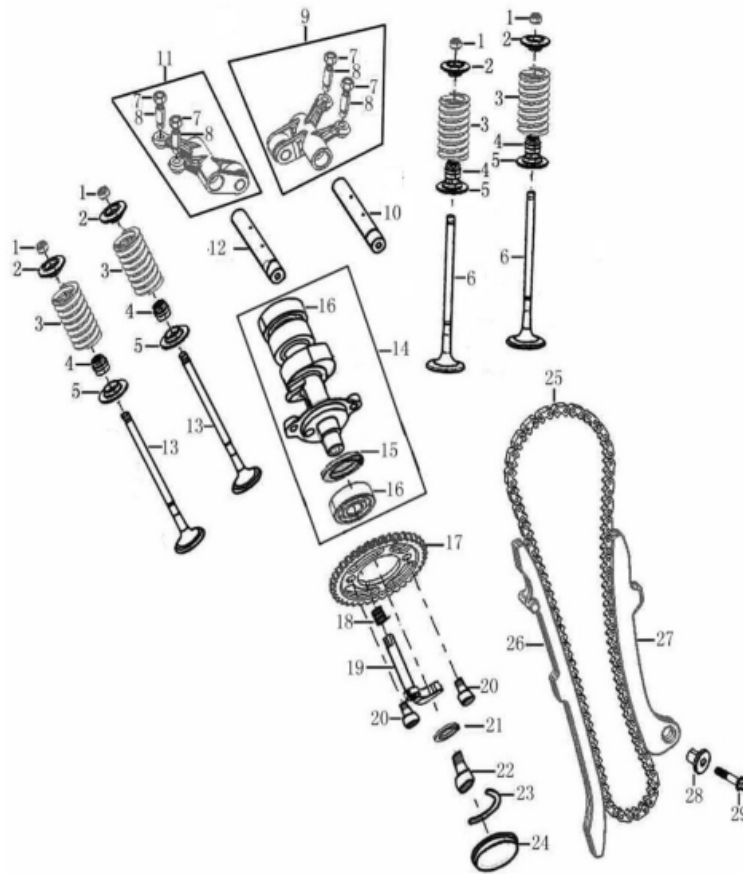VALVE MECHANISM


(u. 1)

(u. 1)

-

(u. 1)

(u. 1)

1

 AJP-VALVE LOCK CLAMP PR5 2013
 15707BA810000 (u. 8)

2

 AJP-VALVE SPRING BASE
 15705ME300000 (u. 4)

3

 AJP-VALVE SPRING PR5 LC 2013
 15703ME300000 (u. 4)

4

 AJP-SEAL VALVE STEM PR5 LC 2013
 1572BBA810000 (u. 4)

5

 AJP-OUTER VALVE SPRING RETAINER PR5 LC 2013
 15706ME300000 (u. 4)

6

 AJP-INLET VALVE PR5 LC 2013
 15701ME300000 (u. 2)

7

 AJP-NUT VALVE CLEARENCE PR5 2013
 15403BA810000 (u. 4)

8

 AJP-SCREW. VALVE CLEARENCE PR5 2013 LC
 15404BA810000 (u. 4)

9

 AJP-ROCKER ARM ASSEMBLY. VALVE IN PR5 LC 2013
 1540AME300000 (u. 1)


10

 AJP-ROCKER SHAFT IN PR5 LC 2013
 15402ME300000 (u. 1)

11

 AJP-ROCKER ARM ASSEMBLY. VALVE RX PR5 LC 2013
 1540AME300100 (u. 1)


12	AJP-ROCKER SHAFT EX PR5 LC 2013 15402ME300100 (u. 1)
13	AJP-EXHAUST VALVE PR5 2013 15702ME300000 (u. 2)
14	AJP-CAMSHAFT PR5 2013 15100ME300000 (u. 1)
15	AJP-WASHER PR5 LC 2013 15169ME300000 (u. 1)
16	AJP-BEARING (6201C3) PR5 LC 2013 92102000006201C3 (u. 2)
17	AJP-TIMING DRIVEN SPROCKET PR5 LC 2013 15301MZ300000 (u. 1)
18	AJP-DECOMPRESSION SPRING OF CAMSHAFT PR5 2013 LC 15164ME300000 (u. 1)
19	AJP-CENTRIFUGAL MASS ASS PR5 2013 LC 1516AME300000 (u. 1)
20	AJP-SCREW M6X10 PR5 LC 2013 B000700106001070B (u. 2)
21	AJP-WASHER 6.5×1.5×18 PR5 LC 2013 933015065151800N (u. 0)
22	AJP-BOLT M6×16 PR5 LC 2013 B166740A06001670B (u. 0)
23	AJP-STOP PLATE. CAMSHAFT PR5 LC 2013 15108ME300000 (u. 0)
24	AJP-SEAL COLLOID OF CYLINDER HEAD PR5 LC 2013 11264ME300000 (u. 0)
25	AJP-TIMING CHAIN 200 100L 1532BL0440000 (u. 1)
26	AJP-GUIDE PLATE CHAIN PR5 LC 2013 1553AME300000 (u. 1)
27	AJP-TENSION PLATE ASSY PR5 2013 1552AME300000 (u. 1)
28	AJP-BUSH PR5 2013 LC 15526ME300000 (u. 1)
29	AJP-BOLT M5×25 PR5 2013 LC B166740A05002570B (u. 1)

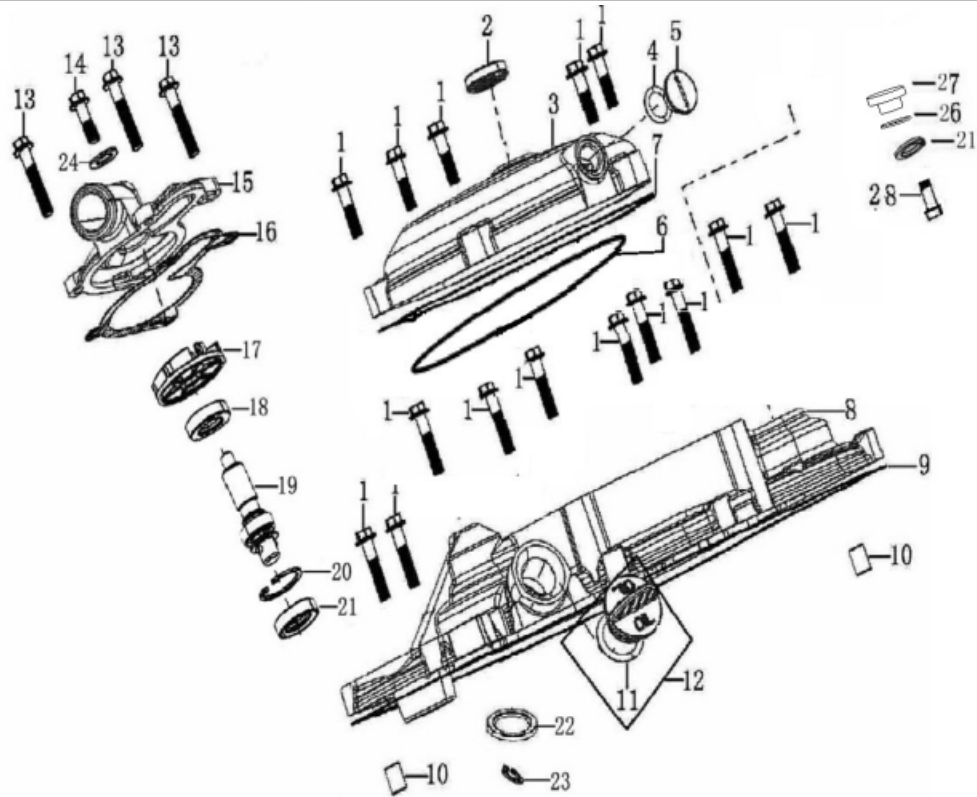RIGHT CRANKCASE COVER


1	AJP-BOLT M6×30 PR5 2013 B166740A06003070X (u. 15)
2	AJP-OIL LEVEL SIGHT WINDOW PR5 LC 2013 12426ME300000 (u. 1)
3	AJP-CRANKCASE COVER PR5 2013 LC 00MTS01A0122 (u. 1)
4	AJP-O-RING 13.2×2.65 PR5 2013 LC 9010110132000265 (u. 1)
5	AJP-CAP. SMALL VIEW HOLE PR5 2013 LC 12303G01100000W (u. 1)
6	AJP-OIL SEAL COVER 157X1.5 PR5 2013 00MTS01A0142 (u. 1)
7	AJP-GASKET. DECORATE COVER PR5 2013 LC 90228ME300100 (u. 1)
8	AJP-COVER COMP. RIGHT CRANKCASE PR5 2013 LC 12421ME3000000W (u. 1)
9	AJP-GASKET 90206ME300100 (u. 1)
10	AJP-PIN 9×13 PR5 2013 LC 9152109001300000 (u. 2)
11	AJP-O-RING 20×3.55 PR5 2013 LC 9010130200000355 (u. 1)
12	AJP-OIL PLUG ASSY PR5 2013 LC 14311ME300000 (u. 1)
13	AJP-BOLT M6×35 PR5 2013 B166740A06003570X (u. 3)
14	AJP-BOLT M6×20 PR5 2013 B166740A06002070X (u. 1)
15	AJP-WATER PUMP COVER PR5 2013 LC 19001ME3000000W (u. 1)


16	AJP-GASKET PR5 2013 LC 90217ME300100 (u. 1)
17	AJP-ANE WHEEL WATER PUMP PR5 2013 LC 19002ME300000 (u. 1)
18	AJP-WATER PUMP SEAL PR5 2013 LC 19012ME300000 (u. 1)
19	AJP-SHAFT. WATER PUMP PR5 2013 LC 19004ME300000 (u. 1)
20	AJP-CIRCLIP 22 PR5 2013 LC B0089301220000000 (u. 1)
21	AJP-OIL SEAL 12×24×6 PR5 2013 LC 90326ME300000 (u. 1)
22	AJP-OIL SEAL 14×24×7 PR5 2013 LC 90302ME300000 (u. 1)
23	AJP-CIRCLIP 24 PR5 2013 LC B0089301240000000 (u. 1)
24	AJP-WASHER 6.5×1.5×12 PR5 2013 9330180651512000 (u. 1)
25	AJP-DOWEL PR5 2013 00MTS01A0132 (u. 1)
26	AJP-O- RING (15X1.5) PR5 2013 00MTS01A0131 (u. 1)
28	AJP-SCREW DIN7380 M6X12 PF07380006012 (u. 1)

LEFT CRANKCASE COVER

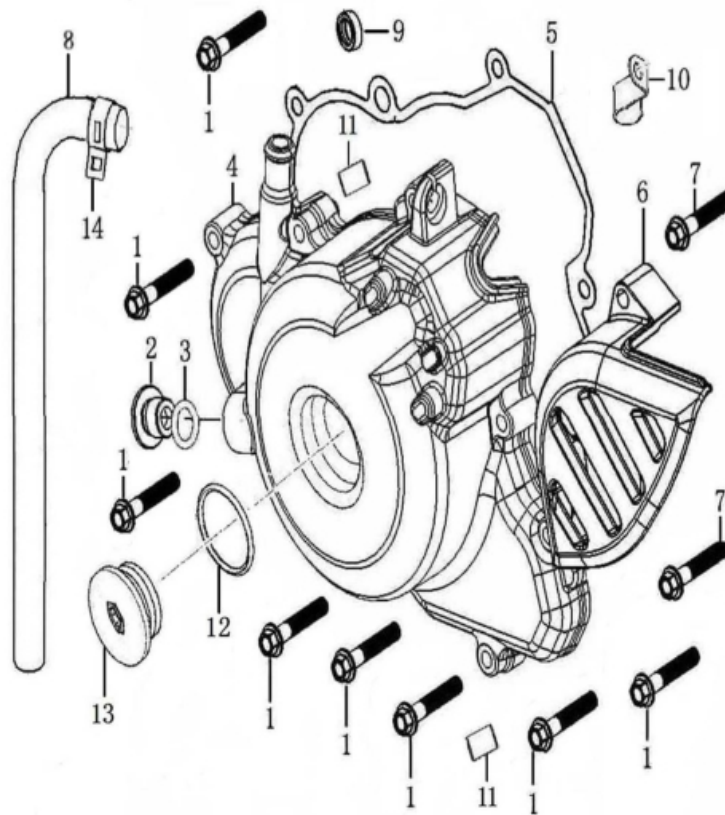

1	AJP-BOLT M6×35 PR5 2013 B166740A06003570X (u. 8)
2	AJP-BOLT PR5 2013 15415ME300000 (u. 1)
3	AJP-O-RING 11.8×2.6 PR5 2013 9010130118000260 (u. 1)
4	AJP-FRONT PART 12301ME3000000W (u. 1)
5	AJP-GASKET. LEFT CRANKCASE PR5 LC 90207ME300000 (u. 1)
6	AJP-BACK PART 12302ME300000 (u. 1)
7	AJP-BOLT M6×30 PR5 2013 B166740A06003070X (u. 2)
8	AJP-BREATHER TUBE PR5 LC 2013 1213010080001 (u. 1)
9	AJP-OIL-SEAL 10×18×6 PR5 LC 2013 90302H0920000 (u. 1)
10	AJP-FIXING PLATE. MAGNETO CABLE PR5 LC 2013 12305PE0301000G (u. 1)
11	AJP-PIN 9×13 PR5 2013 LC 9152109001300000 (u. 2)
12	AJP-O-RING 22.5×3.55 PR5 2013 LC 9010100225000355 (u. 1)
13	AJP-CAP. BIG VIEW HOLE PR5 2013 LC 12304103800000W (u. 1)


CLUTCH

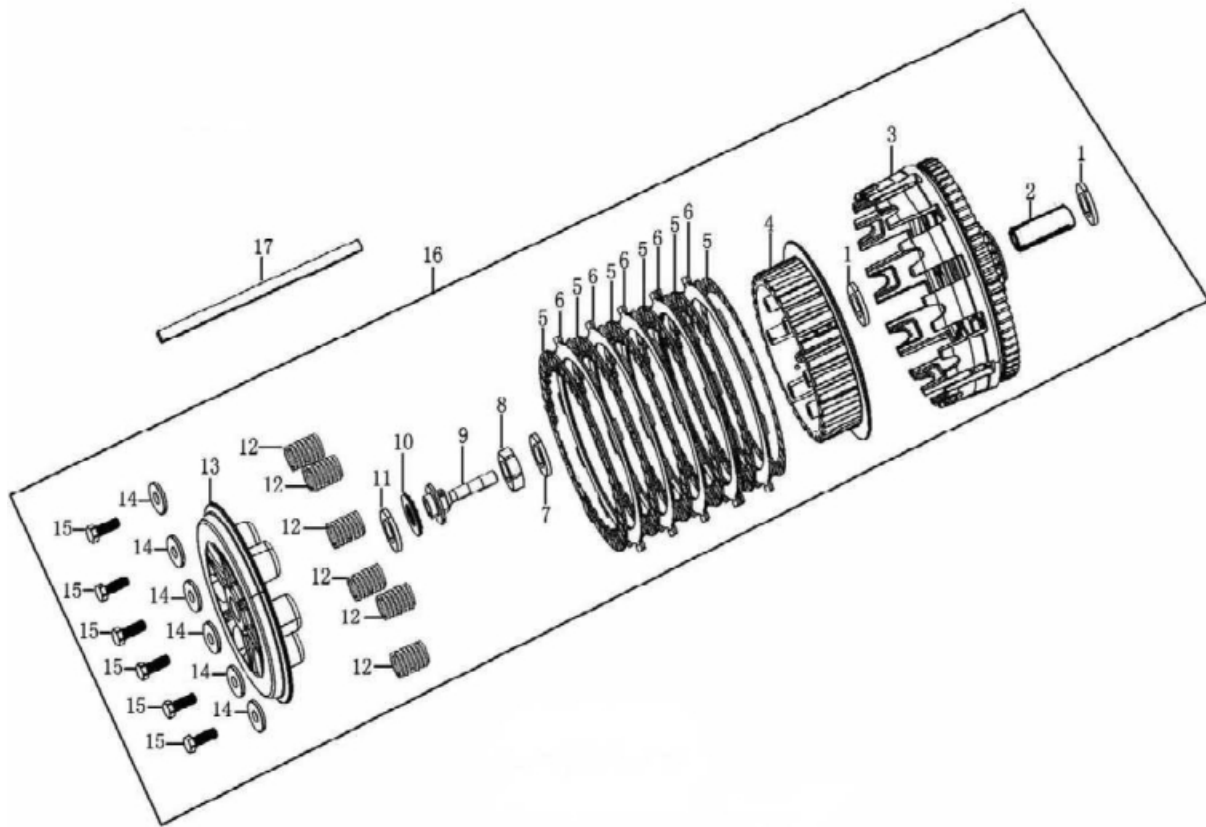

1	AJP-WASHER 20.2×1.8×34 PR5 2013 LC 9330152021834000 (u. 2)
2	AJP-SLEEVE.CLUTCH PR5 2013 LC 22104ME300000 (u. 1)
3	AJP-OUT CASE ASSEMBLY.CLUTCH PR5 2013 LC 22150ME300000 (u. 1)
4	AJP-CENTER SLEEVE. CLUTCH PR5 2013 22105ME300000 (u. 1)
5	AJP-DRIVE FRICTION DISK PR5 2013 LC 22214ME300000 (u. 6)
6	AJP-OUTER FRICTION DISK A PR5 2013 LC 22215ME300000 (u. 5)
7	AJP-CONIC WASHER 22004I0060000 (u. 1)
8	AJP-NUT M16×1 PR5 2013 LC 91202ME300000 (u. 1)
9	AJP-ROD.CLUTCH PUSH PR5 2013 LC 22314ME300000 (u. 1)
10	AJP-BEARING (AXK1528) PR5 2013 LC 92102I0930000 (u. 1)
11	AJP-WASHER 15×1×28 PR5 2013 LC 9330151501028000 (u. 1)
12	AJP-SPRING. CLUTCH PR5 2013 LC 22142ME300000 (u. 5)
13	AJP-PRESSURE PLATE. CLUTCH PR5 2013 LC 22122ME300000 (u. 1)
14	AJP-WASHER 5.2×2×17 PR5 2013 LC 9330130522017000 (u. 6)

15	AJP-BOLT M5x25 PR5 2013 LC B057830005002570B (u. 6)
16	AJP-CLUTCH ASSY PR5 2013 LC 22000ME300000 (u. 1)
17	AJP-PUSHING ROD. CLUTCH PR5 2013 LC 22403ME300000 (u. 1)

OIL PUMP

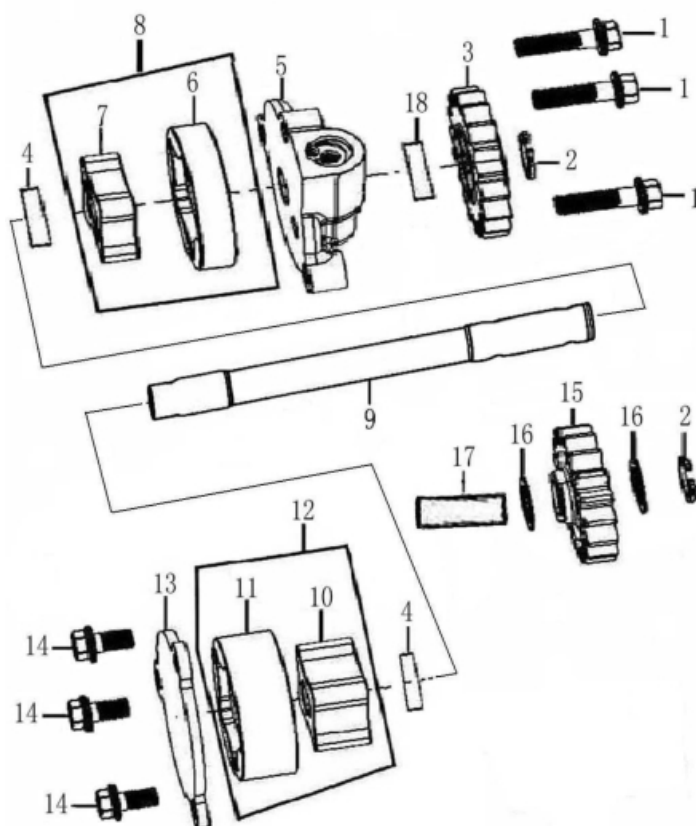

- (u. 0)

1 AJP-BOLT M5x18 PR5 2013 LC
 B166740A05001870B (u. 3)

2 AJP-CIRCLIP 10 PR5 2013 LC
 B0089401100000000 (u. 2)

3 AJP-OIL PUMP GEAR ASS. PR5 2013 LC
 1410BME300000 (u. 1)

4 AJP-PIN 4x15.8 PR5 2013 LC
 9152204001580000 (u. 2)

5 AJP-OIL PUMP COVER PR5 2013 LC
 14108ME300100 (u. 1)

6 AJP-OUTER ROTOR. OIL PUMP (8MM) PR5 LC 2013
 14112ME300000 (u. 1)

7 AJP-INNER ROTOR. OIL PUMP (8MM) PR5 LC 2013
 14111ME300000 (u. 1)

8 AJP-OIL PUMP ROTOR (8MM) (8MM) PR5 LC 2013
 14120ME300100 (u. 1)

9 AJP-SHAFT.OIL PUMP PR5 LC 2013
 14107ME300000 (u. 1)

10 AJP-INNER ROTOR. OIL PUMP (14MM) PR5 LC 2013
 14111ME300100 (u. 1)


11 AJP-OUTER ROTOR. OIL PUMP (14MM) PR5 LC 2013
 14112ME300100 (u. 1)

12 AJP-OIL PUMP ROTOR (14MM) PR5 LC 2013
 14120ME300200 (u. 1)

13 AJP-OIL PUMP COVER LH PR5 2013 LC
 14108ME300000 (u. 1)


14	AJP-BOLT M5×12 PR5 2013 LC B166740A05001270B (u. 3)
15	AJP-OIL PUMP GEAR ASS. PR5 2013 LC 14135ME300000 (u. 1)
16	AJP-WASHER 10.2×0.5×15 PR5 2013 LC 9330151020515000 (u. 2)
17	AJP-OIL PUMP GEAR SHAFT PR5 2013 LC 14134ME300000 (u. 1)
18	AJP-PIN 3×15.8 PR5 2013 LC 9152203001580000 (u. 0)

LEFT CRANKCASE

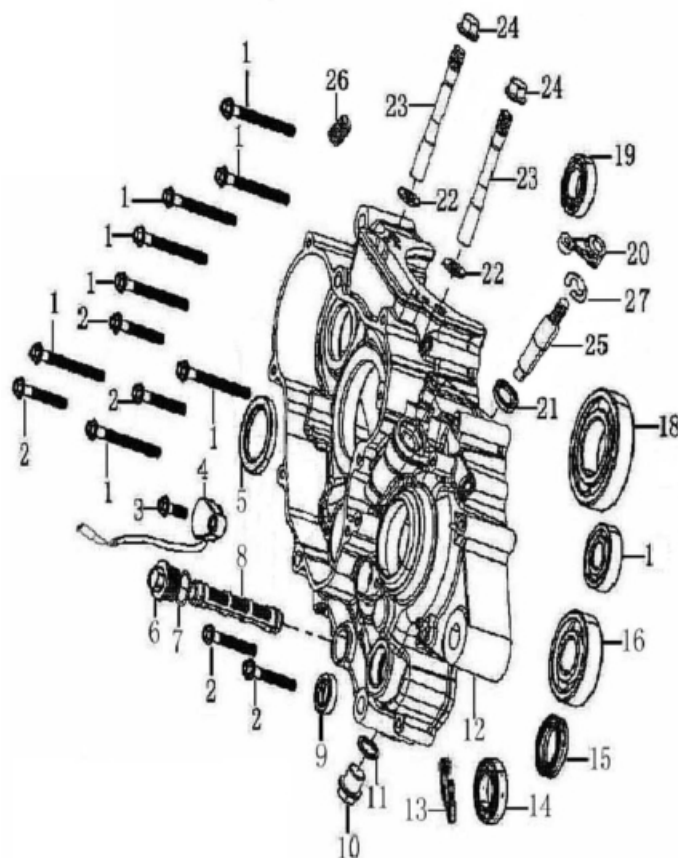


-	(u. 0)
-	(u. 0)
1	AJP-BOLT M6×65 PR5 2013 B166740A06006570X (u. 8)
2	AJP-BOLT M6×45 PR5 2013 B166740A06004570X (u. 5)
3	AJP-SCREW M6×20 PR5 2013 B008190106002020X (u. 1)
5	AJP-OIL SEAL 32×47×6 PR5 2013 LC 90303ME300000 (u. 1)
6	AJP-COVER. OIL FILTER SCREEN PR5 2013 LC 14305ME3000000H (u. 1)
7	AJP-O-RING 17.5×1.8 PR5 2013 LC 9010130175000180 (u. 1)
8	AJP-STRAINER.OIL FILTER PR5 2013 LC 1431BME300000 (u. 1)
9	AJP-OIL SEAL 15×25×5 PR5 2013 LC 90345PE030000 (u. 1)
11	AJP-WASHER 14.5×1.5×20 PR5 2013 LC 9330181451520000 (u. 1)
12	AJP-LEFT CRANKCASE BLOCK PR5 LC 2013 1212BME3000000W (u. 1)
13	AJP-CIRCLIP 28 PR5 LC 2013 B0089301280000000 (u. 1)
15	AJP-BEARING (61805) PR5 2013 LC 9210200000061805 (u. 1)
16	AJP-BEARING (63/22/P5/16) PR5 LC 2013 921020006322P516 (u. 1)

17	AJP-BEARING (6003/P53) PR5 LC 2013 9210200006203P63 (u. 1)
18	AJP-BEARING (6207JR2LUC3) PR5 LC 2013 921026207JR2LUC3 (u. 1)
19	AJP-BEARING (CSB004 JR2CS18SPX9) PR5 LC 2013 9210200CSB004TPI (u. 1)
21	AJP-OIL SEAL 14×22×5 PR5 LC 2013 90305I0080100 (u. 1)
22	AJP-WASHER 10.5×2×20 PR5 LC 2013 933015105202000N (u. 2)
23	AJP-CYLINDER STUD BOLT A PR5 LC 2013 91101ME300000 (u. 2)
24	AJP-NUT M10×1.25 PR5 LC 2013 91212RE0800000X (u. 2)
26	AJP-OIL NOZZLE PR5 LC 2013 92202ME300000 (u. 1)
27	AJP-CLUTC LEVER REATAINER PR5 2013 LC 00MTS01A0133 (u. 1)
28	AJP-SPACER ENGINE PR5 2013 LC 5.2MM 00MTS07A0080 (u. 0)

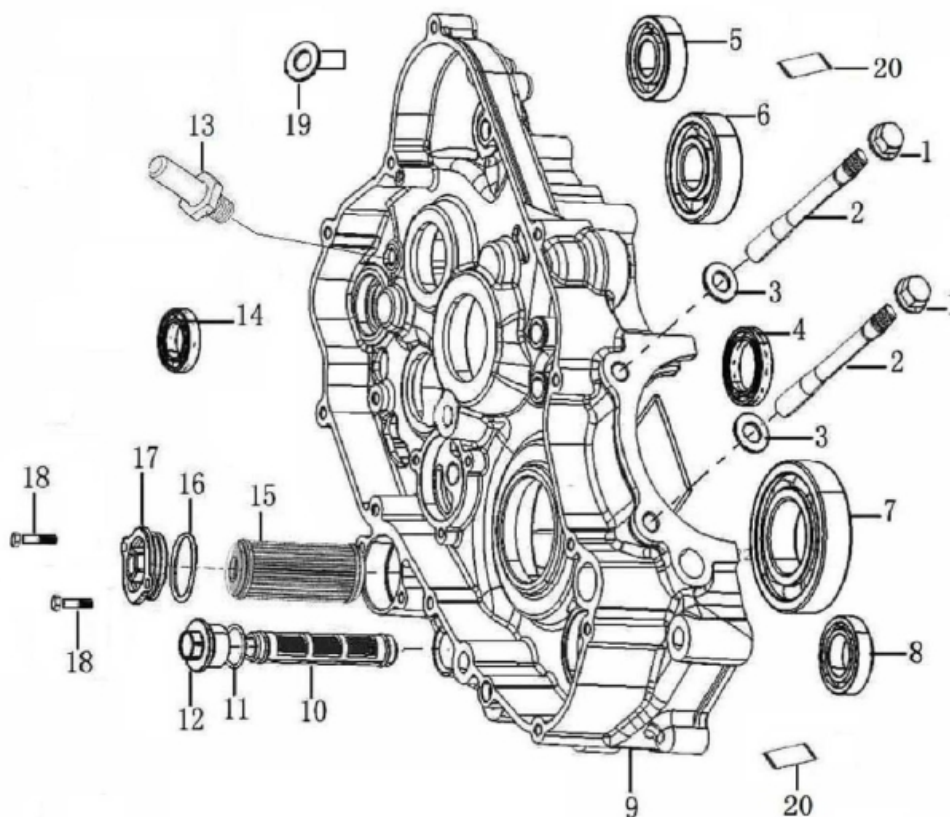RIGHT CRANKCASE


1	AJP-NUT M10×1.25 PR5 LC 2013 91212RE0800000X (u. 2)
2	AJP-CYLINDER STUD BOLT A PR5 LC 2013 91101ME300000 (u. 2)
3	AJP-WASHER 10.5×2×20 PR5 LC 2013 933015105202000N (u. 2)
4	AJP-BEARING (61805) PR5 2013 LC 921020000061805 (u. 1)
5	AJP-BEARING (6003/P53) PR5 LC 2013 9210200006203P63 (u. 1)
8	AJP-BEARING (CSB004 JR2LUACS18SPX9) PR5 2013 LC 9210210CSB004TPI (u. 1)
10	AJP-STRAINER.OIL FILTER PR5 2013 LC 1431BME300000 (u. 1)
11	AJP-O-RING 17.5×1.8 PR5 2013 LC 9010130175000180 (u. 1)
12	AJP-COVER. OIL FILTER SCREEN PR5 2013 LC 14305ME3000000H (u. 1)
13	AJP-BOLT. RETURN SPRING FIXING PR5 2013 LC 91117ME300000 (u. 1)
15	AJP-OIL FILTER ELEMENT ASSY PR5 2013 LC 14210ME300000 (u. 1)
16	AJP-O-RING 30×2.6 PR5 2013 LC 9010130300000260 (u. 1)
18	AJP-BOLT M5×22 PR5 2013 LC 91140ME3000000B (u. 2)
19	AJP-SPACER ENGINE PR5 2013 LC 5.2MM 00MTS07A0080 (u. 1)


20	AJP-PIN 13x14 PR5 2013 9152113001400000 (u. 2)
----	---

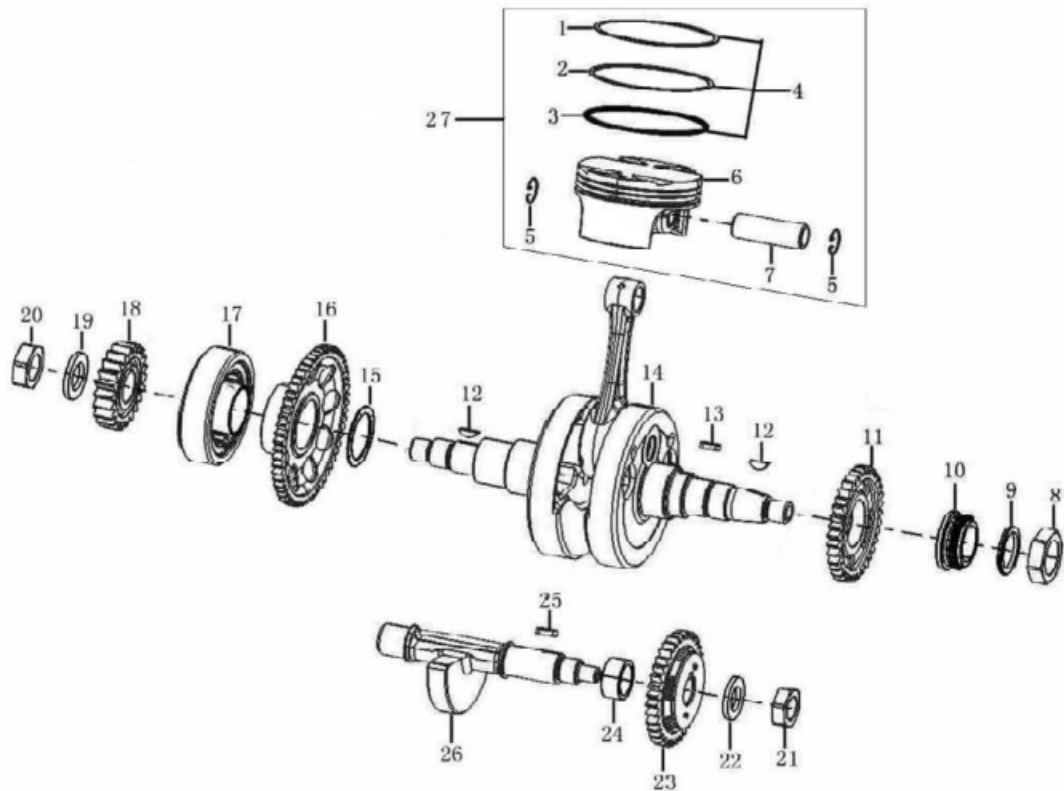CRANKSHAFT CONNECTING-ROD ASSY, PISTON


-	(u. 0)	
1	PISTON RING 1 13103ME300000 (u. 0)	OBSOLETE
2	PISTON RING 2 13104ME300000 (u. 0)	OBSOLETE
3	OIL RING ASSY 13120ME300000 (u. 0)	OBSOLETE
4	AJP-PISTON RING SET LC PR5 2013 1310AME300000 (u. 0)	
5	AJP-CHECK RING. PISTON PIN PR5 LC 2013 91401ME300000 (u. 0)	
6	PISTON 13101ME300000 (u. 0)	
7	AJP-PISTON PIN PR5 LC 2013 13102ME300000 (u. 0)	
8	AJP-NUT M24X1 PR5 2013 LC 91220ME300000 (u. 0)	
9	AJP-WASHER 24.2x2.5x32 PR5 2013 LC 9330142422532000 (u. 0)	
10	AJP-HUB DUMP CHAIN SPROCKET PR5 2013 LC 13222ME300000 (u. 0)	
11	AJP-DRIVING GEAR PR5 2013 LC 13302ME300000 (u. 0)	
12	AJP-SEMICIRCULAR KEY PR5 2013 LC 91601ME300000 (u. 0)	
13	AJP-TABULATE KEY PR5 2013 LC 91606ME300000 (u. 0)	

14	CRANKSHAFT CONNECTING ROD ASSY 1320BME300000 (u. 0)
15	AJP-WASHER 30.2X1X40 PR5 LC 2013 9330153021040000 (u. 0)
16	AJP-DRIVER STARTING GEAR LC 2013 2142AME300000 (u. 0)
17	AJP-ASSEMBLY. OVERRUNNING CLUTCH LC 2013 21300ME300000 (u. 0)
18	AJP-PRIMARY DRIVE GEAR PR5 2013 LC 23101ME300000 (u. 0)
19	AJP-WASHER 18.2X2X31 PR5 LC 2013 9330141823031000 (u. 0)
20	AJP-NUT M18X1 PR5 LC 2013 91218ME300000 (u. 0)
21	AJP-NUT M16x1 PR5 2013 LC 91202ME300000 (u. 0)
22	AJP-CONIC WASHER 22004I0060000 (u. 0)
23	AJP-DRIVEN GEAR ASS. PR5 2013 LC 1331BME300000 (u. 0)
24	AJP-CRANKSHAFT TUBE PR5 2013 LC 23206ME300000 (u. 0)
25	AJP-TABULATE KEY PR5 2013 LC 91607ME300000 (u. 0)
26	AJP-BALANCE SHAFT PR5 2013 LC 13301ME300000 (u. 0)
27	AJP-PSITON SET PR5 2013 LC 00MTS01A014 (u. 0)


GEARBOX

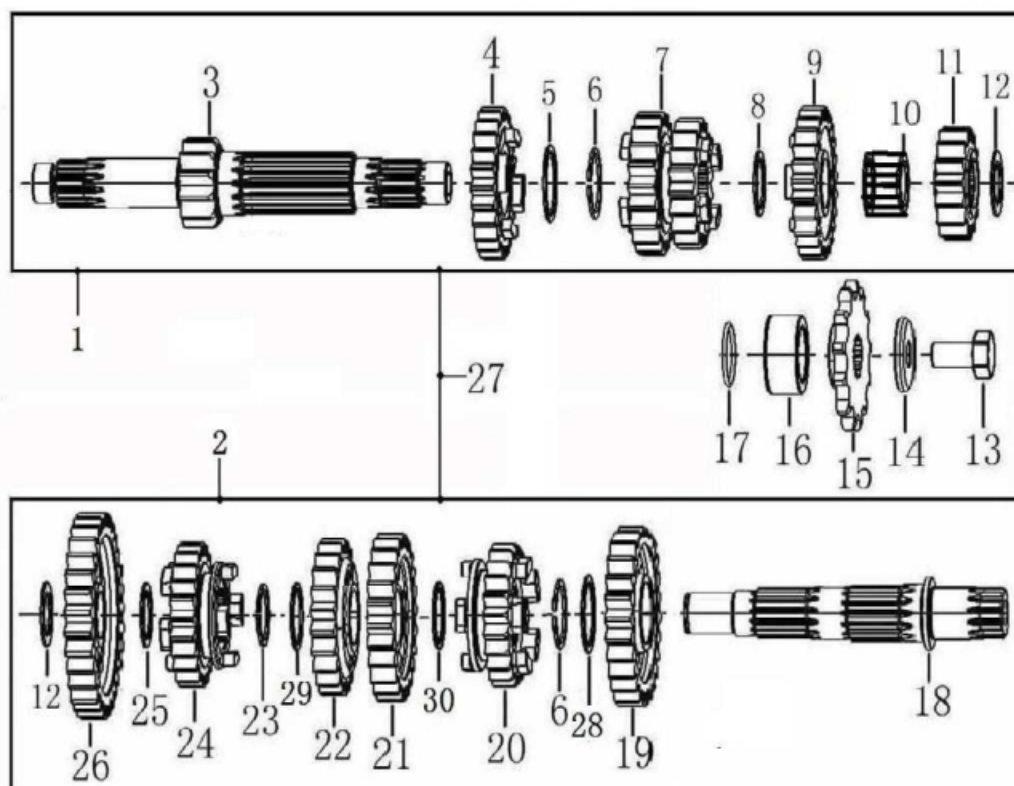

1	AJP-MAIN SHAFT. TRANSMISSION PR5 LC 2013 23220ME300000 (u. 1)	
2	AJP-COUTERSHAFT TRANSMISSION PR5 LC 2013 23240ME300000 (u. 1)	
3	TRANSMISSION MAIN SHAFT 23221ME300100 (u. 1)	OBSOLETE
4	AJP-GEAR M-5 PR5 LC 2013 23222ME300005 (u. 1)	
5	AJP-WASHER 25.1X1X30 PR5 LC 2013 9330152511030000 (u. 1)	
6	AJP-CIRCLIP (23MM) PR5 2013 LC 23226M0370000 (u. 2)	
7	AJP-GEAR M-3 23222ME300034 (u. 1)	
8	AJP-WASHER 20.1×1.0×25 LC PR5 2013 9330152011025000 (u. 1)	
9	AJP-GEAR M-6 LC PR5 2013 23222ME300006 (u. 1)	
10	AJP-BEARING 20X24X9.7 PR5 LC 2013 23226I0080000 (u. 1)	
11	GEAR M-2 23222ME300102 (u. 1)	OBSOLETE
12	AJP-WASHER 17.1×1.0×26 PR5 2013 LC 9330151711026000 (u. 2)	
13	AJP-BOLT M10×1.25 PR5 2013 LC B057890010002070H (u. 1)	
14	AJP-WASHER 10.2×4×30 PR5 2013 LC 933011102403000X (u. 1)	

15	AJP-NG - AJP- DRIVE SPROCKET Z13 LC PR5 2013 23401ME300000 (u. 1)
16	AJP-BUSH LC PR5 2013 23106ME300000 (u. 1)
17	AJP-O-RING 21×2 PR5 LC 2013 9010130210000200 (u. 1)
18	AJP-TRANSMISSION COUNTER SHAFT LC 2013 23241ME300000 (u. 1)
19	AJP-GEAR C-2 PR5 LC 2013 23242ME300002 (u. 1)
20	AJP-GEAR C-6 PR5 LC 2013 23242ME300006 (u. 1)
21	AJP-GEAR C-3 PR5 LC 2013 23242ME300003 (u. 1)
22	AJP-GEAR C-4 PR5 LC 2013 23242ME300004 (u. 1)
23	AJP-CHECK RING PR5 LC 2013 91414ME300000 (u. 1)
24	AJP-GEAR C-5 PR5 LC 2013 23242ME300005 (u. 1)
25	AJP-WASHER 19×1×26 PR5 LC 2013 9330151901026000 (u. 1)
26	AJP-GEAR C-1 PR5 LC 2013 23242ME300001 (u. 1)
27	AJP-MAINSHAFT ASSEMBLY PR5 LC 2013 23200ME300000 (u. 1)
28	AJP-WASHER PR5 LC 2013 23223ME300100 (u. 1)
29	AJP-WASHER PR5 LC 2013 23223ME300200 (u. 1)
30	AJP-WASHER 22.1×1.0×28 PR5 LC 2013 933015221102800B (u. 1)


GEARSHIFT MECHANISM

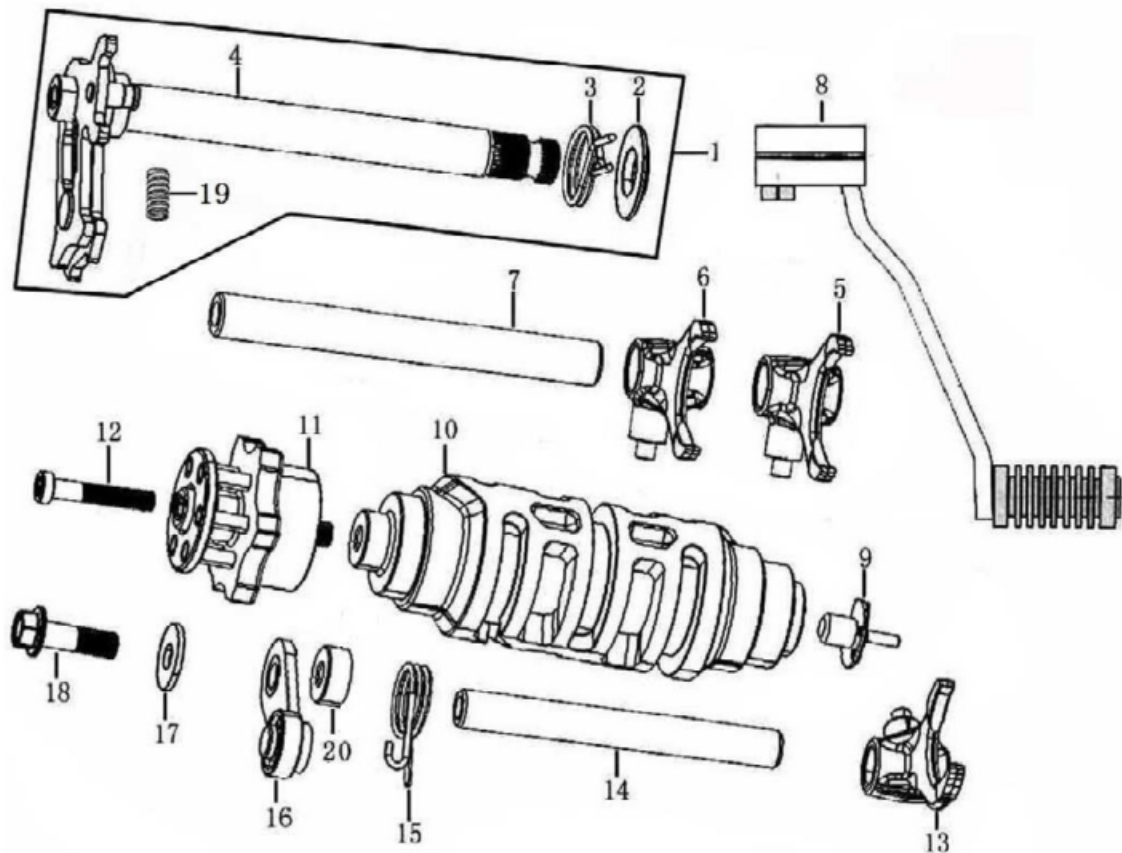

1	AJP-GEARSHIFT LEVER COMP LC PR5 2013 24300ME300000 (u. 1)
2	AJP-AXLE SLEEVE LC PR5 2013 24324ME300000 (u. 1)
3	AJP-RETURN SPRING PR5 2013 LC 24302ME300000 (u. 1)
4	AJP-NG - AJP- GEARSHIFT SHAFT COMP PR5 LC 2013 24301ME300000 (u. 1)
5	AJP-RIGHT FORK. COUNTERSHAFT LC PR5 2013 24104ME300000 (u. 1)
6	AJP-LEFT FORK. COUNTERSHAFT PR5 LC 2013 24105ME300000 (u. 1)
7	AJP-GUIDE PIN. SELECTOR FORK CENTER PR5 LC 2013 24108ME300000 (u. 1)
8	AJP-GEARING PEDAL PR5 2013 EXTREME 00MTS01C0069 (u. 1) AJP-GEARING PEDAL PR5 2013 00MTS01B0069 (u. 1)
9	AJP-CONTACT CEARINDICATION PR5 2013 88004I0080100 (u. 1)
10	AJP-GEARSHIFT DRUM COMP PR5 LC 2013 24200ME300000 (u. 1)
12	AJP-SCREW M6x35 PR5 LC 2013 B000700106003570B (u. 1)
13	AJP-CENTER FORK. MAINSHAFT 24106ME300000 (u. 1)
14	AJP-SHAFT. GEARSHIFT FORK LC 2013 PR5 24107ME300000 (u. 1)


15	AJP-SPRING. LOCATING PLATE PR5 2013 LC 24304ME300000 (u. 1)
16	AJP-LOCATING PLATE ASSY PR5 LC 2013 2434AME300000 (u. 1)
17	AJP-WASHER 6.5×1.5×18 PR5 LC 2013 933015065151800N (u. 1)
18	AJP-BOLT M6×20 PR5 LC 2013 B166740A06002070B (u. 1)
19	AJP-SPRING. GEARSHIFT PLATE PR5 LC 2013 24303ME300000 (u. 1)
20	AJP-GEARSHIFT PIVOT SPACER PR5 2013 00MTS01A0152 (u. 1)

MAGNETO

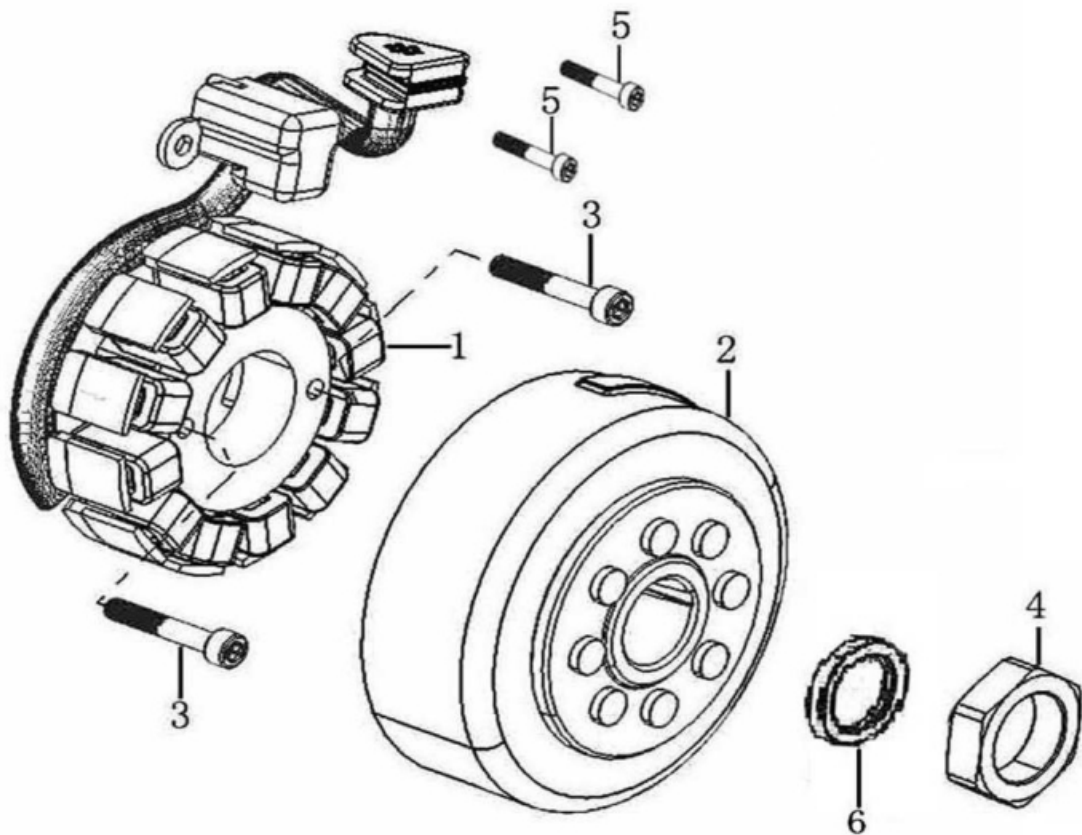


1	AJP-STATOR ASSY.MAGNETO LC PR5 2013 82120MH06000080 (u. 1)
3	AJP-SCREW M5×30 LC PR5 2013 B000700105003070B (u. 2)
4	AJP-NUT M14×1.5 LC PR5 2013 91213ME300000 (u. 1)
5	AJP-SCREW M5×10 LC PR5 2013 B000700105001070B (u. 2)
6	AJP-WASHER 15.2×1.5×25 LC PR5 2013 933015152152500N (u. 1)
11	AJP-STATOR WIRE CONNECTOR 2013 00ELS01A0066 (u. 1)
12	AJP-STATOR CONNECTOR TERMINAL 2013 00ELS01A0067 (u. 3)

ELECTRIC STARTER

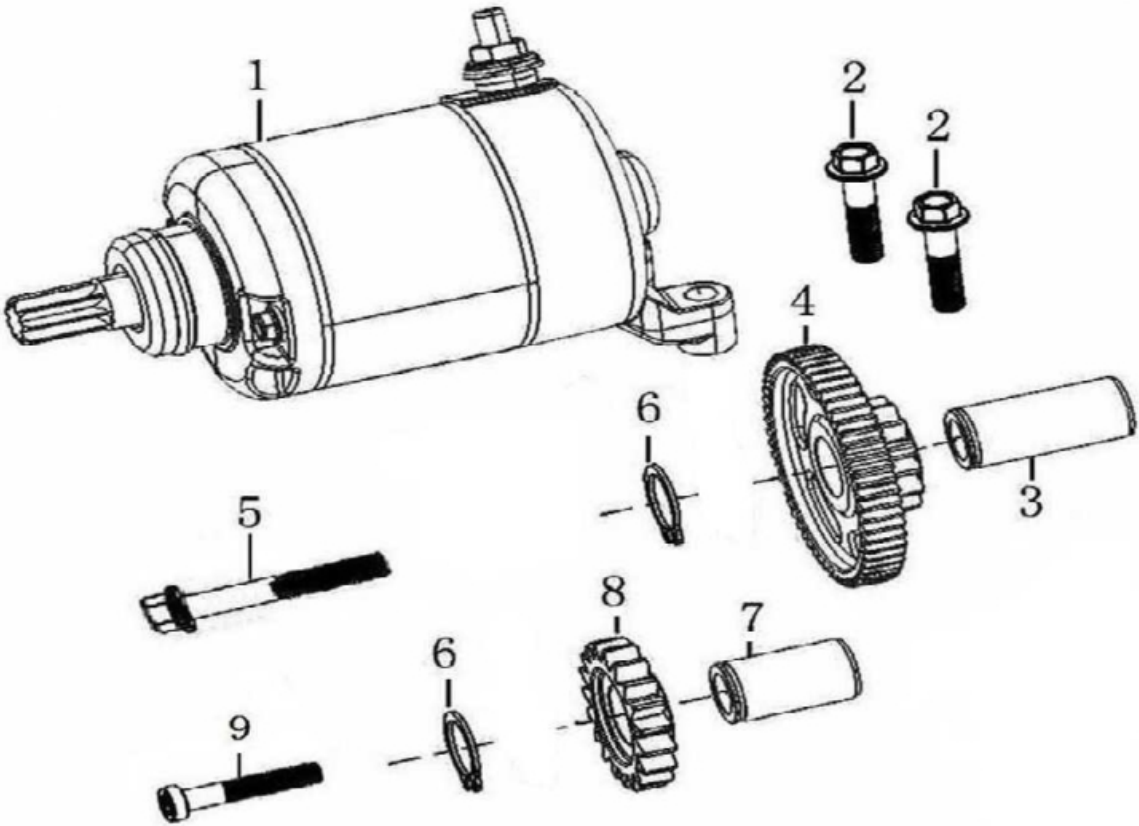

1	AJP-STARTING MOTOR ASSY PR5 LC 2013 82200ME30000051 (u. 1)	
2	AJP-BOLT M6x25 PR5 2013 B166740A06002570X (u. 2)	
3	AJP-SHAFT.REDUCTION.1 PR5 LC 2013 21402ME300000 (u. 1)	
4	ENGRANAJE DOBLE 21421ME300000 (u. 1)	OBSOLETE
5	AJP-SCREW M6x35 PR5 LC 2013 B000700106003570B (u. 1)	
6	AJP-CIRCLIP 15 PR5 LC 2013 B0089401150000000 (u. 2)	
7	AJP-SHAFT.REDUCTION.2 PR5 LC 2013 21402ME300100 (u. 1)	
8	AJP-GEAR. REDUCTION. 2 LC 2013 PR5 21401ME300000 (u. 1)	
9	AJP-SCREW M6x30 LC 2013 PR5 B000700106003070B (u. 1)	


WATER RADIATOR

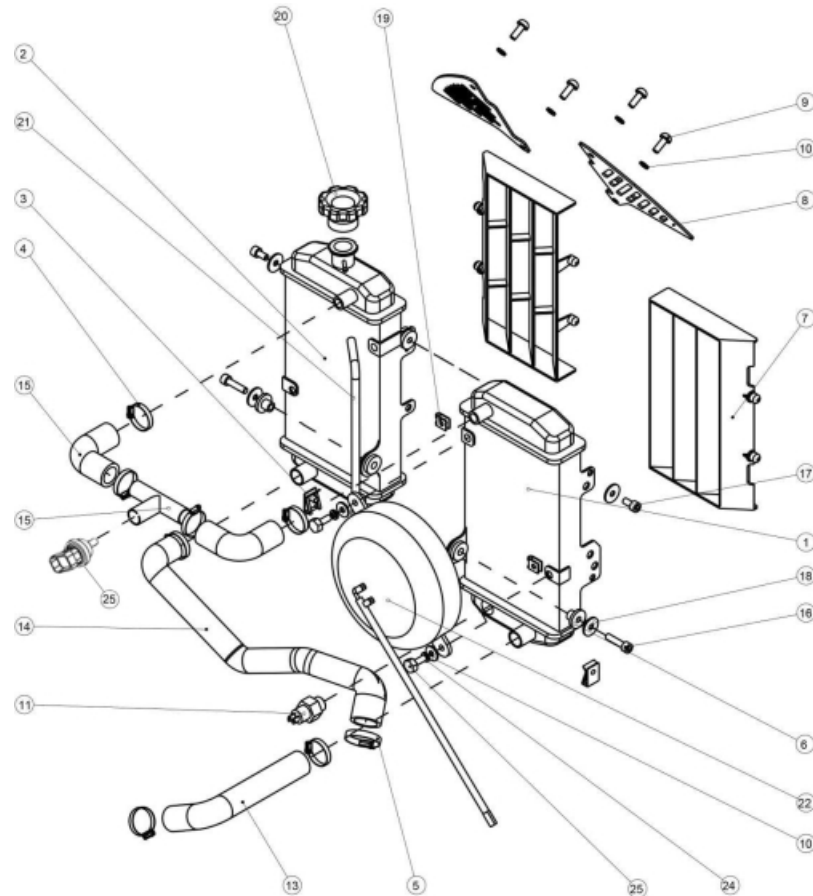

1	AJP-WATER RADIATOR RH 2013 00MTS01A0127 (u. 1)
2	AJP-WATER RADIATOR LH 2013 00MTS01A0128 (u. 1)
3	AJP-SPRING FOR FAN PR5 2013 00MTS01A0123 (u. 2)
4	AJP-WASHER FOR RADIATOR TUBE PR5 2013 00MTS01A0117 (u. 7)
5	AJP-WASHER WATER TUBE FOR PUMP WATER PR5 2013 00MTS01A0118 (u. 1)
6	AJP-SPACER FOR RADIATOR PR5/PR7 2013 00MTS01A0107 (u. 2)
7	AJP-FRONT FRAME COVER RH/LH PR5 PLASTIC 2013 00PLS01A0092 (u. 2)
8	AJP-FRONT FRAME COVER RH/LH PR5 2013 00PLS01A0091 (u. 2)
9	AJP-SCREW DIN7380 M6X16 PF7380006016 (u. 4)
10	AJP-WASHER DIN125A M6 AN125A006000 (u. 6)
11	AJP-TEMPERATURE SENSOR RADIATOR 100C° PR5 2013 00MTS01A0116 (u. 1)
12	AJP-T FOR SOUNDER RADIATOR TEMPERATURE PR5 2013 00MTS01A0112 (u. 1)
13	AJP-RADIATOR OUTLET HOSE PR5 2013 00MTS01A0114 (u. 1)
14	AJP-RADIATOR INLET HOSE PR5 2013 00MTS01A0115 (u. 1)


15	AJP-CONNECTING HOSES BETWEEN RADIATORS PR5 2013 00MTS01A0113 (u. 2)
16	AJP-SCREW DIN912 M6X25 PF0912006025 (u. 2)
17	AJP-SCREW DIN912 M6X12 PF0912006012 (u. 2)
18	AJP-WASHER DIN9021 M6 AN9021006000 (u. 4)
19	AJP-FAN RH 2013 00MTS01A0135 (u. 1)
20	AJP-RADIATOR PLUG 2013 00MTS01A0136 (u. 1)
21	AJP-TUBE FOR BRIDE 2013 00MTS01A0137 (u. 1)
23	AJP-WASHER DIN127B M6 AN127B006000 (u. 2)
24	AJP-SCREW DIN933 M6X16 PF0933006016 (u. 2)
25	AJP-TEMPERATURE SENSOR 00MTS01A0051 (u. 1)

AIR FILTER

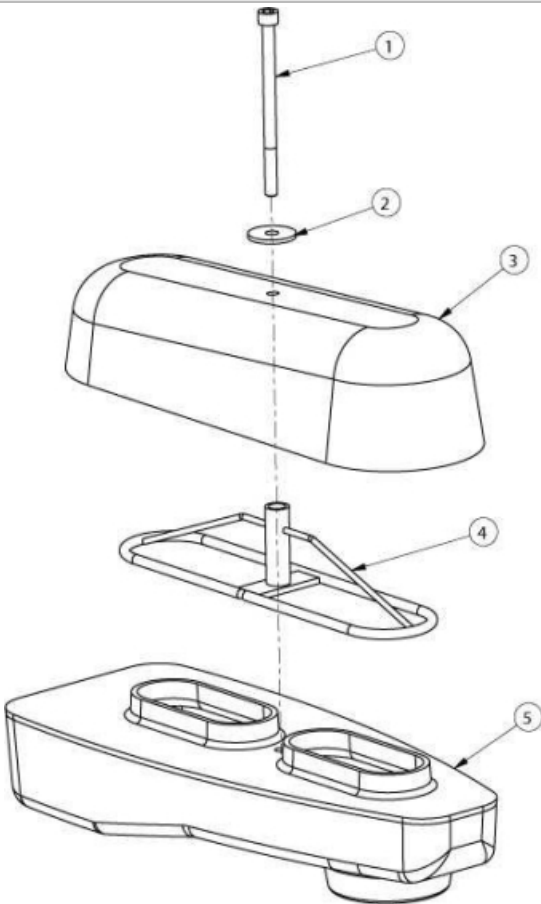

1	AJP-SCREW DIN912 M6X90 PF0912006090 (u. 1)
2	AJP-WASHER DIN9021 M6 AN9021006000 (u. 1)
3	AJP-FILTRE A AIR PR5 00MTS01A0043 (u. 1)
4	AJP-AIR FILTER BRACKET 00MTS07A0045 (u. 1)
5	AJP-AIR FILTER BOX PR5 2013 00MTS01A0105 (u. 1)


INJECTION SYSTEM

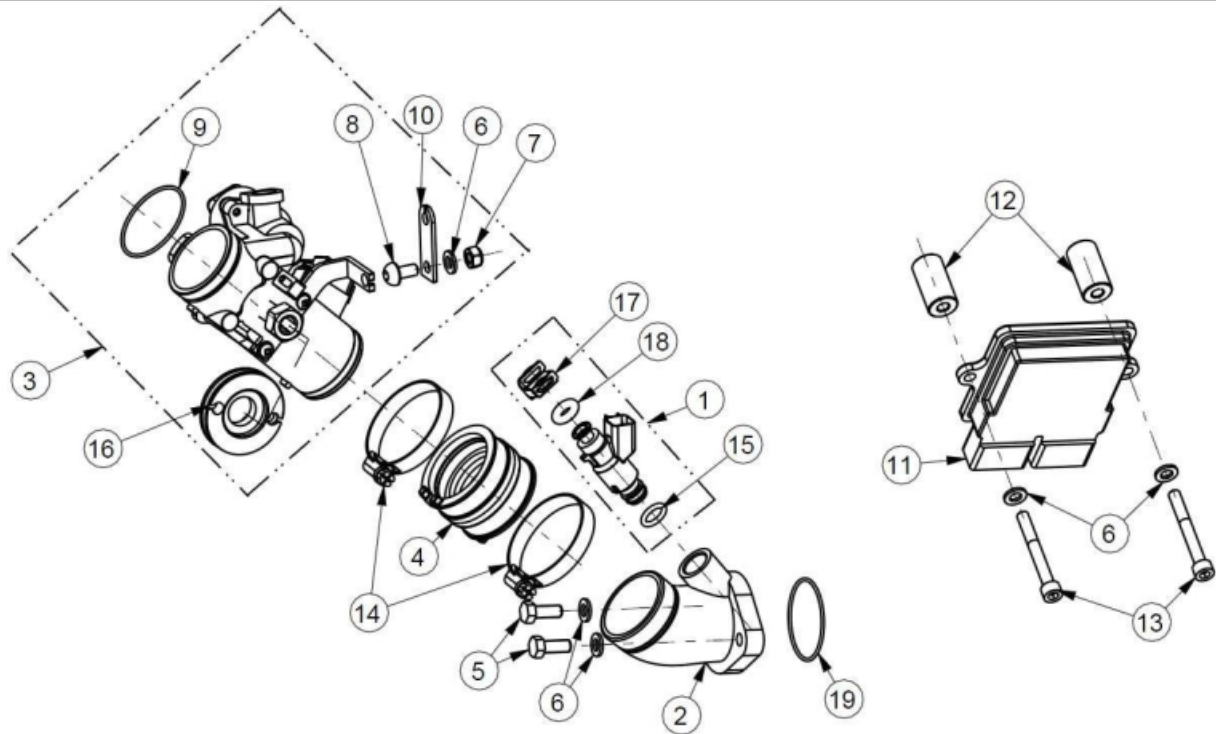

1	AJP-INJECTOR 00MTC01A0058 (u. 1)
2	AJP-INTAKE PIPE PR5 2013 00MTS01A0100 (u. 1)
4	AJP-INTAKE TUBE PR5 LC 2013 00MTS01A0138 (u. 1)
5	AJP-SCREW DIN933 M6X20 PF0933006020 (u. 2)
6	AJP-WASHER DIN125A M6 AN125A006000 (u. 4)
7	AJP-NUT DIN985 M6 PC0985006000 (u. 1)
8	AJP-SCREW DIN7380 M6X12 PF7380006012 (u. 1)
9	AJP-O-RING (39X1.5) 00MTS01A0062 (u. 1)
10	AJP-BRACKET 00MTS07A0061 (u. 1)
11	AJP-ECU 00MTS01A0038 (u. 1)
12	AJP-SPACER ECU PR5 AND PR7 00MTS01A0064 (u. 2)
13	AJP-SCREW DIN912 M6X50 PF0912006050 (u. 2)
14	AJP-CLAMP 40X55 00DES01A0062 (u. 2)
15	AJP-O-RING NBR (10X2.5) 00MTS01A0074 (u. 1)
16	AJP-THROTTLE CABLE STOPPER 00MTS01A0075 (u. 1)
17	AJP-INJECTOR COVER CLIP 00MTS01A0060 (u. 1)


18	AJP-INJECTOR O-RING (7X4) 00MTS01A0059 (u. 1)
19	AJP-O-RING INTAKE HOSE (42X3) 00MTS01A0134 (u. 1)

FUEL TANK

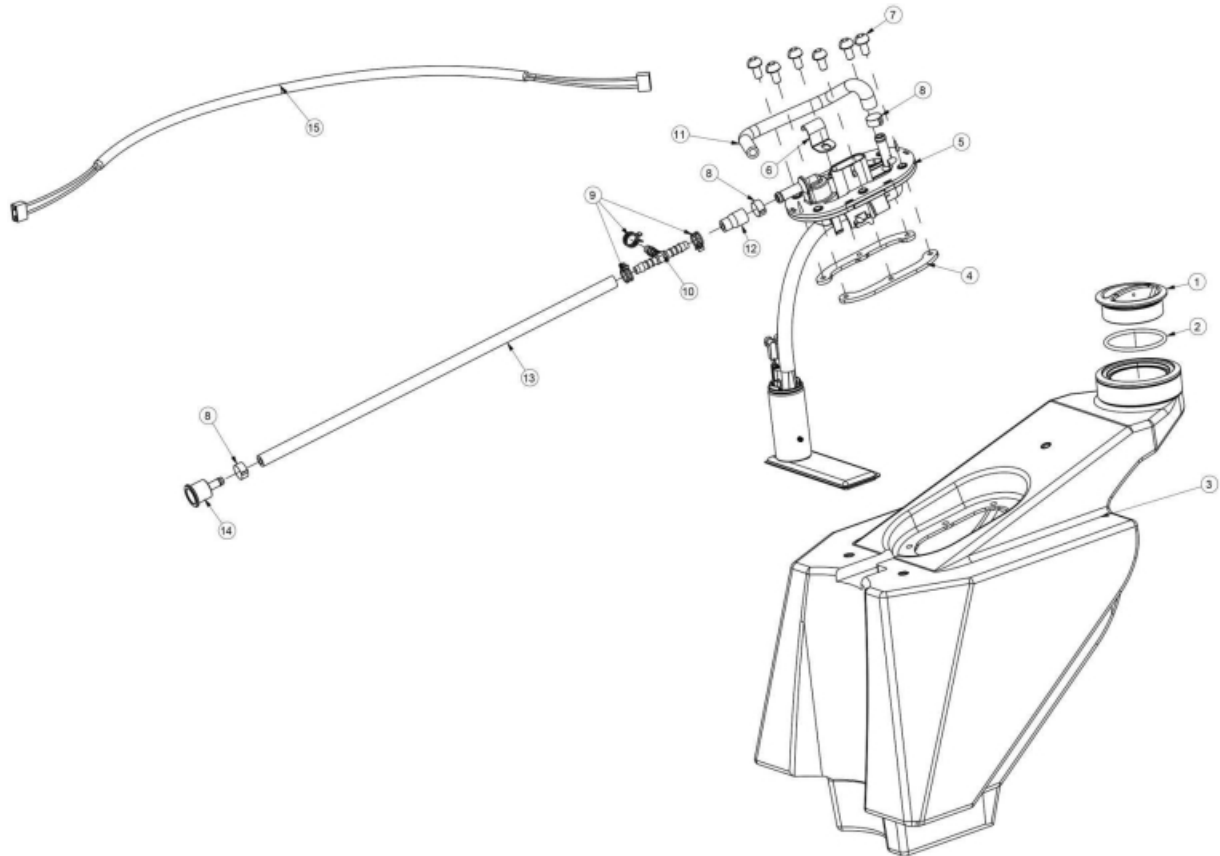

1	AJP-FUEL CAP 00DES02A0039 (u. 1)
2	AJP-GAS CAP O-RING 00DES01A0028 (u. 1)
3	AJP-FUEL TANK PR5 2013 00DES01A0054 (u. 1)
4	AJP-SUPPORT FOR FUEL PUMP PR5 2013 00DES07A0051 (u. 2)
5	AJP-FUEL PUMP PR5 2013 00DES01A0052 (u. 1)
6	AJP-HOSE PROTECTION PLATE PR5 2013 00DES07A0053 (u. 1)
7	AJP-SCREW DIN7380 M5X20 PF7380005020 (u. 6)
8	AJP-CLAMP 00DES01A0045 (u. 3)
9	AJP-CLAMP 11.6-12.30MM 2013 00DES01A0057 (u. 3)
10	AJP-CONNECTOR 00DES01A0008 (u. 1)
11	AJP-FUEL OUT HOSE (5X10X200) 2013 00DES01A0059 (u. 1)
12	AJP-FUEL FEED HOSE (5X10X35) 2013 00DES01A0060 (u. 1)
13	AJP-INJECTOR HOSE (5X10X300) 2013 00DES01A0058 (u. 1)
14	AJP-SPACER FOR INJECTOR PR5 2013 00MTS07A0081 (u. 1)

15	AJP-HARNESS FOR FUEL PUMP 2013 00ELS01A0061 (u. 1)
----	---

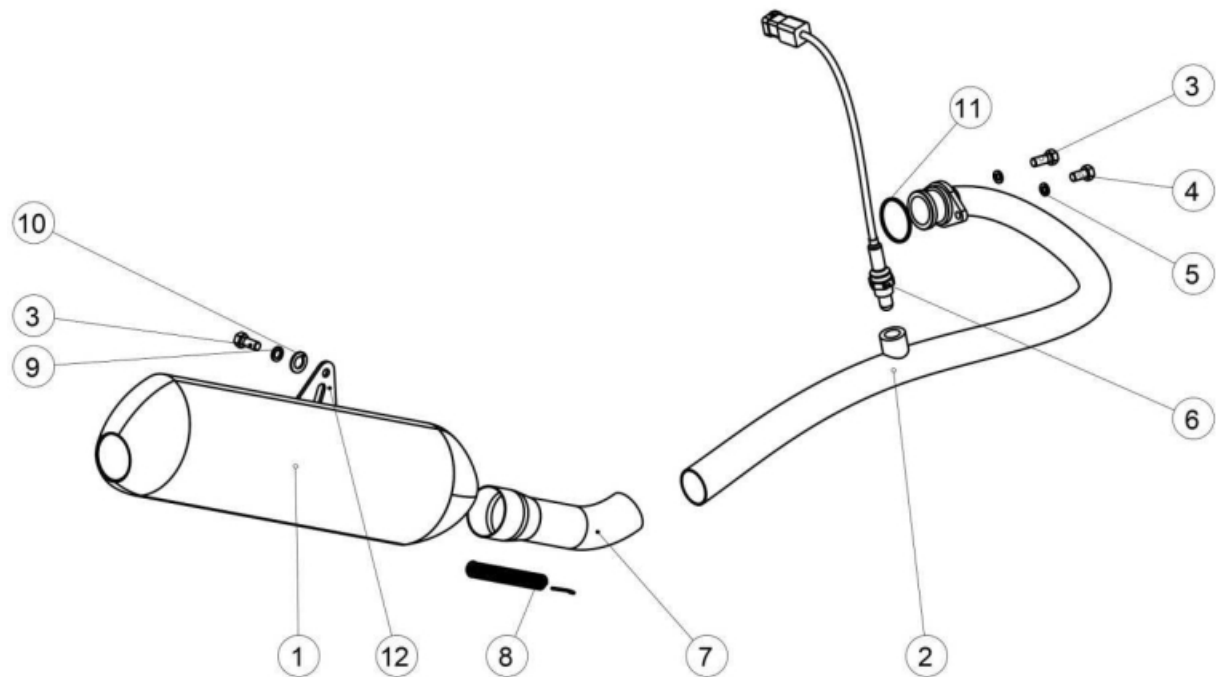EXHAUST SYSTEM


1 AJP-EXHAUST MUFFLER DOMA 2013
00MTS04A0031 (u. 1)

AJP-EXHAUST MUFFLER
00MTS01A0042 (u. 1)

2 AJP-EXHAUST PIPE PR5 2013
00MTS06A0058 (u. 1)

AJP-EXHAUST PIPE FOR DOMA 2013
00MTS06A0057 (u. 1)

3 AJP-SCREW DIN933 M8X20
PF0933008020 (u. 2)

4 AJP-SCREW DIN933 M8X16
PF0933008016 (u. 1)

5 AJP-WASHER DIN127B M8
AN127B008000 (u. 2)

6 AJP-OXYGEN SENSOR
00MTS01A0056 (u. 1)

7 AJP-EXHAUST MUFFLER PIPE
00MTS06A0053 (u. 1)

8 AJP-EXHAUST MUFFLER SPRING
00MTS01A0055 (u. 1)

9 AJP-WASHER DIN127B M8
AN127B008000 (u. 1)


10 AJP-WASHER 5/16
00MTS01A0072 (u. 1)

11 AJP-GASKET 2013
00MTS01A0139 (u. 1)

12 AJP-MUFFLER BRACKET
00MTS07A0079 (u. 1)

13 AJP-RIVET
00MTS01A0080 (u. 4)


FRAME

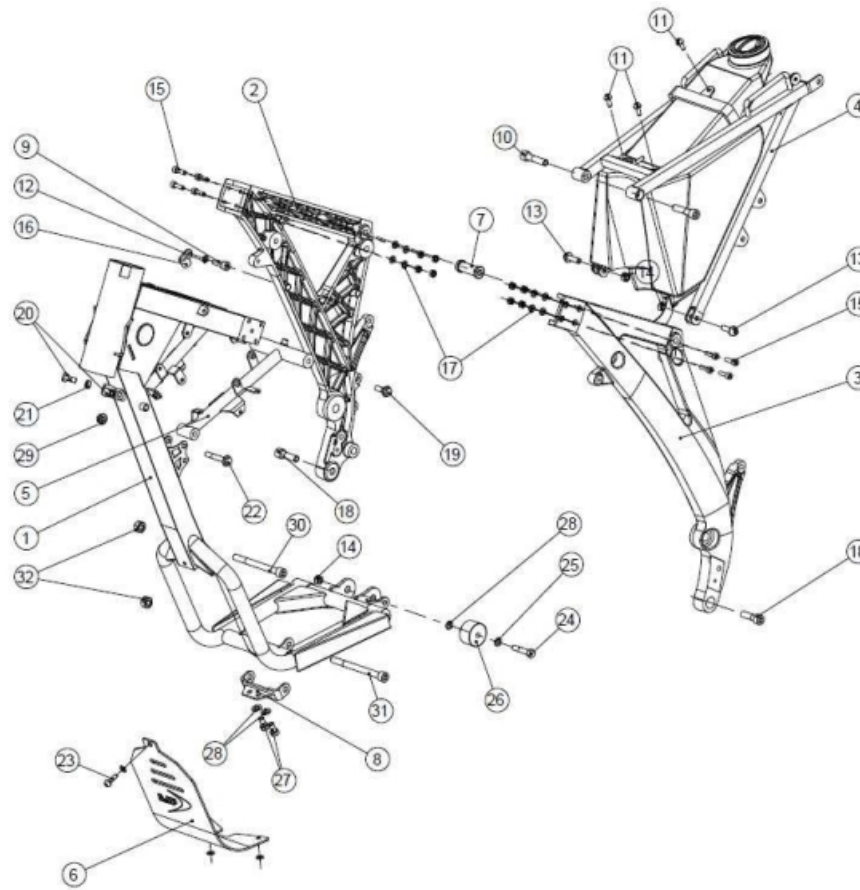

1	AJP-FRAME PR5 RED 2013 00QUS04A0052 (u. 1)
2	AJP-FRAME BEAM RH PR5 2013 00QUS01A0050 (u. 1)
3	AJP-FRAME BEAM LH PR5 2013 00QUS01A0051 (u. 1)
4	AJP-REAR FRAME PR5 00QUS06A0047 (u. 1) AJP-COMPETITION REAR FRAME 00QUS06A0056 (u. 1)
5	AJP-FRAME REINFORCEMENT RED 2013 00QUS04A0053 (u. 1)
6	AJP-FRAME COVER EXTREME PR5 PLASTIC 00MTS01A0109 (u. 1) AJP-FRAME COVER EXTREME ALLUMINUM PR5 00MTS01A0125 (u. 1) AJP-FRAME COVER PR5 2013 00QUS03A0053 (u. 1)
7	AJP-SPACER 00STS07A0057 (u. 1)
8	AJP-FRONT ENGINE MOUNT PR5 2013 00QUS07A0063 (u. 2)
9	AJP-SCREW DIN933 M6X12 PF0933006012 (u. 1)
10	AJP-SCREW DIN912 M10X50 PF0912010050 (u. 2)
11	AJP-SCREW DIN7380 M6X12 PF7380006012 (u. 3)

12	AJP-WASHER DIN127B M8 AN127B008000 (u. 1)
13	AJP-SCREW DIN7380 M8X25 PF7380008025 (u. 2)
14	AJP-NUT DIN985 M8 PC0985008000 (u. 3)
15	AJP-SCREW DIN912 M6X20 PF0912006020 (u. 8)
16	AJP-CLUCTH CABLE BRACKET 00QUS07A0055 (u. 8)
17	AJP-WASHER DIN127A M6 AN127A006000 (u. 21)
18	AJP-SCREW DIN912 M12X40 PF0912012040 (u. 2)
19	AJP-SCREW DIN6921 M8X25 PF6921008025 (u. 2)
20	AJP-SCREW DIN933 M8X10 PF0933008010 (u. 2)
21	AJP-NUT DIN 934 M8 PC0934008001 (u. 2)
22	AJP-SCREW DIN6921 M8X50 PF6921008050 (u. 1)
23	AJP-SCREW DIN7380 M6X16 PF7380006016 (u. 3)
24	AJP-SCREW DIN6921 M8X45 PF6921008045 (u. 1)
25	AJP-WASHER 5/16 00MTS01A0072 (u. 2)
26	AJP-CHAIN ROLLER (40MM) 00QUS01A0022 (u. 1)
27	AJP-SCREW DIN933 M8X16 PF0933008016 (u. 2)
28	AJP-WASHER DIN127B M8 AN127B008000 (u. 3)
29	AJP-NUT DIN6923 M8 PC6923008000 (u. 1)
30	AJP-SCREW DIN912 M10X90 FOR FRONT ENGINE SUPPORT PR5 2013 PF0912010110 (u. 1)
31	AJP-SCREW DIN912 M10X120 PF0912010120 (u. 1)
32	AJP-NUT DIN985 M10 PC0985010000 (u. 2)

SIDE STAND FOOTPEG

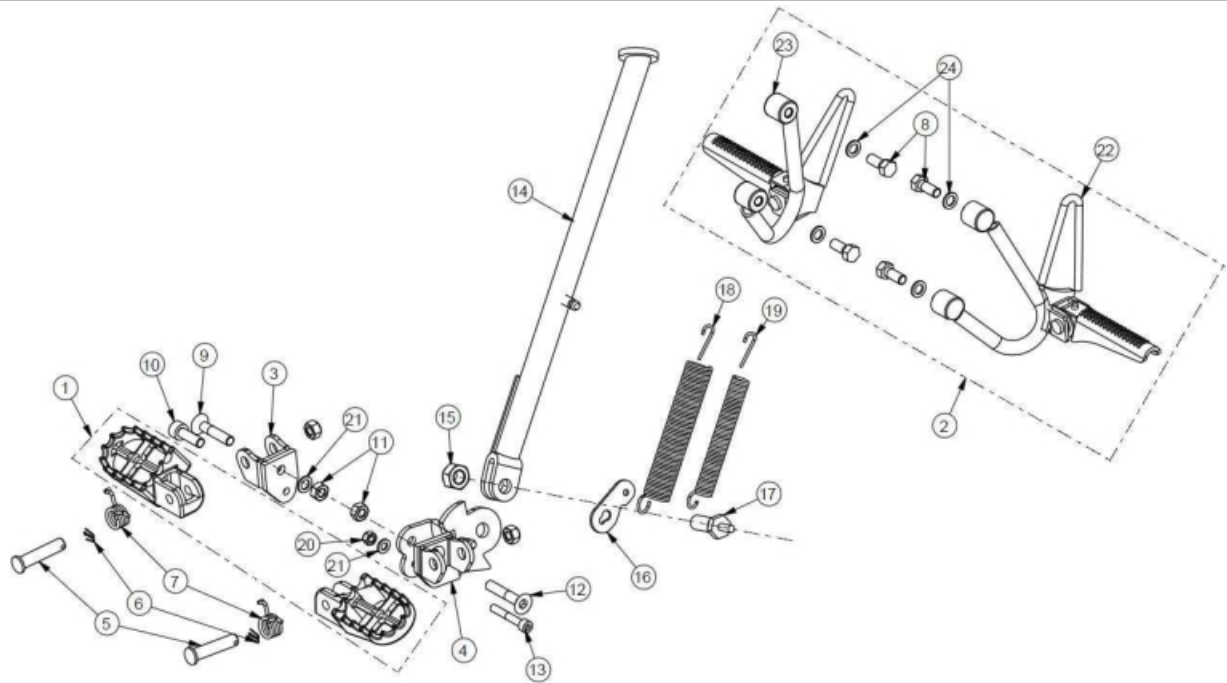

AJP-FRONT FOOTPEG LH/RH IN ALLOY EXTREME
00QUS03A0037 (u. 1)

1

AJP-FRONT FOOTPEG LH/RH IN STEEL
00QUS03A0038 (u. 1)

2

AJP-COMPLETE REAR FOOTPEG ASSEMBLY
00QUC01A0041 (u. 1)

3

AJP-FRONT FOOTPEG HOLDER RH PR5 ALLOY HYUTEX
00QUS07A0060 (u. 1)

4

AJP-FRONT FOOTPEG HOLDER LH
00QUS07A0045 (u. 1)

5

AJP-DOWEL FOR FOOTPEG RED EXTREME 2013
00QUS07A0064 (u. 2)

6

AJP-SCREW 2.5X20 DIN 94 FOR FOOTPEG EXTREME
00QUS07A0065 (u. 1)

7

AJP-SCREW DIN933 M8X16
PF0933008016 (u. 0)

8

AJP-FRONT FOOTPEG SPRING LH EXTREME PR4/PR5 2013
00QUS07A0061 (u. 1)

9

AJP-SCREW DIN7991 M8X35
PF7991008035 (u. 1)

10

AJP-SCREW DIN912 M6X25
PF0912006025 (u. 1)

11

AJP-NUT DIN985 M8
PC0985008000 (u. 1)

12

AJP-SCREW DIN7991 M8X40
PF7991008040 (u. 1)

13

AJP-SCREW DIN912 M6X35
PF0912006035 (u. 1)

14

AJP-SIDE STAND PR3 EN
00QUS04A0039 (u. 1)


AJP-SIDE STAND PR5 EN
00QUS04A0044 (u. 1)

15

AJP-NUT DIN985 M12
PC0985012000 (u. 1)

16	AJP-SPRING HOLDER 00QUS01A0017 (u. 1)
18	AJP-RESSORT BEQUILLE EXT. 00QUS01A0013 (u. 1)
19	AJP-INNER SPRING 00QUS01A0014 (u. 1)
20	AJP-NUT DIN985 M6 PC0985006000 (u. 1)
24	AJP-WASHER DIN125 M8 AN0125008000 (u. 4)

REAR SWING ARM

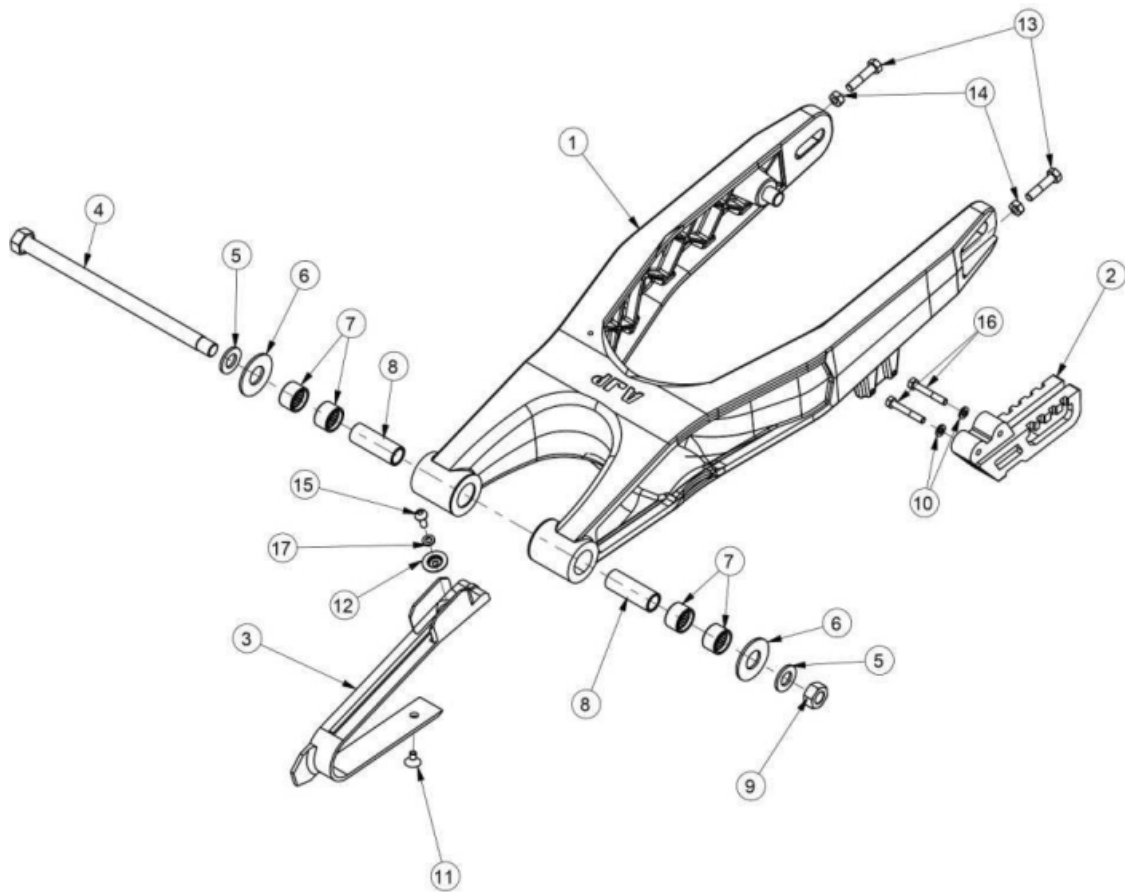

AJP-REAR SWING ARM ASSEMBLY PR5 SINCE 2013
 00STC02A0090 (u. 1)

1
 AJP-REAR SWING ARM PR5 2013
 00STS02A0085 (u. 1)

2
 AJP-CHAIN GUIDE
 00STS01B0007 (u. 1)

3
 AJP-CHAIN TOUCH DEFENSE BUFFER
 00PLS01A0049 (u. 1)

4
 AJP-PIVOT SHAFT
 00STS07A0083 (u. 1)

5
 AJP-WASHER DIN125A M14
 AN125A014000 (u. 2)

6
 AJP-WASHER 45X20X2.5
 00STS01A0086 (u. 2)

7
 AJP-BEARING HK2020 RS
 RL00HK2020RS (u. 4)

8
 AJP-SPACER 15X20X55
 00STS01A0085 (u. 2)

9
 AJP-NUT DIN934 M14
 PC0934014000 (u. 1)

10
 AJP-WASHER DIN9021 M6
 AN9021006000 (u. 2)


11
 AJP-SCREW DIN7991 M6X12
 PF7991006012 (u. 1)

12
 AJP-WASHER
 00PLS07A0029 (u. 1)

13
 AJP-SCREW DIN933 M8X35
 PF0933008035 (u. 2)


14	AJP-NUT DIN934 M8 PC0934008000 (u. 2)
15	AJP-SCREW DIN7380 M6X12 PF7380006012 (u. 1)
16	AJP-SCREW DIN912 M6X40 PF0912006040 (u. 2)
17	AJP-WASHER DIN125A M6 AN125A006000 (u. 1)

SUSPENSION LINKS

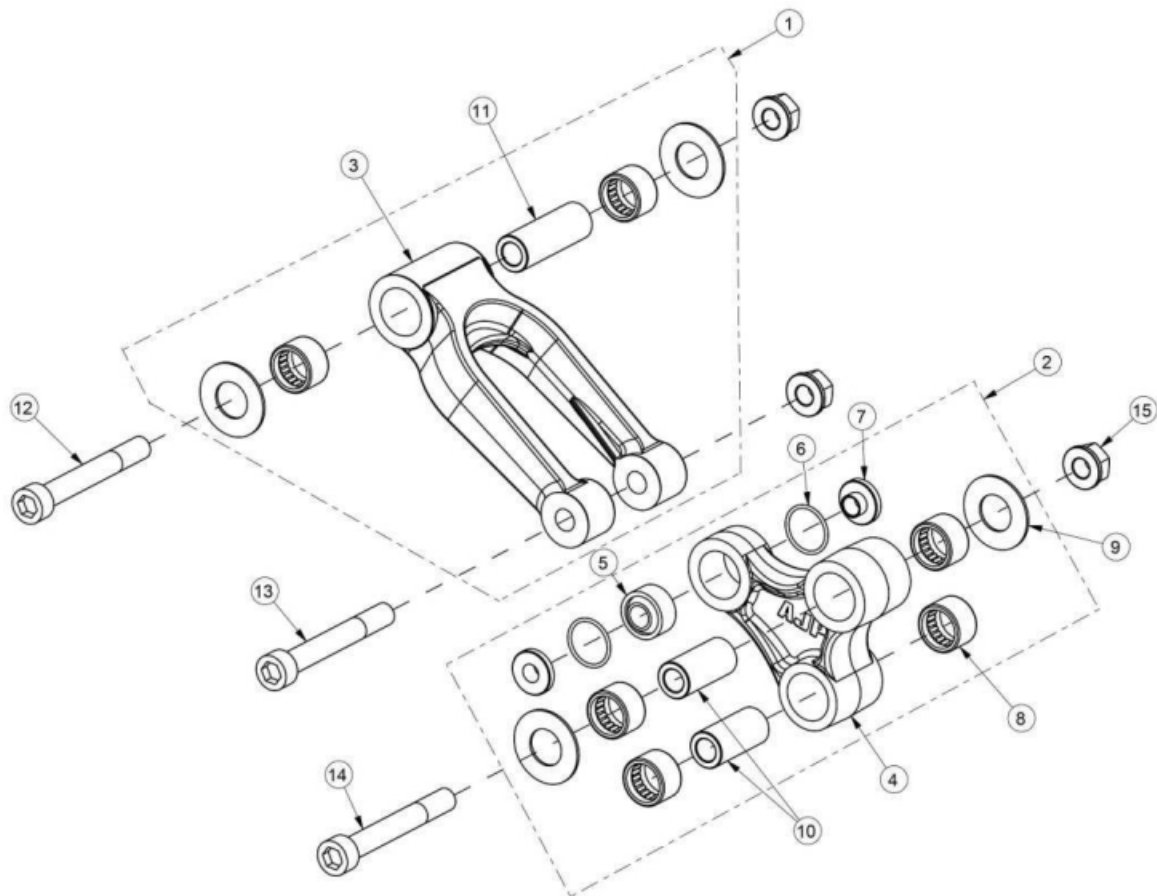

1	AJP-FRAME LINK ASSEMBLY 00STC01A0080 (u. 1)
2	AJP-REAR ARM LINK COMPLETE 2013 00STC01A0083 (u. 1)
3	AJP-FRAME LINK 00STS01A0089 (u. 1)
4	AJP-REAR ARM LINK 00STS07A0077 (u. 1)
6	AJP-O-RING (22X2) 00STS01A0087 (u. 2)
8	AJP-BEARING HK2020 RS RL00HK2020RS (u. 4)
9	AJP-WASHER 41X20X1.5 00STS01A0078 (u. 2)
10	AJP-SPACER 12.2X20X42 00STS07A0085 (u. 2)
12	AJP-SCREW DIN912 M12X80 PF0912012080 (u. 1)
13	AJP-SCREW DIN912 M12X100 PF0912012100 (u. 1)
14	AJP-SCREW DIN912 M12X95 PF0912012095 (u. 1)
15	AJP-NUT DIN985 M12 PC0985012000 (u. 3)

REAR SHOCK ABSORBER

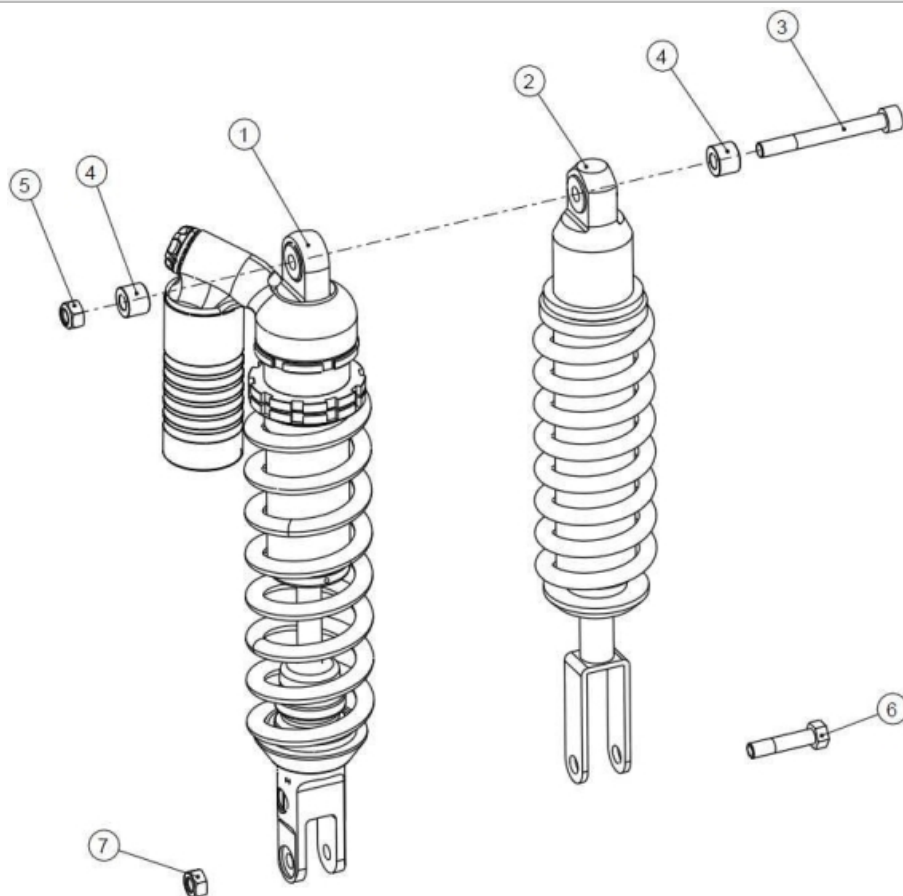

1 AJP-REAR SHOCK ABSORBER (SACHS) PR5/PR7
00STC01A0074 (u. 1)

2 AJP-REAR SHOCK ABSORBER TRAIL PR5 2013
00STC01A0085 (u. 1)

3 AJP-SCREW DIN912 M10X90
PF0912010090 (u. 1)

4 AJP-SPACER TRAIL 2013
00STS07A0086 (u. 2)


AJP-SPACER (15MM)
00STS07A0075 (u. 2)

5 AJP-NUT DIN985 M10
PC0985010000 (u. 1)

6 AJP-SCREW M10X43
00STS07A0076 (u. 1)

7 AJP-NUT DIN934 M10
PC0934010000 (u. 1)


FRONT SUSPENSION

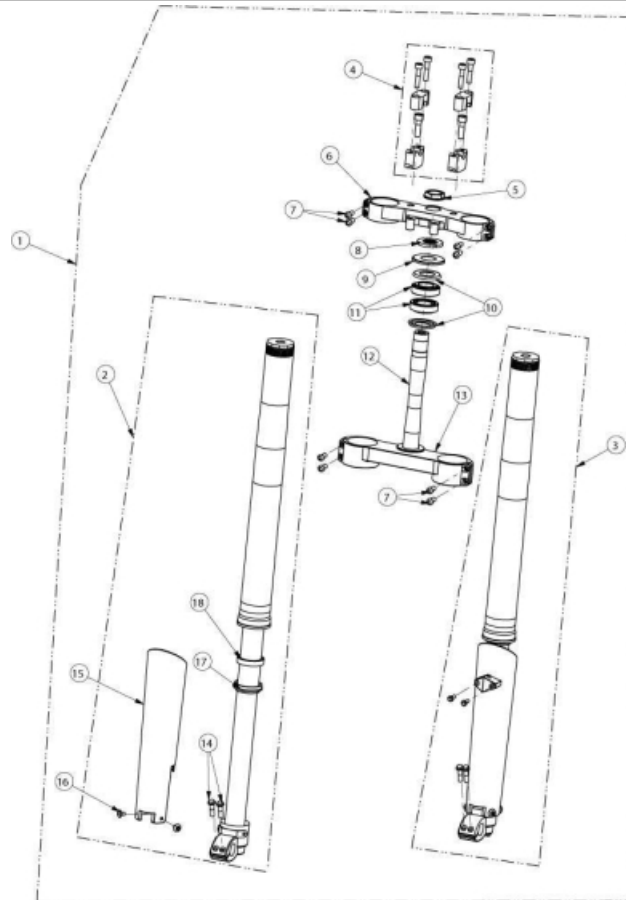

-	AJP-LOWER DUST GASKET (30X55.2X2) 00SFS01A0022 (u. 1)
1	AJP-FRONT FORK ASSEMBLY MARZOCCHI EXTREME 00SFC01A0078 (u. 1) AJP-FRONT FORK ASSEMBLY 00SFC01A0058 (u. 1)
2	AJP-FORK LEG ASSEMBLY LH 00SFS01A0059 (u. 1)
3	AJP-FORK LEG ASSEMBLY RH 00SFS01A0060 (u. 1)
4	AJP-BAR MOUNT PR5 00SFS01A0061 (u. 1)
5	AJP-NUT M28X1 00SFS07A0071 (u. 1)
6	AJP-UPPER BRACKET 00SFS01A0062 (u. 1)
8	AJP-STEERING NUT (M28X1) 00SFS01A0063 (u. 1)
9	AJP-SEAL COVER 00SFS01A0064 (u. 1)
10	AJP-UPPER/LOWER STEER SEAL 00SFS01A0065 (u. 2)
11	AJP-BEARING 6006 2RS RL00060062RS (u. 1) AJP-BEARING 32006JR PR5 RL00032006JR (u. 2)
12	AJP-STEERING STEM PR5/PR7 00SFS01A0066 (u. 1)

13	AJP-LOWER BRACKET 00SFS01A0067 (u. 1)
15	AJP-FORK PROTECTOR SET 00SFS01A0068 (u. 1)
16	AJP-UPPER BRACKET PR3 00SFS01A0055 (u. 6)
17	AJP-DUST SEAL 00SFS01A0069 (u. 2)
18	AJP-OIL SEAL 00SFS01A0070 (u. 2)

FRONT WHEEL

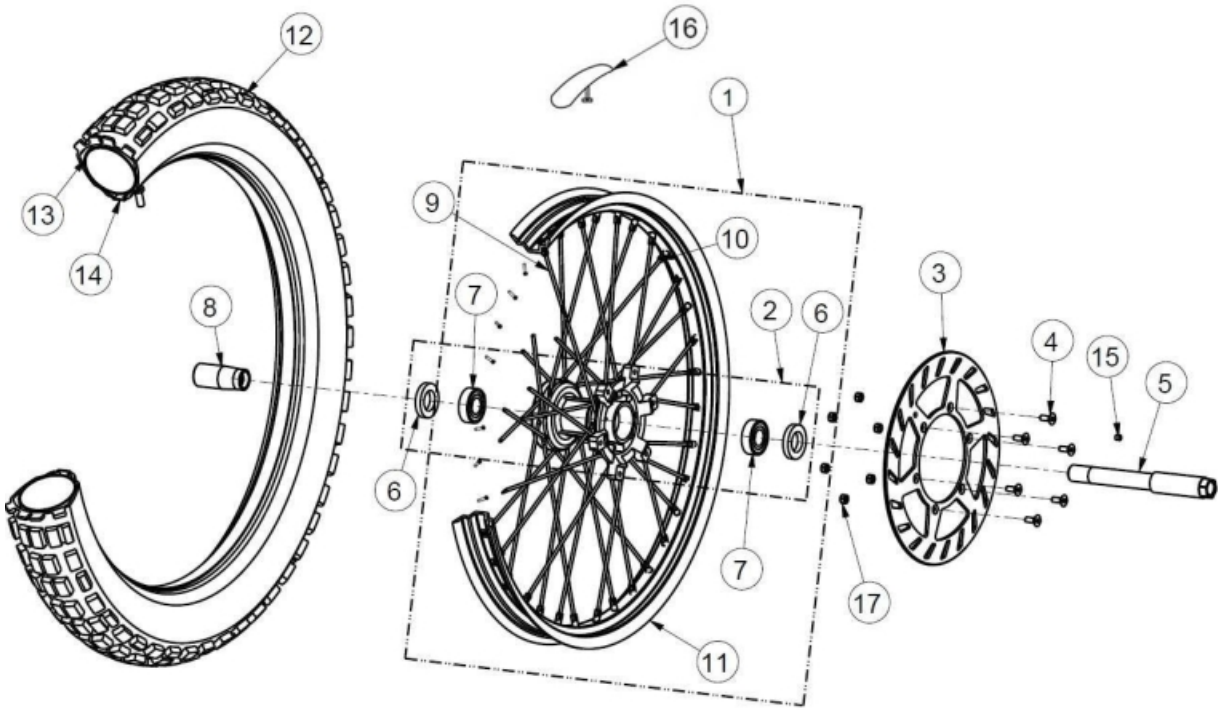

AJP-FRONT WHEEL SM PR3/PR4/PR5 2.50X17 2012
00RFC01A0060 (u. 1)

1 AJP-FRONT WHEEL BLACK RIM 1.60X21 PR4/PR5 EXTREME 2012
00RFC01A0061 (u. 0)

AJP-FRONT WHEEL BLACK RIM 1.60X21 PR4/PR5 2012
00RFC01A0009 (u. 1)

2 AJP-HUB RED PR4/PR5 2013
00RFS07A0053 (u. 1)

AJP-HUB FOR PR4/PR5 2012
00RFS01A0075 (u. 1)

3 AJP-SPECIAL DISC FOR FRONT GALFER PR4/PR5 2013
00RFS01A0078 (u. 1)

AJP-FRONT BRAKE DISC 260MM PR4/PR5 2012
00RFS01A0067 (u. 1)

4 AJP-SCREW DIN7991 M6X16
PF7991006016 (u. 6)

AJP-SCREW DIN7991 M6X20
PF7991006020 (u. 6)

5 AJP-FRONT AXLE LH
00RFS05A0055 (u. 1)

6 AJP-DUST SEAL 25X42X7
00RFS01A0057 (u. 2)


7 AJP-BEARING 6004-2RS
RL00060042RS (u. 2)

8 AJP-FRONT AXLE RH
00RFS05A0054 (u. 1)

AJP-SPACER FRONT AXLE RH
00RFS05A0057 (u. 1)

9	AJP-SPOKE EN 21" 243 X 3.5 PR4/PR5 2013 EXTREME 00RFS01A0014 (u. 36)
	AJP-SPOKE SM PR4/PR5 2013 192X3.8 00RFS01A0077 (u. 36)
	AJP-SPOKE 240X3.8 PR4/PR5 2011-2013 00RFS01A0079 (u. 36)
10	AJP-SPOKE NUT 3.8MM 2012 00RTS01A0031 (u. 36)
	AJP-INNER TUBE 2.50/2.75-19 00RFS01A0051 (u. 36)
11	AJP-RIM EN BLACK 1.60"X21" EXTREME 00RFS01A0056 (u. 1)
	AJP-RIM BLACK SM 2.50-17 36T 2012 00RFS01A0021 (u. 1)
	AJP-RIM EN BLACK 1.60"X21" 2012 PR4/PR5 00RFS01A0068 (u. 1)
12	AJP-TIRE MICHELIN EN 90/90-21" 00RFS01A0002 (u. 1)
	AJP-TIRE MICHELIN SM 100/80-17" 00RFS01A0003 (u. 1)
13	AJP-INNER TUBE SM 00RFS01A0006 (u. 1)
	AJP-INNER TUBE EN 00RFS01A0005 (u. 1)
14	AJP-WHEEL RIM TAPE 21" 00RFS01A0023 (u. 1)
	AJP-WHEEL RIM TAPE 1.35/1.85X17" 00RFS01A0046 (u. 1)
15	AJP-FRONT DISC MAGNET 00RFS01A0042 (u. 1)
16	AJP-FRONT TIRE FIXATION 1.60 00RFS01A0061 (u. 1)
17	AJP-NUT M6 S40010600001 (u. 6)

REAR WHEEL

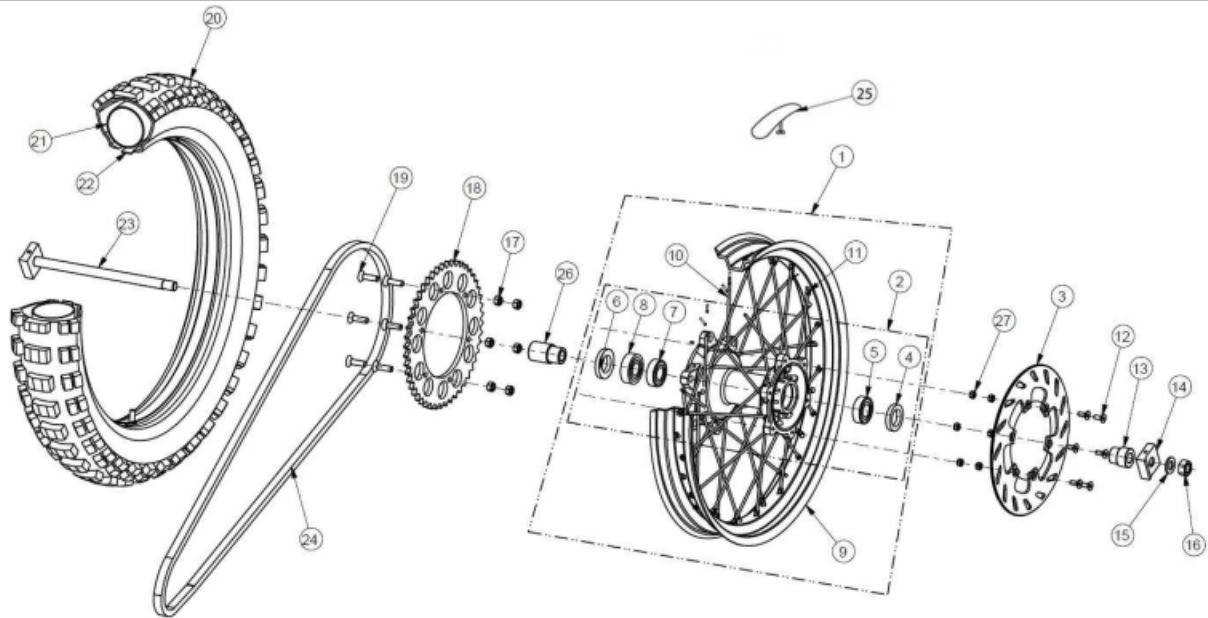

AJP-REAR WHEEL RIM BLACK 2.15X18 PR4/PR5 2012
00RTC01A0010 (u. 1)

1 AJP-REAR WHEEL SM PR3/PR4/PR5
00RTC01A0076 (u. 1)

AJP-REAR WHEEL RIM BLACK 2.15X18 PR4/PR5 EXTREME 2012
00RTC01A0077 (u. 1)

2 AJP-REAR HUB PR5 2012
00RTS01A0100 (u. 1)

AJP-REAR HUB RED PR4 /PR5 2013
00RTS07A0078 (u. 1)

3 AJP-SPECIAL DISC FOR REAR PR4/PR5 2013
00RTS01A0105 (u. 1)

AJP-REAR BRAKE DISC 220MM PR4/PR5 2012
00RTS01A0097 (u. 1)

4 AJP-DUST SEAL 47X7X30
00RTS01A0022 (u. 2)

5 AJP-BEARING 6005 2RS
RL00060052RS (u. 1)

AJP-BEARING 6204 2RS
RL00062042RS (u. 1)

6 AJP-DUST SEAL 47X7X30
00RTS01A0022 (u. 1)

AJP-DUST SEAL 28X42X7
00RTS01A0024 (u. 1)

7 AJP-BEARING 6005 2RS
RL00060052RS (u. 2)

AJP-BEARING 6204 2RS
RL00062042RS (u. 1)

9 AJP-WHEEL RIM BLACK EN 2.15X18 PR4/PR5 2012
00RTS01A0075 (u. 1)


AJP-WHEEL RIM BLACK EN 2.15X18 EXTREME
00RTS01A0074 (u. 1)

AJP-RIM BLACK SM 3.50-17 36T PR4/PR5 2012
00RTS01A0026 (u. 1)

10	AJP-SPOKE EN LH 207X3.8 2011-2013 00RTS01A0112 (u. 18)
	AJP-SPOKE REAR SM PR4/PR5 2012 189X3.8 00RTS01A0104 (u. 18)
11	AJP-SPOKE EN RH 192X3.8 PR4/PR5 EXTREME 00RTS01A0079 (u. 18)
	AJP-SPOKE EN LH 189X4 PR5 EXTREME 00RTS01A0110 (u. 18)
	AJP-SPROCKET Z46 00RTS01A0077 (u. 18)
12	AJP-SCREW DIN7991 M6X20 PF7991006020 (u. 6)
	AJP-SCREW DIN7991 M6X16 PF7991006016 (u. 6)
13	AJP-SPACER REAR WHEEL RH 2012 PR5 00RTS07A0073 (u. 1)
	AJP-SPACER REAR WHEEL RH PR5 EXTREME 00RTS07A0079 (u. 1)
14	AJP-CHAIN ADJUSTER RH 00RTS02A0042 (u. 1)
15	AJP-WASHER DIN125A M14 AN125A014000 (u. 1)
16	AJP-NUT DIN934 M14 PC0934014000 (u. 1)
17	AJP-NUT DIN985 M8 PC0985008000 (u. 6)
18	AJP-SPROCKET 52 MORAD HUB 00RTS01A0107 (u. 1)
	AJP-SPROCKET 52 METALWAY HUB 00RTS01A0109 (u. 1)
	AJP-ALLOY SPROCKET Z48 PR5 2012 00RTS01A0037 (u. 1)
	AJP-ALLOY SPROCKET Z50 PR5 2012 00RTS01A0038 (u. 1)
19	AJP-VIS DIN79914 M8X30 PF7991008030 (u. 6)
	AJP-SCREW DIN7991 M8X35 PF7991008035 (u. 6)
20	AJP-TIRE MICHELIN 120/80-18 T63 00RTS01A0001 (u. 1)
	AJP-TYRE MICHELIN 130/70-17" 00RTS01A0003 (u. 1)
	AJP-TYRE MICHELIN 120/90-18 00RTS01A0002 (u. 1)
21	AJP-INNER TUBE SM 17" 00RTS01A0006 (u. 1)
	AJP-INNER TUBE TR 120/90-18 00RTS01A0005 (u. 1)
22	AJP-WHEEL RIM TAPE 1.60/2.00X 18/19 00RTS01A0025 (u. 1)
	AJP-WHEEL RIM TAPE 2.15/3.00-17" 00RTS01A0060 (u. 1)
23	AJP-REAR SHAFT 00RTS01A0070 (u. 1)
24	AJP-CHAIN 520H - 112L 00RTS01A0069 (u. 1)

25	AJP-FRONT TIRE FIXATION 00RTS01A0080 (u. 1)
26	AJP-SPACER REAR WHEEL LH 2012 PR5 00RTS07A0074 (u. 1)
	AJP-SPACER REAR WHEEL RH PR5 EXTREME 00RTS07A0080 (u. 1)
27	AJP-NUT M6 S40010600001 (u. 6)


FRONT BRAKE

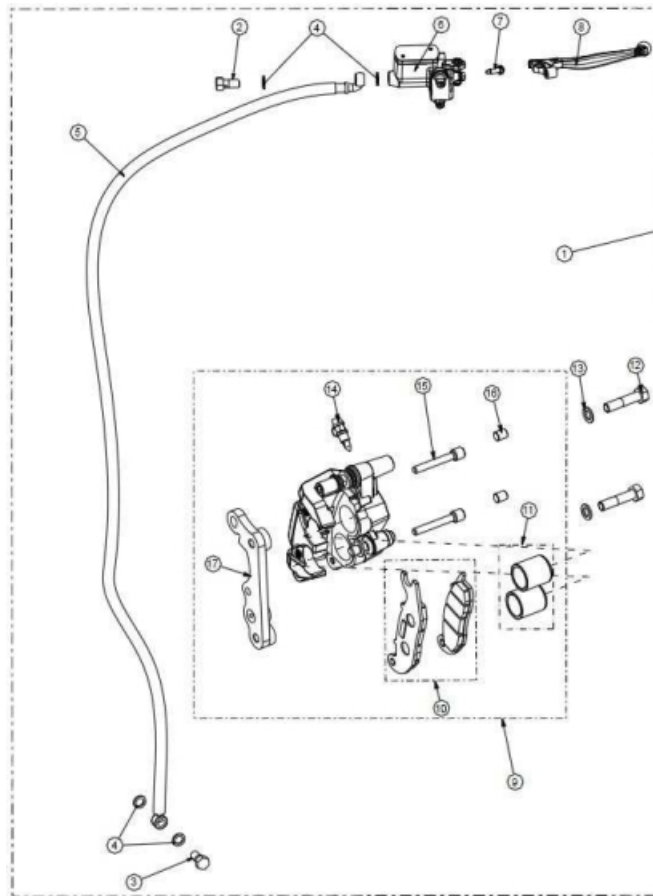

1	AJP-FRONT BRAKE ASSEMBLY COMPLETE PR5 2012 00TRC01A0009 (u. 1)
2	AJP-SCREW 1.25 PR3/PR4/PR5 00TRS01A0049 (u. 1)
3	AJP-SCREW M10X1 PR3/PR4/PR5 2012 00TRS01A0025 (u. 1)
4	AJP-WASHER FOR BRAKES 00TRS01A0010 (u. 4)
5	AJP-FRONT BRAKE HOSE PR5 2012 00TRS01A0003 (u. 1)
6	AJP-FRONT MASTER CYLINDER ASSEMBLY PR4/PR5 2012 00TRS01A0098 (u. 1)
7	AJP-STOP VALVE 00TRS01A0055 (u. 1)
8	AJP-BRAKE LEVER PR4/PR5 2012 00TRS01D0001 (u. 1)
9	AJP-FRONT CALIPER ASSEMBLY PR3/PR4/PR5 2012 00TRC01A0007 (u. 1)
10	AJP-FRONT PAD SET PR3/PR4/PR5 OUT. 2011 TO AUGUST 2014 00TRS01A0046 (u. 1)
11	AJP-FRONT PISTON SET PR3/PR4/PR5 2012 00TRS01A0069 (u. 1)
12	AJP-SCREW DIN933 M8X35 PF0933008035 (u. 2)
13	AJP-WASHER DIN127 M8 AN0127008000 (u. 2)
14	AJP-BLEEDER SCREW 00TRS01A0060 (u. 1)

15	AJP-FRONT PAD FIXATION SCREW PR3/PR4/PR5 2012 00TRS01A0064 (u. 2)
16	AJP-TAP FOR FRONT CALIPER 2012 00TRS01A0059 (u. 2)
17	AJP-SUPPORT OF FRONT CALIPER EXTREME PR5 00TRS07A0083 (u. 1)
	AJP-SUPPORT OF FRONT CALIPER PR5 2010-2013 00TRS01A0077 (u. 1)


REAR BRAKE

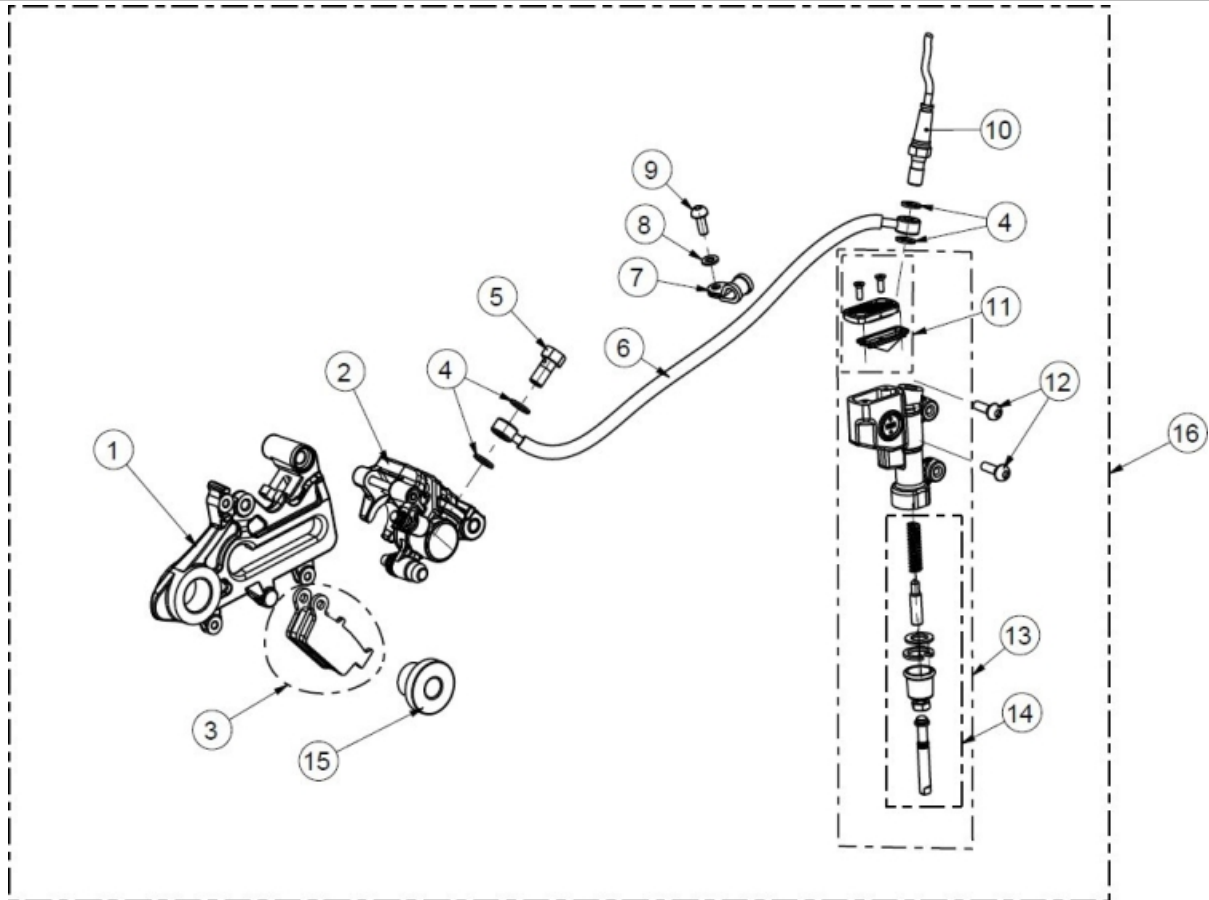

1	AJP-SUPPORT REAR CALIPER 2012 BRAKING 00TRS01A0099 (u. 1)
2	AJP-REAR CALIPER ASSEMBLY PR4/PR5 2012 00TRC01A0099 (u. 1)
3	AJP-REAR PAD SET PR4/PR5 2012 00TRS01A0100 (u. 1)
4	AJP-WASHER FOR BRAKES 00TRS01A0010 (u. 4)
5	AJP-SCREW 1.25 PR3/PR4/PR5 00TRS01A0049 (u. 1)
6	AJP-REAR BRAKE HOSE PR3/PR5 2012 00TRS01A0005 (u. 1)
7	AJP-HOLDER 00TRS01A0037 (u. 1)
8	AJP-WASHER DIN125A M6 AN125A006000 (u. 1)
9	AJP-SCREW DIN7380 M6X12 PF7380006012 (u. 1)
10	AJP-STOP VALVE 00TRS01A0039 (u. 1)
11	AJP-DIAPHRAGM SET REAR PR3/PR4 E PR5 2012 00TRS01A0102 (u. 1)
12	AJP-SCREW DIN7380 M6X20 PF7380006020 (u. 2)
13	AJP-REAR MASTER CYLINDER PR3/PR4/PR5 00TRS01A0095 (u. 1)
14	AJP-PISTON&CUP SET PR3/PR4/PR5 SINCE 04/10/2011 - 2014 00TRS01A0101 (u. 1)

15	AJP-SPACER SUPPORT OF REAR CALIPER PR5 2012/2013 00TRS07A0081 (u. 1)
16	AJP-REAR BRAKE CALIPER COMPLETE 00TRC01A0096 (u. 1)

REAR BRAKE PEDAL

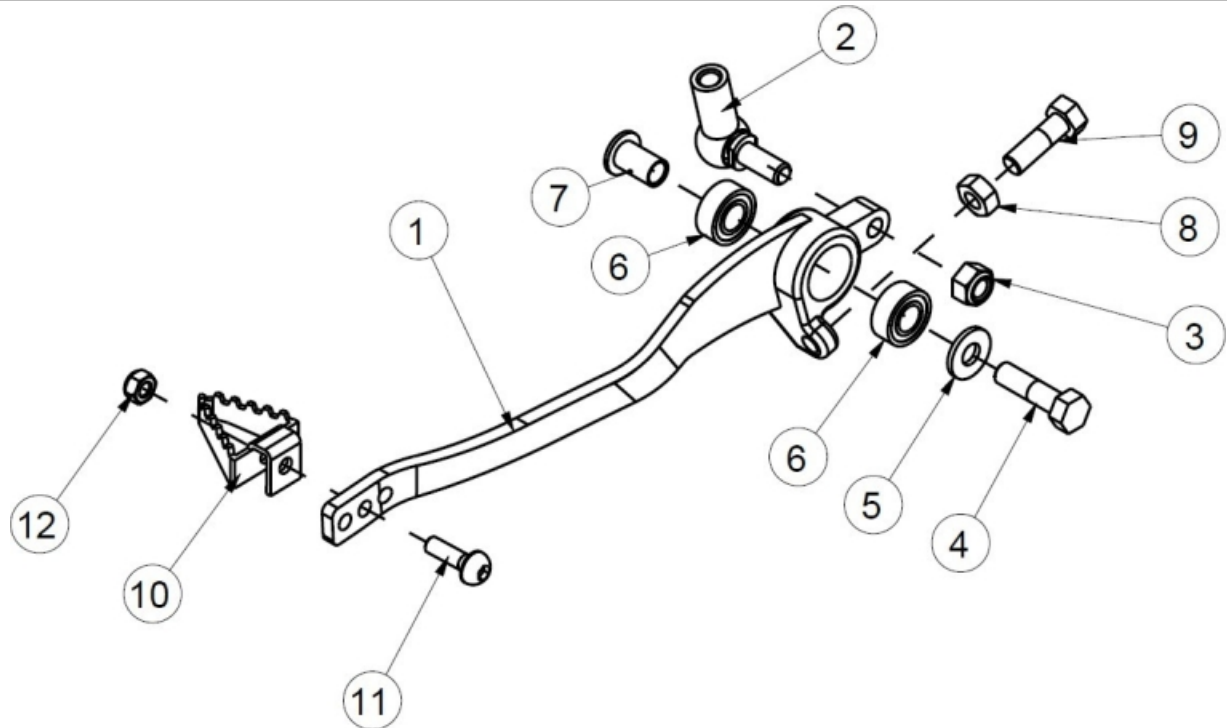

1

AJP-REAR BRAKE PEDAL PR5 2013 RED EXTREME
00TRS07A0085 (u. 1)

AJP-REAR BRAKE PEDAL PR5 2013
00TRS07A0084 (u. 1)

2

AJP-PUSH ROD
00TRS06A0005 (u. 1)

3

AJP-NUT DIN 934 M8
PC0934008001 (u. 1)

4

AJP-SCREW DIN933 M8X30
PF0933008030 (u. 1)

5

AJP-WASHER 5/16
00MTS01A0072 (u. 1)

6

AJP-BEARING 6000 2RS
RL00060002RS (u. 2)

7

AJP-SPACER OF BRAKE PEDAL PR5 2013
00TRS07A0079 (u. 1)

8

AJP-NUT DIN934 M8
PC0934008000 (u. 1)

9

AJP-SCREW DIN912 M8X25
PF0912008025 (u. 1)

10

AJP-CRAMPON ALLOY OF REAR BRAKE PEDAL PR5 2013
00TRS07A0086 (u. 1)


11

AJP-SCREW DIN7380 M6X16
PF380006016 (u. 1)

12


AJP-NUT M6
S40010600001 (u. 1)

HANDLEBAR

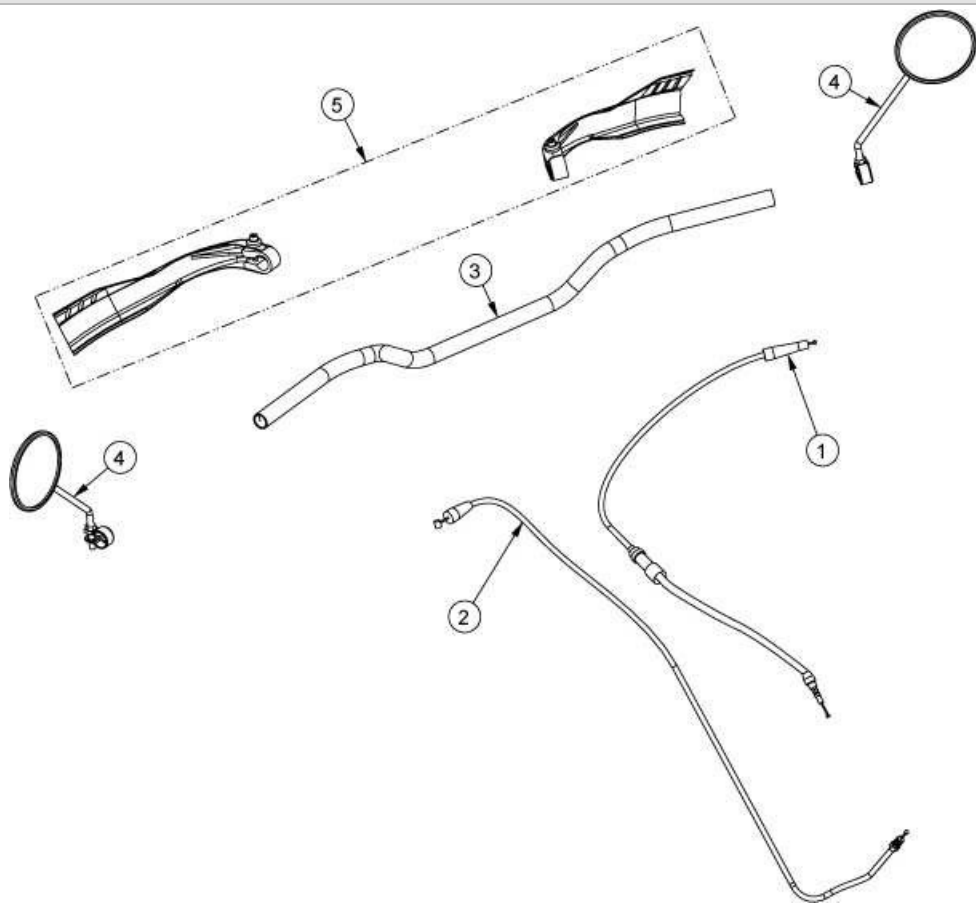


1	AJP-THROTTLE CABLE PR5 00COS01A0032 (u. 1)
2	AJP-CLUTCH CABLE PR5 2013 00COS01B0033 (u. 1)
3	AJP-HANDLEBAR PR5 REIKON 00COS01A0034 (u. 1)
4	AJP-REAR VIEW MIRROR 00COS01A0021 (u. 2)
5	AJP-HAND GARDS WHITE 00PLS01A0073 (u. 1)

MAIN CONTROLS

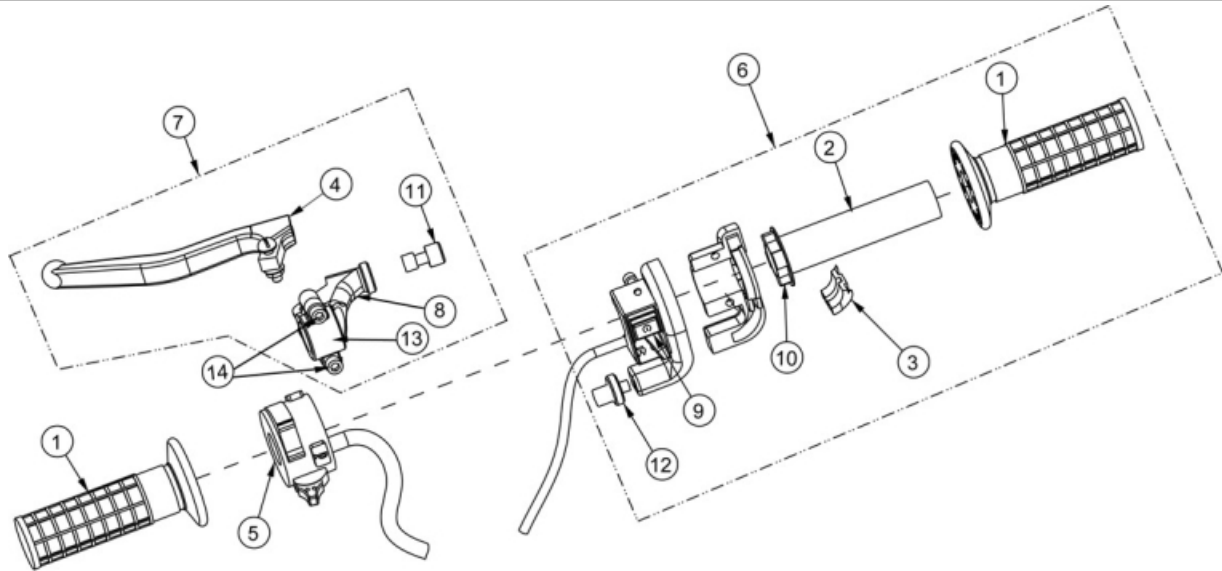


1	AJP-SET OF GRIPS 00COC01B0003 (u. 1)
3	AJP-GUIDE THROTTLE CABLE 00COS01A0004 (u. 1)
4	AJP-CLUTCH LEVER SPECIAL REIKON 00COC01A0028 (u. 1) AJP-CLUTCH LEVER 00COS01A0002 (u. 1)
5	AJP-COMMODO GAUCHE 00ELC01A0003 (u. 1)
6	AJP-THROTTLE CONTROL ASSEMBLY 00COC01A0002 (u. 1)
7	AJP-CLUTCH LEVER ASSEMBLY REIKON 00COC01A0027 (u. 1) AJP-CLUTCH LEVER ASSEMBLY 00COC01A0001 (u. 1)
8	AJP-CLUTCH LEVER BRACKET 00COS01A0027 (u. 1)
9	AJP-STARTING BUTTON 00COS01A0029 (u. 1)
10	AJP-THROTTLE STOPPER 00COS01A0036 (u. 1) AJP-SCREW DIN912 M6X20 PF0912006020 (u. 2)
11	AJP-CLUTCH CABLE TUNNER 00COS01A0028 (u. 1)
12	AJP-THROTTLE CABLE TUNNER 00COS01A0037 (u. 1)
14	AJP-SCREW DIN912 M6X20 PF0912006020 (u. 2)

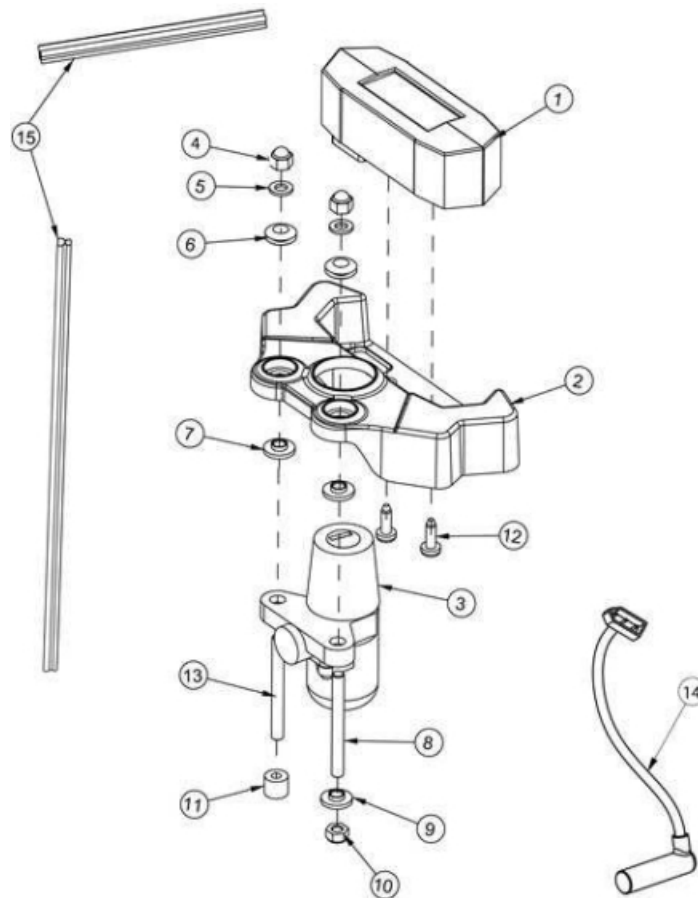COCKPIT


1	AJP-SPEEDOMETER 00ELS01A0036 (u. 1)
2	AJP-SPEEDOMETER COVER 00ELS01A0035 (u. 1)
3	AJP-IGNITION SWITCH ASSEMBLY 00COS01A0018 (u. 1)
4	AJP-NUT DIN1587 M6 PC1587006000 (u. 2)
5	AJP-WASHER DIN125A M6 AN125A006000 (u. 2)
6	AJP-CUSHION 00COS01A0016 (u. 2)
7	AJP-SPACER 00COS07A0030 (u. 2)
8	AJP-STUD M6X50 00COS01A0024 (u. 1)
9	AJP-SPACER 16X4.4X6 00COS07A0015 (u. 1)
10	AJP-NUT DIN985 M6 PC0985006000 (u. 1)
13	AJP-STUD M6X60 00COS01A0022 (u. 1)
14	AJP-SPEEDOMETER SENSOR 00ELS01A0038 (u. 1)
15	AJP-SENSOR CABLE HOSE KIT 00TRS01A0088 (u. 1)


ELECTRICAL SYSTEM

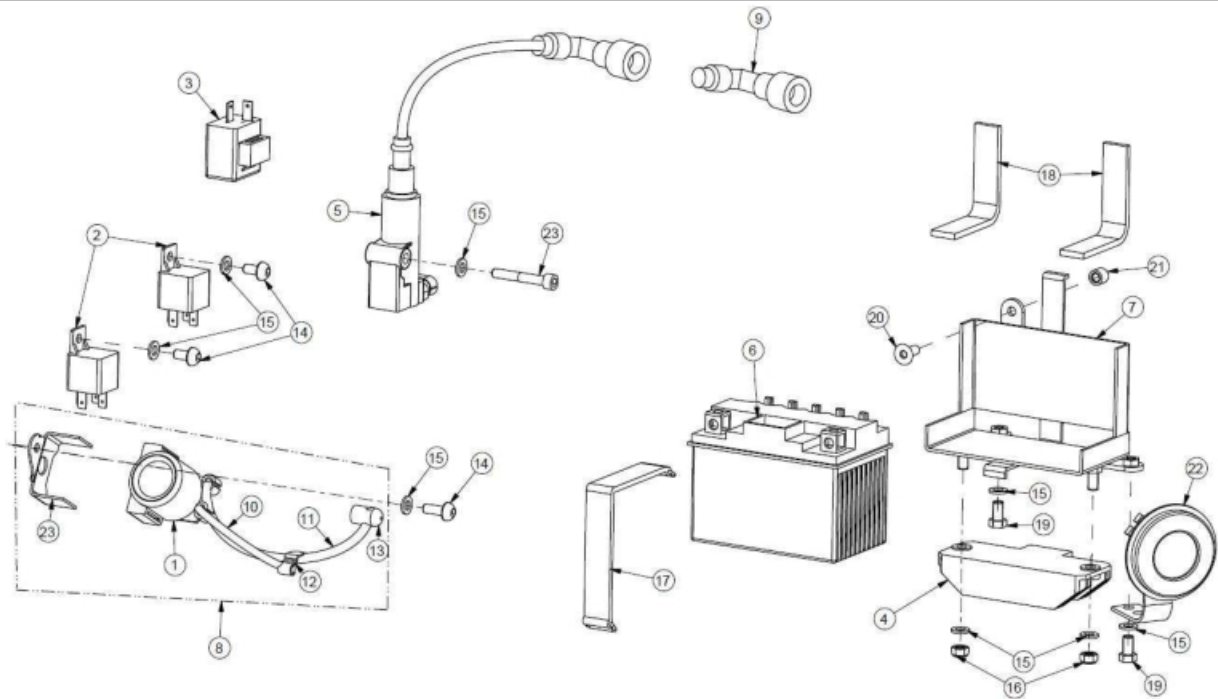

1	AJP-STARTER RELAY 93A283100000 (u. 1)
2	AJP-INJECTION RELAY 00ELS01A0045 (u. 2)
3	AJP-TURN LIGHTS RELAY 00ELS01A0006 (u. 1)
4	AJP-Rectifier, PR5, LC 2013, AJP 83100JA320400 (u. 1)
5	AJP-IGNITION COIL 00ELS01A0043 (u. 1)
6	AJP-BATTERY YTZ7-S (12V 6AH) 00ELS01A0039 (u. 1)
7	AJP-BATTERY HOLDER PR5 2013 00ELS04A0041 (u. 1)
8	AJP-COMPLETE STARTER ASSEMBLY 00ELC01A0052 (u. 1)
9	AJP-SPARK PLUG CONNECTOR 00ELS01A0044 (u. 1)
10	AJP-BATTERY CABLE 250MM 00ELS01A0054 (u. 1)
11	AJP-STARTING MOTOR CABLE 82231I0490000 (u. 1)
12	AJP-BATTERY TERMINAL PROTECTION 00ELS01A0056 (u. 1)
13	AJP-STARTER CABLE TERMINAL 82233I0490000 (u. 2)
14	AJP-SCREW DIN933 M6X12 PF0933006012 (u. 3)
15	AJP-WASHER DIN125A M6 AN125A006000 (u. 8)
16	AJP-NUT DIN985 M6 PC0985006000 (u. 2)
17	AJP-BAND 00ELS01A0004 (u. 1)


20	AJP-SCREW DIN7991 M6X25MM PF7991006025 (u. 1)
21	AJP-SPACER SUPERIOR FOR BATTERY 240 2013 00MTS01A0121 (u. 1)
22	AJP-HORN 12V CC 00ELS01A0005 (u. 1)

WIRING HARNESS

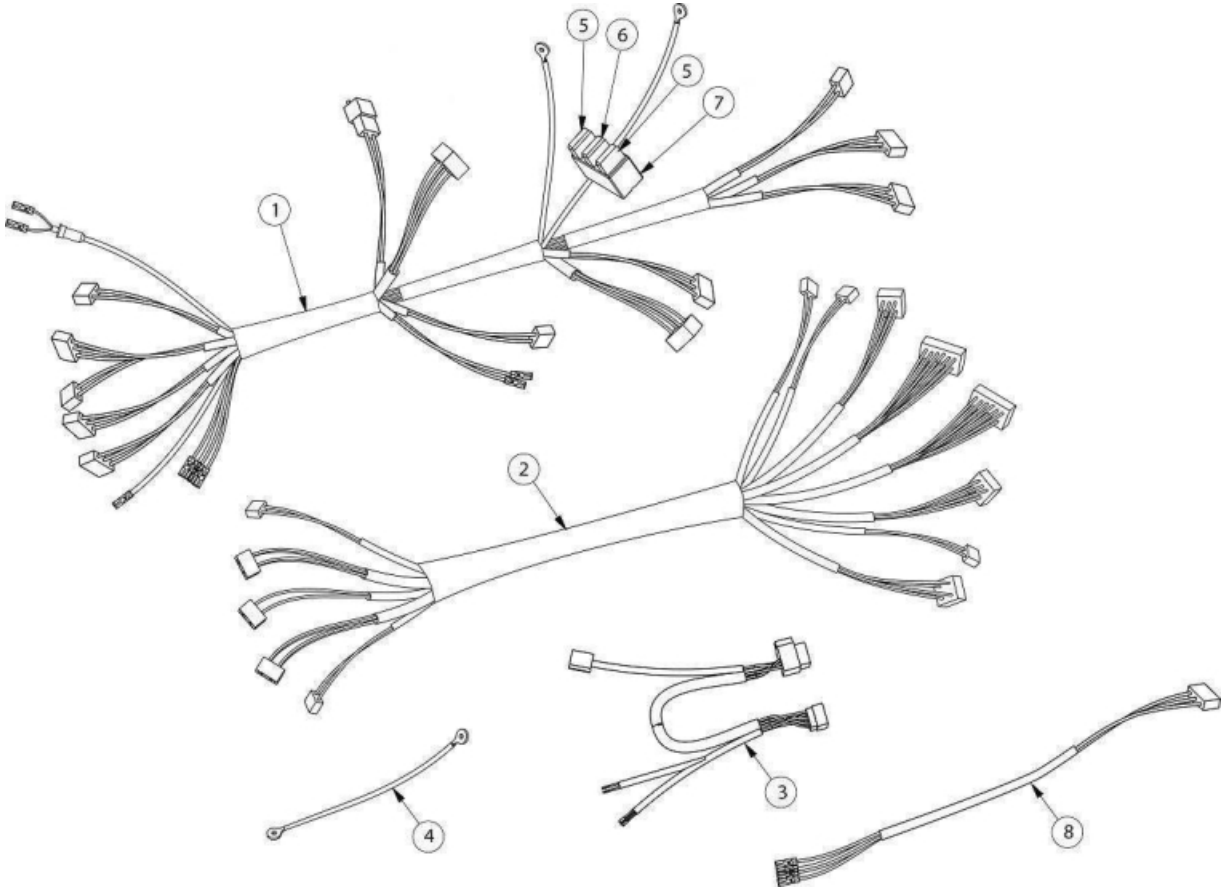


1	AJP-ELECTRICAL SYSTEM HARNESS 2013 00ELS01A0060 (u. 1)
2	AJP-INJECTION SYSTEM HARNESS 00ELS01A0050 (u. 1)
3	AJP-SPEEDOMETER WIRING 00ELS01A0037 (u. 1)
4	AJP-GROUND CONNECTION CABLE (250MM) 00ELS01A0051 (u. 1)
5	AJP-FUSE 15A 00ELS01A0047 (u. 2)
6	AJP-FUSE 00ELS01A0017 (u. 1)
7	AJP-FUSE HOLDER 00ELS01B0018 (u. 1)
8	AJP-BLINKER HARNESS 00ELS01A0021 (u. 1)

TURN SIGNAL

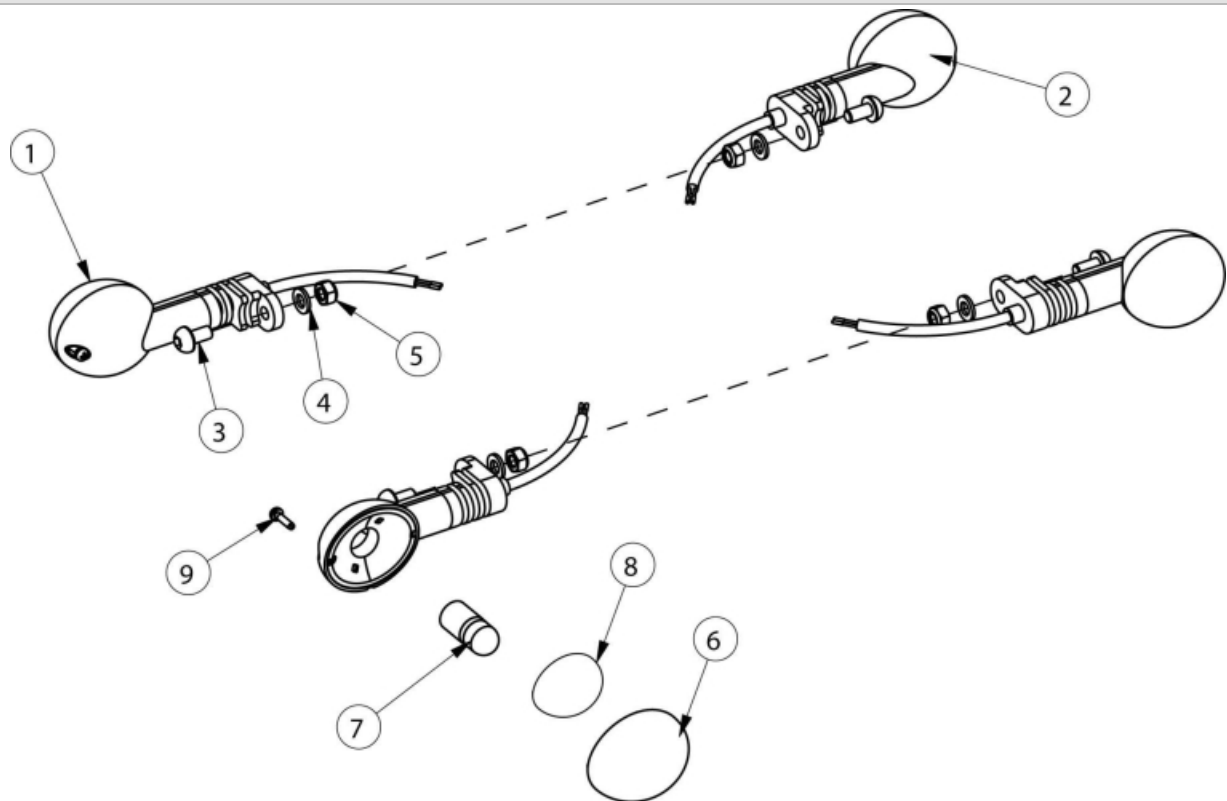

1	AJP-TURN LAMP ASSEMBLY LH 00ELC01A0002 (u. 2)
2	AJP-TURN LAMP ASSEMBLY RH 00ELC01A0001 (u. 2)
3	AJP-SCREW DIN7380 M6X16 PF7380006016 (u. 4)
4	AJP-WASHER DIN125A M6 AN125A006000 (u. 4)
5	AJP-NUT DIN985 M6 PC0985006000 (u. 4)
6	AJP-BLINKER GLASS 00ELS01A0013 (u. 4)
7	AJP-LAMP. TURN LIGHT 00ELS01A0015 (u. 4)
8	AJP-TURN SIGN INNER GLASS 00ELS01A0014 (u. 4)


FRONT PLASTICS

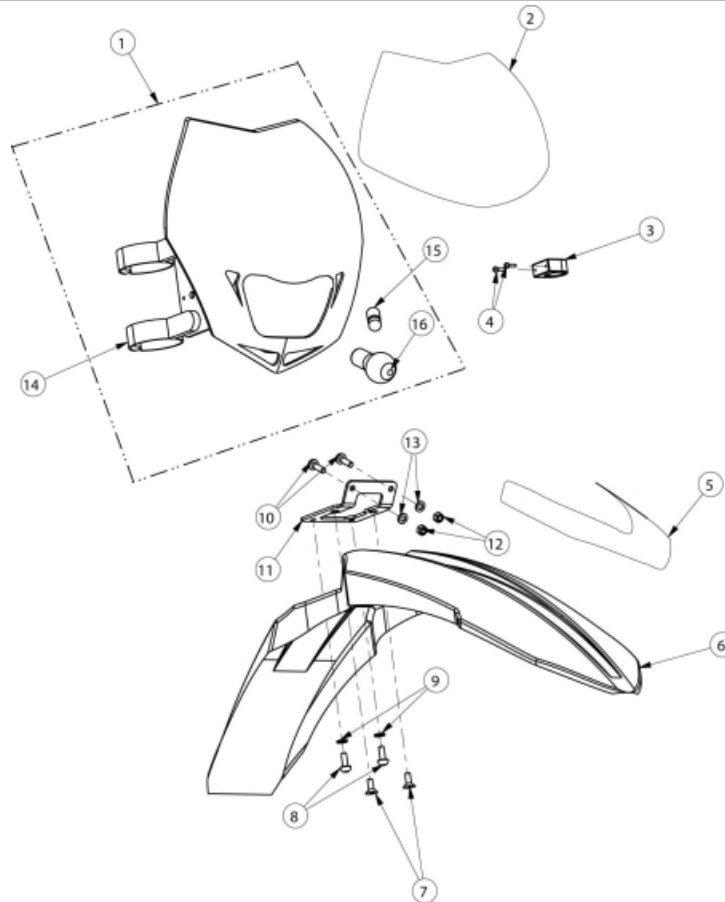

1	AJP-HEADLAMP COVER ASSEMBLY WHITE 00PLC01A0071 (u. 1)
2	AJP-HEAD LAMP STICKER PR5 2013 00BAS01A0124 (u. 1)
3	AJP-HOLDER 00PLS01A0042 (u. 1)
4	AJP-SCREW 3.5 PF7981003513 (u. 2)
5	AJP-FRONT FENDER STICKER PR5 2013 00BAS01A0119 (u. 1) AJP-FRONT FENDER STICKER PR5 2013 EXTREME 00BAS01A0130 (u. 1)
6	AJP-FRONT FENDER EN WHITE 00PLS01A0076 (u. 1) AJP-FRONT FENDER SM WHITE 00PLS01A0072 (u. 1)
7	AJP-SCREW DIN7991 M6X16 PF7991006016 (u. 2)
8	AJP-SCREW DIN912 M6X20 PF0912006020 (u. 2)
9	AJP-WASHER DIN9021 M6 AN9021006000 (u. 2)
10	AJP-SCREW DIN7380 M6X16 PF7380006016 (u. 2)
11	AJP-FRONT FENDER BRACKET 00PLS07A0081 (u. 1)
12	AJP-NUT DIN985 M6 PC0985006000 (u. 2)

13	AJP-WASHER DIN9021 M6 AN9021006000 (u. 2)
14	AJP-BAND 00PLS01A0007 (u. 4)
15	AJP-LAMP 12V35W B20 00ELS01A0030 (u. 1)
16	AJP-LAMP 12V 5W 00ELS01A0029 (u. 1)


REAR FENDER

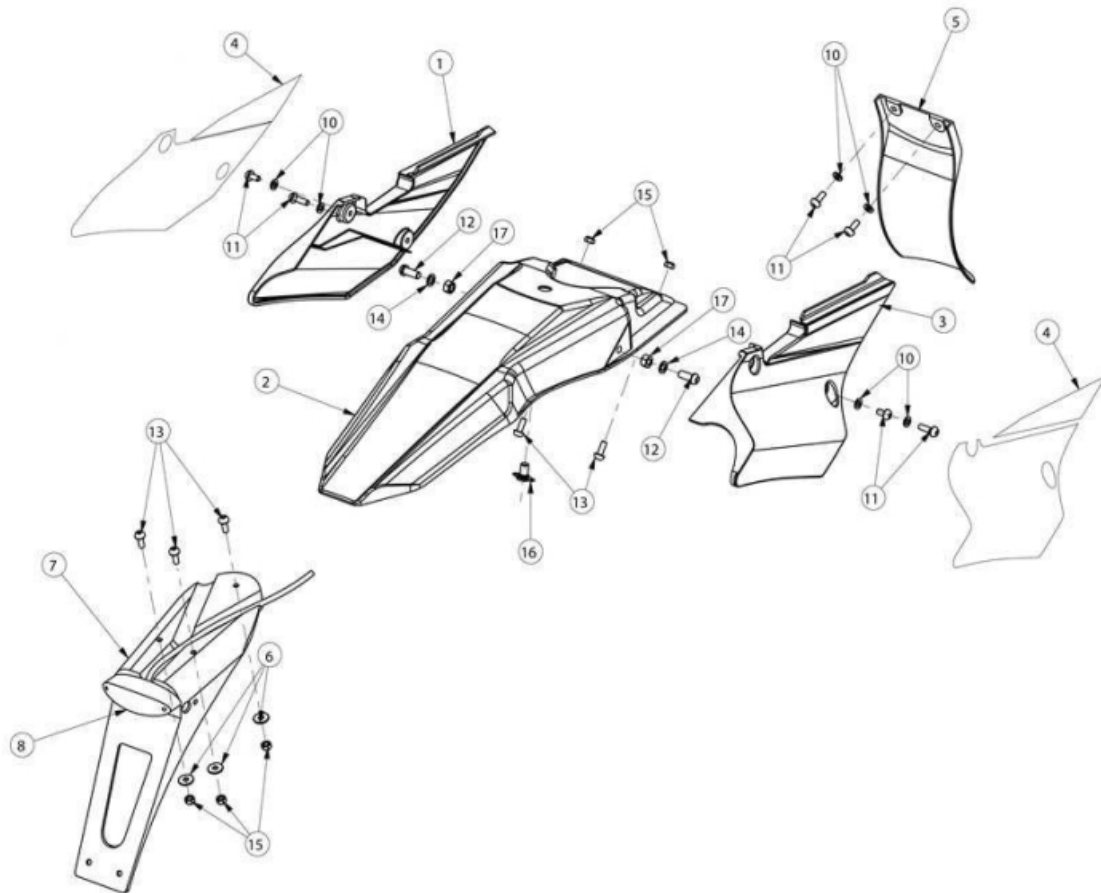

1	AJP-FRAME COVER LH 00PLS01A0082 (u. 1)
2	AJP-REAR FENDER 00PLS01A0064 (u. 1)
3	AJP-FRAME COVER RH 00PLS01A0083 (u. 1)
4	AJP-KIT REAR COVER STICKER LH/RH PR5 2013 00BAS01A0125 (u. 1)
5	AJP-MUD GARD 00PLS01A0013 (u. 1)
6	AJP-WASHER DIN125A M6 AN125A006000 (u. 3)
	AJP-WASHER DIN9021 M6 AN9021006000 (u. 3)
7	AJP-SPOILER EXTREME 00PLC01A0008 (u. 0)
	AJP-REAR FENDER SPOILER 00PLC01A0006 (u. 1)
9	AJP-WASHER DIN9021 M6 AN9021006000 (u. 3)
10	AJP-WASHER DIN125A M6 AN125A006000 (u. 6)
11	AJP-SCREW DIN7380 M6X16 PF7380006016 (u. 6)
12	AJP-SCREW DIN7380 M8X20 PF7380008020 (u. 2)
13	AJP-SCREW DIN7380 M6X16 PF7380006016 (u. 5)


14	AJP-WASHER DIN125A M8 AN125A008000 (u. 2)
15	AJP-NUT DIN985 M6 PC0985006000 (u. 3)
16	AJP-SEAT LOCKER 00PLS01A0084 (u. 1)
17	AJP-NUT DIN985 M8 PC0985008000 (u. 2)

FRAME COVER

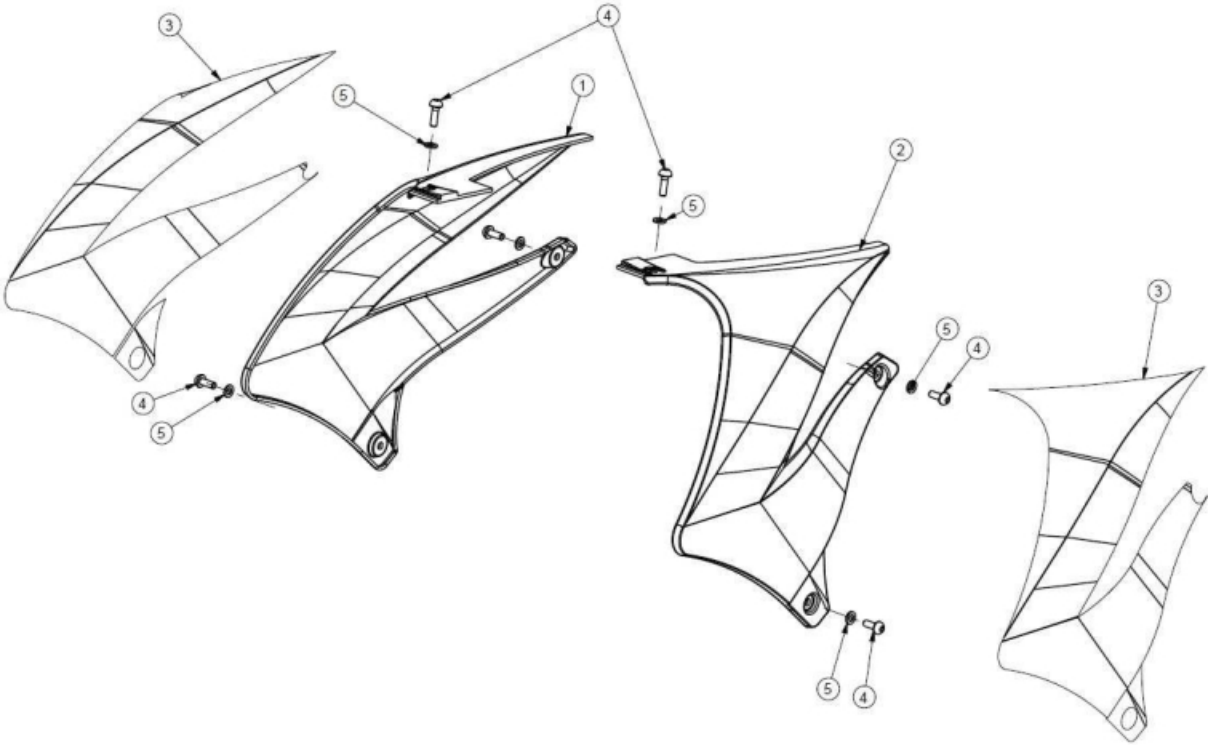

1	AJP-FRONT COVER RH PR5 2013 00PLS01A0089 (u. 1)
2	AJP-FRONT COVER LH PR5 2013 00PLS01A0090 (u. 1)
3	AJP-KIT FRONT COVER STICKER LH/RH PR5 2013 00BAS01A0121 (u. 1)
4	AJP-SCREW DIN7380 M6X16 PF7380006016 (u. 6)
5	AJP-WASHER DIN125A M6 AN125A006000 (u. 6)

SEAT

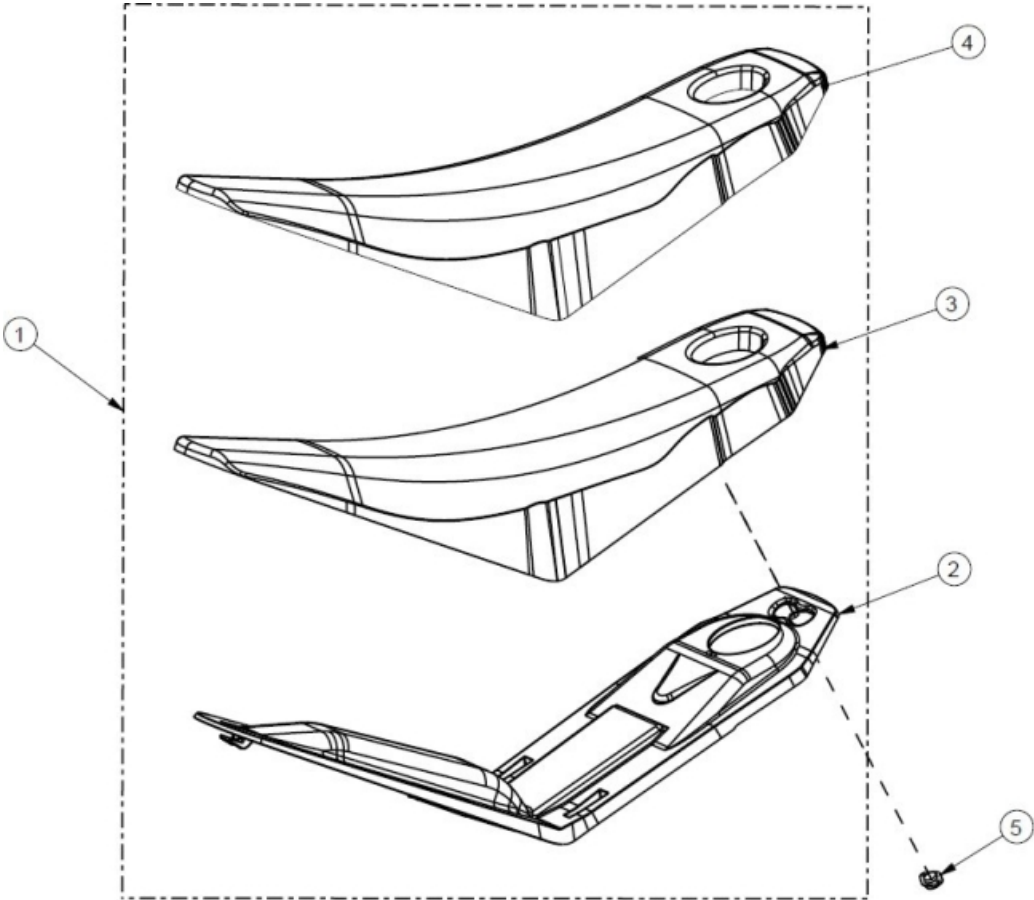

1	AJP-SEAT ASSEMBLY 00BAC01A0086 (u. 1)
2	AJP-SADDLE BASE 00BAS01A0082 (u. 1)
3	AJP-FOAM SADDLE 00BAS01A0085 (u. 1)
4	AJP-SEAT COVER RED 00BAS01A0026 (u. 1)
5	AJP-SEAT LOCKER 00PLS01A0084 (u. 1)