 
 
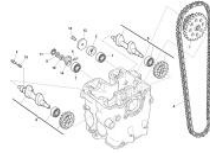 
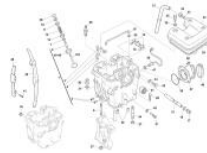 
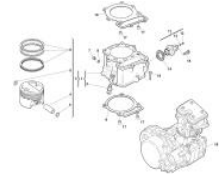 
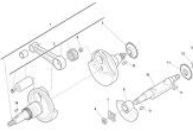 
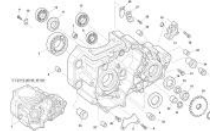 
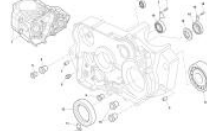 
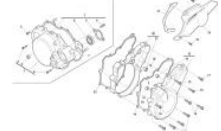 
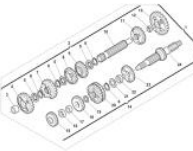 
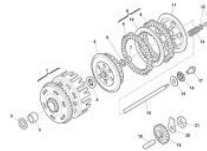 
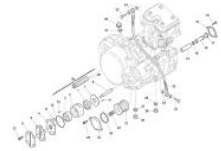 
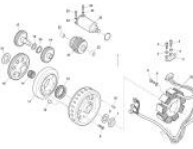 
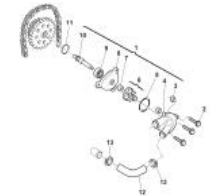 
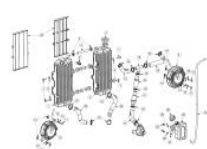 
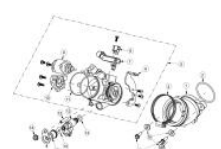 
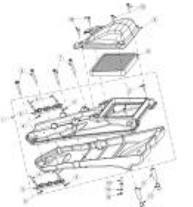 
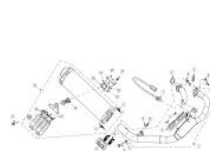 
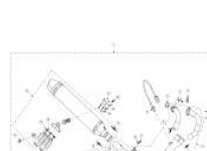 
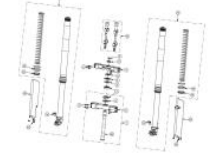 
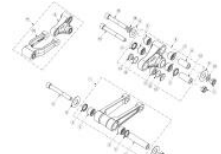 
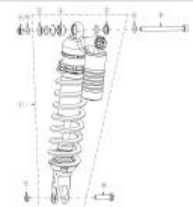 


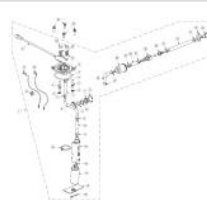


# **PR7 650 2023**

## **Exploded**


**SERVICE TOOLS AND MANUALS****CAMSHAFT AND TIMING CHAIN****CYLINDER HEAD****CYLINDER AND PISTON****CRANKSHAFT AND CRANK BALANCER****L.H HALF CRANKCASE****R.H HALF CRANKCASE****CRANKCASE COVERS****GEARBOX****GEARSHIFT MECHANISM****CLUTCH****LUBRICATION****FLYWHEEL, STATOR AND ELECTRIC STARTER MOTOR****WATER PUMP****COOLING SYSTEM****THROTTLE BODY****AIR FILTER BOX****EXHAUST SYSTEM (STANDARD)****POWER KIT****FRAME****FOOT RESTS AND SIDE STAND****FRONT FORKS AND STEERING COLUMN****SWING ARM****REAR SUSPENSION LINKAGE****REAR SHOCK ABSORBER****FUEL TANK****FUEL PUMP****FRONT BRAKE SYSTEM**

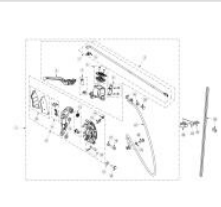

 
**REAR BRAKE SYSTEM**

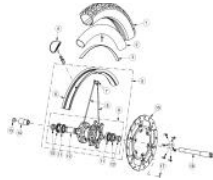


**FRONT WHEEL**

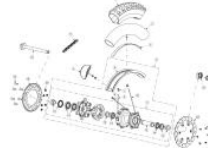 

**REAR WHEEL**

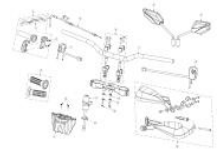 

**HANDLEBAR, CONTROLS AND SWITCHES**

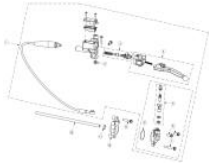 

**HYDRAULIC CLUTCH CONTROL**



 
**ELECTRIC HARNESS**




**IGNITION COIL, VOLTAGE REGULATOR, RELAYS AND HORN (ECU DELPHI)**




**IGNITION COIL, VOLTAGE REGULATOR, RELAYS AND HORN (ECU ATHENA)**

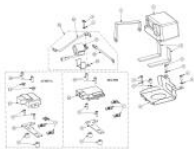


**BATTERY, ECU AND STARTER RELAY**

 

**HEADLIGHT**

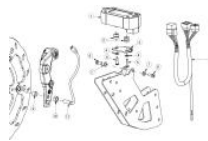 

**INSTRUMENT PANEL AND DIGITAL SPEEDOMETER SENSOR**

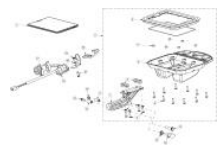 


**TABLET (MICRO USB)**



**TABLET (USB C)**



 **WINDSHIELD**

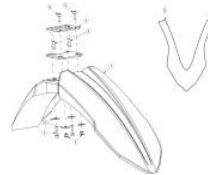

**FRONT FENDER**



 
**SIDE FENDERS, SEAT AND SEAT LOCK**



**REAR FENDER**




**DECALS**

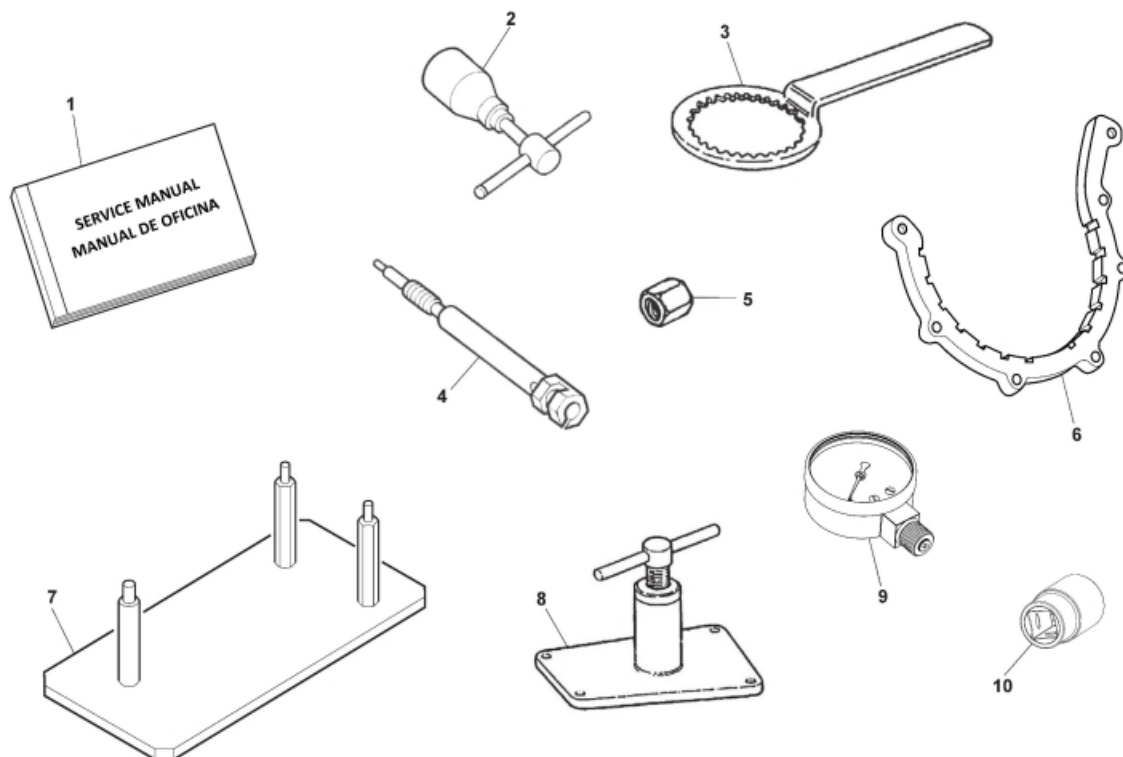**SERVICE TOOLS AND MANUALS**


|   |                                                                             |
|---|-----------------------------------------------------------------------------|
| 2 | SWM-FLYWHEEL REMOVING TOOL SD<br>800039523 (u. 1)                           |
| 3 | SWM-WRENCH FOR CLUTCH DISK HUB<br>800079015 (u. 1)                          |
| 4 | SWM-DIAL GAUGE HOLDING TOOL<br>8000A1625 (u. 1)                             |
| 5 | SWM-F.W.M PULLER PROTECTION TOOL<br>800083254 (u. 1)                        |
| 6 | TOOL. TDC PR7 - SWM/AJP<br>M000P00688 (u. 1)                                |
| 7 | OBSOLETE : 8A0090662 : SWM-ENGINE SUPPORT ASSEMBLY ASSY<br>800090662 (u. 1) |
| 8 | SWM-CRANK SHAFT REMOVING TOOL<br>800089743 (u. 1)                           |
| 9 | AJP-PRESSURE GAUGE FOR FUEL PUMP PR5/PR7<br>00DES01A0104 (u. 1)             |

 
OBSOLETE

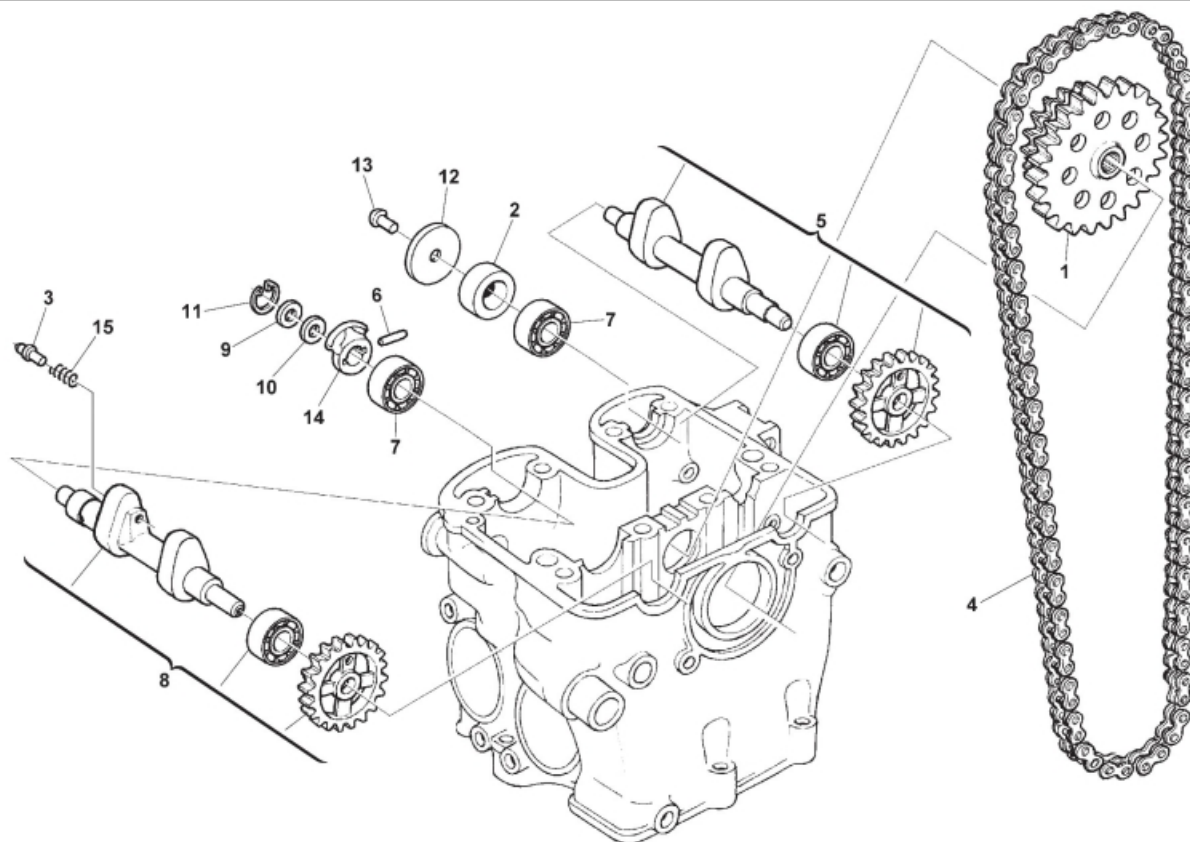**CAMSHAFT AND TIMING CHAIN**


|    |                                                                |
|----|----------------------------------------------------------------|
| 1  | TIMMING GEAR (Z42/Z36) PR7 - SWM/AJP<br>8000H0986 (u. 1)       |
| 2  | SPACER PR7 - SWM/AJP<br>8000A6271 (u. 1)                       |
| 3  | SPACER PR7 - SWM/AJP<br>800099700 (u. 1)                       |
| 4  | TIMING CHAIN PR7 - SWM/AJP<br>8C00H0987 (u. 1)                 |
| 5  | CAM SHAFT. INTAKE PR7/510 - SWM/AJP<br>8000A5595 (u. 1)        |
| 6  | ROLLER B (4X21.8) - SWM/AJP<br>800099701 (u. 1)                |
| 7  | BEARING. BALL 12X28X8 PR7 - SWM/AJP<br>800034317 (u. 2)        |
| 8  | CAM SHAFT. EXHAUST PR7/510CC - SWM/AJP<br>8000A4953 (u. 1)     |
| 9  | WASHER. THRUST (16X19.2X0.8) PR7 - SWM/AJP<br>8A00H0597 (u. 1) |
| 10 | WASHER. THRUST (16X19.2X1) PR7 - SWM/AJP<br>8000H0597 (u. 1)   |
| 11 | CIRCLIP 16 MM PR7 - SWM/AJP<br>66N021205 (u. 1)                |
| 12 | CENTRIFUGAL DISC PR7 - SWM/AJP<br>800099703 (u. 1)             |
| 13 | SCREW TCEI M6X10 PR7 - SWM/AJP<br>Z00055699 (u. 1)             |
| 14 | WEIGHT. VALVE LIFTER PR7 - SWM/AJP<br>8000A8994 (u. 1)         |

|    |                                          |
|----|------------------------------------------|
| 15 | SPRING PR7 - SWM/AJP<br>800099699 (u. 1) |
|----|------------------------------------------|

## CYLINDER HEAD

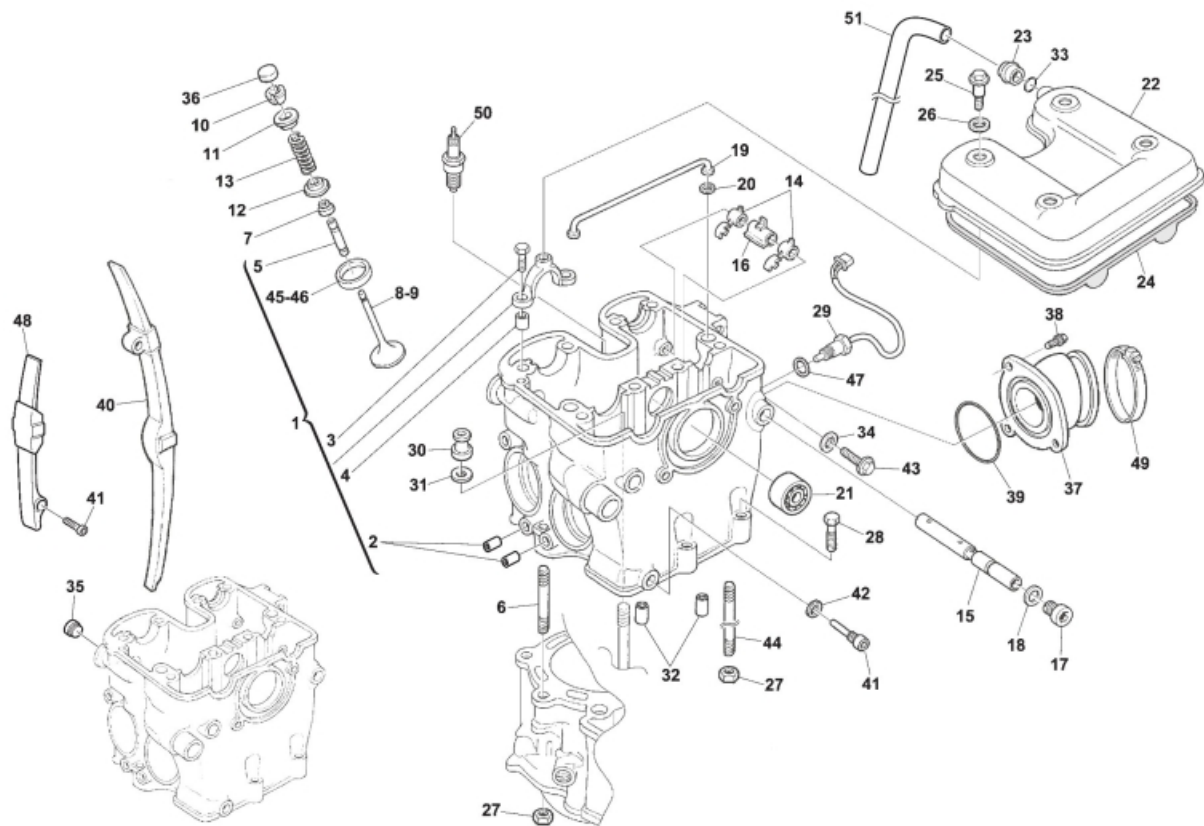 

SWM-VALVE GUIDE D5.5  
8000A4159 (u. 2)

SWM-HEX FLANGE SCREW M6x1x40-CH8  
ZE0067545 (u. 1)

SEAL VALVE STEM 5.5 MM - SWM/AJP  
8000A4137 (u. 2)

COTTER. VALVE 5.5 MM PR7 - SWM/AJP  
8000A4107 (u. 4)

SEAT. SPRING INTAKE PR7 - SWM/AJP  
8000A4135 (u. 2)

SPACER. SPRING 30.8 MM PR7 - SWM/AJP  
8C00A5435 (u. 1)

RETAINER. SPRING INTAKE VALVE 5.5 MM PR7 - SWM/AJP  
8000A4157 (u. 2)

2 SWM-HELI-COIL THREAD  
800049792 (u. 4)

3 SCREW TCEI M6X1X25 PR7 - SWM/AJP  
8A0085071 (u. 8)

4 BUSH 8X6.4X6 PR7 - SWM/AJP  
161795501 (u. 8)

5 SWM-VALVE GUIDE D5 SD  
8000A4158 (u. 2)

6 STUD BOLT M8X51 MM PR7 - SWM/AJP  
800074836 (u. 2)

7 SEAL VALVE STEM 5 MM PR7 - SWM/AJP  
8000A4136 (u. 2)

8 VALVE. EXHAUST STEEL PR7 - SWM/AJP  
8000H4194 (u. 2)


9 VALVE. INTAKE PR7 - SWM/AJP  
8000H4195 (u. 2)

|    |                                                                             |
|----|-----------------------------------------------------------------------------|
| 10 | COTTER. VALVE 5 MM PR7 - SWM/AJP<br>8000A4106 (u. 4)                        |
| 11 | RETAINER. EXHAUST VALVE SPRING 5 MM PR7 - SWM/AJP<br>8000A4151 (u. 2)       |
| 12 | SEAT. SPRING EXHAUST PR7 - SWM/AJP<br>800091578 (u. 2)                      |
| 13 | SWM-VALVE SPRING SD<br>8000A0568 (u. 4)                                     |
| 14 | SWM-ROCKER ARM<br>800091568 (u. 4)                                          |
| 15 | AXLE. VALVE ROCKER ARM PR7 - SWM/AJP<br>8000A5437 (u. 2)                    |
| 16 | SPACER. SPRING 25.8 MM PR7 - SWM/AJP<br>8B00A5435 (u. 1)                    |
| 17 | PLUG DIN 908 M14X1.5 PR7 - SWM/AJP<br>800099711 (u. 2)                      |
| 18 | WASHER 17.9X14.2X1.5 MM PR7 - SWM/AJP<br>800047763 (u. 2)                   |
| 19 | HOSE. OIL PR7 - SWM/AJP<br>800099834 (u. 1)                                 |
| 20 | O-RING 2018 1.78 D4.48 PR7 - SWM/AJP<br>800091584 (u. 2)                    |
| 21 | BEARING. BALL 12X28X8 PR7 - SWM/AJP<br>800034317 (u. 1)                     |
| 22 | COVER. CYLINDER HEAD PR7 - SWM/AJP<br>M000P00098 (u. 1)                     |
| 23 | JOINT. CYLINDER HEAD COVER BREATHER PR7 - SWM/AJP<br>8000A7039 (u. 1)       |
| 24 | GASKET CYLINDER HEAD COVER PR7 + SPR510CC - SWM/AJP<br>800099837 (u. 1)     |
| 25 | AJP-SCREW PR7<br>Z00091587 (u. 4)                                           |
| 26 | WASHER PR7 - SWM/AJP<br>800091588 (u. 4)                                    |
| 27 | NUT M8 PR7 - SWM/AJP<br>Z00054700 (u. 2)                                    |
| 28 | SCREW TE M6X1X30 CH8 PR7 - SWM/AJP<br>Z00062730 (u. 2)                      |
| 29 | AJP-WATER TEMPERATURE SENSOR PR7<br>8000H3649 (u. 1)                        |
| 30 | NUT M10 PR7 - SWM/AJP<br>800091589 (u. 4)                                   |
| 31 | WASHER PR7 - SWM/AJP<br>Z00023374 (u. 4)                                    |
| 32 | BUSH. CYLINDER HEAD (10.3X12.3X9.8) PR7 - SWM/AJP<br>8000H0278 (u. 4)       |
| 33 | O-RING. CYLINDER HEAD COVER BREATHER 11X2 PR7 - SWM/AJP<br>800001199 (u. 1) |
| 34 | ALUMINIUM WASHER 10X5.1X1 MM PR7 - SWM/AJP<br>62N015672 (u. 1)              |
| 35 | SWM-STABLE PLUG 12x6x10<br>800057196 (u. 1)                                 |

|    |                                                                |
|----|----------------------------------------------------------------|
| 36 | PAD. VALVE ADJUSTING 2.55 MM PR7 - SWM/AJP<br>8V00A4162 (u. 4) |
|    | PAD. VALVE ADJUSTING 2.35 MM PR7 - SWM/AJP<br>8R00A4162 (u. 4) |
|    | PAD. VALVE ADJUSTING 1.75 MM PR7 - SWM/AJP<br>8C00A4162 (u. 4) |
|    | PAD. VALVE ADJUSTING 1.60 MM PR7 - SWM/AJP<br>8000A4162 (u. 4) |
|    | PAD. VALVE ADJUSTING 2.45 MM PR7 - SWM/AJP<br>8T00A4162 (u. 4) |
|    | PAD. VALVE ADJUSTING 2.05 MM PR7 - SWM/AJP<br>8J00A4162 (u. 4) |
|    | PAD. VALVE ADJUSTING 2.20 MM PR7 - SWM/AJP<br>8M00A4162 (u. 4) |
|    | PAD. VALVE ADJUSTING 1.90 MM PR7 - SWM/AJP<br>8F00A4162 (u. 4) |
|    | PAD. VALVE ADJUSTING 1.85 MM PR7 - SWM/AJP<br>8E00A4162 (u. 4) |
|    | PAD. VALVE ADJUSTING 2.50 MM PR7 - SWM/AJP<br>8U00A4162 (u. 4) |
|    | PAD. VALVE ADJUSTING 2.40 MM PR7 - SWM/AJP<br>8S00A4162 (u. 4) |
|    | PAD. VALVE ADJUSTING 2.00 MM PR7 - SWM/AJP<br>8H00A4162 (u. 4) |
|    | PAD. VALVE ADJUSTING 2.60 MM PR7 - SWM/AJP<br>8W00A4162 (u. 4) |
|    | PAD. VALVE ADJUSTING 2.25 MM PR7 - SWM/AJP<br>8N00A4162 (u. 4) |
|    | PAD. VALVE ADJUSTING 1.70 MM PR7 - SWM/AJP<br>8B00A4162 (u. 4) |
|    | PAD. VALVE ADJUSTING 1.65 MM PR7 - SWM/AJP<br>8A00A4162 (u. 4) |
|    | PAD. VALVE ADJUSTING 2.30 MM PR7 - SWM/AJP<br>8P00A4162 (u. 4) |
|    | PAD. VALVE ADJUSTING 2.10 MM PR7 - SWM/AJP<br>8K00A4162 (u. 4) |
|    | PAD. VALVE ADJUSTING 1.95 MM PR7 - SWM/AJP<br>8G00A4162 (u. 4) |
|    | PAD. VALVE ADJUSTING 2.15 MM PR7 - SWM/AJP<br>8L00A4162 (u. 4) |
|    | PAD. VALVE ADJUSTING 1.80 MM PR7 - SWM/AJP<br>8D00A4162 (u. 4) |
| 37 | AJP-INTAKE PIPE PR7 AND SPR510<br>00MTS01A0185 (u. 1)          |
| 38 | SWM-TCEI SCREW M6x1x20-CH5<br>60ND02509 (u. 3)                 |
| 39 | AJP-O-RING 49X3 INTAKE PIPE PR7<br>00MTS01A0192 (u. 1)         |
| 40 | TIMING CHAIN GUIDE PR7 - SWM/AJP<br>8000H1783 (u. 1)           |
| 41 | SCREW PR7 - SWM/AJP<br>161535902 (u. 2)                        |
| 42 | WASHER 14X8.2X1 PR7 - SWM/AJP<br>800045194 (u. 1)              |
| 43 | SCREW TEF M5X0.8X8 CH8 PR7 - SWM/AJP<br>ZD0067997 (u. 1)       |

|    |                                                               |
|----|---------------------------------------------------------------|
| 44 | STUD BOLT M10X185 MM PR7 - SWM/AJP<br>8B0081650 (u. 4)        |
| 45 | SWM-EXHAUST VALVE SEAT RS-500R<br>8000A5449 (u. 2)            |
| 46 | SWM-INLET VALVE SEAT RS-500R<br>8000A5450 (u. 2)              |
| 47 | O-RING 2037 1.78X9.25 PR7 - SWM/AJP<br>8A0023108 (u. 2)       |
| 48 | CAM CHAIN TENSIONER PR7 - SWM/AJP<br>8000H1782 (u. 1)         |
| 49 | AJP-CLAMP INTAKE PIPE W2 40-60PR7 INOX<br>00MTS01A0202 (u. 1) |
| 50 | SPARK PLUG CR8EB PR7 - SWM/AJP<br>8000A0573 (u. 1)            |
| 51 | AJP-ENGINE BREATHER PIPE (900X108) PR7<br>00MTS01A0221 (u. 1) |

## CYLINDER AND PISTON

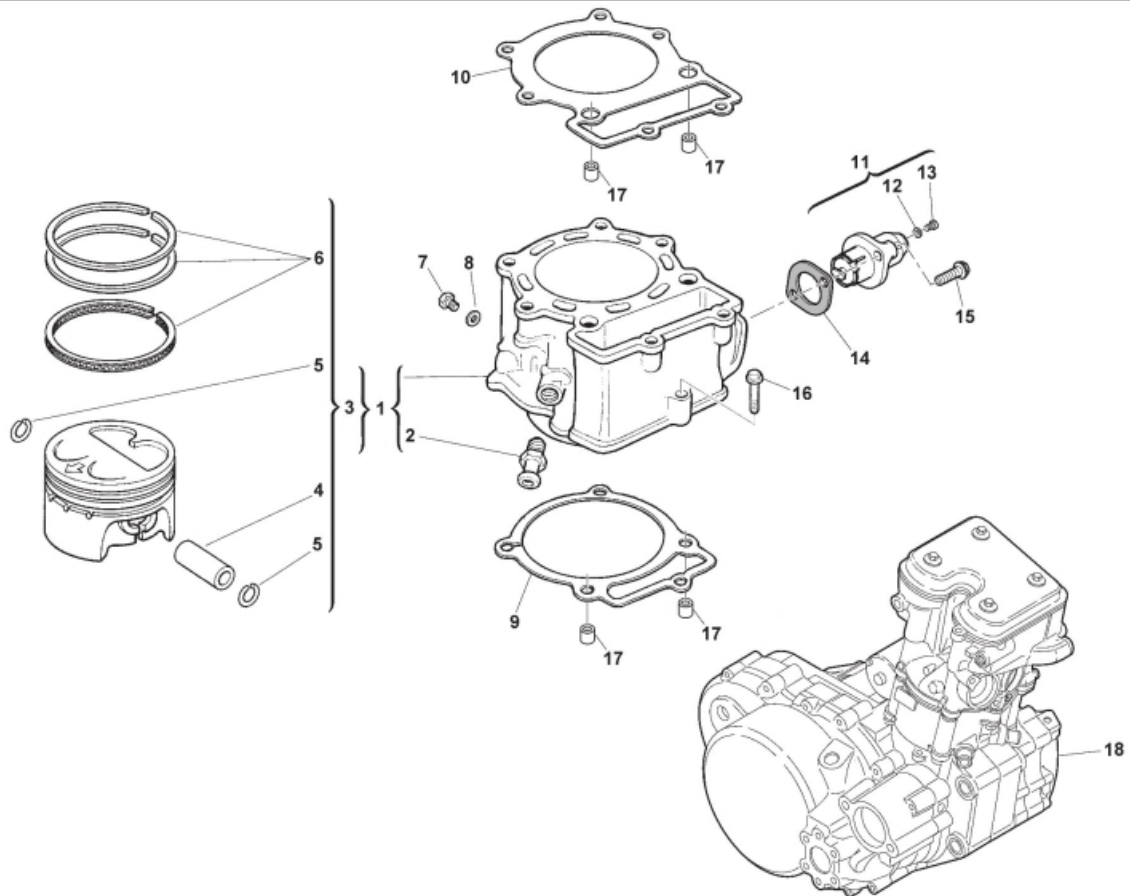 


|    |                                                                    |
|----|--------------------------------------------------------------------|
| 1  | CYLINDER ASSY PR7 - SWM/AJP<br>M000A00100 (u. 1)                   |
| 2  | JOINT PR7 - SWM/AJP<br>800063885 (u. 2)                            |
| 3  | PISTON ASSY PR7 - SWM/AJP<br>8000H6251 (u. 1)                      |
| 4  | PIN. PISTON (GUDGEON PIN) PR7 - SWM/AJP<br>8000A9652 (u. 1)        |
| 5  | CLIP. PISTON PIN PR7 - SWM/AJP<br>8000A5475 (u. 2)                 |
| 6  | PISTON RING SET PR7 - SWM/AJP<br>8000H6252 (u. 1)                  |
| 7  | SWM-HEX FLANGE SCREW M6x1x8-CH8<br>ZS0067545 (u. 1)                |
| 8  | GASKET 10X6.2X1 PR7 - SWM/AJP<br>8A0015960 (u. 1)                  |
| 9  | GASKET. CYLINDER BASE PR7 - SWM/AJP<br>800099841 (u. 1)            |
| 10 | CYLINDER HEAD GASKET PR7 1.1MM - SWM/AJP<br>8A00H0937 (u. 1)       |
| 11 | TENSIONER. TIMING CHAIN PR7 SPR300 - SWM/AJP<br>8000A6950 (u. 1)   |
| 12 | OBSOLETE : 8000A6950 : SWM-WASHER 13x6x1<br>8000A6358 (u. 1)       |
| 13 | OBSOLETE : 8000A6950 : SWM-FLANGE BOLT M6x8x14<br>8000A6357 (u. 1) |
| 14 | GASKET. TENSIONER ADJUSTER PR7 - SWM/AJP<br>8000A6954 (u. 1)       |

OBSOLETE

OBSOLETE

|    |                                                                       |
|----|-----------------------------------------------------------------------|
| 15 | SCREW TEF M6X1X20 CH8 PR7 - SWM/AJP<br>Z00062728 (u. 2)               |
| 16 | SCREW TE M6X1X30 CH8 PR7 - SWM/AJP<br>Z00062730 (u. 1)                |
| 17 | BUSH. CYLINDER HEAD (10.3X12.3X9.8) PR7 - SWM/AJP<br>8000H0278 (u. 4) |


## CRANKSHAFT AND CRANK BALANCER

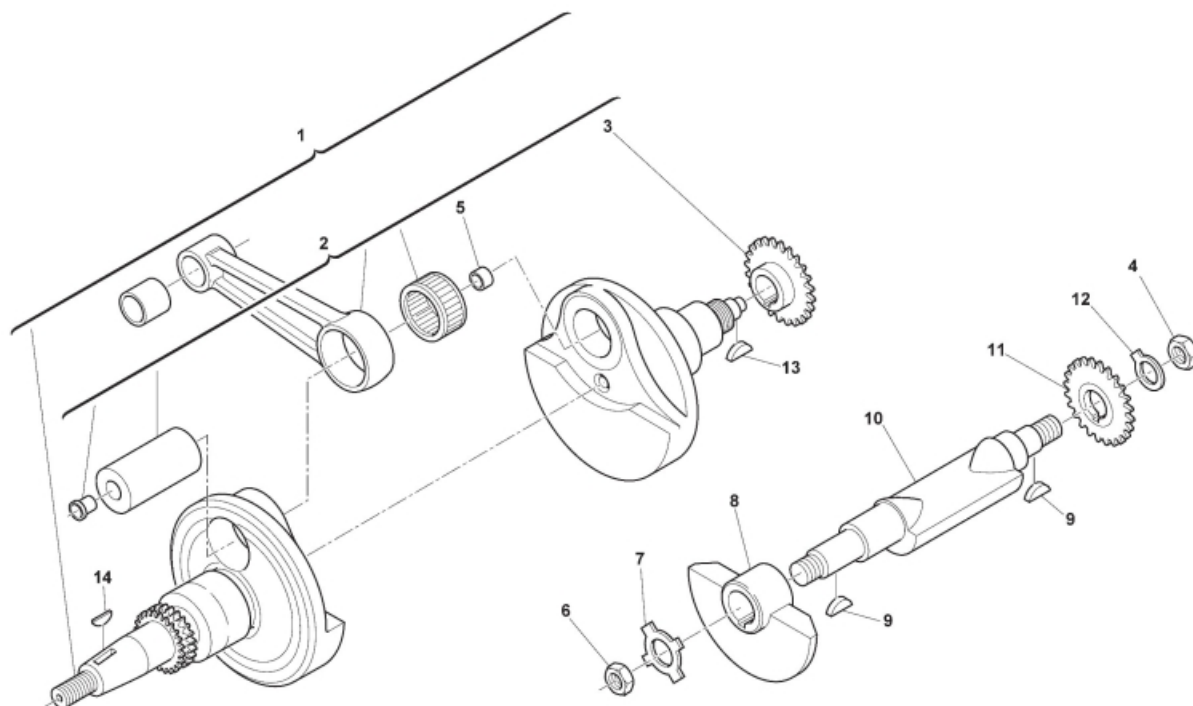 

|    |                                                                                       |
|----|---------------------------------------------------------------------------------------|
| 1  | CRANKSHAFT PR7 - SWM/AJP<br>8000H7033 (u. 1)                                          |
| 2  | OBSOLETE : 8000H7033 : SWM-CONNECTING ROAD WITH PIN AND CAGE ASSY<br>8000H7035 (u. 1) |
| 3  | DRIVE GEAR T39 PR7 - SWM/AJP<br>M000P00001 (u. 1)                                     |
| 4  | NUT PR7 - SWM/AJP<br>800003170 (u. 1)                                                 |
| 5  | SWM-STABLE PLUG 12x6x10<br>800057196 (u. 2)                                           |
| 6  | NUT PR7 - SWM/AJP<br>800071031 (u. 1)                                                 |
| 7  | WASHER. LOCK PR7 - SWM/AJP<br>800071034 (u. 1)                                        |
| 8  | COUNTERWEIGHT WITH GEARS PR7 - SWM/AJP<br>800071024 (u. 1)                            |
| 9  | SWM-CRANKSHAFT KEY RS/SD<br>151371301 (u. 2)                                          |
| 10 | CRANK BALANCER PR7 - SWM/AJP<br>800071023 (u. 1)                                      |
| 11 | DRIVEN GEAR T39 PR7 - SWM/AJP<br>M000P00002 (u. 1)                                    |
| 12 | WASHER. LOCK PR7 - SWM/AJP<br>800071035 (u. 1)                                        |
| 13 | KEY PR7 - SWM/AJP<br>800022426 (u. 1)                                                 |
| 14 | KEY. WOODRUFF PR7 - SWM/AJP<br>65N121007 (u. 1)                                       |


OBSOLETE

## L.H HALF CRANKCASE

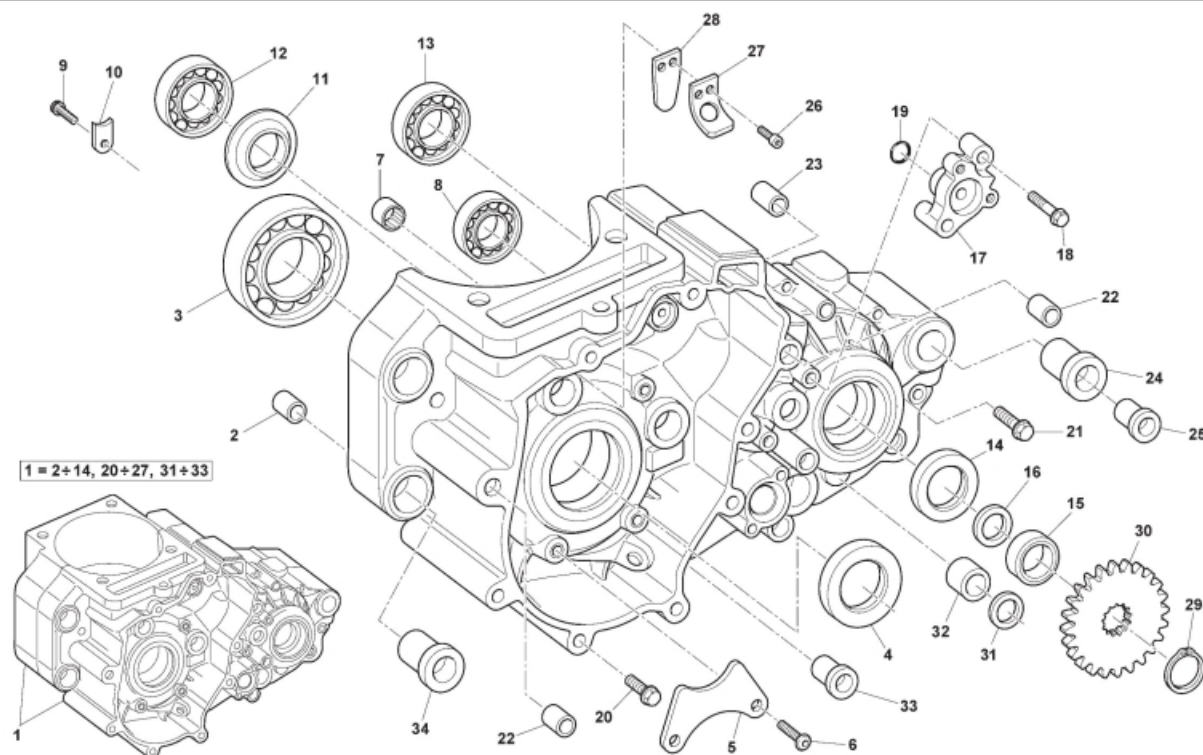 

|    |                                                                                     |
|----|-------------------------------------------------------------------------------------|
| 1  | AJP-CRANKCASE SET PR7<br>M000A00102 (u. 1)                                          |
| 2  | BUSH. CRANKCASE FRONT (13X8.5X15) PR7 - SWM/AJP<br>161077601 (u. 1)                 |
| 3  | BALL BEARING. CRANKSAFT 62009/C3 (85X45X19) PR7 - SWM/AJP<br>800085380 (u. 1)       |
| 4  | OIL SEAL. CRANKSHAFT (60X45X7) PR7 - SWM/AJP<br>800085381 (u. 1)                    |
| 5  | OIL SEAL HOLDING PLATE. CRANKSHAFT LEFT SIDE PR7 - SWM/AJP<br>800085383 (u. 1)      |
| 6  | SWM-HEX FLANGE SCREW M5x0.8x16-CH8<br>ZA0067997 (u. 2)                              |
| 7  | NEEDLE BEARING. GEAR SHIFT CAM (24X30X7.5) PR7 - SWM/AJP<br>800062200 (u. 1)        |
| 8  | BALL BEARING. MAIN SHAFT (42X15X13) PR7 - SWM/AJP<br>800019768 (u. 1)               |
| 9  | AJP-SCREW TEF M5X0.8X16 CH8 PR7<br>ZA0066525 (u. 1)                                 |
| 10 | RETAINING PLATE. CRANKSHAFT LEFT SIDE BEARING PR7 - SWM/AJP<br>800081663 (u. 1)     |
| 11 | SEAL. CRANK BALANCER BEARING NUP 204 JV PR7 - SWM/AJP<br>800072966 (u. 1)           |
| 12 | ROLLER BEARING. CRANK BALANCER NSK 204 (20X47X14) PR7 - SWM/AJP<br>800072964 (u. 1) |
| 13 | ROLLER BEARING. DRIVE GEAR NU205 PR7 - SWM/AJP<br>800043789 (u. 1)                  |
| 14 | SEAL. OIL 32X40X5 PR7 - SWM/AJP<br>800059977 (u. 1)                                 |
| 15 | SPACER 32X28.2X25X10.3 PR7 - SWM/AJP<br>800060464 (u. 1)                            |
| 16 | O-RING. COUNTER SHAFT (2100 28.68X1.72) - SWM/AJP<br>800023110 (u. 1)               |


|    |                                                                             |
|----|-----------------------------------------------------------------------------|
| 17 | SWM-HYDRAULIC CLUTCH SLAVE SD<br>80A0H0994 (u. 1)                           |
| 18 | SCREW TE M6X1X30 CH8 PR7 - SWM/AJP<br>Z00062730 (u. 2)                      |
| 19 | O-RING 13X1.8 PR7 - SWM/AJP<br>8B0023109 (u. 1)                             |
| 20 | SCREW TEF M6X55 CH8 PR7 - SWM/AJP<br>ZB0067545 (u. 9)                       |
| 21 | SCREW TEF M6X65 CH8 PR7 - SWM/AJP<br>ZC0067545 (u. 2)                       |
| 22 | SWM-CENTERING BUSH 10x7.2x16 RS/SD<br>800007719 (u. 2)                      |
| 23 | BUSH 22X17.5X15 PR7 - SWM/AJP<br>161459002 (u. 1)                           |
| 24 | SWM-BUSH FOR FORK AXIS D32-D22-D17.2<br>800071154 (u. 1)                    |
| 25 | AJP-SPACER ENGINE 28X10X15 PR7<br>00MTS07A0084 (u. 1)                       |
| 26 | SCREW TCI M4X0.7X6 PR7 - SWM/AJP<br>60ND02866 (u. 2)                        |
| 27 | STOPPER. REED VALVE PR7 - SWM/AJP<br>161510501 (u. 1)                       |
| 28 | READ VALVE COMP PR7 - SWM/AJP<br>161534801 (u. 1)                           |
| 29 | CIRCLIP 25MM DIN471 PR7 + SPR310CC/510CC - SWM/AJP<br>66N021211 (u. 1)      |
| 30 | AJP-TRANSMISSION GEAR PINION PR7 _ FRONT SPROCKT PR7<br>00MTS01A0197 (u. 1) |
| 31 | OIL SEAL 12X19X5 PR7 - SWM/AJP<br>800034451 (u. 1)                          |
| 32 | BUSH PR7 - SWM/AJP<br>8A0065847 (u. 1)                                      |
| 33 | SWM-FLANGE BUSHING D20-D12.8-D8.5-L27<br>161077701 (u. 1)                   |
| 34 | SWM-FLANGE BUSHING D20-D12.8-D8.5-L33<br>161077702 (u. 2)                   |

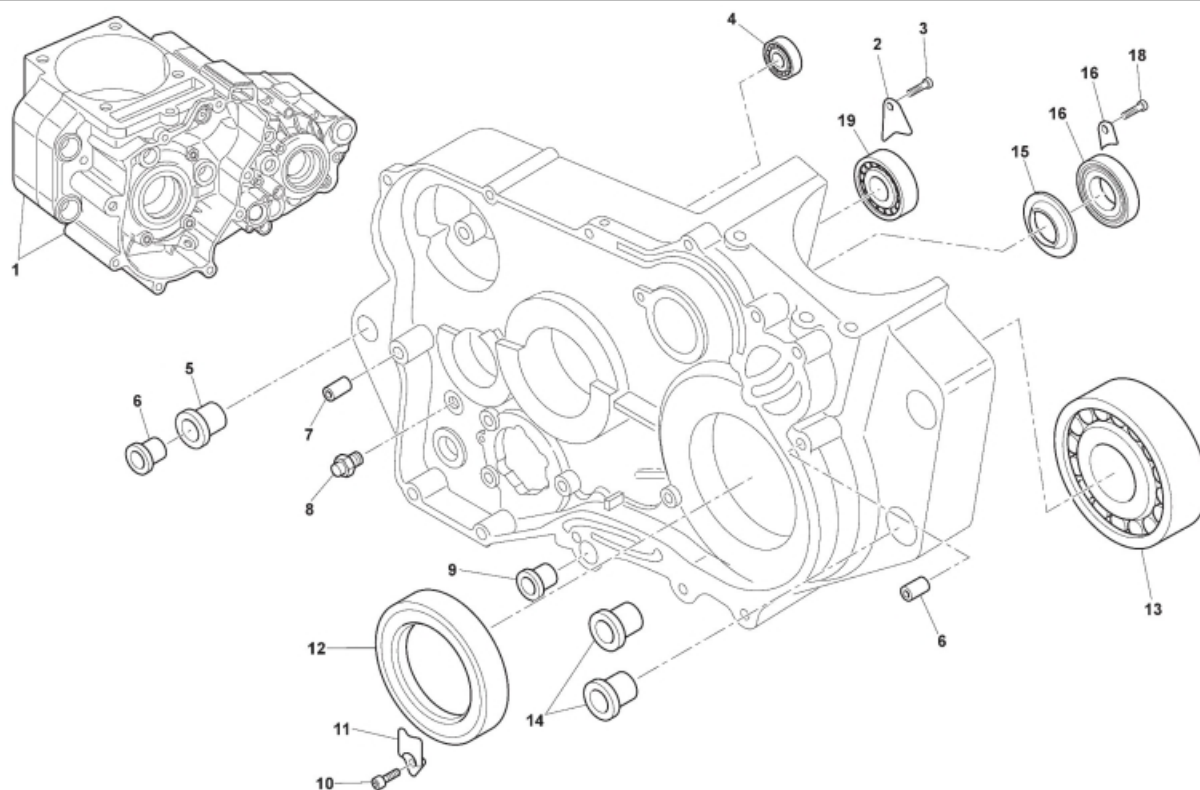 **R.H HALF CRANKCASE**


|    |                                                                               |
|----|-------------------------------------------------------------------------------|
| 1  | AJP-CRANKCASE SET PR7<br>M000A00102 (u. 1)                                    |
| 2  | RETAINER. BEARING PR7 - SWM/AJP<br>800051746 (u. 1)                           |
| 3  | SCREW M6X1.00X8.5 PR7 - SWM/AJP<br>Z00042643 (u. 1)                           |
| 4  | BALL BEARING 47X17X14 PR7 - SWM/AJP<br>800072962 (u. 1)                       |
| 5  | SWM-BUSH FOR FORK AXIS D32-D22-D17.2<br>800071154 (u. 1)                      |
| 6  | AJP-SPACER ENGINE 28X10X15 PR7<br>00MTS07A0084 (u. 1)                         |
| 7  | SWM-CENTERING BUSH 10x7.2x16 RS/SD<br>800007719 (u. 2)                        |
| 8  | PIN PR7 - SWM/AJP<br>8A0066953 (u. 1)                                         |
| 9  | SWM-FLANGE BUSHING D20-D12.8-D8.5-L27<br>161077701 (u. 1)                     |
| 10 | SWM-TEF SCREW M6x1x10-CH8<br>Z00062725 (u. 1)                                 |
| 11 | PLATE HOLDING OIL SEAL PR7 - SWM/AJP<br>800085382 (u. 1)                      |
| 12 | OIL SEAL. CRANKSHAFT (60X45X7) PR7 - SWM/AJP<br>800085381 (u. 1)              |
| 13 | BALL BEARING. CRANKSAFT 62009/C3 (85X45X19) PR7 - SWM/AJP<br>800085380 (u. 1) |
| 14 | SWM-FLANGE BUSHING D20-D12.8-D8.5-L33<br>161077702 (u. 2)                     |
| 15 | SEAL. MECHANICAL 6204 Z JV PR7 - SWM/AJP<br>8B0072966 (u. 1)                  |

|    |                                                                                 |
|----|---------------------------------------------------------------------------------|
| 16 | BALL BEARING 20X47X14 PR7 - SWM/AJP<br>800076680 (u. 1)                         |
| 17 | RETAINING PLATE. CRANKSHAFT LEFT SIDE BEARING PR7 - SWM/AJP<br>800081663 (u. 1) |
| 18 | AJP-SCREW TEF M5X0.8X16 CH8 PR7<br>ZA0066525 (u. 1)                             |
| 19 | BALL BEARING 52X25X15 PR7 - SWM/AJP<br>8A0059975 (u. 1)                         |


## CRANKCASE COVERS

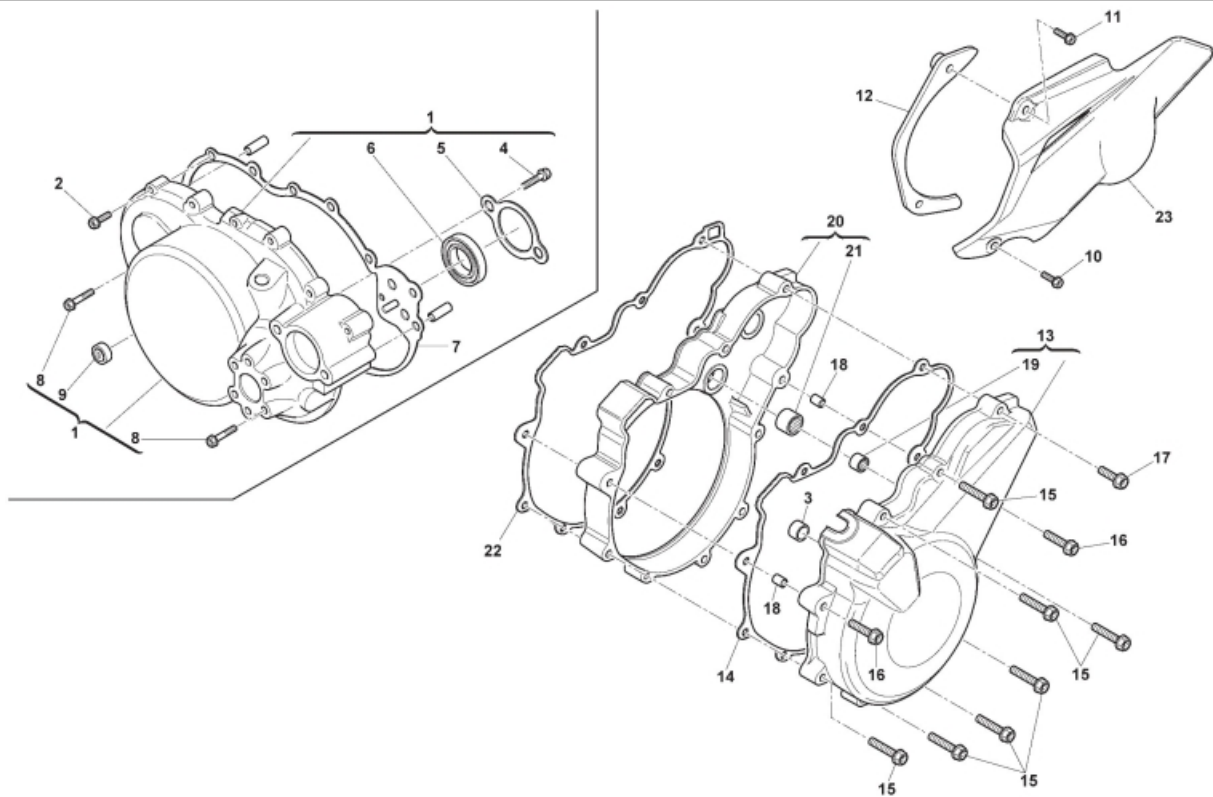 

|    |                                                                  |
|----|------------------------------------------------------------------|
| 1  | COVER. CLUTCH PR7 - SWM/AJP<br>M000A00106 (u. 1)                 |
| 2  | SCREW TE M6X1X30 CH8 PR7 - SWM/AJP<br>Z00062730 (u. 11)          |
| 3  | BALL BEARING 6201C3 (32X12X10) PR7 - SWM/AJP<br>800002124 (u. 1) |
| 4  | SCREW TSEI M5X0.8X10 PR7 - SWM/AJP<br>Z00049608 (u. 2)           |
| 5  | COVER. OIL SEAL PR7 - SWM/AJP<br>800084817 (u. 1)                |
| 6  | OIL SEAL 17X28X7 PR7 - SWM/AJP<br>800062209 (u. 1)               |
| 7  | GASKET. CLUTCH COVER PR7 - SWM/AJP<br>M000P00108 (u. 1)          |
| 8  | SCREW TEF M6X65 CH8 PR7 - SWM/AJP<br>ZC0067545 (u. 2)            |
| 9  | WINDOW. OIL LEVEL CHECK PR7 - SWM/AJP<br>800073529 (u. 1)        |
| 10 | SCREW TEF M6X1X25 CH8 PR7 - SWM/AJP<br>Z00067545 (u. 1)          |
| 11 | SCREW TEF M6X1X45 PR7 - SWM/AJP<br>ZA0067545 (u. 1)              |
| 12 | PLATE PR7 - SWM/AJP<br>8000H2207 (u. 1)                          |
| 13 | COVER. GENERATOR PR7 - SWM/AJP<br>M000A00105 (u. 1)              |
| 14 | GASKET. GENERATOR COVER PR7 - SWM/AJP<br>8000A1368 (u. 1)        |
| 15 | SCREW TEF M6X55 CH8 PR7 - SWM/AJP<br>ZB0067545 (u. 7)            |

|    |                                                                 |
|----|-----------------------------------------------------------------|
| 16 | SCREW TEF M6X65 CH8 PR7 - SWM/AJP<br>ZC0067545 (u. 2)           |
| 17 | SCREW TE M6X1X30 CH8 PR7 - SWM/AJP<br>Z00062730 (u. 1)          |
| 18 | PIN. DOWEL 10X39.9X7.2 PR7 - SWM/AJP<br>M000P00423 (u. 2)       |
| 19 | BEARING. NEEDLE HK1015 PR7 - SWM/AJP<br>800086243 (u. 1)        |
| 20 | COVER. BRACKET STARTING MOTOR PR7 - SWM/AJP<br>8C0086246 (u. 1) |
| 21 | BEARING. NEEDLE HK1412 PR7 - SWM/AJP<br>800033422 (u. 1)        |
| 22 | GASKET PR7 - SWM/AJP<br>8000A1367 (u. 1)                        |
| 23 | COVER. SPROCKET PR7 - SWM/AJP<br>F000P00067 (u. 1)              |

## GEARBOX

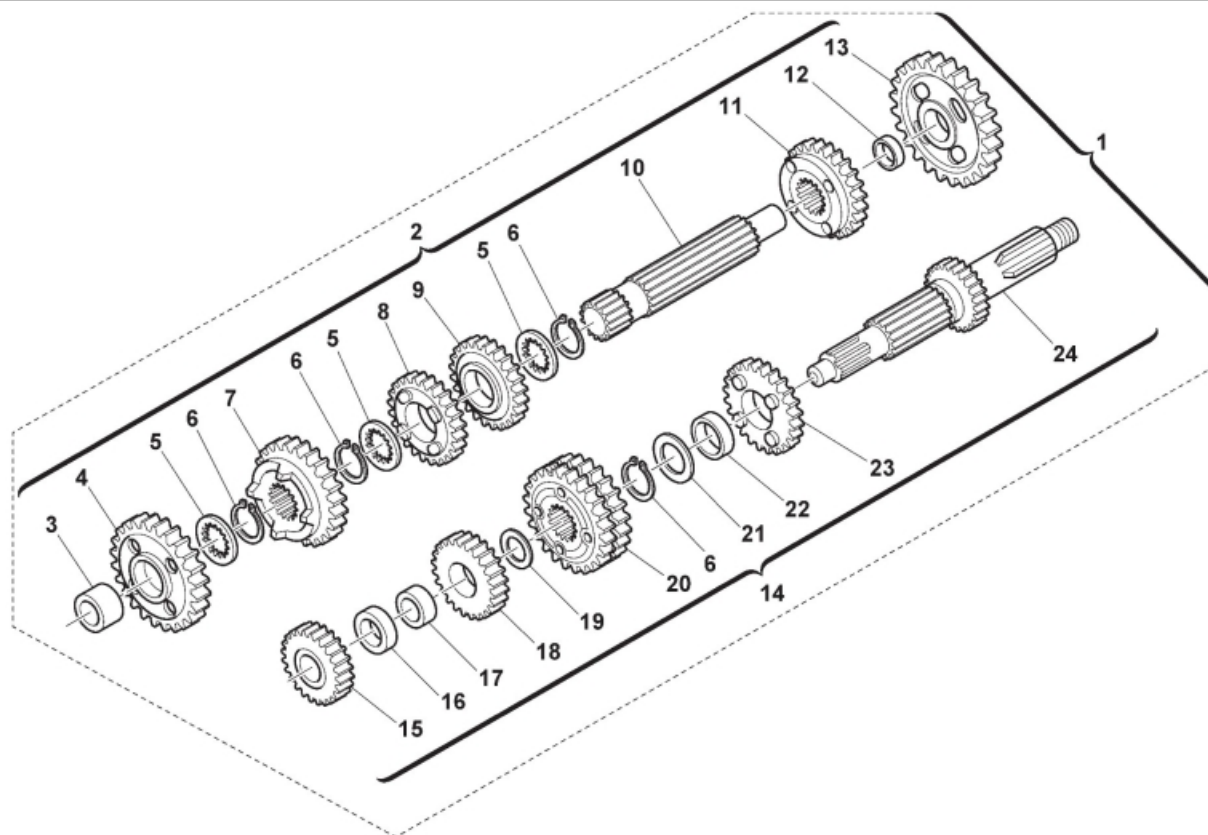 

1 OBSOLETE : M000A02244 : SWM-GEARBOX ASSY (6 GEARS)  
M000A00702 (u. 1)

OBSOLETE

2 COUNTER SHAFT ASSY PR7 - SWM/AJP  
M000A00706 (u. 1)

3 BUSH 28X25X7 PR7 - SWM/AJP  
800063822 (u. 1)

4 SWM-2ND GEAR 29T SD  
800074864 (u. 1)

5 WASHER PR7 - SWM/AJP  
161171701 (u. 3)

6 CIRCLIP 25MM DIN471 PR7 + SPR310CC/510CC - SWM/AJP  
66N021211 (u. 4)

7 DRIVEN GEAR 3RD SPEED T27 PR7 - SWM/AJP  
M000P00708 (u. 1)

8 DRIVEN GEAR 6TH SPEED PR7 - SWM/AJP  
M000P00709 (u. 1)

9 DRIVEN GEAR 5TH SPEED T22 PR7 - SWM/AJP  
M000P00710 (u. 1)

10 COUNTER SHAFT PR7 - SWM/AJP  
M000P00707 (u. 1)

11 DRIVEN GEAR 4TH SPEED T24 PR7 - SWM/AJP  
M000P00711 (u. 1)

12 SWM-COUNTER SHAFT GEAR BUSHING  
161241501 (u. 1)


13 DRIVEN GEAR 1ST SPEED T34 PR7 - SWM/AJP  
800074862 (u. 1)

14 MAIN SHAFT ASSY PR7 - SWM/AJP  
M000A00703 (u. 1)

15 INPUT GEAR 2ND T16 PR7 - SWM/AJP  
800074863 (u. 1)

|    |                                                            |
|----|------------------------------------------------------------|
| 16 | SWM-MAIN SHAFT SHIM BUSHING<br>161248101 (u. 1)            |
| 17 | SWM-MAIN SHAFT GEAR BUSHING<br>161248001 (u. 1)            |
| 18 | GEAR DRIVE 3RD SPEED T20 PR7 - SWM/AJP<br>800079688 (u. 1) |
| 19 | SWM-MAIN SHAFT SHIM WASHER<br>161284201 (u. 1)             |
| 20 | GEAR DRIVE 5-6TH SPEED PR7 - SWM/AJP<br>M000P00705 (u. 1)  |
| 21 | SWM-SHIM WASHER 32x25.1<br>8H0036022 (u. 1)                |
| 22 | SWM-BUSH D28-D25x9.9<br>800063821 (u. 1)                   |
| 23 | GEAR. 4TH DRIVE T22 PR7 - SWM/AJP<br>800079686 (u. 1)      |
| 24 | MAIN SHAFT T13 PR7 - SWM/AJP<br>M000P00704 (u. 1)          |


## GEARSHIFT MECHANISM

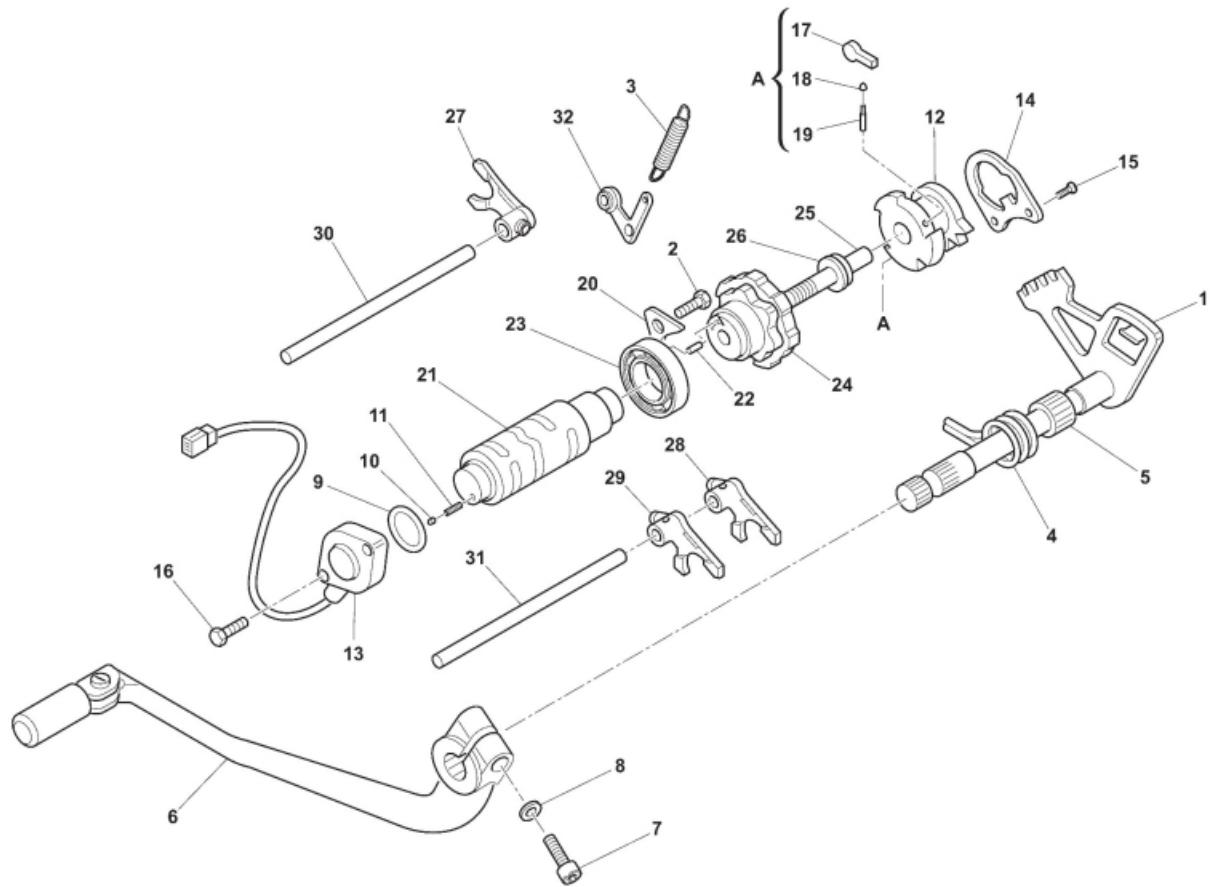 

|    |                                                               |
|----|---------------------------------------------------------------|
| 1  | AJP-GEAR SELECTOR SHAFT PR7<br>800075302 (u. 1)               |
| 2  | SCREW TE M6X1X15 PR7 - SWM/AJP<br>8B0054139 (u. 1)            |
| 3  | SPRING. PAWL PR7 - SWM/AJP<br>M000P00578 (u. 1)               |
| 4  | SPRING. SHIFT RETURN PR7 - SWM/AJP<br>800046225 (u. 1)        |
| 5  | BUSH PR7 - SWM/AJP<br>8A0031503 (u. 1)                        |
| 6  | AJP-GEARSHIFT CONTROL LEVER ASSY PR7<br>800081681 (u. 1)      |
| 7  | SCREW TE M6X1X22 PR7 - SWM/AJP<br>60ND07336 (u. 1)            |
| 8  | WASHER. SPRING (11X6.4X0.5) PR7 - SWM/AJP<br>62NA15767 (u. 1) |
| 9  | O-RING 2093 23.52X1.78 MM PR7 - SWM/AJP<br>8A0042700 (u. 1)   |
| 10 | POINT. NEUTRAL PR7 - SWM/AJP<br>800042676 (u. 1)              |
| 11 | SPRING PR7 - SWM/AJP<br>800042677 (u. 1)                      |
| 12 | CAM-CHANGE DRUM PR7 - SWM/AJP<br>800075291 (u. 1)             |
| 13 | NEUTRAL SENSOR AJP PR7 - SWM/AJP<br>E000P01442 (u. 1)         |
| 14 | PLATE PR7 - SWM/AJP<br>800071012 (u. 1)                       |

|    |                                                                   |
|----|-------------------------------------------------------------------|
| 15 | SCREW TSEI M6X1X14 DIN 7991 CH4 PR7 - SWM/AJP<br>Y00028327 (u. 2) |
| 16 | SCREW TEF M5X0.8X12 CH8 PR7 - SWM/AJP<br>Z00067997 (u. 2)         |
| 17 | PAWL PR7 - SWM/AJP<br>800071007 (u. 2)                            |
| 18 | PUSH ROD PR7 - SWM/AJP<br>800071008 (u. 2)                        |
| 19 | SPRING PR7 - SWM/AJP<br>800071009 (u. 2)                          |
| 20 | RETAINER. BEARING PR7 - SWM/AJP<br>800083126 (u. 1)               |
| 21 | CAM. GEAR SHIFT PR7 - SWM/AJP<br>800082347 (u. 1)                 |
| 22 | ROLLER 4X8 PR7 - SWM/AJP<br>800038520 (u. 1)                      |
| 23 | BALL BEARING 25X42X9 PR7 - SWM/AJP<br>800085395 (u. 1)            |
| 24 | CAM-CHANGE DRUM PR7 - SWM/AJP<br>8A0097739 (u. 1)                 |
| 25 | SCREW PR7 - SWM/AJP<br>800071011 (u. 1)                           |
| 26 | WASHER (16X8.3X1) - SWM/AJP<br>Z00056377 (u. 1)                   |
| 27 | FORK. GEAR SHIFTING 3TH-4TH PR7 - SWM/AJP<br>800071158 (u. 1)     |
| 28 | FORK. GEAR SHIFTING 1ST-5TH PR7 - SWM/AJP<br>800071159 (u. 1)     |
| 29 | FORK. GEAR SHIFTING 2ND-6TH PR7 - SWM/AJP<br>800071160 (u. 1)     |
| 30 | AXLE. GEAR SHIFT FORK 85MM PR7 - SWM/AJP<br>800035876 (u. 1)      |
| 31 | AXLE. GEAR SHIFT FORK 93.5MM PR7 - SWM/AJP<br>8B0035876 (u. 1)    |
| 32 | STOPPER LEVER PR7 - SWM/AJP<br>800054136 (u. 1)                   |


## CLUTCH

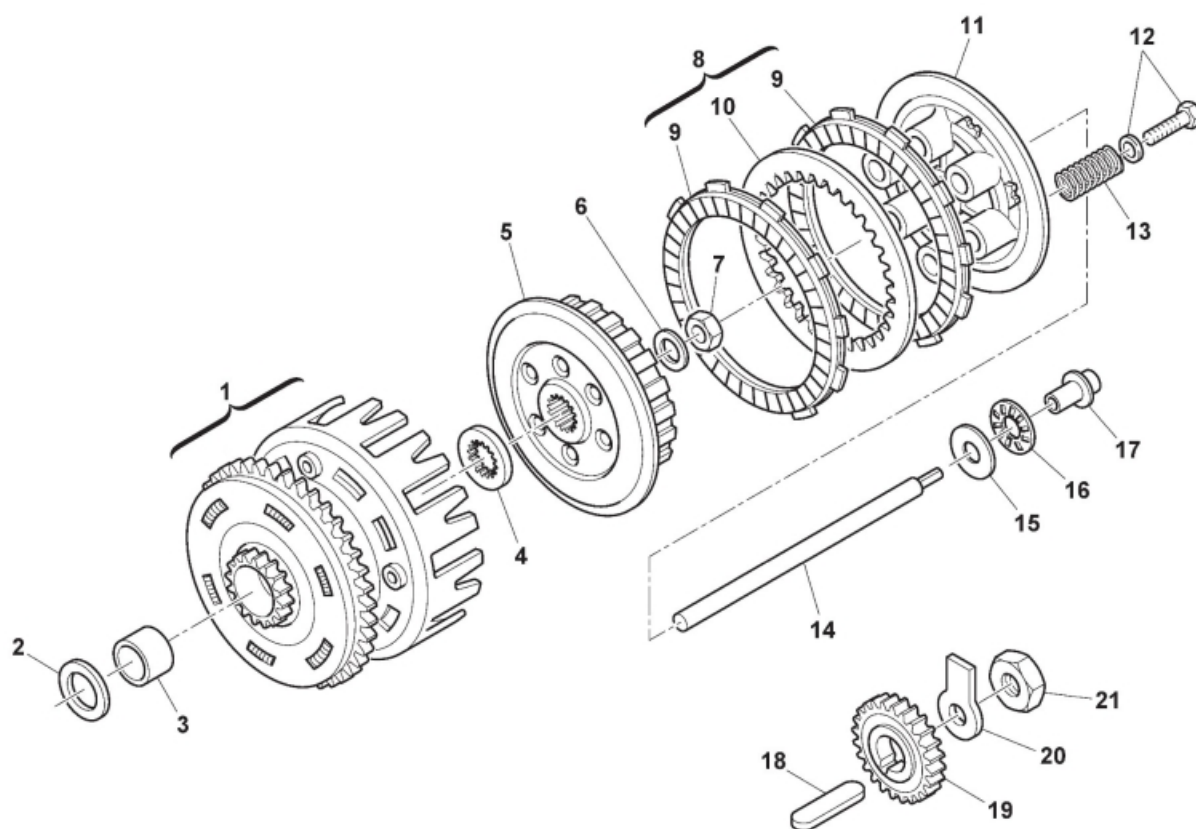 

|    |                                                                 |
|----|-----------------------------------------------------------------|
| 1  | AJP-GEAR. DRIVEN ASSY PR7<br>8000H2946 (u. 1)                   |
| 2  | THRUST WASHER 38X25.2 PR7 - SWM/AJP<br>8E0030053 (u. 1)         |
| 3  | BUSH 28X25 MM PR7 - SWM/AJP<br>161538802 (u. 1)                 |
| 4  | WASHER 46X22X19 PR7 - SWM/AJP<br>800038350 (u. 1)               |
| 5  | BOSS. CLUTCH PR7 - SWM/AJP<br>800085390 (u. 1)                  |
| 6  | WASHER. LOCK 18MM PR7 - SWM/AJP<br>800036857 (u. 1)             |
| 7  | NUT M18X1 PR7 - SWM/AJP<br>800036856 (u. 1)                     |
| 8  | CLUTCH DISC SET PR7 + 310 +510 - SWM/AJP<br>8000A9764 (u. 1)    |
| 9  | CLUTCH PLATE 3.1MMPR7 - SWM/AJP<br>8000A6916 (u. 8)             |
| 10 | CLUTCH DRIVEN PLATE PR7 - SWM/AJP<br>800088968 (u. 7)           |
| 11 | DISC. CLUTCH PRESSURE PR7 - SWM/AJP<br>800048138 (u. 1)         |
| 12 | SCREW (M6X20) WITH WASHER (17.8) - SWM/AJP<br>M000P00464 (u. 6) |
| 13 | CLUTCH SPRING PR7 - SWM/AJP<br>8000A0730 (u. 6)                 |
| 14 | ROD. CLUTCH PUSH PR7 - SWM/AJP<br>8000H5375 (u. 1)              |
| 15 | WASHER. AXIAL BEARING PR7 - SWM/AJP<br>800035781 (u. 1)         |


|    |                                                      |
|----|------------------------------------------------------|
| 16 | THRUST BEARING PR7 - SWM/AJP<br>800035780 (u. 1)     |
| 17 | PIECE. CLUTCH PUSH PR7 - SWM/AJP<br>8000A9749 (u. 1) |
| 18 | KEY PR7 - SWM/AJP<br>800022426 (u. 1)                |
| 19 | GEAR DRIVE T32 PR7 - SWM/AJP<br>800097935 (u. 1)     |
| 20 | WASHER. LOCK PR7 - SWM/AJP<br>800086007 (u. 1)       |
| 21 | NUT M24X1.25 PR7 - SWM/AJP<br>800086006 (u. 1)       |

## LUBRICATION

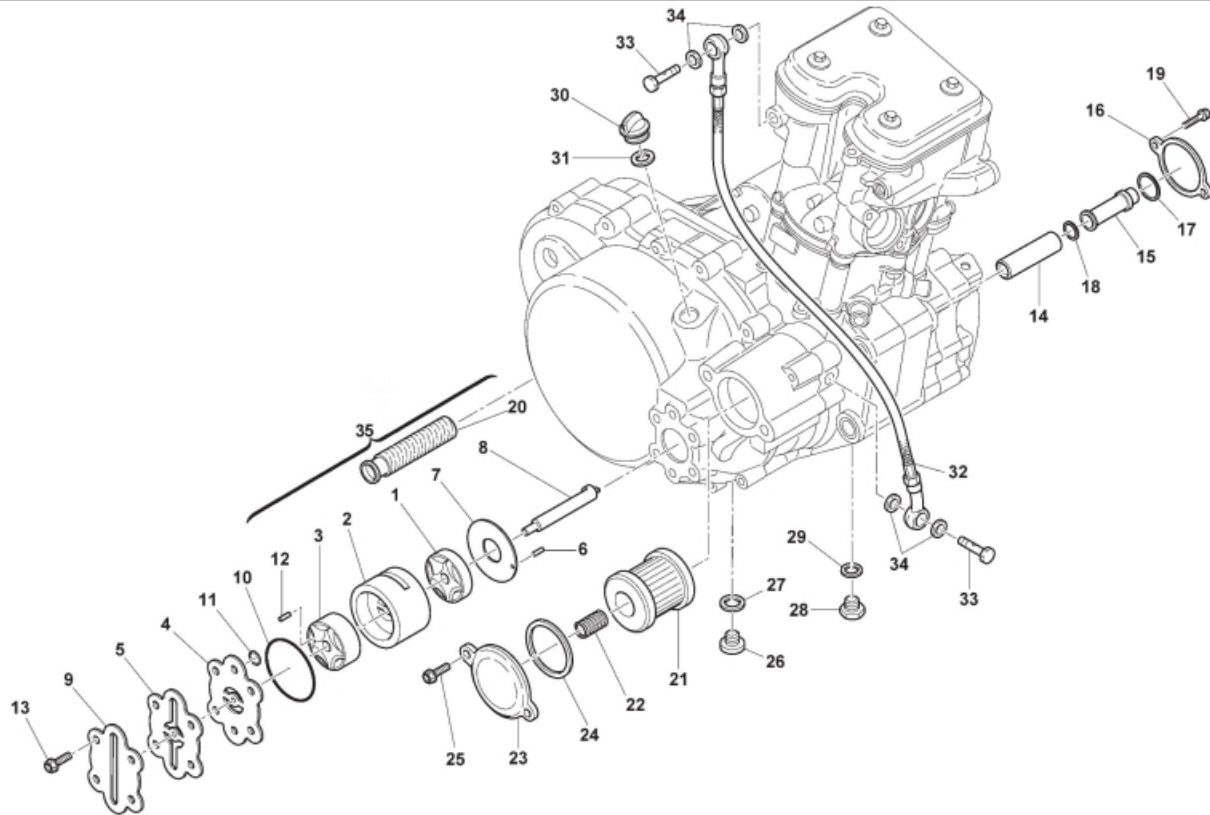 

|    |                                                                |
|----|----------------------------------------------------------------|
| 1  | ROTOR. OIL PUMP SCAVENGE PR7 - SWM/AJP<br>8000H4001 (u. 1)     |
| 2  | AJP-HOUSING. OIL PUMP PR7<br>8000H4002 (u. 1)                  |
| 3  | OIL SUCTION ROTOR PR7 - SWM/AJP<br>800082948 (u. 1)            |
| 4  | COVER PR7 - SWM/AJP<br>800084821 (u. 1)                        |
| 5  | HOUSING. BEARING PR7 - SWM/AJP<br>8000A1374 (u. 1)             |
| 6  | ROLLER PR7 - SWM/AJP<br>8B0047773 (u. 1)                       |
| 7  | INNER SPACER PR7 - SWM/AJP<br>800084819 (u. 1)                 |
| 8  | AJP-SHAFT. OIL PUMP PR7<br>800084818 (u. 1)                    |
| 9  | COVER OIL PUMP PR7 - SWM/AJP<br>80C075630 (u. 1)               |
| 10 | O-RING 3156 39.34X2.6 PR7 - SWM/AJP<br>800027073 (u. 1)        |
| 11 | O-RING 2037 1.78X9.25 PR7 - SWM/AJP<br>8A0023108 (u. 2)        |
| 12 | ROLLER PR7 - SWM/AJP<br>8A0047773 (u. 2)                       |
| 13 | SCREW TEF M6X1X20 CH8 PR7 - SWM/AJP<br>Z00062728 (u. 4)        |
| 14 | Filter, Oil, Outer, PR7, SWM/AJP - SWM/AJP<br>800072426 (u. 1) |
| 15 | Filter, Oil, Inner, PR7, SWM/AJP - SWM/AJP<br>800072427 (u. 1) |


|    |                                                                  |
|----|------------------------------------------------------------------|
| 16 | COVER. OIL ELEMENT PR7 - SWM/AJP<br>800072425 (u. 1)             |
| 17 | O-RING 3087 T2,62-D22,00 (GACO P5) - SWM/AJP<br>800034609 (u. 1) |
| 18 | O-RING 3062 15.54X2.62 PR7 - SWM/AJP<br>800026884 (u. 1)         |
| 19 | SCREW TEF M5X0.8X12 CH8 PR7 - SWM/AJP<br>Z00067997 (u. 2)        |
| 20 | Strainer, Oil, PR7, SWM/AJP<br>800074716 (u. 1)                  |
| 21 | OIL FILTER PR7 + SPR510 + SPR310 - SWM/AJP<br>8000B0593 (u. 1)   |
| 22 | SPRING. OIL FILTER PR7 - SWM/AJP<br>800085385 (u. 1)             |
| 23 | SWM-OIL FILTER COVER PAINTED<br>80C078988 (u. 1)                 |
| 24 | O-RING 2.62X50.47 PR7 - SWM/AJP<br>8A0028553 (u. 1)              |
| 25 | SCREW TEF M6X1X20 CH8 PR7 - SWM/AJP<br>Z00062728 (u. 2)          |
| 26 | OIL DRAIN PLUG M22X1.5 PR7 - SWM/AJP<br>800096747 (u. 1)         |
| 27 | WASHER 22.3X28X1 PR7 - SWM/AJP<br>62N015682 (u. 1)               |
| 28 | OIL DRAIN PLUG M14X1.25 PR7 - SWM/AJP<br>800075415 (u. 1)        |
| 29 | WASHER. ALUMINIUM 21X14.3X1.2 PR7 - SWM/AJP<br>62N015678 (u. 1)  |
| 30 | CAP. OIL FILLER PR7 - SWM/AJP<br>800049032 (u. 1)                |
| 31 | O-RING 2081 20.35X1.78 PR7 - SWM/AJP<br>800019789 (u. 1)         |
| 32 | HOSE. OIL DELIVERY PR7 - SWM/AJP<br>8000H1763 (u. 1)             |
| 33 | BANJO BOLT. M10X1 PR7 - SWM/AJP<br>8A00A0574 (u. 2)              |
| 34 | SEALING WASHER PR7 - SWM/AJP<br>800021480 (u. 4)                 |
| 35 | OIL PUMP ASSY - SWM/AJP<br>M000A02545 (u. 1)                     |

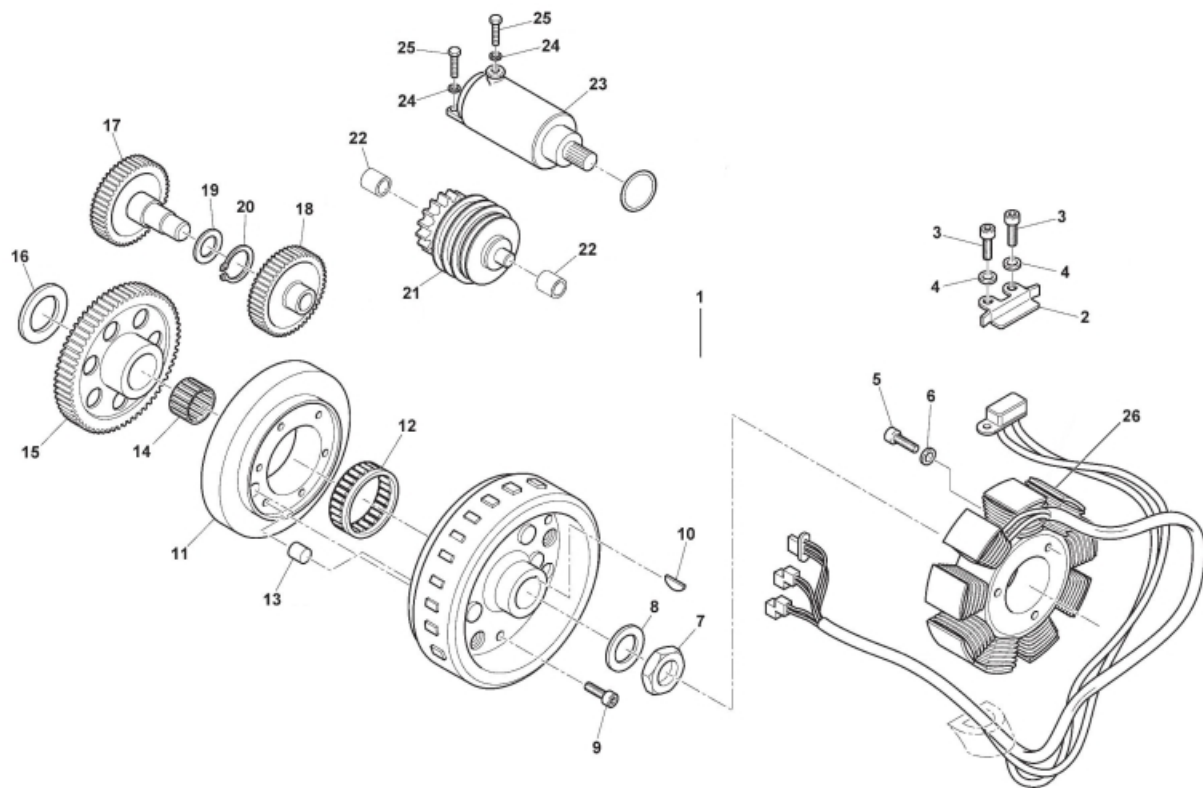 **FLYWHEEL, STATOR AND ELECTRIC STARTER MOTOR**


|    |                                                               |
|----|---------------------------------------------------------------|
| 1  | AJP-GENERATOR.ASSY PR7<br>8000A6767 (u. 1)                    |
| 2  | CLAMP. WIRE PR7 - SWM/AJP<br>8000H3841 (u. 1)                 |
| 3  | SWM-SCREW M4x0.7x10<br>60ND02461 (u. 2)                       |
| 4  | SPRING WASHER 7.3X4.3X0.9 PR7 - SWM/AJP<br>62ND15534 (u. 2)   |
| 5  | SWM-SCREW M6x1x30<br>60ND02511 (u. 3)                         |
| 6  | WASHER. SPRING (11X6.4X0.5) PR7 - SWM/AJP<br>62NA15767 (u. 3) |
| 7  | NUT ( M16X1)PR7 - SWM/AJP<br>8000H3679 (u. 1)                 |
| 8  | WASHER (16.3X28X2) PR7 - SWM/AJP<br>8000H3680 (u. 1)          |
| 9  | SCREW PR7 - SWM/AJP<br>8A0078647 (u. 6)                       |
| 10 | KEY. WOODRUFF PR7 - SWM/AJP<br>65N121007 (u. 1)               |
| 11 | ADDITIONAL WEIGHT PR7 - SWM/AJP<br>8A0084828 (u. 1)           |
| 12 | CLUTCH. ONE WAY PR7 - SWM/AJP<br>800083136 (u. 1)             |
| 13 | PIN DOWEL 8X10 PR7 - SWM/AJP<br>800086051 (u. 1)              |
| 14 | BEARING. NEEDLE 28X34X20 PR7 - SWM/AJP<br>800084597 (u. 1)    |
| 15 | GEAR. FREE-WHEEL T62 PR7 - SWM/AJP<br>800089011 (u. 1)        |

|    |                                                                |
|----|----------------------------------------------------------------|
| 16 | WASHER. THRUST (28X47.8X1.5) PR7 - SWM/AJP<br>8A0084473 (u. 1) |
| 17 | IDLE GEAR T27 PR7 - SWM/AJP<br>800089012 (u. 1)                |
| 18 | IDLE GEAR T27 PR7 - SWM/AJP<br>800084831 (u. 1)                |
| 19 | WASHER 22X14.5X1 PR7 - SWM/AJP<br>8F0009408 (u. 1)             |
| 20 | AJP-CIRCLIP 13 MM PR7<br>66ND21196 (u. 1)                      |
| 21 | TORQUE LIMITER Z17/52 PR7 - SWM/AJP<br>8000A5015 (u. 1)        |
| 22 | BUSH PR7 - SWM/AJP<br>8000A1017 (u. 2)                         |
| 23 | STARTING MOTOR PR7 - SWM/AJP<br>8000H1772 (u. 1)               |
| 24 | SPRING WASHER 10X6.4X0.5 PR7 - SWM/AJP<br>800048591 (u. 3)     |
| 25 | SCREW TEF M6X1X25 CH8 PR7 - SWM/AJP<br>Z00062729 (u. 3)        |
| 26 | STATOR PR7 - SWM/AJP<br>8000A6778 (u. 1)                       |

## WATER PUMP

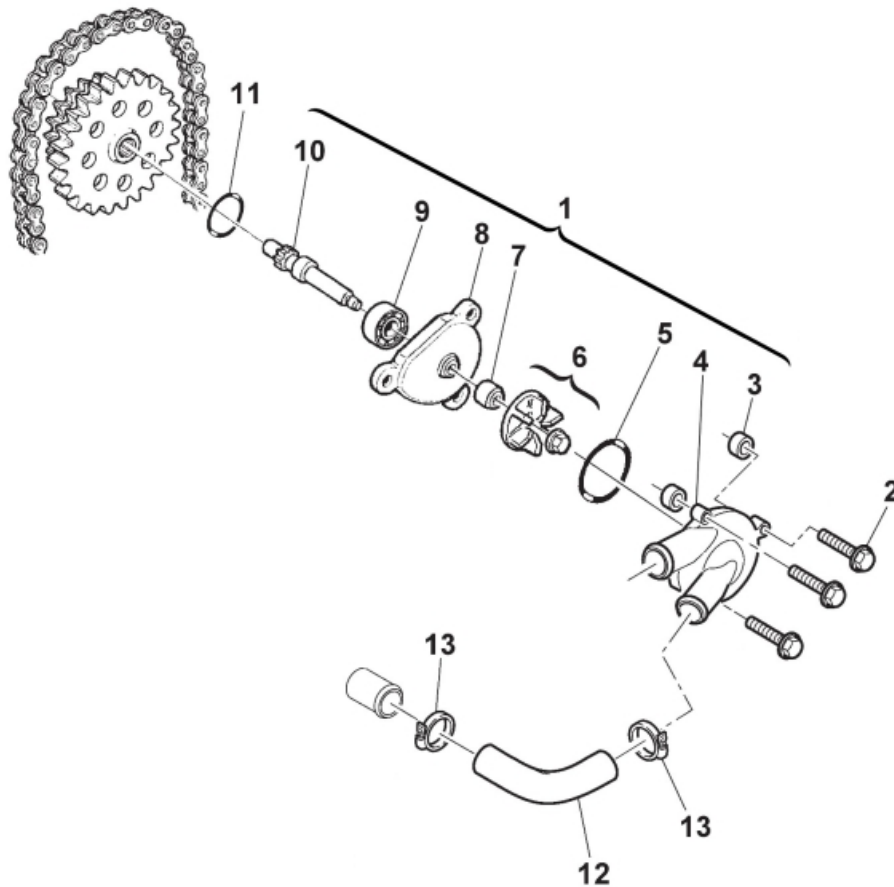 

1 WATER PUMP ASSEMBLY WITHOUT GASKET: M000P01959 - SWM/AJP  
M000A01955 (u. 1)

2 SCREW TE M6X1X30 CH8 PR7 - SWM/AJP  
Z00062730 (u. 3)

3 BUSH 8X6.4X6 PR7 - SWM/AJP  
161795501 (u. 2)

4 AJP-WATER PUMP CAP PR7  
8000H41958 (u. 1)

5 GASKET CAP PR7 - SWM/AJP  
800027122 (u. 1)

6 OBSOLETE - M000A01955 SWM- IMPELLER  
M000P01959 (u. 1)

OBSOLETE

7 SEAL. WATER PUMP (8X16X10) - 2 - SWM/AJP  
M000P01958 (u. 1)

8 OBSOLETE - M000A01955 : SWM-WATER PUMP FLANGE MOUNTING  
M000P01957 (u. 1)

OBSOLETE

 
9 BEARING. BALL 12X28X8 PR7 - SWM/AJP  
800034317 (u. 1)

10 PENDING - M000A01955 : SWM-WATER PUMP SHAFT  
M000P01956 (u. 1)

11 O-RING PR7 - SWM/AJP  
800040007 (u. 1)

12 HOSE. WATER PUMP PR7 - SWM/AJP  
8A0099708 (u. 1)


13 CLAMP. HOSE PR7 - SWM/AJP  
8B0099475 (u. 2)

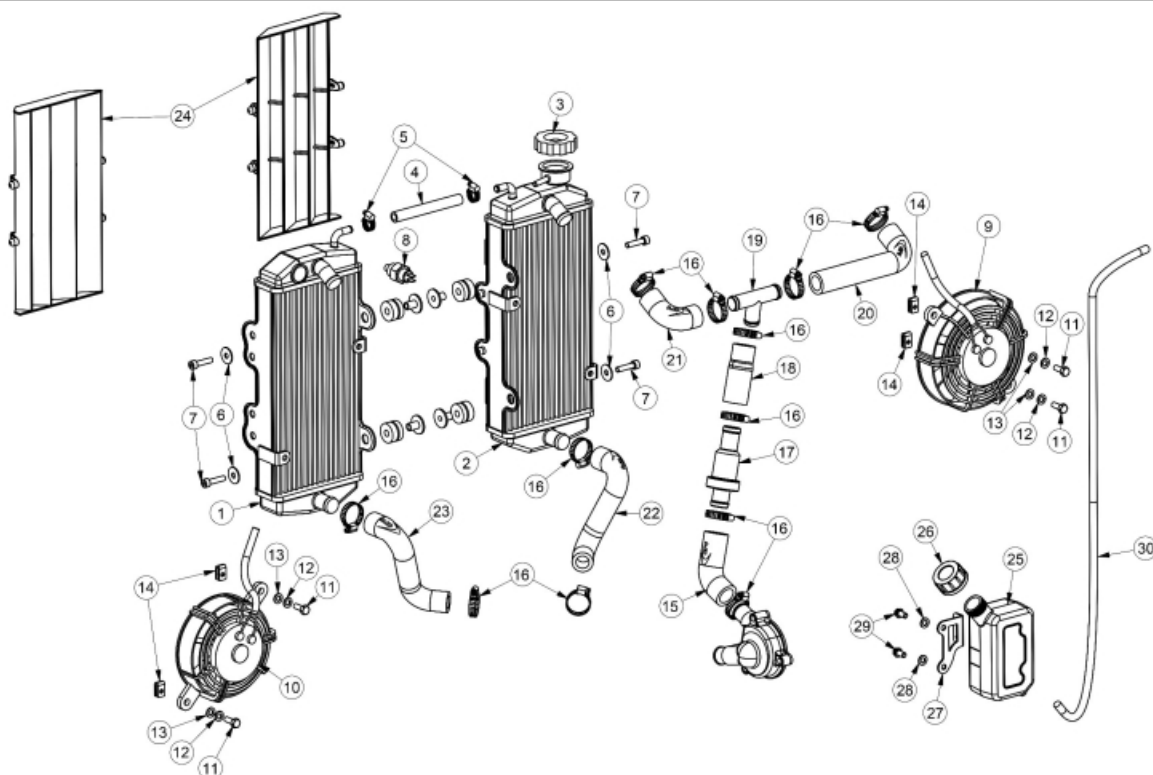**COOLING SYSTEM**


|    |                                                                       |
|----|-----------------------------------------------------------------------|
| 1  | AJP-RADIATOR LH PR7<br>00MTS01A0200 (u. 1)                            |
| 2  | AJP-RADIATOR RH PR7 (BIG FAN WITH TAMPON)<br>00MTS01A0199 (u. 1)      |
| 3  | AJP-RADIATOR PLUG 2013<br>00MTS01A0136 (u. 1)                         |
| 4  | AJP-BY-PASSE HOSE (8.5X15X110MM) PR7<br>00MTS01A0215 (u. 1)           |
| 5  | AJP-CLAMP SERFLEX SX 9 - 14 /5ZYW2B PR7<br>00MTS01A0216 (u. 2)        |
| 6  | AJP-WASHER DIN9021 M6<br>AN9021006000 (u. 4)                          |
| 7  | AJP-SCREW DIN912 M6X25<br>PF0912006025 (u. 4)                         |
| 8  | AJP-TEMPERATURE SENSOR RADIATOR 100C° PR5 2013<br>00MTS01A0116 (u. 1) |
| 9  | AJP-FAN RH 2013<br>00MTS01A0135 (u. 1)                                |
| 10 | AJP-FAN RH 2014 FRAME LETTER E<br>00MTS01A0166 (u. 1)                 |
| 11 | AJP-SCREW DIN933 M6X12<br>PF0933006012 (u. 4)                         |
| 12 | AJP-WASHER DIN125A M6<br>AN125A006000 (u. 4)                          |
| 13 | AJP-WASHER DIN127B M6<br>AN127B006000 (u. 4)                          |
| 15 | AJP-WATER TUBE OUT OF ENGINE PR7<br>00MTS01A0188 (u. 1)               |
| 16 | AJP-WASHER FOR RADIATOR TUBE PR5 2013<br>00MTS01A0117 (u. 14)         |

|    |                                                                        |
|----|------------------------------------------------------------------------|
| 17 | AJP-TERMOSTATO FOR RADIATOR TUBES PR7<br>00MTS01A0186 (u. 1)           |
| 18 | AJP-HOSE. HOSE T JOINT THERMOSTAT PR7<br>00MTS01A0293 (u. 1)           |
| 19 | AJP-T FOR SOUNDER RADIATOR TEMPERATURE PR7<br>00MTS01A0218 (u. 1)      |
| 20 | AJP-WATER TUBE CONNECTION BETWEEN RADIATORS PR7<br>00MTS01A0187 (u. 1) |
| 21 | AJP-HOSE. THERMOSTAT PR7<br>00MTS01A0217 (u. 1)                        |
| 22 | AJP-WATER TUBE CYLINDER RIGHT RADIATOR PR7<br>00MTS01A0190 (u. 1)      |
| 23 | AJP-WATER TUBE CYLINDER LEFT RADIATOR PR7<br>00MTS01A0191 (u. 1)       |
| 24 | AJP-FRONT FRAME COVER RH/LH PR7 PLASTIC<br>00PLS01A0118 (u. 2)         |
| 25 | AJP-RESERVOIR OF WATER PR7<br>00DES01A0084 (u. 1)                      |
| 26 | AJP-CAP FOR WATER TANK PR7<br>00DES01A0082 (u. 1)                      |
| 27 | AJP-SUPPORT FOR RESERVOIR OF WATER PR7<br>00DES01A0096 (u. 1)          |
| 28 | AJP-WASHER DIN125A M6<br>AN125A006000 (u. 2)                           |
| 30 | AJP-HOSE. BREATHER 9X5X685 PR7<br>00DES01A0102 (u. 1)                  |


## THROTTLE BODY

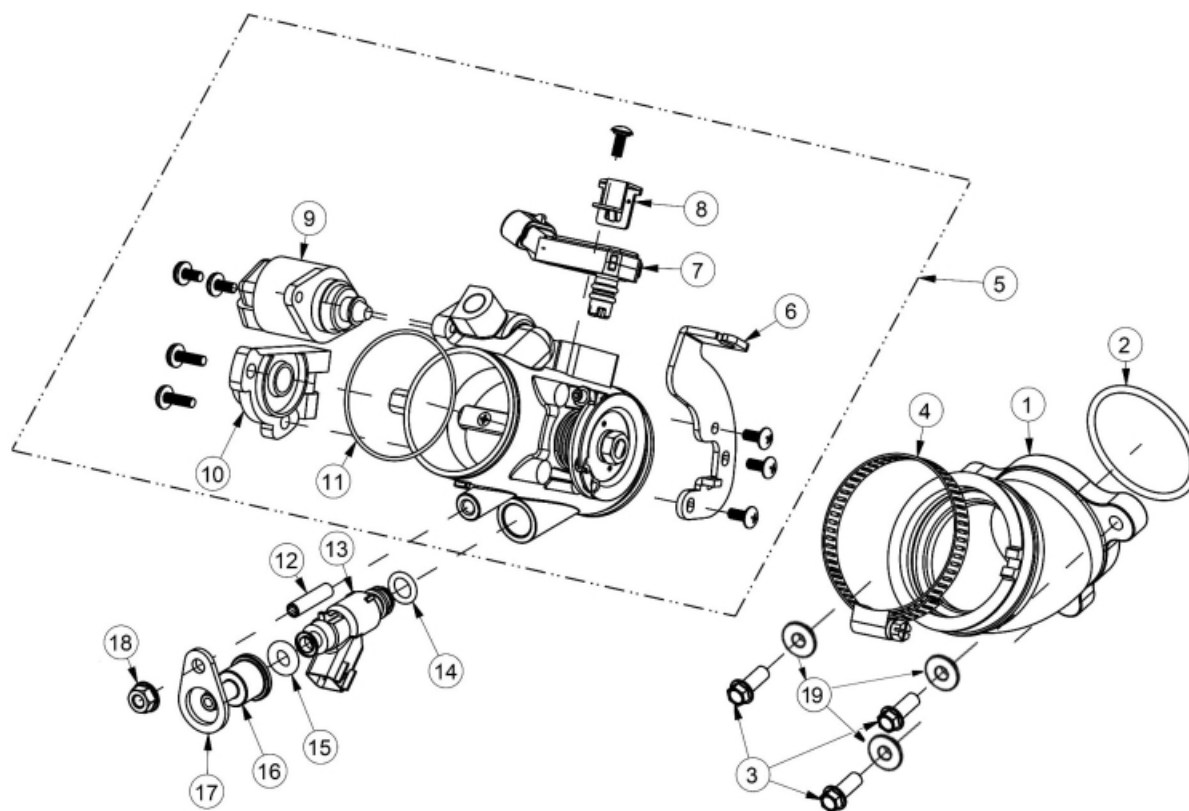 


|    |                                                                          |
|----|--------------------------------------------------------------------------|
| 1  | AJP-INTAKE PIPE PR7 AND SPR510<br>00MTS01A0185 (u. 1)                    |
| 2  | AJP-O-RING 49X3 INTAKE PIPE PR7<br>00MTS01A0192 (u. 1)                   |
| 3  | AJP-SCREW DIN69FS2 6X16 PR7<br>PF069FS26016 (u. 3)                       |
| 4  | AJP-CLAMP INTAKE PIPE W2 40-60PR7 INOX<br>00MTS01A0202 (u. 1)            |
| 5  | AJP-THROTTLE BODY PR7<br>00MTS01A0184 (u. 1)                             |
| 6  | AJP-SUPPORT THROTTLE CABLE PR7<br>00COS01A0052 (u. 1)                    |
| 7  | AJP-TMAP FOR THROTTLE BODY PR5/PR7<br>00MTS01A0196 (u. 1)                |
| 8  | AJP-PLATE FOR FIXATION TMAP FOR THROTTLE BODY PR7<br>00MTS01A0204 (u. 1) |
| 9  | AJP-IACV FOR THROTTLE BODY PR7<br>00MTS01A0195 (u. 1)                    |
| 10 | AJP-TPS FOR THROTTLE BODY PR7<br>00MTS01A0194 (u. 1)                     |
| 11 | AJP-O-RING THROTTLE BODY 50X1.5 PR7<br>00MTS01A0201 (u. 1)               |
| 12 | AJP-DIN916 M6X25<br>PF0916006025 (u. 1)                                  |
| 13 | AJP-INJECTOR FOR PR7<br>00MTC01A0092 (u. 1)                              |
| 14 | AJP-O-RING NBR (10X2.5)<br>00MTS01A0074 (u. 1)                           |
| 15 | AJP-INJECTOR O-RING (7X4)<br>00MTS01A0059 (u. 1)                         |

|    |                                                                              |
|----|------------------------------------------------------------------------------|
| 16 | AJP-SPACER FOR INJECTOR PR5 2013<br>00MTS07A0081 (u. 1)                      |
| 17 | AJP-SUPPORT SPACER INJECTOR PR7<br>00MTS01A0206 (u. 1)                       |
| 18 | AJP-NUT DIN 6923 M6 FOR FUEL PUMP AFTER 10 APRIL 2015<br>PC6923006000 (u. 1) |

## AIR FILTER BOX

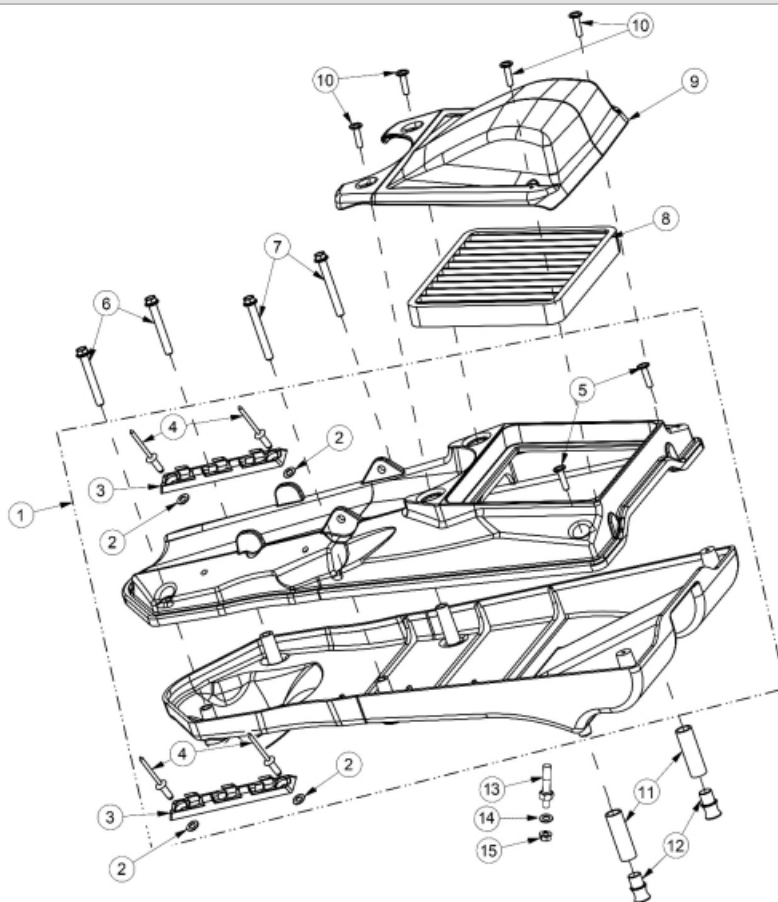 


|    |                                                                          |
|----|--------------------------------------------------------------------------|
| 1  | AJP-AIR BOX FILTER PR7<br>00MTS01A0183 (u. 1)                            |
| 2  | AJP-WASHER (INOX 4.2X8.7X0.7)<br>AN125A0040INOX (u. 4)                   |
| 3  | AJP-GUIDE OF BRAKE HOSE PR7 + GUIDE HOSE FUEL PR7<br>00TRS01A0124 (u. 2) |
| 7  | AJP-SCREW DIN69FS2 6X50 PR7<br>PF069FS26050 (u. 2)                       |
| 8  | AJP-AIR FILTER PR7<br>00MTS01A0193 (u. 1)                                |
| 9  | AJP-CARBON PR7 SINCE MAY 2019<br>00PLS01B0117 (u. 1)                     |
| 10 | AJP-SCREW 10.9 KN6031 5X18 PR7<br>PFKN60315018 (u. 4)                    |
| 11 | AJP-DRAIN HOSE. AIR FILTER BOX (9X12X60) PR7<br>00MTS01A0225 (u. 2)      |
| 12 | AJP-PLUG. DRAIN HOSE PR7<br>00MTS01A0226 (u. 2)                          |
| 13 | AJP-FUEL CAP ACERBIS AFTER MARCH 2015<br>00DES02A0041 (u. 1)             |
| 14 | AJP-WASHER DIN125A M6<br>AN125A06INOX (u. 1)                             |
| 15 | AJP-NUT DIN985 M6<br>PC0985006000 (u. 1)                                 |

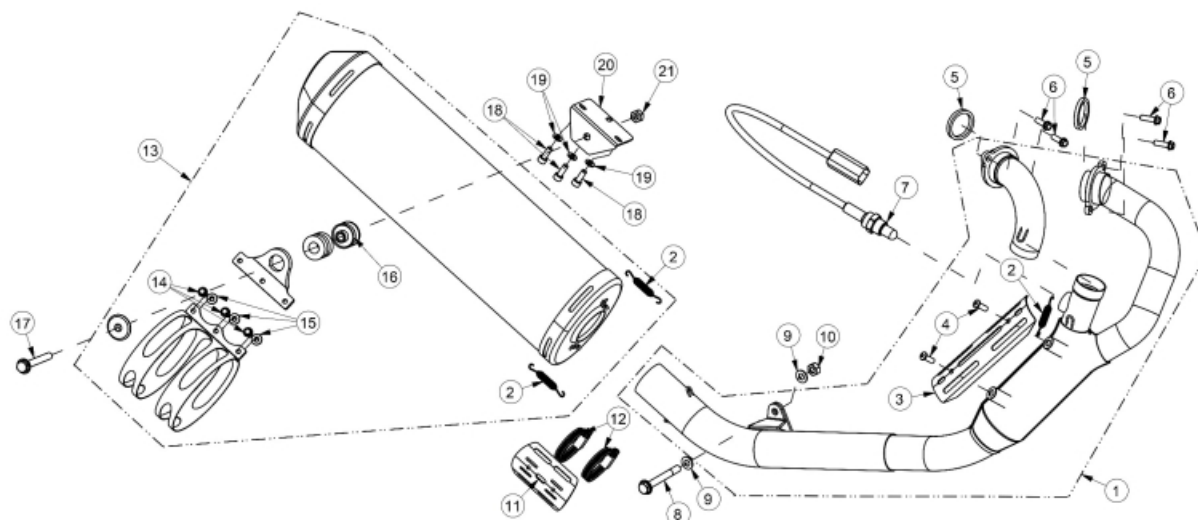 **EXHAUST SYSTEM (STANDARD)**


|    |                                                                              |
|----|------------------------------------------------------------------------------|
| 1  | AJP-EXHAUST PIPE WITH CATHALYST PR7<br>00MTS06A0059 (u. 1)                   |
| 2  | AJP-EXHAUST MUFFLER SPRING<br>00MTS01A0055 (u. 4)                            |
| 3  | AJP-EXHAUST PIPE PROTECTION HOMOLOGATED PR7<br>00MTS04A0058 (u. 1)           |
| 4  | AJP-SCREW ISO7380 M6X8<br>PF0738006008 (u. 2)                                |
| 5  | EXHAUST GASKET D38-D31 PR7 + SPR510CC - SWM/AJP<br>8A00A0873 (u. 2)          |
| 6  | AJP-SCREW DIN69FS2 6X20 PR7<br>PF069FS26020 (u. 4)                           |
| 7  | AJP-OXYGEN SENSOR<br>00MTS01A0056 (u. 1)                                     |
| 8  | AJP-SCREW DIN931 M8X65<br>PF0931008065 (u. 1)                                |
| 9  | AJP-WASHER DIN125A M8<br>AN125A008000 (u. 2)                                 |
| 10 | AJP-NUT DIN985 M8<br>PC0985008000 (u. 1)                                     |
| 11 | AJP-EXHAUST PIPE PROTECTION PR7<br>00MTS04A0057 (u. 1)                       |
| 12 | AJP-CLAMP 32-50<br>00DES01A0018 (u. 2)                                       |
| 13 | AJP-EXHAUST PR5 AND PR7 GPR<br>00MTS04A0055 (u. 1)                           |
| 14 | AJP-SCREW DIN69FS2 6X16 PR7<br>PF069FS26016 (u. 3)                           |
| 15 | AJP-NUT DIN 6923 M6 FOR FUEL PUMP AFTER 10 APRIL 2015<br>PC6923006000 (u. 3) |
| 16 | AJP-SPACER EXHAUST GPR (18MM) PR7<br>00MTS01A0212 (u. 1)                     |
| 17 | AJP-SCREW DIN6921 M8X50<br>PF6921008050 (u. 1)                               |
| 18 | AJP-SCREW DIN7380 M6X12<br>PF73806012INOX (u. 3)                             |
| 19 | AJP-WASHER DIN125A M6<br>AN125A06INOX (u. 3)                                 |

|    |                                                           |
|----|-----------------------------------------------------------|
| 20 | AJP-MUFFLER BRACKET DOMA + GPR PR7<br>00MTS07A0083 (u. 1) |
| 21 | AJP-NUT DIN6923 M8<br>PC6923008000 (u. 1)                 |


## POWER KIT

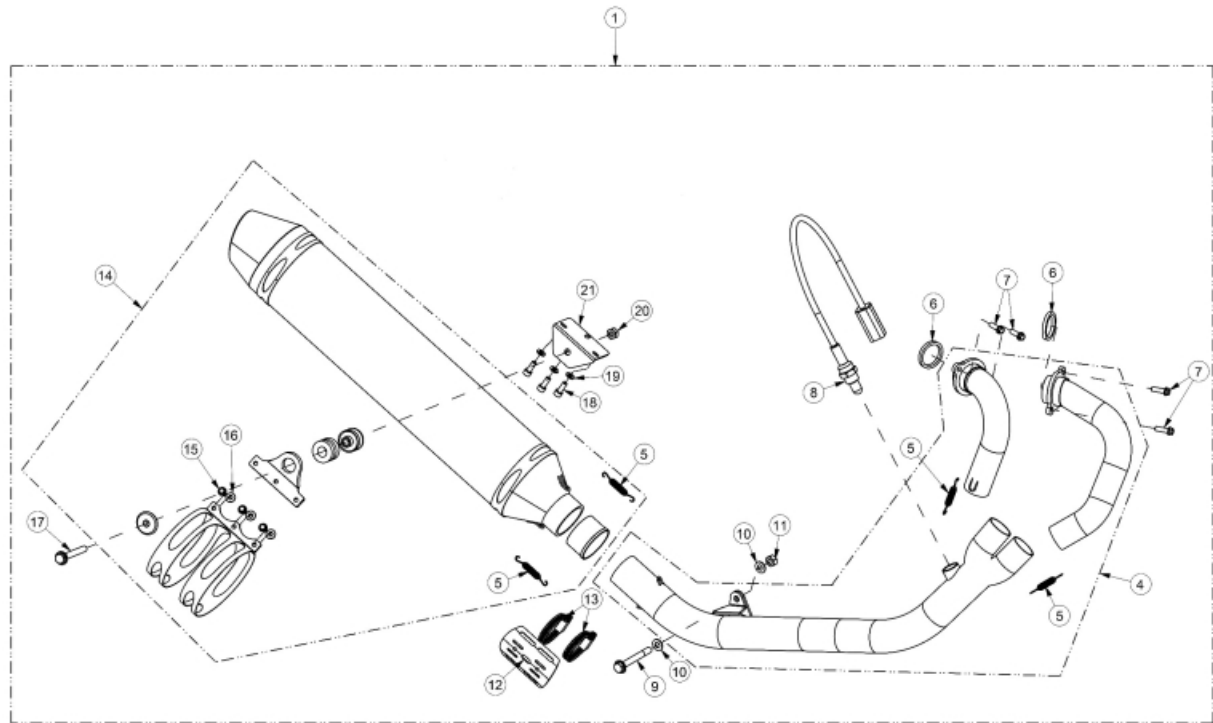 

|    |                                                                              |
|----|------------------------------------------------------------------------------|
| 1  | AJP-POWER KIT PR7<br>00MTS01A0203 (u. 1)                                     |
| 4  | AJP-EXHAUST PIPE DOMA PR7<br>00MTS06A0061 (u. 1)                             |
| 5  | AJP-EXHAUST MUFFLER SPRING<br>00MTS01A0055 (u. 4)                            |
| 6  | EXHAUST GASKET D38-D31 PR7 + SPR510CC - SWM/AJP<br>8A00A0873 (u. 2)          |
| 7  | AJP-SCREW DIN69FS2 6X25 PR7<br>PF069FS26025 (u. 4)                           |
| 8  | AJP-OXYGEN SENSOR<br>00MTS01A0056 (u. 1)                                     |
| 9  | AJP-SCREW DIN931 M8X65<br>PF0931008065 (u. 1)                                |
| 10 | AJP-WASHER DIN125A M8<br>AN125A008000 (u. 2)                                 |
| 11 | AJP-NUT DIN985 M8<br>PC0985008000 (u. 1)                                     |
| 12 | AJP-EXHAUST PIPE PROTECTION PR7<br>00MTS04A0057 (u. 1)                       |
| 13 | AJP-CLAMP 32-50<br>00DES01A0018 (u. 2)                                       |
| 14 | AJP-EXHAUST PR7 DOMA<br>00MTS04A0056 (u. 1)                                  |
| 15 | AJP-SCREW DIN69FS2 6X16 PR7<br>PF069FS26016 (u. 3)                           |
| 16 | AJP-NUT DIN 6923 M6 FOR FUEL PUMP AFTER 10 APRIL 2015<br>PC6923006000 (u. 3) |
| 17 | AJP-SCREW DIN6921 M8X50<br>PF6921008050 (u. 1)                               |
| 18 | AJP-SCREW DIN7380 M6X12<br>PF73806012INOX (u. 3)                             |


|    |                                                           |
|----|-----------------------------------------------------------|
| 19 | AJP-WASHER DIN125A M6<br>AN125A06INOX (u. 3)              |
| 20 | AJP-NUT DIN6923 M8<br>PC6923008000 (u. 1)                 |
| 21 | AJP-MUFFLER BRACKET DOMA + GPR PR7<br>00MTS07A0083 (u. 1) |

## FRAME

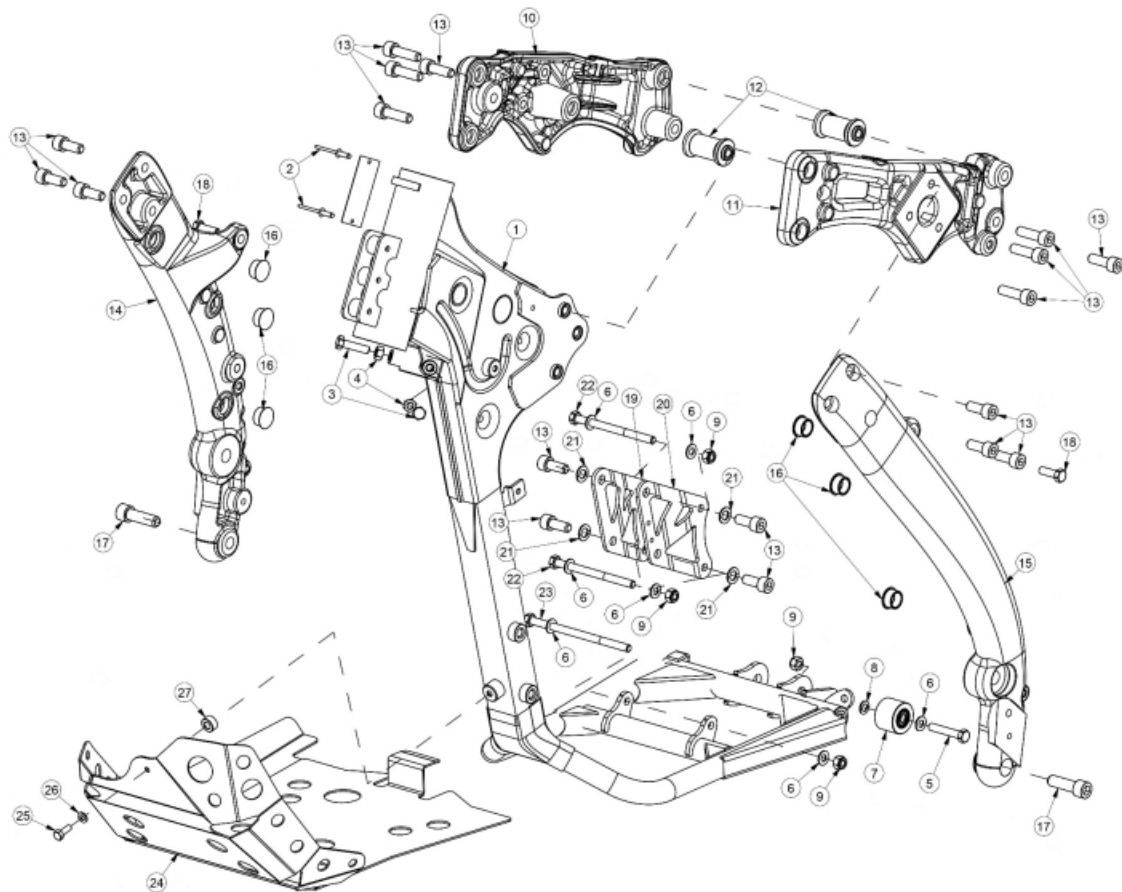 

|    |                                                                                |
|----|--------------------------------------------------------------------------------|
| 1  | AJP-FRAME PR7 BORDEAUX PR7 2023<br>00QUS04B0075 (u. 1)                         |
| 3  | AJP-SCREW DIN933 M8X30<br>PF0933008030INOX (u. 2)                              |
| 4  | AJP-NUT DIN934 M8<br>PC093408INOX (u. 2)                                       |
| 5  | AJP-SCREW DIN933 M8X45<br>PF0933008045 (u. 1)                                  |
| 7  | AJP-CHAIN ROLLER (40MM)<br>00QUS01A0022 (u. 1)                                 |
| 8  | AJP-WASHER DIN127B M8<br>AN127B008000 (u. 1)                                   |
| 9  | AJP-NUT DIN985 M8<br>PC0985008000 (u. 3)                                       |
| 10 | AJP-UP BEAM RH PR7<br>00QUS01A0054 (u. 1)                                      |
| 11 | AJP-UP BEAM LH PR7<br>00QUS01A0055 (u. 1)                                      |
| 12 | AJP-INTERNAL SPACER (58X24X16) PR7 & SPR 250 + 310 +510<br>00STS07A0090 (u. 2) |
| 13 | AJP-SCREW DIN912 M10X25<br>PF0912010025 (u. 18)                                |
| 14 | AJP-FRAME BEAM RH PR7<br>00QUS01A0053 (u. 1)                                   |
| 15 | AJP-FRAME BEAM LH PR7<br>00QUS01A0052 (u. 1)                                   |
| 16 | AJP-PLUG IN RUBBER TO BEAM 20MM PR7<br>00QUS01A0057 (u. 6)                     |


|    |                                                                           |
|----|---------------------------------------------------------------------------|
| 17 | AJP-SCREW DIN912 M12X40<br>PF0912012040 (u. 2)                            |
| 18 | AJP-SCREW DIN6921 M8X25<br>PF6921008025 (u. 2)                            |
| 19 | AJP-SUPPORTE FRAME PLAN RH PR7<br>00QUS04A0078 (u. 1)                     |
| 20 | AJP-SUPPORTE FRAME PLAN LH PR7<br>00QUS04A0077 (u. 1)                     |
| 21 | AJP-WASHER DIN127B M10 FOR SCRE OF ENGINE PR5 2013<br>AN127B001000 (u. 4) |
| 22 | AJP-SCREW DIN931 M8X110<br>PF0931008110 (u. 2)                            |
| 23 | AJP-SCREW DIN931 M8X140<br>PF0931008140 (u. 1)                            |
| 24 | AJP-ENGINE PROTECTOR PLATE PR7<br>00QUS03A0054 (u. 1)                     |
| 25 | AJP-SCREW DIN69FS2 6X25 PR7<br>PF069FS26025 (u. 1)                        |
| 26 | AJP-WASHER DIN9021 M6<br>AN9021006000 (u. 1)                              |
| 27 | AJP-SPACER SUPERIOR FOR BATTERY 240 2013<br>00MTS01A0121 (u. 1)           |

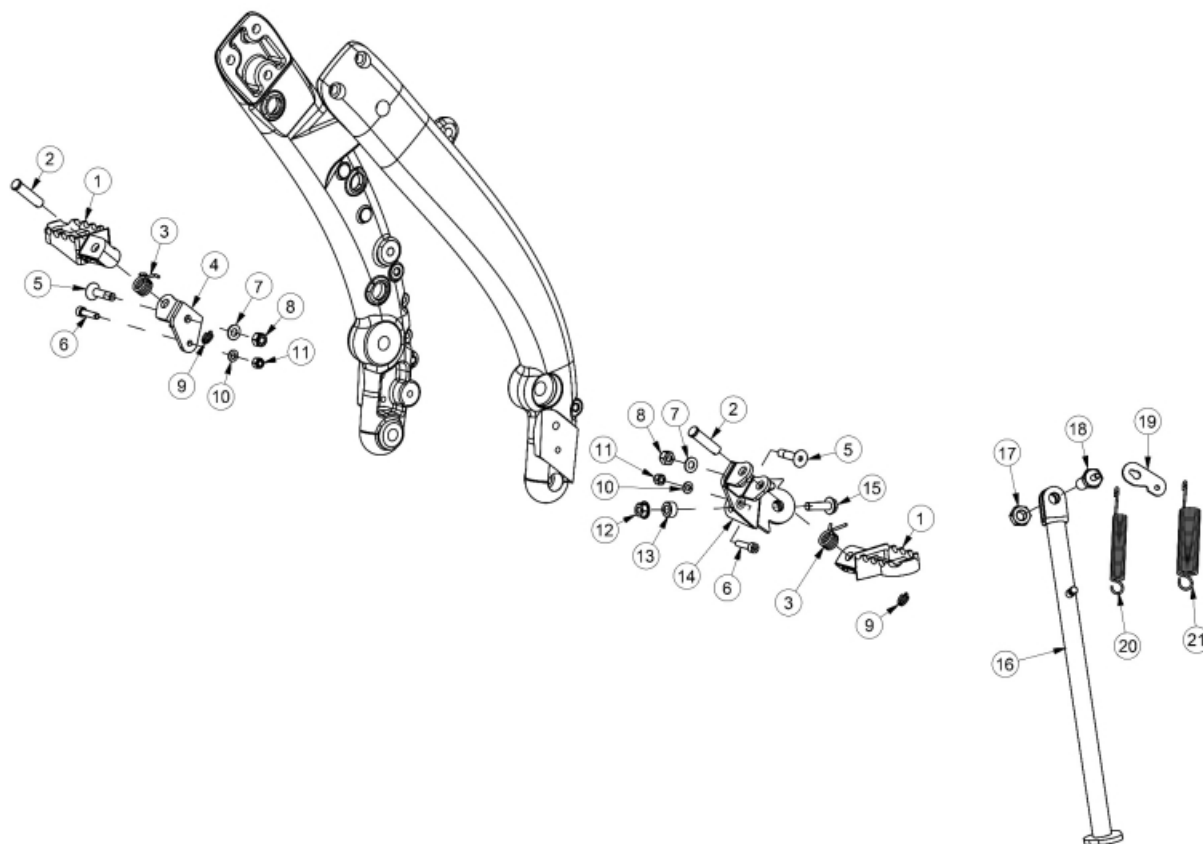 **FOOT RESTS AND SIDE STAND**


- |    |                                                                          |
|----|--------------------------------------------------------------------------|
| 1  | AJP-FRONT FOOTPEG LH/RH IN ALLOY EXTREME<br>00QUS03A0037 (u. 1)          |
| 2  | AJP-DOWEL FOR FOOTPEG RED EXTREME 2013<br>00QUS07A0064 (u. 2)            |
| 3  | AJP-FRONT FOOTPEG SPRING RH EXTREME PR4 /PR5 2013<br>00QUS07A0062 (u. 2) |
| 4  | AJP-FRONT FOOTPEG HOLDER RH PR7<br>00QUS07A0071 (u. 1)                   |
| 5  | AJP-SCREW DIN7991 M8X35<br>PF7991008035 (u. 2)                           |
| 6  | AJP-SCREW DIN912 M6X25<br>PF0912006025 (u. 2)                            |
| 7  | AJP-WASHER 5/16<br>00MTS01A0072 (u. 2)                                   |
| 8  | AJP-NUT DIN985 M8<br>PC0985008000 (u. 2)                                 |
| 9  | AJP-SCREW 2.5X20 DIN 94 FOR FOOTPEG EXTREME<br>00QUS07A0065 (u. 2)       |
| 10 | AJP-WASHER DIN125A M6<br>AN125A006000 (u. 2)                             |
| 11 | AJP-NUT DIN985 M6<br>PC0985006000 (u. 2)                                 |
| 12 | AJP-NUT DIN6923 M8<br>PC6923008000 (u. 1)                                |
| 13 | AJP-SPACER (16X9X8MM) PR7<br>00QUS03A0055 (u. 1)                         |
| 14 | AJP-FRONT FOOTPEG HOLDER LH PR7<br>00QUS07A0070 (u. 1)                   |

|    |                                                  |
|----|--------------------------------------------------|
| 15 | AJP-SCREW DIN6921 M8X25<br>PF6921008025 (u. 1)   |
| 16 | AJP-SIDE STAND PR7<br>00QUS04A0076 (u. 1)        |
| 17 | AJP-NUT DIN985 M12<br>PC0985012000 (u. 1)        |
| 18 | AJP-STUD PR7<br>00QUS04A0079 (u. 1)              |
| 19 | AJP-SPRING HOLDER<br>00QUS01A0017 (u. 1)         |
| 20 | AJP-INNER SPRING<br>00QUS01A0014 (u. 1)          |
| 21 | AJP-RESSORT BEQUILLE EXT.<br>00QUS01A0013 (u. 1) |


## FRONT FORKS AND STEERING COLUMN

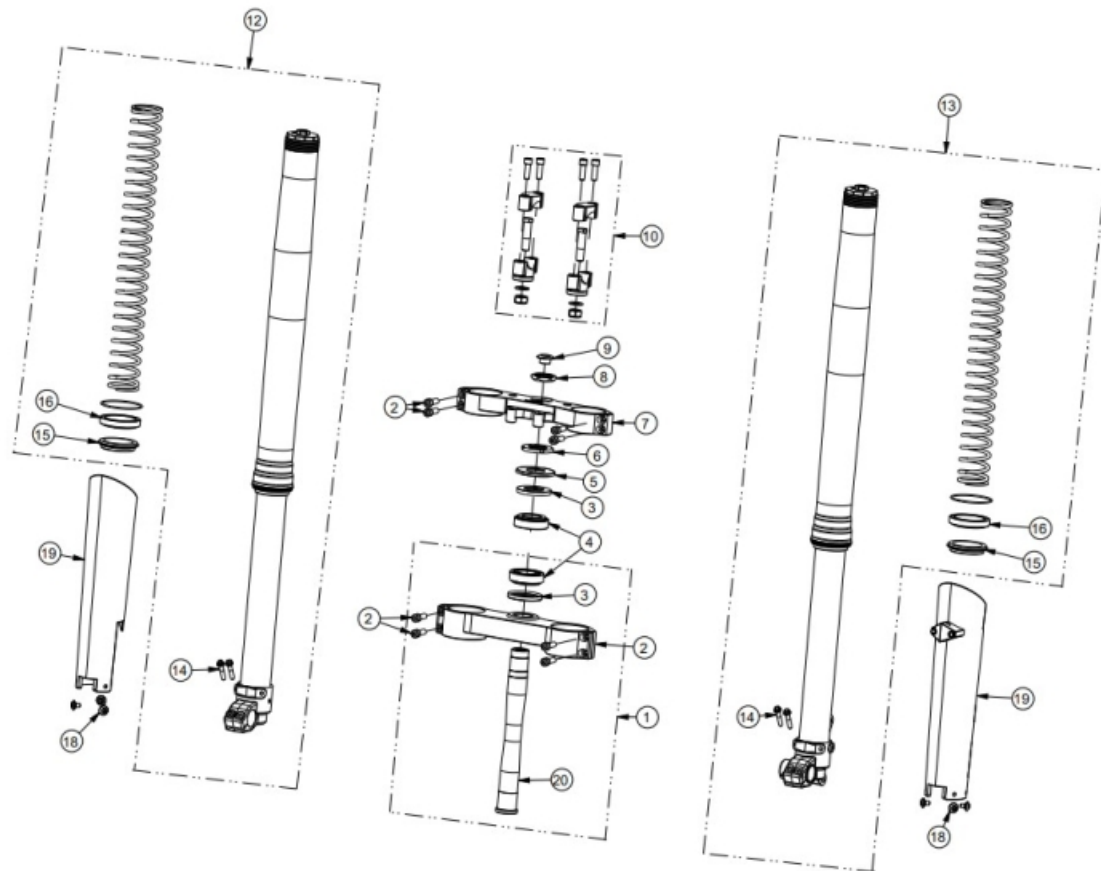 

|    |                                                                         |
|----|-------------------------------------------------------------------------|
| 3  | AJP-UPPER/LOWER STEER SEAL<br>00SFS01A0065 (u. 2)                       |
| 4  | AJP-BEARING 32006 PR7 + PR5 2020+ 310CC + 510CC<br>RL00032006JR7 (u. 2) |
| 5  | AJP-SEAL COVER<br>00SFS01A0064 (u. 1)                                   |
| 6  | AJP-STEERING NUT 49X28X8<br>00SFS01A0104 (u. 1)                         |
| 7  | AJP-UPPER BRACKET<br>00SFS01A0062 (u. 1)                                |
| 8  | AJP-NUT M28X1<br>00SFS07A0071 (u. 1)                                    |
| 9  | AJP-PLUG FOR STEERING STEM FASTACE 2012<br>00SFS01A0088 (u. 1)          |
| 10 | AJP-BAR MOUNT PR5<br>00SFS01A0061 (u. 1)                                |
| 12 | AJP-FRONT FORK RH DOUBLE CIRCUIT 2019<br>00SFC01A0084 (u. 1)            |
| 13 | AJP-FRONT FORK LH DOUBLE CIRCUIT 2019<br>00SFC01A0085 (u. 1)            |
| 14 | AJP-SCREW DIN6921 M6X30<br>PF6921006030 (u. 4)                          |
| 15 | AJP-DUST SEAL<br>00SFS01A0069 (u. 2)                                    |
| 16 | AJP-OIL SEAL<br>00SFS01A0070 (u. 2)                                     |
| 17 | AJP-SPRING FOR FORK SACH 48MM RED (MORE STRONG)<br>00SFS01A0108 (u. 2)  |

|    |                                                                 |
|----|-----------------------------------------------------------------|
| 18 | AJP-SCREW FOR SET PROTECTOR FOR PR5<br>00PLS01A0093 (u. 6)      |
| 19 | AJP-FORK PROTECTOR SET SPECIAL WHITE PR7<br>00PLS01A0115 (u. 1) |
| 20 | AJP-STEERING STEM PR5/PR7<br>00SFS01A0066 (u. 1)                |

## SWING ARM

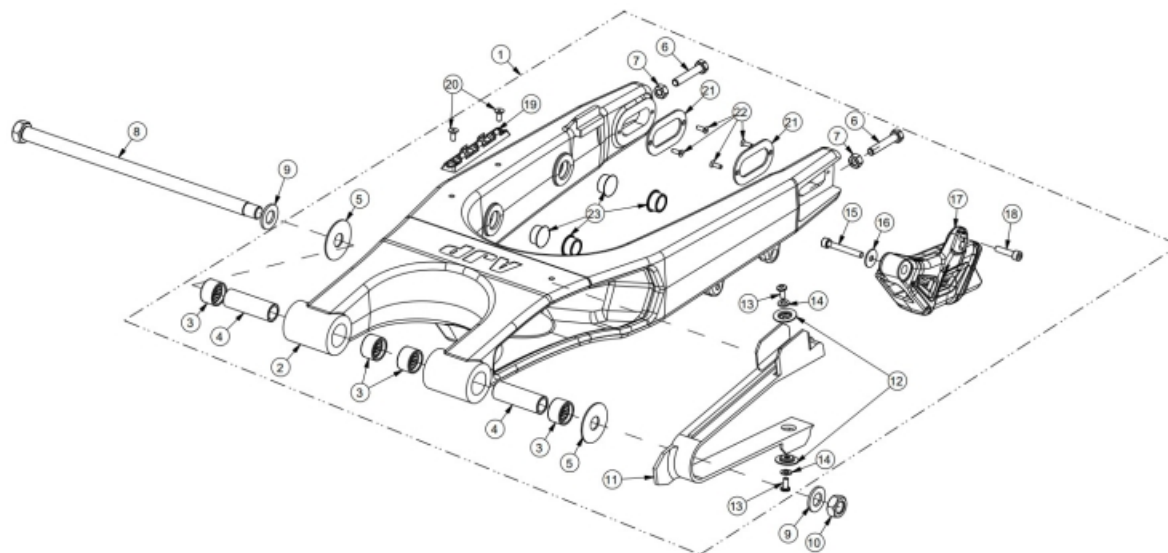 

AJP-SWING ARM ASSY (SINCE MARCH 2022)  
00STC02B0004 (u. 1)

1

AJP-SWING ARM ASSY PR7  
00STC02A0004 (u. 1)

AJP-SWING ARM (SINCE MARCH 2022)  
00STS02B0086 (u. 1)

2

AJP-REAR SWING ARM PR7  
00STS02A0086 (u. 1)

AJP-BEARING HK2020 RS  
RL00HK2020RS (u. 4)

3

AJP-SPACER FOR SWINGARM (60X20X15) PR7  
00STS01A0096 (u. 2)

4

AJP-WASHER SWINGARM 45X15X1.5  
00STS01A0095 (u. 2)

5

AJP-SCREW DIN933 M8X50  
PF0933008060 (u. 2)

6

AJP-NUT DIN934 M8  
PC0934008000 (u. 2)

7

AJP-PIVOT SHAFT PR7  
00STS07A0089 (u. 1)

8

AJP-WASHER DIN125A M14  
AN125A014000 (u. 2)

9

AJP-NUT DIN934 M14  
PC0934014000 (u. 1)

10

AJP-CHAIN TOUCH DEFENSE BUFFER PR7  
00PLS01A0121 (u. 1)

11

AJP-WASHER  
00PLS07A0029 (u. 2)

12

AJP-WASHER DIN125A M6  
AN125A006000 (u. 2)

14

AJP-SCREW DIN912 M6X40  
PF0912006040 (u. 1)

15

AJP-WASHER DIN9021 M6  
AN902106INOX (u. 1)


16

AJP-CHAIN GUIDE PR5 P310 E P 510 MODELS FOR 2020  
00STS01C0007 (u. 1)

17

|    |                                                                          |
|----|--------------------------------------------------------------------------|
| 18 | AJP-SCREW DIN912 M6X20<br>PF0912006020 (u. 1)                            |
| 19 | AJP-GUIDE OF BRAKE HOSE PR7 + GUIDE HOSE FUEL PR7<br>00TRS01A0124 (u. 1) |
| 21 | AJP-PLATE FOR REAR SWING ARM PR7<br>00STS02A0087 (u. 2)                  |
| 22 | AJP-SCREW DIN7991 M4X10 INOX<br>PF799104010INOX (u. 4)                   |
| 23 | AJP-PLUG IN RUBBER TO BEAM 20MM PR7<br>00QUS01A0057 (u. 4)               |

## REAR SUSPENSION LINKAGE

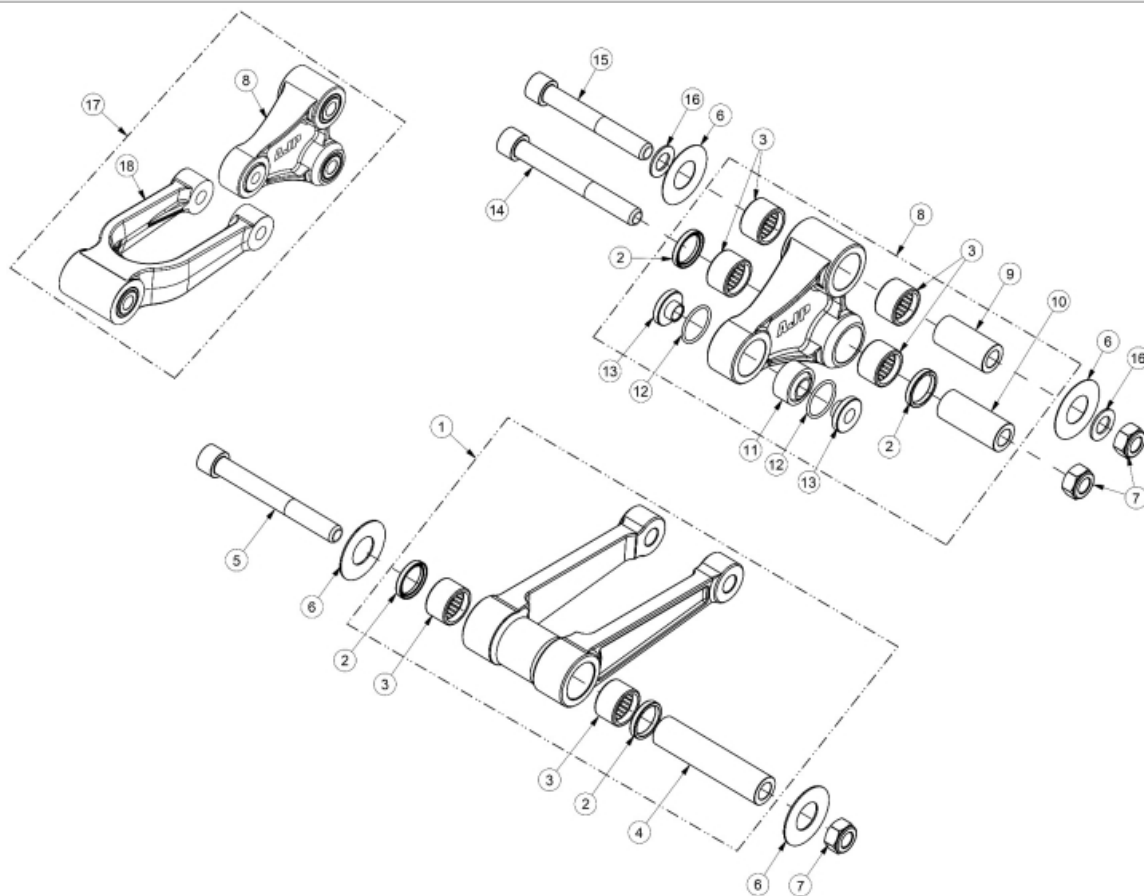 

**1** AJP-RED FRAME LINK ASSEMBLY MACHINED PR7 AFTER MAY 2019  
00STC01A0091 (u. 1)

**2** AJP-SEALING 20X26X4 PR7/SPR 250; 310CC AND 510CC  
00STS01A0099 (u. 4)

**3** AJP-BEARING HK2020 RS  
RL00HK2020RS (u. 6)

**4** AJP-SPACER 20X87X12 FRAME LINK MAQ. PR7 - AFTER MAY 2019  
00STS07A0092 (u. 1)

**6** AJP-WASHER 36X20X0.8 PR7/SPR 250; 310CC AND 510CC  
00STS01A0098 (u. 4)

**7** AJP-NUT DIN985 M12  
PC0985012000 (u. 3)

**8** AJP-RED ARM LINK ASSEMBLY MACHINED PR7 AFTER MAY 2019  
00STC01A0090 (u. 1)

**9** AJP-SPACER 12.2X20X42  
00STS07A0085 (u. 1)

**10** AJP-SPACER 20X87X12 ARM LINK MAQ. PR7 - AFTER MAY 2019  
00STS07A0093 (u. 1)

**11** AJP-ROD  
00STS01A0074 (u. 1)

**12** AJP-O-RING (22X2)  
00STS01A0087 (u. 2)


**13** AJP-SPACER  
00STS07A0082 (u. 2)

**14** AJP-SCREW DIN912 M12X100  
PF0912012100 (u. 1)

**15** AJP-SCREW DIN912 M12X95  
PF0912012095 (u. 1)


|    |                                                                                         |
|----|-----------------------------------------------------------------------------------------|
| 16 | AJP-WASHER DIN125 M12<br>AN0125012000 (u. 2)                                            |
| 17 | AJP-CONVERSION KIT. MACHINED REAR LINK<br>00STC01A0095 (u. 1)                           |
| 18 | AJP-RED FRAME LINK ASSEMBLY MACH. PR7 SINCE 2016 UNTIL JAN, 2019<br>00STC01A0092 (u. 1) |

 REAR SHOCK ABSORBER

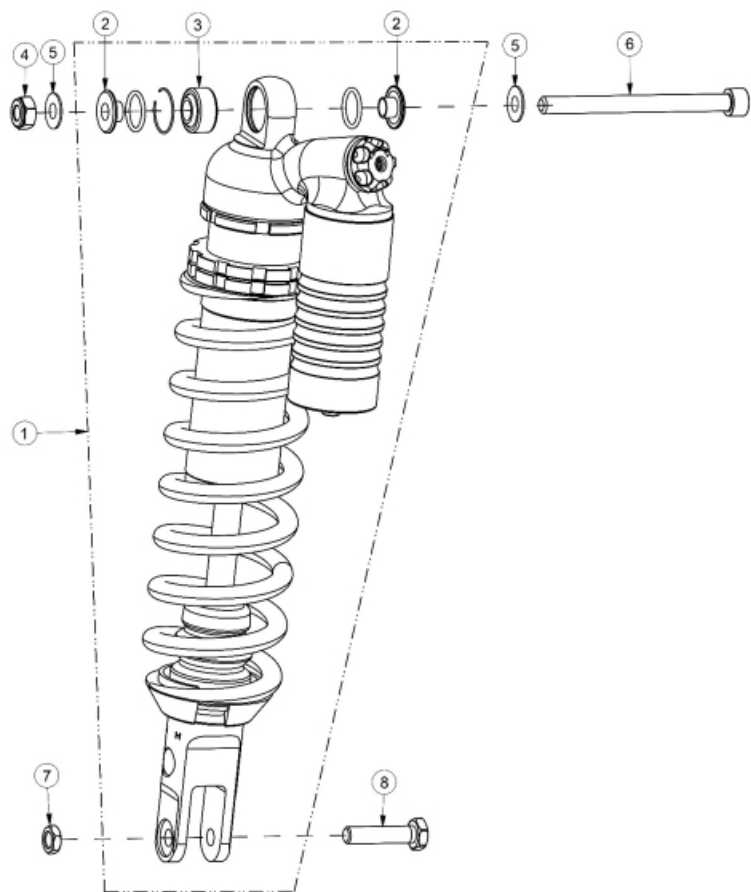

|   |                                                                |
|---|----------------------------------------------------------------|
| 1 | AJP-REAR SHOCK ABSORBER (SACHS) PR5/PR7<br>00STC01A0074 (u. 1) |
| 2 | AJP-BUSH (2 MM) PR7<br>00STS07A0091 (u. 2)                     |
| 3 | AJP-ROD<br>00STS01A0074 (u. 1)                                 |
| 4 | AJP-NUT DIN985 M10<br>PC0985010000 (u. 1)                      |
| 6 | AJP-SCREW DIN912 M10X120<br>PF0912010120 (u. 1)                |
| 7 | AJP-NUT DIN934 M10<br>PC0934010000 (u. 1)                      |
| 8 | AJP-SCREW M10X43<br>00STS07A0076 (u. 1)                        |

 
FUEL TANK

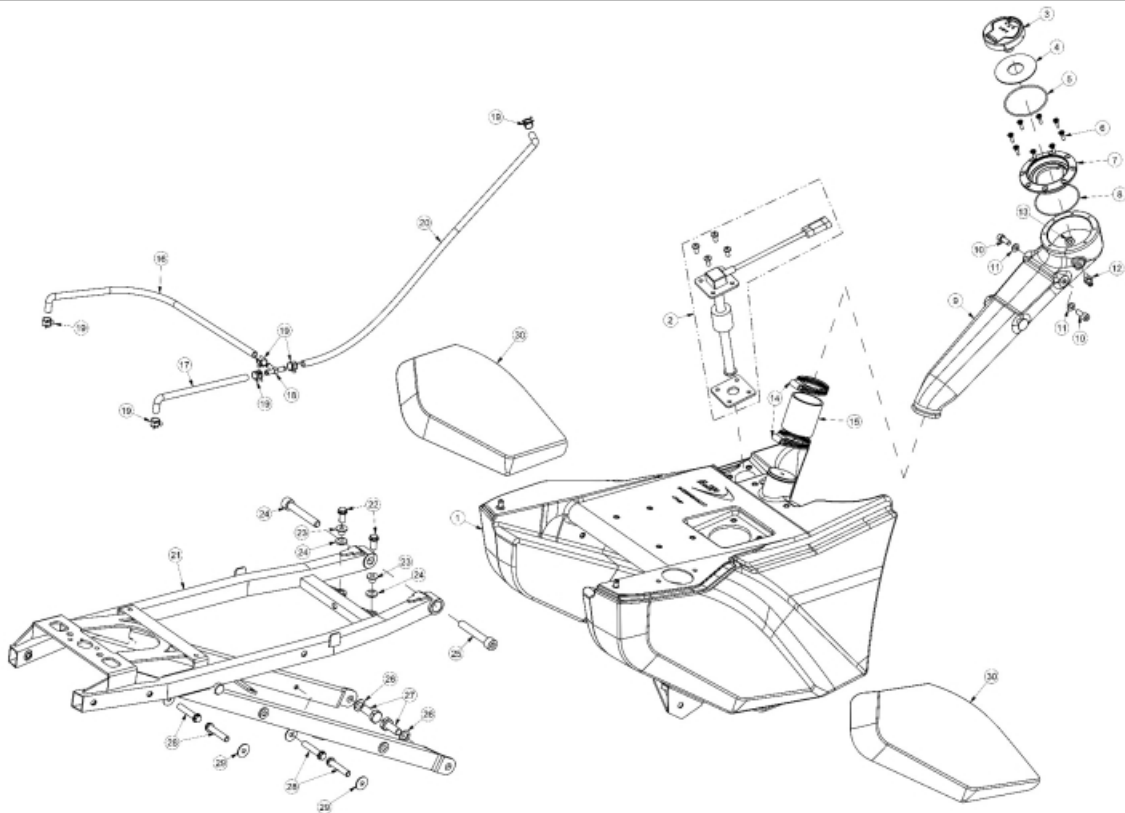

|    |                                                                                 |
|----|---------------------------------------------------------------------------------|
| -  | (u. 0)                                                                          |
| 1  | AJP-FUEL TANK PR7<br>00DES01A0077 (u. 1)                                        |
| 2  | AJP-FUEL LEVEL SENSOR PR7<br>00DES01A0085 (u. 1)                                |
| 3  | AJP-KIT OF IGNITION SWITCH + BLOCK SEAT AND FUEL CAP PR7<br>00COS01A0050 (u. 1) |
| 4  | AJP-SEAL FOR FUEL CAP PR7<br>00DES01A0117 (u. 1)                                |
| 5  | AJP-ORING 60X2.5 NBR PR7<br>00DES02A0043 (u. 1)                                 |
| 7  | AJP-FALANGE FOR FUEL CAP PR7<br>00DES01A0086 (u. 1)                             |
| 8  | AJP-O-RING FALANGE FUEL CAP 62X1.5 PR7<br>00DES01A0089 (u. 1)                   |
| 9  | AJP-CONDUIT FOR FUEL TANK PR7<br>00DES01A0091 (u. 1)                            |
| 10 | AJP-SCREW DIN912 M6X16<br>PF0912006016 (u. 2)                                   |
| 12 | AJP-FUEL CAP ACERBIS AFTER MARCH 2015<br>00DES02A0041 (u. 2)                    |
| 13 | AJP-NUT DIN985 M6<br>PC0985006000 (u. 2)                                        |
| 14 | AJP-CLAMP 32-50<br>00DES01A0018 (u. 2)                                          |
| 15 | AJP-HOSE COBBECTION FOR FUEL TANK PR7 40X46X50<br>00DES01A0083 (u. 1)           |
| 16 | AJP-HOSE. BREATHER L.H. (250 MM) PR7<br>00DES01A0107 (u. 1)                     |

|    |                                                                                    |
|----|------------------------------------------------------------------------------------|
| 17 | AJP-HOSE. BREATHER R.H. (125 MM)<br>00DES01A0108 (u. 1)                            |
| 18 | AJP-CONNECTOR<br>00DES01A0008 (u. 1)                                               |
| 19 | AJP-BREATHER FILTER CLAMP 10MM<br>00DES01A0019 (u. 6)                              |
| 20 | AJP-HOSE. BREATHER (5X9X685) PR7<br>00DES01A0106 (u. 1)                            |
| 21 | AJP-REAR FRAME BLACK PR7<br>00QUS06A0069 (u. 1)                                    |
| 22 | AJP-SCREW DIN69FS2 6X16 PR7<br>PF069FS26016 (u. 2)                                 |
| 23 | AJP-SPACER FOR REAR FRAME 16X9 PR3/PR4/PR5 AFTER APRIL 2015<br>00QUS07A0068 (u. 2) |
| 24 | AJP-CUSHION FOR REAR FRAME PR3/PR4/PR5 AFTER APRIL 2015<br>00QUS07A0069 (u. 2)     |
| 25 | AJP-SCREW DIN912 M10X65<br>PF0912010065 (u. 2)                                     |
| 26 | AJP-SCREW DIN931 M10X25<br>PF0933010025 (u. 2)                                     |
| 28 | AJP-SCREW DIN69FS2 6X35 PR7<br>PF069FS26035 (u. 4)                                 |
| 29 | AJP-WASHER DIN9021 M6<br>AN9021006000 (u. 4)                                       |
| 30 | AJP-KIT OF STICKERS FUEL TANK AFTER MAY 2019 PR7<br>00BAS01A0199 (u. 1)            |
|    | AJP-KIT STICKERS FUEL TANK AFTER PR7 2023<br>00BAS01A0223 (u. 0)                   |
|    | AJP-KIT OF STICKERS FUEL TANK AFTER DEC.2020 PR7<br>00BAS01A0213 (u. 0)            |

 
FUEL PUMP

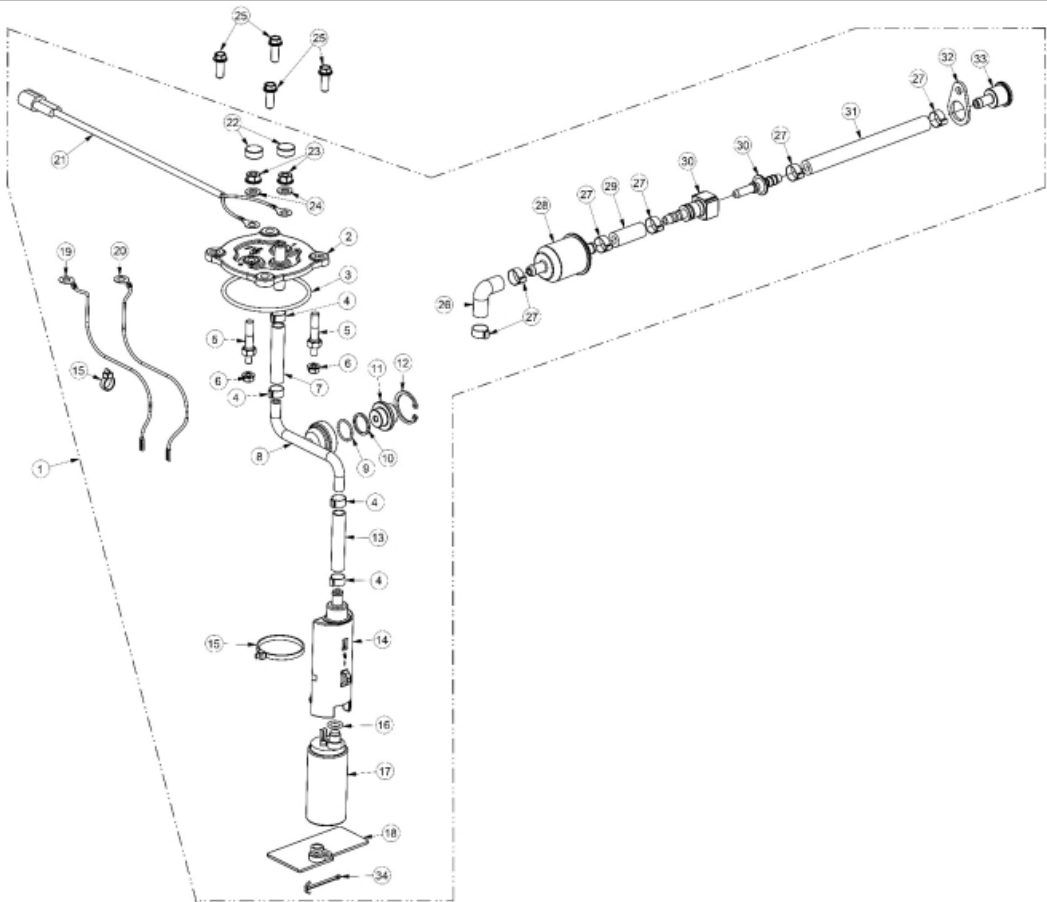

|    |                                                                                 |
|----|---------------------------------------------------------------------------------|
| -  | (u. 0)                                                                          |
| 1  | AJP-FUEL PUMP PR7<br>00DES01A0097 (u. 1)                                        |
| 2  | AJP-PLASTICS PARTS FOR FUEL PUMP PR7<br>00DES01A0090 (u. 1)                     |
| 3  | AJP-O-RING 65X3 NBR 70 FOR FUEL PIMP AFTER 10 APRIL 2015<br>00DES01A0070 (u. 1) |
| 4  | AJP-CLAMP<br>00DES01A0045 (u. 4)                                                |
| 5  | AJP-STUD M6-M5 PR7<br>00DES01A0101 (u. 2)                                       |
| 6  | AJP-NUT DIN985 M5<br>PC0985050000 (u. 2)                                        |
| 7  | AJP-NYLON HOSE (60 MM) PR7<br>00DES01A0109 (u. 1)                               |
| 8  | AJP-SUPPORT VALVE PRESSAO FUEL PUMP PR7<br>00DES07A0055 (u. 1)                  |
| 9  | AJP-O-RING (14X2) PR7<br>00DES01A0115 (u. 1)                                    |
| 10 | AJP-NYLON RING. PRESSURE VALVE (15X18X1.5) PR7<br>00DES01A0116 (u. 1)           |
| 11 | AJP-VALVE FOR FUEL PUMP 3.00 BAR PR7<br>00DES01A0098 (u. 1)                     |
| 13 | AJP-NYLON HOSE (40 MM) PR7<br>00DES01A0110 (u. 1)                               |
| 14 | AJP-PLASTICS PARTS FOR FUEL PUMP PR7<br>00DES01A0090 (u. 1)                     |

|    |                                                                                          |
|----|------------------------------------------------------------------------------------------|
| 15 | AJP-PLASTIC CLAMP 26 MX<br>00DES01A0051 (u. 3)                                           |
| 16 | AJP-O-RING 8.50X2 FUEL P7UMP PR5/ PR7<br>00DES01A0088 (u. 1)                             |
| 17 | AJP-ENGINE FOR FUEL PUMP 2015<br>00DES01A0075 (u. 1)                                     |
| 18 | AJP-STRAINER FOR FUEL PUMP PR5 AND PR7<br>00DES01A0041 (u. 1)                            |
| 21 | AJP-HARNESS FOR FUEL PUMP PR5/PR7 AFTER 15 APRIL 2015<br>00ELS01A0091 (u. 1)             |
| 22 | AJP-TAP SCREW FOR FUEL PUMP 2015<br>00DES01A0080 (u. 2)                                  |
| 23 | AJP-NUT DIN 6923 M6 FOR FUEL PUMP AFTER 10 APRIL 2015<br>PC6923006000 (u. 2)             |
| 24 | AJP-WASHER DIN125A M6<br>AN125A006000 (u. 2)                                             |
| 25 | AJP-SCREW DIN69FS2 6X16 PR7<br>PF069FS26016 (u. 4)                                       |
| 26 | AJP-HOSE. FUEL OUTLET PR7<br>00DES01A0111 (u. 1)                                         |
| 27 | AJP-CLAMP FUEL TUBE FOR PR5 LC FOR FUEL PUMP AFTER APRIL 2015<br>00DES01A0079 (u. 44716) |
| 28 | AJP-FUEL FILTER D8MM/ MAHLE PR7<br>00DES01A0095 (u. 1)                                   |
| 30 | AJP-FAST FIT FOR FUEL TUBE PR7<br>00DES01A0105 (u. 1)                                    |
| 31 | AJP-HOSE (117 MM) PR7<br>00DES01A0113 (u. 1)                                             |
| 32 | AJP-SUPPORT SPACER INJECTOR PR7<br>00MTS01A0206 (u. 1)                                   |
| 33 | AJP-SPACER FOR INJECTOR PR5 2013<br>00MTS07A0081 (u. 1)                                  |


## FRONT BRAKE SYSTEM

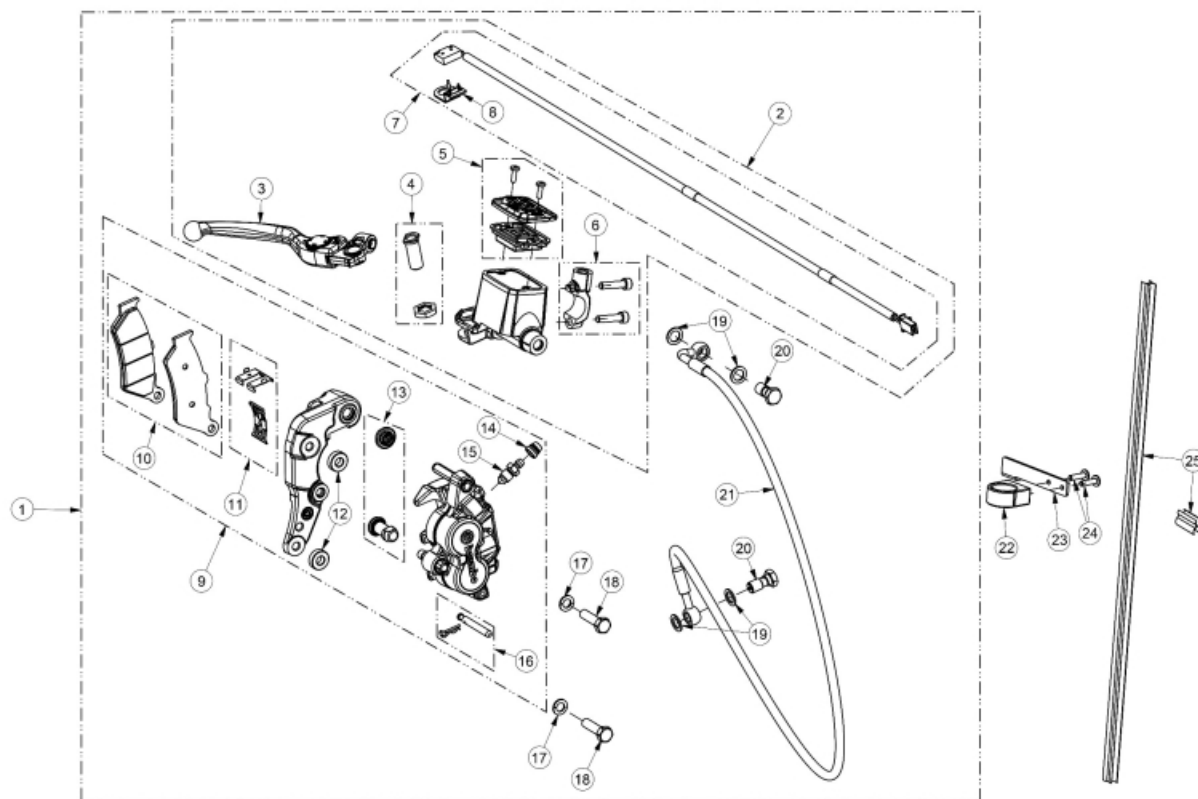 

|    |                                                                                        |
|----|----------------------------------------------------------------------------------------|
| 1  | AJP-FRONT BRAKE ASSEMBLY PR7 - BREMBO AFTER MAY 2019<br>00TRC01A0111 (u. 1)            |
| 2  | AJP-FRONT MASTER CYLINDER. BREMBO PR7 - AFTER MAY 2019<br>00TRS01A0134 (u. 1)          |
| 3  | AJP-BRAKE LEVER KIT PR7 2020<br>00TRS01A0147 (u. 1)                                    |
| 4  | AJP-LEVER PIN KIT 2020<br>110279856AJP (u. 1)                                          |
| 5  | AJP-RESERVOIR CAP KIT BREMBO PR7 2020<br>110430885AJP (u. 1)                           |
| 6  | AJP-CLAMP KIT BRAMBO PR7 2020<br>110437248AJP (u. 1)                                   |
| 7  | AJP-MICROSWITCH KIT BREMBO PR7 2020<br>110C10912AJP (u. 1)                             |
| 8  | AJP-MICROSWITCH SHIM KIT BREMBO PR7 2020<br>110441834AJP (u. 1)                        |
| 9  | AJP-FRONT CALIPER ASSY. BREMBO PR7 - AFTER MAY 2019<br>00TRS01A0142 (u. 1)             |
| 10 | AJP-FRONT PAD KIT PR7 2020<br>00TRS01A0145 (u. 1)                                      |
| 11 | AJP-SPRING - SHIM KIT PR7 2020<br>120468326AJP (u. 1)                                  |
| 12 | AJP-SPACER SUPPORT OF FRONT CALIPER 18X5.9X8 PR7 AFTER MAY 2020<br>00TRS07A0104 (u. 2) |
| 13 | AJP-DUST BOOT KIT PR7 2020<br>122474614AJP (u. 1)                                      |
| 14 | AJP-RUBBER CAP KIT PR7 2020<br>105150210AJP (u. 1)                                     |
| 15 | AJP-BLEEDER PLUG KIT PR7 2020<br>105338763AJP (u. 1)                                   |

|    |                                                                    |
|----|--------------------------------------------------------------------|
| 16 | AJP-PADS PIN KIT BREMBO PR7 2020<br>122508938AJP (u. 1)            |
| 17 | AJP-WASHER DIN6798 M8X14X0.8<br>AN67980801408 (u. 2)               |
| 18 | AJP-SCREW DIN933 M8X35<br>PF0933008035 (u. 2)                      |
| 19 | AJP-WASHER<br>00TRS01A0103 (u. 4)                                  |
| 20 | AJP-SCREW M10X1 PR3/PR4/PR5 2012<br>00TRS01A0025 (u. 2)            |
| 21 | AJP-FRONT BRAKE HOSE PR7 BREMBO PUMP 1270MM<br>00TRS01B0125 (u. 1) |
| 22 | AJP-HOLDER<br>00PLS01A0042 (u. 1)                                  |
| 23 | AJP-SUPPORT FOR GUIDE OF BRAKE HOSE PR7<br>00TRS01A0123 (u. 1)     |
| 24 | AJP-SCREW 3.5<br>PF7981003513 (u. 2)                               |
| 25 | AJP-SENSOR CABLE HOSE KIT 466MM/30MM PR7<br>00TRS01A0132 (u. 1)    |


## REAR BRAKE SYSTEM

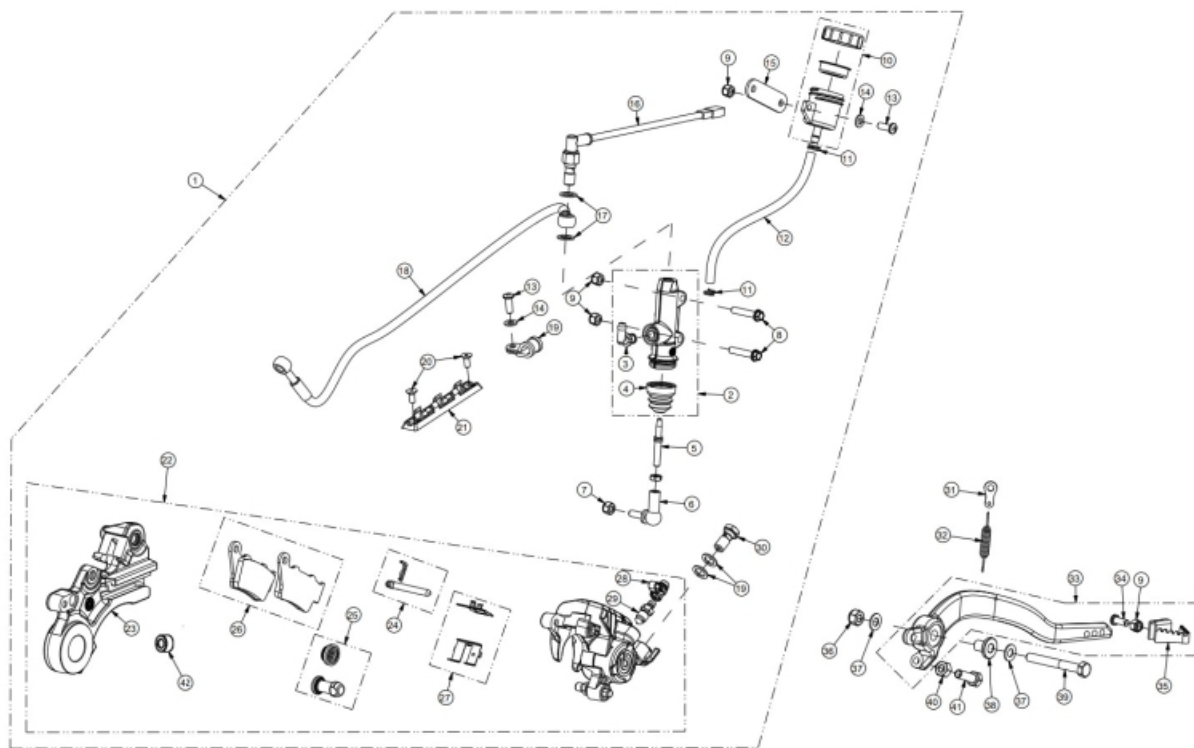 

|    |                                                                              |
|----|------------------------------------------------------------------------------|
| 1  | AJP-REAR BRAKE ASSEMBLY PR7 - BREMBO AFTER MAY 2019<br>00TRC01A0112 (u. 1)   |
| 2  | AJP-REAR MASTER CYLINDER. BREMBO PR7 - AFTER MAY 2019<br>00TRS01A0133 (u. 1) |
| 3  | AJP-FITTING KIT KIT PR7 2020<br>110312720AJP (u. 1)                          |
| 4  | AJP-RUBBER BOOT KIT PR7 2020<br>110374120AJP (u. 1)                          |
| 5  | AJP-SCREW FOR REAR BRAKE PEDAL PR7; 310 AND 510CC<br>00TRS07A0103 (u. 1)     |
| 6  | AJP-PUSH ROD PA7340 M6 FOR REAR BRAKE PEDAL<br>00TRS06A0006 (u. 1)           |
| 7  | AJP-NUT DIN934 M6<br>PC0934006000 (u. 1)                                     |
| 8  | AJP-SCREW DIN69FS2 6X25 PR7<br>PF069FS26025 (u. 2)                           |
| 9  | AJP-NUT DIN985 M6<br>PC0985006000 (u. 4)                                     |
| 12 | AJP-BRAKE HOSE L=420. BREMBO PR7 - AFTER MAY 2019<br>00TRS01A0137 (u. 1)     |
| 13 | AJP-SCREW DIN7380 M6X12<br>PF73806012INOX (u. 2)                             |
| 14 | AJP-WASHER DIN125A M6<br>AN125A06INOX (u. 2)                                 |
| 15 | AJP-SUPPORT RESERVAIOIR REAR BRAKE PR7 - BREMBO<br>00TRS01A0143 (u. 1)       |
| 16 | AJP-STOP VALVE<br>00TRS01A0039 (u. 1)                                        |
| 17 | AJP-WASHER<br>00TRS01A0103 (u. 4)                                            |
| 18 | AJP-REAR BRAKE HOSE PR7 BREMBO 670MM 2023<br>00TRS01C0126 (u. 1)             |

|    |                                                                                 |
|----|---------------------------------------------------------------------------------|
| 19 | AJP-HOLDER<br>00TRS01A0037 (u. 1)                                               |
| 21 | AJP-GUIDE OF BRAKE HOSE PR7 + GUIDE HOSE FUEL PR7<br>00TRS01A0124 (u. 1)        |
| 22 | AJP-REAR CALIPER ASSY. BREMBO PR7 - AFTER MAY 2019<br>00TRS01A0138 (u. 1)       |
| 23 | AJP-SUPPORT REAR CALIPER BREMBO PR7 - AFTER MARCH 2022<br>00TRS01B0141 (u. 1)   |
| 24 | AJP-PADS PIN KIT PR7 2020<br>122508933AJP (u. 1)                                |
| 25 | AJP-DUST BOOT KIT PR7 2020<br>122474614AJP (u. 1)                               |
| 26 | AJP-REAR PAD KIT PR7 2020<br>00TRS01A0146 (u. 1)                                |
| 27 | AJP-SPRING - SHIM KIT PR7 2020<br>120468322AJP (u. 1)                           |
| 28 | AJP-RUBBER CAP KIT PR7 2020<br>105150220AJP (u. 1)                              |
| 29 | AJP-BLEEDER PLUG KIT PR7 2020<br>105338763AJP (u. 1)                            |
| 30 | AJP-SCREW M10X1 PR3/PR4/PR5 2012<br>00TRS01A0025 (u. 1)                         |
| 31 | AJP-SUPPORT SPRING REAR BRAKE PEDAL PR5 2013 END/EXTREME<br>00TRS07A0093 (u. 1) |
| 32 | AJP-SUPPORT SPRING REAR BRAKE PEDAL PR7<br>00TRS07A0098 (u. 1)                  |
| 33 | AJP-REAR BRAKE BREMBO PEDAL RED 6MM PR7<br>00TRS07B0096 (u. 1)                  |
| 35 | AJP-CRAMPON ALLOY OF REAR BRAKE PEDAL PR5 2013<br>00TRS07A0086 (u. 1)           |
| 36 | AJP-NUT DIN985 M8<br>PC0985008000 (u. 1)                                        |
| 37 | AJP-WASHER 5/16<br>00MTS01A0072 (u. 1)                                          |
| 38 | AJP-SPACER REAR BRAKE PEDAL RED 17X10X8 PR7<br>00TRS07A0100 (u. 1)              |
| 39 | AJP-SCREW DIN931 M8X65<br>PF0931008065 (u. 1)                                   |
| 40 | AJP-NUT DIN934 M8<br>PC0934008000 (u. 1)                                        |
| 41 | AJP-SCREW DIN933 M8X25<br>PF0933008025 (u. 1)                                   |


## FRONT WHEEL

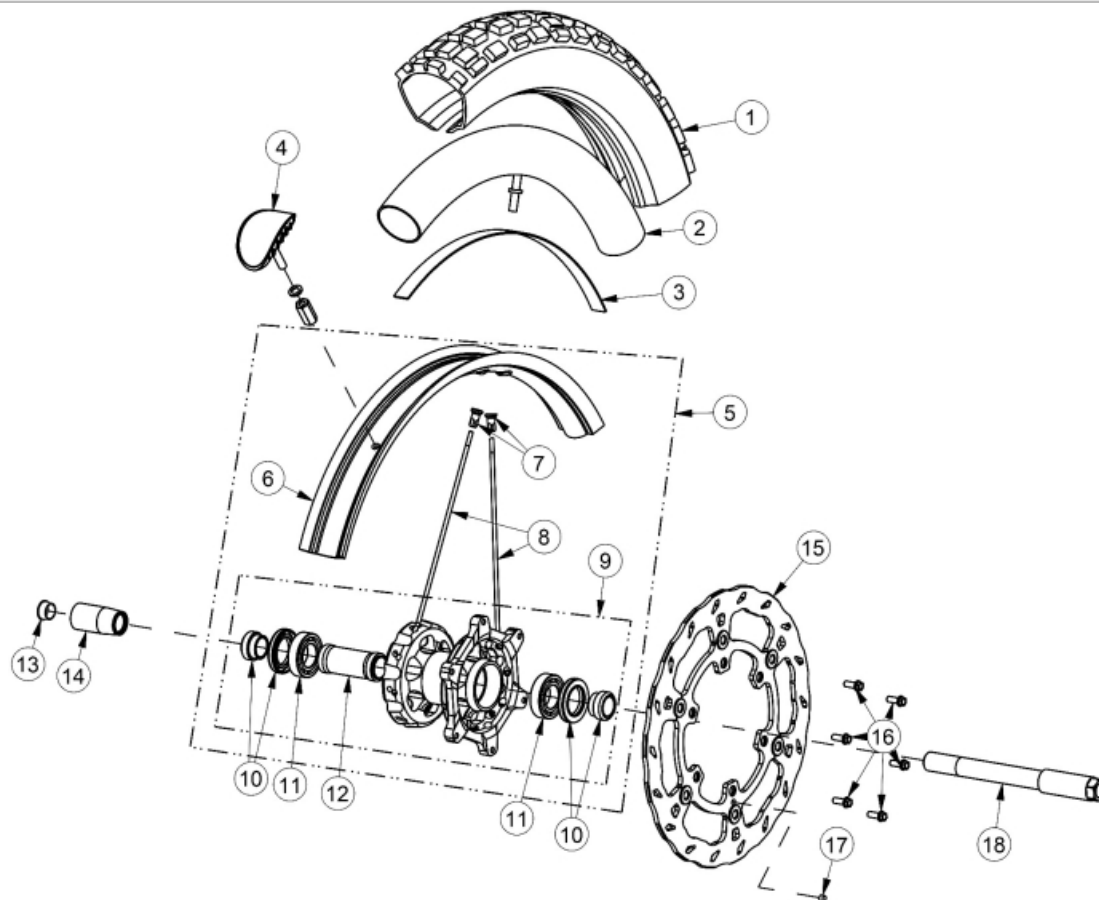 

|    |                                                                        |
|----|------------------------------------------------------------------------|
| 1  | AJP-TIRE 90/90-21 DESERT<br>00RFS01A0086 (u. 1)                        |
| 2  | AJP-FRONT TYRE TKC80 TWINDURO 90/90-21 54S PR7<br>00RFS01A0130 (u. 1)  |
| 3  | AJP-INNER TUBE EN<br>00RFS01A0005 (u. 1)                               |
| 4  | AJP-WHEEL RIM TAPE 21"<br>00RFS01A0023 (u. 1)                          |
| 5  | AJP-FRONT WHEEL BLACK RIM + RED HUB 1.60X21 PR7<br>00RFS01A0133 (u. 1) |
| 6  | AJP-FRONT RIM BLACK 1.60X21 PR7<br>00RFS01A0132 (u. 1)                 |
| 7  | AJP-SPOKE NUT INOX 4X7.5MM PR7<br>00RFS01A0137 (u. 36)                 |
| 8  | AJP-SPOKE INOX FRONT WHEEL 223X4MM PR7<br>00RFS01A0134 (u. 36)         |
| 9  | AJP-FRONT HUB PR7<br>00RFS01A0129 (u. 1)                               |
| 10 | AJP-SET OF SPACER AND SEALS FRONT HUB PR7<br>00RFC01A0022 (u. 1)       |
| 11 | AJP-BEARING 6005 2RS<br>RL00060052RS (u. 2)                            |
| 12 | AJP-INNER TUBE (72MM) FRONT HUB PR7<br>00RFS01A0093 (u. 1)             |
| 13 | AJP-PLASTIC PLUG. AXLE (20 MM) PR7<br>00RFS01A0139 (u. 1)              |

|    |                                                                |
|----|----------------------------------------------------------------|
| 14 | AJP-SPACER FRONT AXLE PR7<br>00RFS05A0060 (u. 1)               |
| 15 | AJP-FRONT DISC 300MM PR7 AFTER MAY 2019<br>00RFS01B0131 (u. 1) |
| 16 | AJP-SCREW DIN69FS2 6X16 PR7<br>PF069FS26016 (u. 6)             |
| 17 | AJP-FRONT DISC MAGNET<br>00RFS01A0042 (u. 1)                   |
| 18 | AJP-FRONT AXLE PR7 + 310 E 510CC<br>00RFS05A0059 (u. 1)        |

## REAR WHEEL

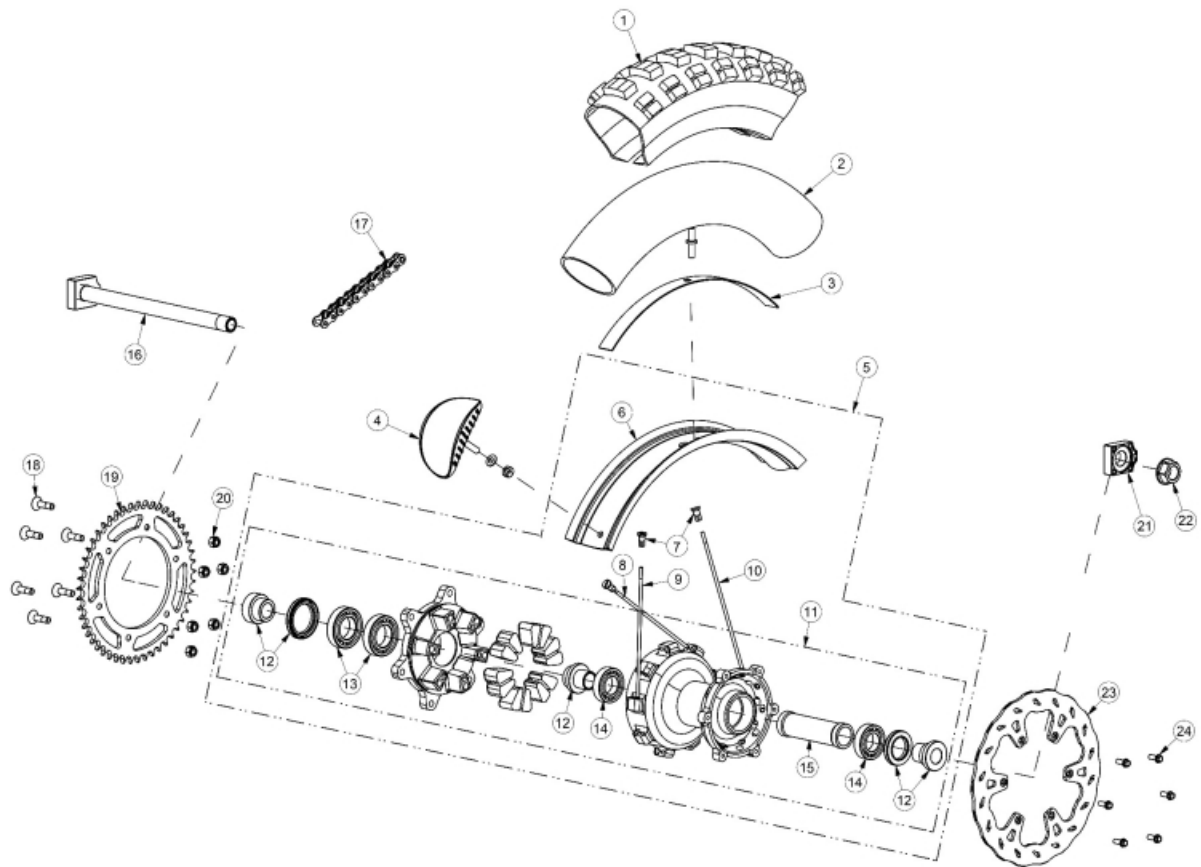 

AJP-TYRE MICHELIN 120/90-18  
00RTS01A0125 (u. 1)

1 AJP-REAR TIRE TKC80 TWINDURO 140/80-18 70R PR7  
00RTS01A0133 (u. 1)

2 AJP-INNER TUBE TR 120/90-18  
00RTS01A0005 (u. 1)

3 AJP-WHEEL RIM TAPE 1.60/2.00X 18/19  
00RTS01A0025 (u. 1)

4 AJP-RIM LOCK 2.50 REAR TIRE DESERT PR7  
00RTS01A0146 (u. 1)

5 AJP-REAR WHEEL BLACK RIM + RED HUB 2.50X18 PR7  
00RTS01A0138 (u. 1)

6 AJP-REAR RIM BLACK 2.50X18 PR7  
00RTS01A0136 (u. 1)

7 AJP-SPOKE NUT INOX 4X7.5MM PR7  
00RFS01A0137 (u. 36)

8 AJP-SPOKE INOX REAR WHEEL 194X4MM PR7  
00RTS01A0142 (u. 9)

9 AJP-SPOKE INOX REAR WHEEL 190X4MM PR7  
00RTS01A0143 (u. 9)

10 AJP-SPOKE INOX REAR WHEEL 206X4MM PR7  
00RTS01A0141 (u. 18)


11 AJP-REAR HUB PR7  
00RTS01A0132 (u. 1)

12 AJP-SET OF SPACER AND SEALS REAR HUB PR7  
00RTC01A0021 (u. 1)

13 AJP-BEARING 6006 2RS  
RL00060062RS (u. 2)

|    |                                                                   |
|----|-------------------------------------------------------------------|
| 14 | AJP-BEARING 6005 2RS<br>RL00060052RS (u. 2)                       |
| 15 | AJP-INNER TUBE (112MM) REAR HUB PR7<br>00RTS01A0157 (u. 1)        |
| 16 | AJP-REAR SHAFT 277MM PR7<br>00RTS07A0085 (u. 1)                   |
| 17 | AJP-CHAIN 520H - 112 ORMX GOLD<br>00RTS01A0145 (u. 1)             |
| 18 | AJP-VIS DIN79914 M8X30<br>PF7991008030 (u. 6)                     |
| 19 | AJP-REAR SPROCKET IN STEEL (CHAIN 520) PR7<br>00RTS01A0137 (u. 1) |
| 20 | AJP-NUT DIN985 M8<br>PC0985008000 (u. 6)                          |
| 21 | AJP-CHAIN ADJUSTER REAR WHEEL PR7<br>00RTS02A0043 (u. 1)          |
| 22 | AJP-NUT REAR WHEEL DIN74361-2 M20X1.5 PR7<br>00RTS01A0139 (u. 1)  |
| 23 | AJP-REAR DISC 240MM PR7 AFTER MAY 2019<br>00RTS01B0134 (u. 1)     |
| 24 | AJP-SCREW DIN69FS2 6X16 PR7<br>PF069FS26016 (u. 6)                |


## HANDLEBAR, CONTROLS AND SWITCHES

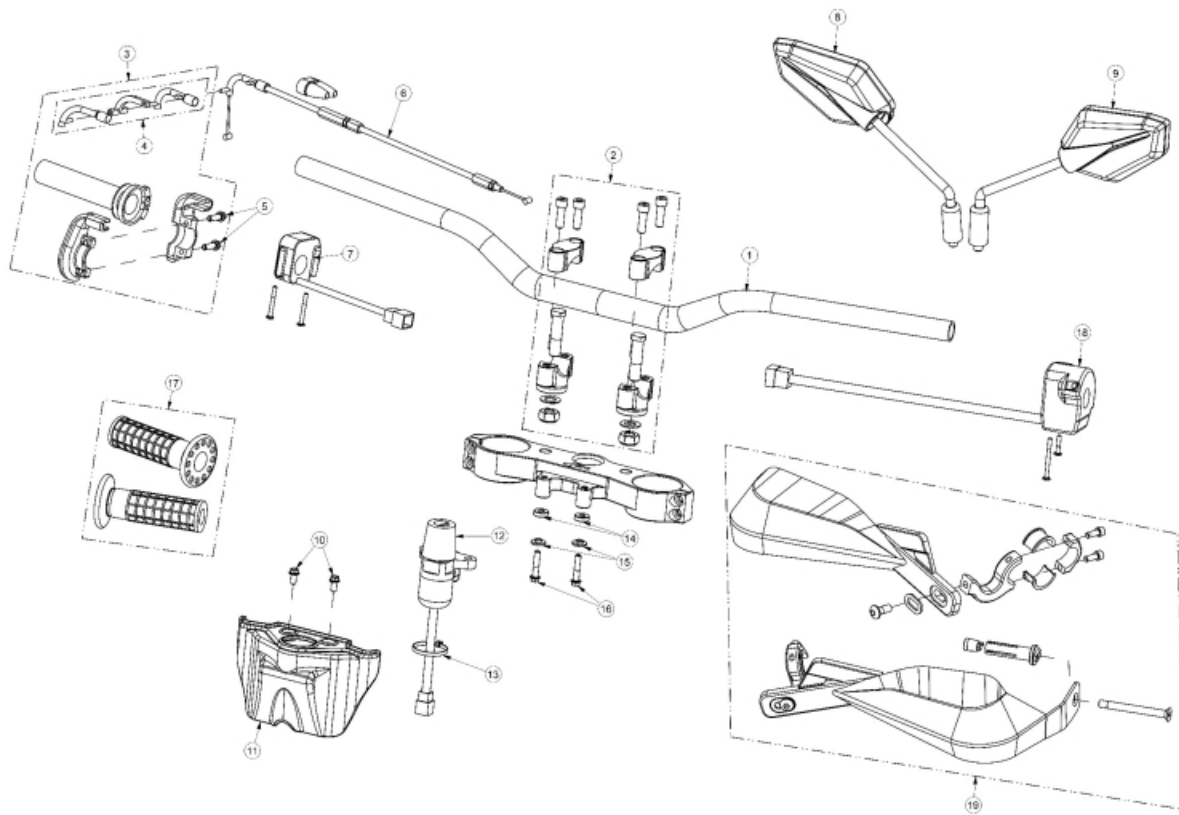 

|    |                                                                                 |
|----|---------------------------------------------------------------------------------|
| 1  | AJP-HANDLEBAR PR5 REIKON<br>00COS01A0034 (u. 1)                                 |
| 2  | AJP-BAR MOUNT PR5<br>00SFS01A0061 (u. 1)                                        |
| 3  | AJP-THROTTLE CONTROL ASSEMBLY PR7<br>00COC01A0045 (u. 1)                        |
| 4  | AJP-KIT OF OPENING/CLOSING CABLE BENDS PR7<br>00COS01A0047 (u. 1)               |
| 5  | AJP-SCREW DIN69FS2 6X20 PR7<br>PF069FS26020 (u. 2)                              |
| 6  | AJP-THROTTLE CABLE PR7<br>00COS01A0048 (u. 1)                                   |
| 7  | AJP-STARTING BUTTON<br>00COS01A0044 (u. 1)                                      |
| 8  | AJP-REARE VIEW MIRROR RH PR7 - MAY 2019<br>00COS01A0058 (u. 1)                  |
| 9  | AJP-REARE VIEW MIRROR LH PR7 - MAY 2019<br>00COS01A0057 (u. 1)                  |
| 10 | AJP-SCREW DIN69FS2 6X12 PR7<br>PF069FS26012 (u. 2)                              |
| 11 | AJP-SPEEDOMETER COVER<br>00ELS01A0071 (u. 1)                                    |
| 12 | AJP-KIT OF IGNITION SWITCH + BLOCK SEAT AND FUEL CAP PR7<br>00COS01A0050 (u. 1) |
| 13 | AJP-PLASTIC CLAMP 26 MX<br>00DES01A0051 (u. 1)                                  |
| 14 | AJP-SPACER (16X6X5) FOR IGNITION SWITCH PR7<br>00COS01A0054 (u. 2)              |
| 15 | AJP-SPACER 16X4.4X6<br>00COS07A0015 (u. 2)                                      |


|    |                                                         |
|----|---------------------------------------------------------|
| 16 | AJP-SCREW DIN6921 M6X30<br>PF6921006030 (u. 2)          |
| 18 | AJP-LIGHTS SWITCH PR7<br>00ELC01A0057 (u. 1)            |
| 19 | AJP-HANDGUARDS SPECIAL WHITE PR7<br>00PLS01A0116 (u. 1) |

## HYDRAULIC CLUTCH CONTROL

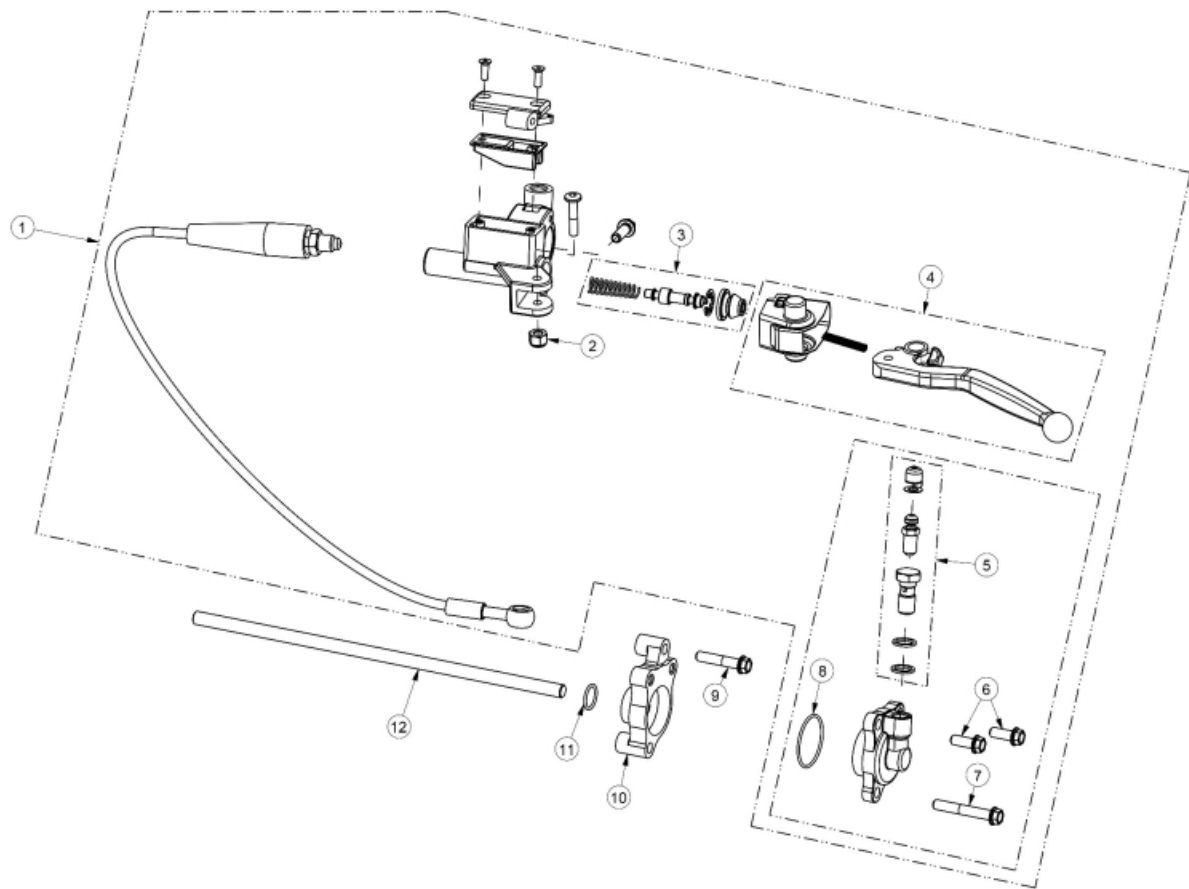 


|    |                                                                                     |
|----|-------------------------------------------------------------------------------------|
| 1  | CLUTCH CONTROL SYSTEM PR7 + 310 + 510CC - SWM/AJP<br>F000A00036 (u. 1)              |
| 2  | AJP-NUT DIN985 M5<br>PC0985050000 (u. 1)                                            |
| 3  | KIT PISTON PUMP CLUTCH (9.5MM) PR7 AND SPR 510 + 310 - SWM/AJP<br>F000A00797 (u. 1) |
| 4  | CLUTCH LEVER KIT PR7 - SWM/AJP<br>F000A00800 (u. 1)                                 |
| 5  | RACORD KIT PR7 + SPR310/510CC - SWM/AJP<br>F000A00799 (u. 1)                        |
| 6  | AJP-SCREW DIN69FS2 6X16 PR7<br>PF069FS26016 (u. 2)                                  |
| 7  | AJP-SCREW DIN69FS2 6X40 PR7<br>PF069FS26040 (u. 1)                                  |
| 8  | AJP-O-RING (30X1.5) PR7<br>00MTS01A0228 (u. 1)                                      |
| 9  | AJP-SCREW DIN69FS2 6X30 PR7<br>PF069FS26030 (u. 1)                                  |
| 10 | SWM-HYDRAULIC CLUTCH SLAVE SD<br>80A0H0994 (u. 1)                                   |
| 11 | O-RING 13X1.8 PR7 - SWM/AJP<br>8B0023109 (u. 1)                                     |
| 12 | ROD. CLUTCH PUSH PR7 - SWM/AJP<br>8000H5375 (u. 1)                                  |

 ELECTRIC HARNESS

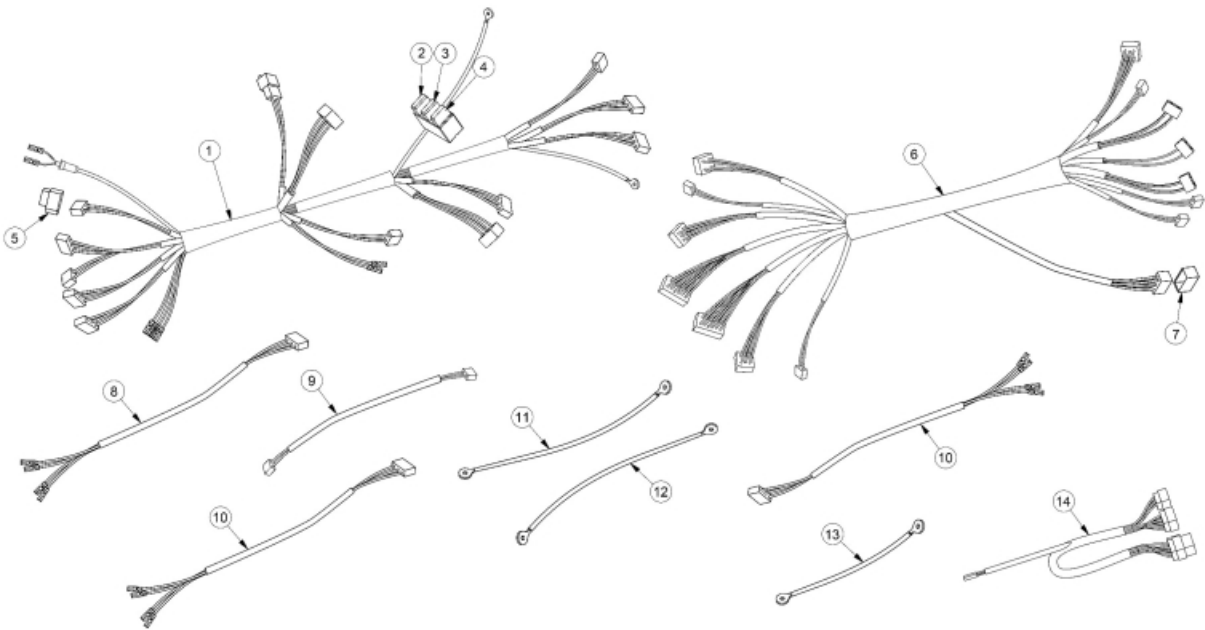


|    |                                                                   |
|----|-------------------------------------------------------------------|
| 1  | AJP-ELECTRICAL SYSTEM HARNESS PR7<br>00ELS01A0073 (u. 1)          |
| 2  | AJP-FUSE<br>00ELS01A0017 (u. 1)                                   |
| 3  | AJP-FUSE 15A<br>00ELS01A0047 (u. 1)                               |
| 4  | AJP-FUSE. 10A (RED) PR7<br>00ELS01A0109 (u. 1)                    |
| 5  | AJP-DIOD. RADIATOR FAN PR5/PR7<br>00ELS01A0110 (u. 1)             |
| 6  | AJP-INJECTION SYSTEM HARNESS PR7<br>00ELS01A0074 (u. 1)           |
| 8  | AJP-HEADLIGHT INTERNAL CABLE PR7<br>00ELS01A0079 (u. 1)           |
| 9  | AJP-DASHBORD HEADLIGHT CABLE PR7<br>00ELS01A0078 (u. 1)           |
| 10 | AJP-INDICATORS CABLES PR7<br>00ELS01A0080 (u. 2)                  |
| 11 | AJP-ENGINE GROUND CABLE PR7<br>00ELS01A0076 (u. 1)                |
| 12 | AJP-CABLE. STARTER RELAY-STARTER MOTOR PR7<br>00ELS01A0081 (u. 1) |
| 13 | AJP-STARTER RELAY BATTERRYCABLE PR7<br>00ELS01A0077 (u. 1)        |
| 14 | AJP-HARNESS. INSTRUMENT PANEL DB-01 PR7<br>00ELS01A0089 (u. 1)    |

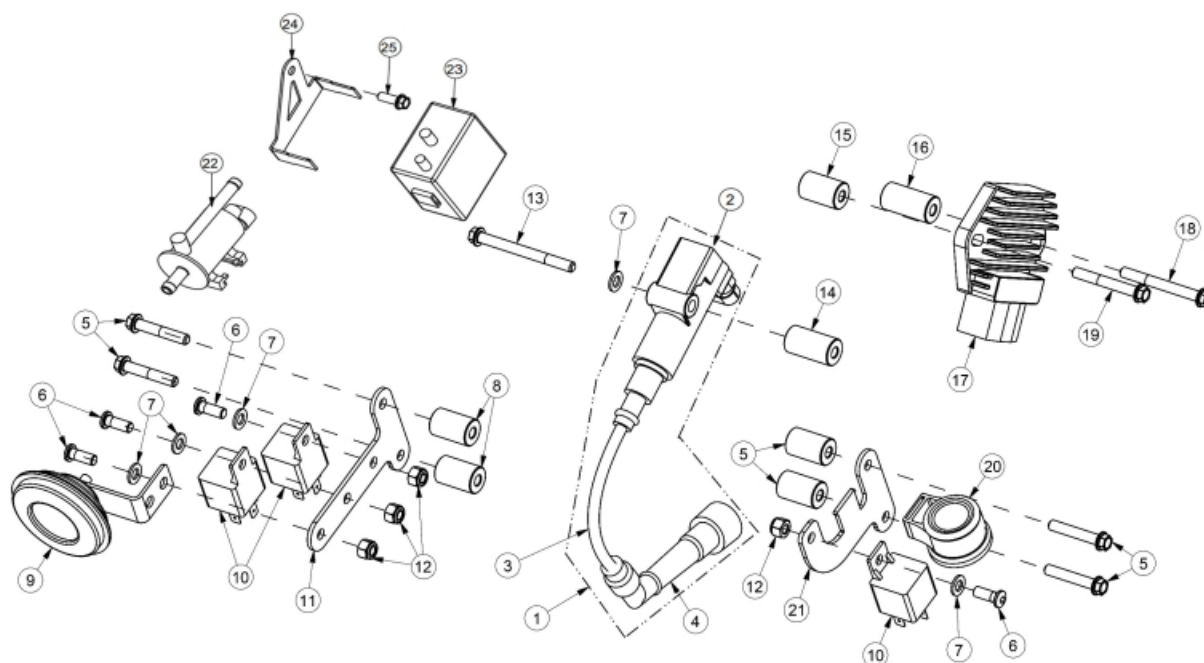 **IGNITION COIL, VOLTAGE REGULATOR, RELAYS AND HORN (ECU DELPHI)**

 
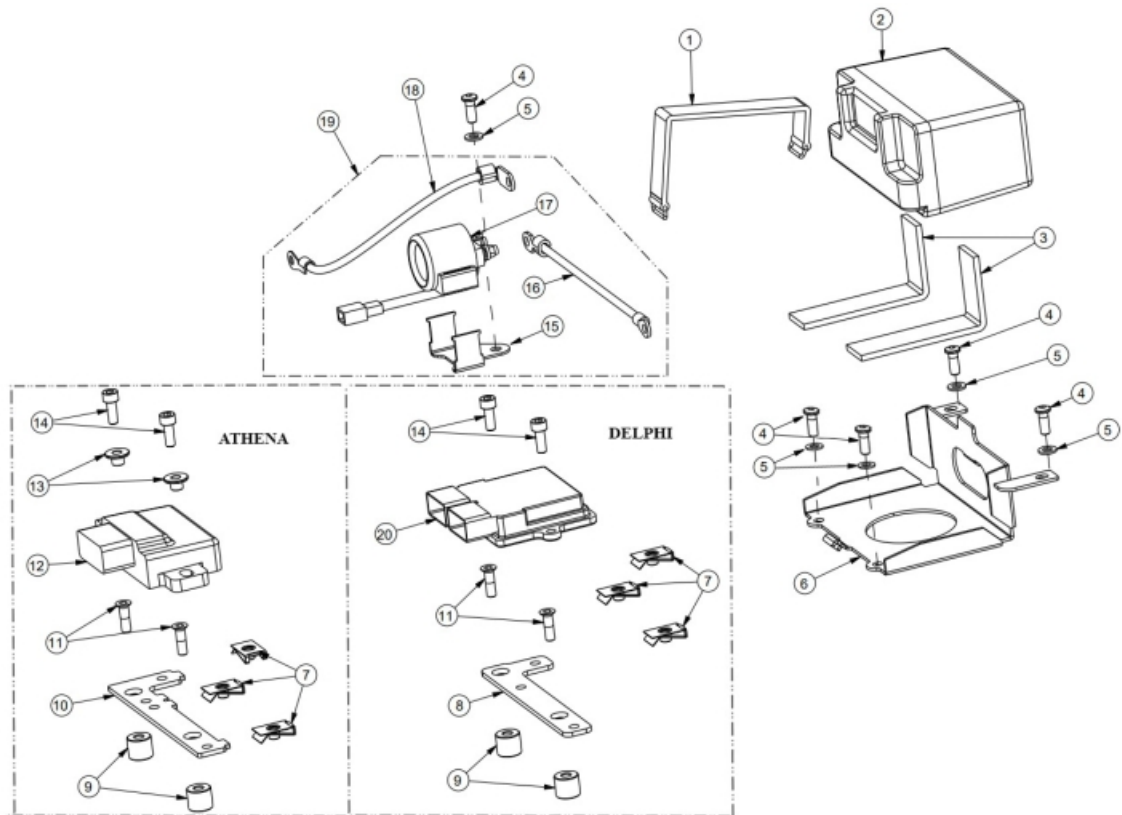 
|    |                                                               |
|----|---------------------------------------------------------------|
| 1  | AJP-IGNITION COIL PR7<br>00ELS01B0043 (u. 1)                  |
| 2  | AJP-IGNITION COIL<br>00ELS01A0043 (u. 1)                      |
| 3  | AJP-CABLE. IGNITION COIL (7X200) PR7<br>00ELS01A0111 (u. 1)   |
| 4  | CAP. SPARK PLUG PR7 - SWM/AJP<br>8000A6740 (u. 1)             |
| 5  | AJP-SCREW DIN69FS2 6X35 PR7<br>PF069FS26035 (u. 4)            |
| 7  | AJP-WASHER DIN125A M6<br>AN125A06INOX (u. 5)                  |
| 8  | AJP-SPACER SUPPORT RELAYS PR7<br>00ELS01A0097 (u. 4)          |
| 9  | AJP-HORN 12V CC<br>00ELS01A0005 (u. 1)                        |
| 10 | AJP-INJECTION RELAY<br>00ELS01A0045 (u. 3)                    |
| 11 | AJP-SUPPORT RELAY RH PR7<br>00ELS01A0093 (u. 1)               |
| 12 | AJP-NUT DIN985 M6<br>PC0985006000 (u. 4)                      |
| 13 | AJP-SCREW DIN69FS2 6X70 PR7<br>PF069FS26070 (u. 1)            |
| 14 | AJP-SPACER IGNITION COIL (30X6X16) PR7<br>00ELS01A0008 (u. 1) |
| 15 | AJP-SPACER SUPPORT RELAYS PR7<br>00ELS01A0097 (u. 1)          |
| 17 | RECTIFIER PR7 - SWM/AJP<br>8000A6768 (u. 1)                   |
| 18 | AJP-SCREW DIN69FS2 6X50 PR7<br>PF069FS26050 (u. 1)            |
| 19 | AJP-SCREW DIN69FS2 6X40 PR7<br>PF069FS26040 (u. 1)            |

|    |                                                                                   |
|----|-----------------------------------------------------------------------------------|
| 20 | AJP-TURN LIGHTS RELAY LEDS AFTER MAY 2019<br>00ELS01A0112 (u. 1)                  |
| 21 | AJP-SUPPORT INJECTION RELAY LH PR7<br>00ELS01A0092 (u. 1)                         |
| 22 | AJP-SOLENOID VALVE CARBON CANISTER SPR + PR7 AFTER 2/26/21<br>00DES01A0128 (u. 1) |
| 23 | AJP-CARBON CANISTER SPR + PR7 AFTER 26/02/2021<br>00DES01A0127 (u. 1)             |
| 25 | AJP-SCREW DIN69FS2 6X12 PR7<br>PF069FS26012 (u. 1)                                |

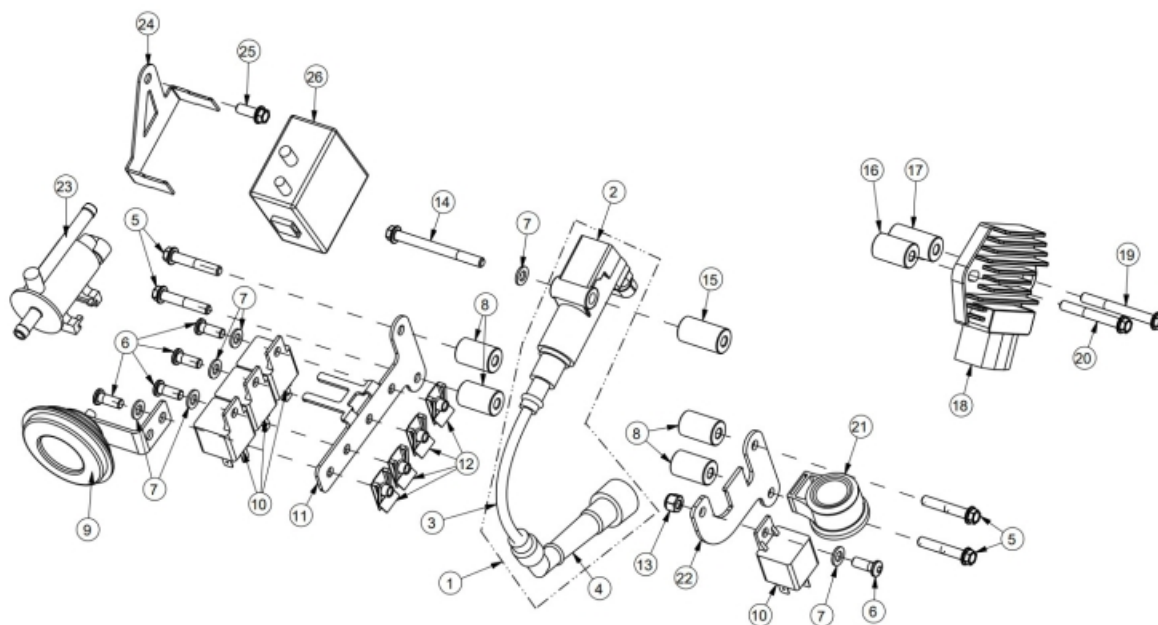**IGNITION COIL, VOLTAGE REGULATOR, RELAYS AND HORN (ECU ATHENA)**


|    |                                                                  |
|----|------------------------------------------------------------------|
| 1  | AJP-IGNITION COIL PR7<br>00ELS01B0043 (u. 1)                     |
| 2  | AJP-IGNITION COIL<br>00ELS01A0043 (u. 1)                         |
| 3  | AJP-CABLE. IGNITION COIL (7X200) PR7<br>00ELS01A0111 (u. 1)      |
| 4  | CAP. SPARK PLUG PR7 - SWM/AJP<br>8000A6740 (u. 1)                |
| 5  | AJP-SCREW DIN69FS2 6X35 PR7<br>PF069FS26035 (u. 4)               |
| 7  | AJP-WASHER DIN125A M6<br>AN125A06INOX (u. 6)                     |
| 8  | AJP-SPACER SUPPORT RELAYS PR7<br>00ELS01A0097 (u. 4)             |
| 9  | AJP-HORN 12V CC<br>00ELS01A0005 (u. 1)                           |
| 10 | AJP-INJECTION RELAY<br>00ELS01A0045 (u. 4)                       |
| 12 | AJP-SPRING FOR FAN PR5 2013<br>00MTS01A0123 (u. 4)               |
| 13 | AJP-NUT DIN985 M6<br>PC0985006000 (u. 4)                         |
| 14 | AJP-SCREW DIN69FS2 6X70 PR7<br>PF069FS26070 (u. 1)               |
| 15 | AJP-SPACER IGNITION COIL (30X6X16) PR7<br>00ELS01A0008 (u. 1)    |
| 16 | AJP-SPACER SUPPORT RELAYS PR7<br>00ELS01A0097 (u. 1)             |
| 18 | RECTIFIER PR7 - SWM/AJP<br>8000A6768 (u. 1)                      |
| 19 | AJP-SCREW DIN69FS2 6X50 PR7<br>PF069FS26050 (u. 1)               |
| 20 | AJP-SCREW DIN69FS2 6X40 PR7<br>PF069FS26040 (u. 1)               |
| 21 | AJP-TURN LIGHTS RELAY LEDS AFTER MAY 2019<br>00ELS01A0112 (u. 1) |

 
|    |                                                                                   |
|----|-----------------------------------------------------------------------------------|
| 22 | AJP-SUPPORT INJECTION RELAY LH PR7<br>00ELS01A0092 (u. 1)                         |
| 23 | AJP-SOLENOID VALVE CARBON CANISTER SPR + PR7 AFTER 2/26/21<br>00DES01A0128 (u. 1) |
| 25 | AJP-SCREW DIN69FS2 6X12 PR7<br>PF069FS26012 (u. 1)                                |
| 26 | AJP-CARBON CANISTER SPR + PR7 AFTER 26/02/2021<br>00DES01A0127 (u. 1)             |

**BATTERY, ECU AND STARTER RELAY**


|    |                                                                    |
|----|--------------------------------------------------------------------|
| 1  | AJP-BAND<br>00ELS01A0004 (u. 1)                                    |
| 2  | AJP-BATTERY LFX14A2-BS12 SHORAI PR7<br>00ELS01A0086 (u. 1)         |
| 4  | AJP-SCREW DIN7380 M6X12<br>PF73806012INOX (u. 5)                   |
| 5  | AJP-WASHER DIN125A M6<br>AN125A06INOX (u. 4)                       |
| 6  | AJP-BATTERY HOLDER PR7 2020<br>00ELS04B0042 (u. 1)                 |
| 7  | AJP-SPRING FOR FAN PR5 2013<br>00MTS01A0123 (u. 3)                 |
| 8  | AJP-SUPPORT ECU PR7<br>00MTS01A0205 (u. 1)                         |
| 9  | AJP-SPACER FOR SUPPORT ECU 16X6X14 PR7<br>00ELS01A0031 (u. 2)      |
| 10 | AJP-SUPPORT ECU PR7 2021(ATHENA)<br>00MTS01B0205 (u. 1)            |
| 11 | AJP-SCREW DIN7991 M6X25MM<br>PF7991006025 (u. 2)                   |
| 12 | AJP-ECU ATHENA SINCE JUNE 2020<br>00MTS01M0038 (u. 1)              |
| 13 | AJP-ECU SPACER SPR 250 + 310 + 510 2020<br>00MTS01A0306 (u. 2)     |
| 14 | AJP-SCREW DIN69FS2 6X16 PR7<br>PF069FS26016 (u. 2)                 |
| 15 | AJP-SUPPORT FOR STARTER RELAY PR3/PR4 E PR5<br>00ELS07A0046 (u. 1) |
| 16 | AJP-STARTER RELAY BATTERYCABLE PR7<br>00ELS01A0077 (u. 1)          |


|    |                                                                   |
|----|-------------------------------------------------------------------|
| 17 | AJP-STARTER RELAY<br>93A283100000 (u. 1)                          |
| 18 | AJP-CABLE. STARTER RELAY-STARTER MOTOR PR7<br>00ELS01A0081 (u. 1) |
| 20 | AJP-ECU<br>00MTS01A0038 (u. 1)                                    |

## HEADLIGHT

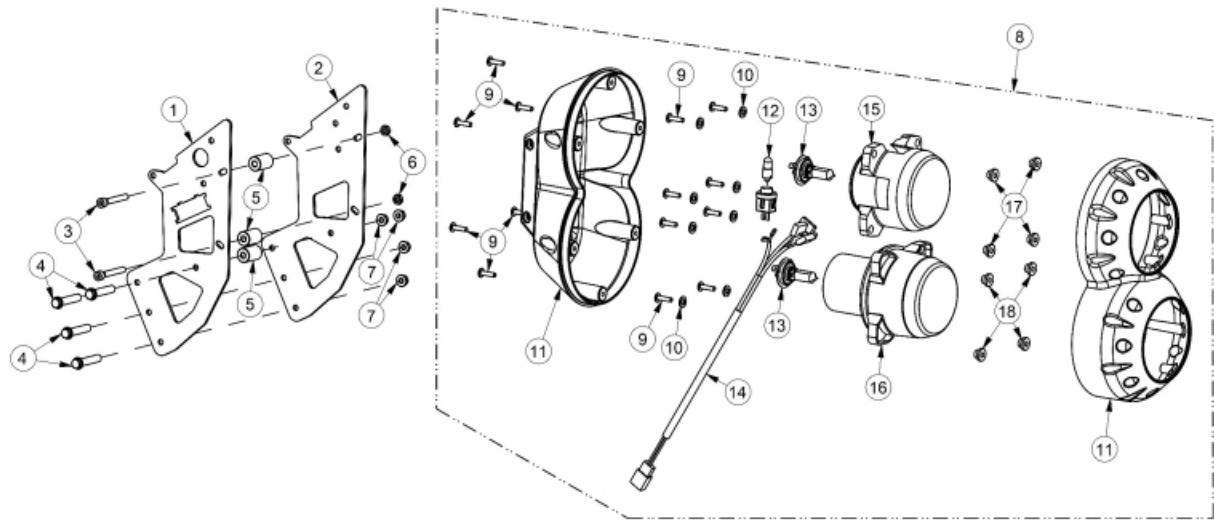


|    |                                                                              |
|----|------------------------------------------------------------------------------|
| 1  | AJP-SUPPORT ROAD BOOK RH PR7<br>00ELS01A0095 (u. 1)                          |
| 2  | AJP-SUPPORT ROAD BOOK LH PR7<br>00ELS01A0094 (u. 1)                          |
| 3  | AJP-SCREW DIN912 M6X50<br>PF0912006050 (u. 2)                                |
| 4  | AJP-SCREW DIN6921 M6X40<br>PF6921006040 (u. 4)                               |
| 5  | AJP-SPACER (16X6X25.5) PR7<br>00ELS01A0098 (u. 3)                            |
| 6  | AJP-NUT DIN934 M6<br>PC0934006000 (u. 2)                                     |
| 7  | AJP-NUT DIN 6923 M6 FOR FUEL PUMP AFTER 10 APRIL 2015<br>PC6923006000 (u. 4) |
| 8  | AJP-HEADLIGHT ASSY PR7<br>00ELS01A0107 (u. 1)                                |
| 10 | AJP-WASHER (4.5X13.7X0.8) PR7<br>AN38065040001 (u. 8)                        |
| 11 | AJP-SUPPORTT OF LIGHTS PR7<br>00PLS01A0108 (u. 1)                            |
| 12 | AJP-LAMP 12V 5W<br>00ELS01A0029 (u. 1)                                       |
| 13 | AJP-LAMP H7 12V 55W PR7<br>00ELS01A0009 (u. 2)                               |
| 14 | AJP-HEADLIGHT INTERNAL CABLE PR7<br>00ELS01A0079 (u. 1)                      |
| 15 | AJP-MINIMUM AND MAXIMUM HEADLIGHT PR7<br>00ELS01A0085 (u. 1)                 |
| 16 | AJP-MEDIUM HEADLIGHT PR7<br>00ELS01A0084 (u. 1)                              |
| 17 | AJP-SAPACER FOR MEDIUM HEADLIGHT PR7<br>00ELS01A0103 (u. 4)                  |
| 18 | AJP-SAPACER FOR MAXIMUM AND MINIMUM HEADLIGHT PR7<br>00ELS01A0102 (u. 4)     |

 INSTRUMENT PANEL AND DIGITAL SPEEDOMETER SENSOR

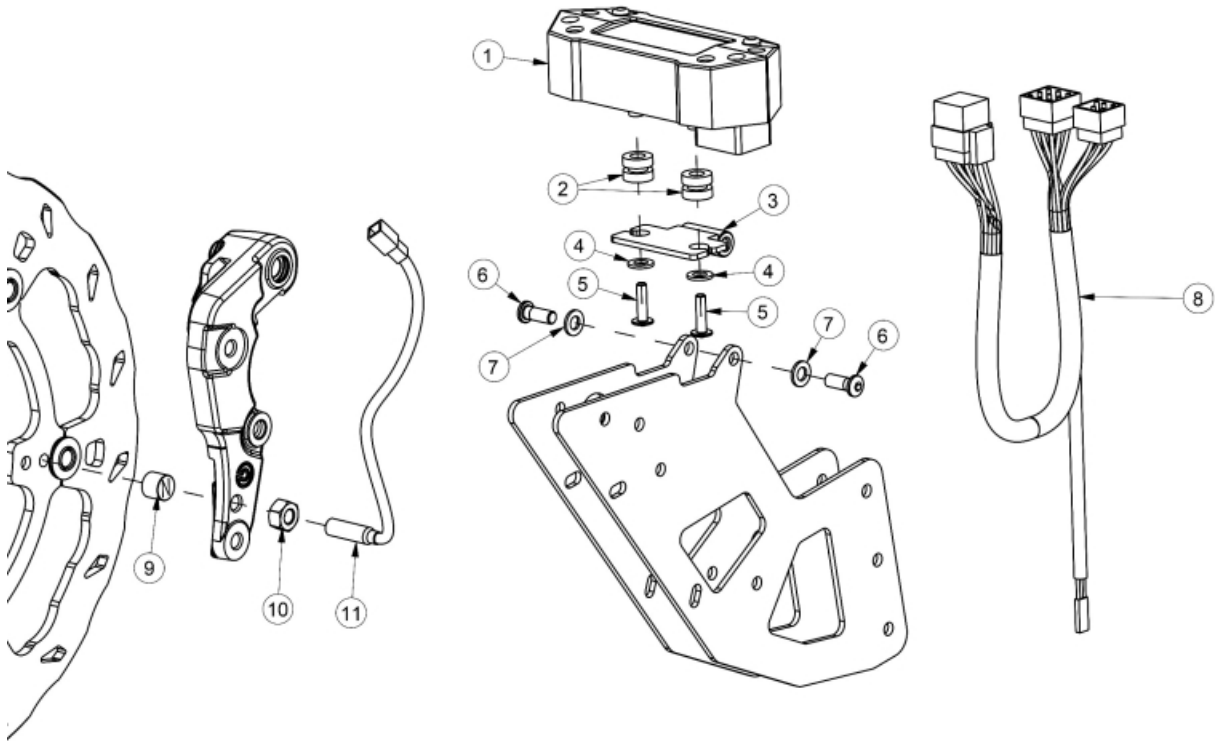


|    |                                                                                 |
|----|---------------------------------------------------------------------------------|
| 1  | AJP-SPEEDOMETER DB-01 PR7<br>00ELS01A0087 (u. 1)                                |
| 2  | AJP-RUBBER MOUNTING PR7<br>00COS01A0056 (u. 2)                                  |
| 3  | AJP-SUPPORT SPEEDOMETER PR7<br>00COS01A0051 (u. 1)                              |
| 6  | AJP-SCREW DIN7380 M6X12<br>PF73806012INOX (u. 2)                                |
| 7  | AJP-WASHER DIN125A M6<br>AN125A06INOX (u. 2)                                    |
| 8  | AJP-HARNESS. INSTRUMENT PANEL DB-01 PR7<br>00ELS01A0089 (u. 1)                  |
| 9  | AJP-FRONT DISC MAGNET<br>00RFS01A0042 (u. 1)                                    |
| 10 | AJP-NUT DIN934 M8<br>PC093408INOX (u. 1)                                        |
| 11 | AJP-SPEEDOMETER SENSOR BREMBOPR7 AFTER MAY (1400MM) 2019<br>00ELS01B0088 (u. 1) |

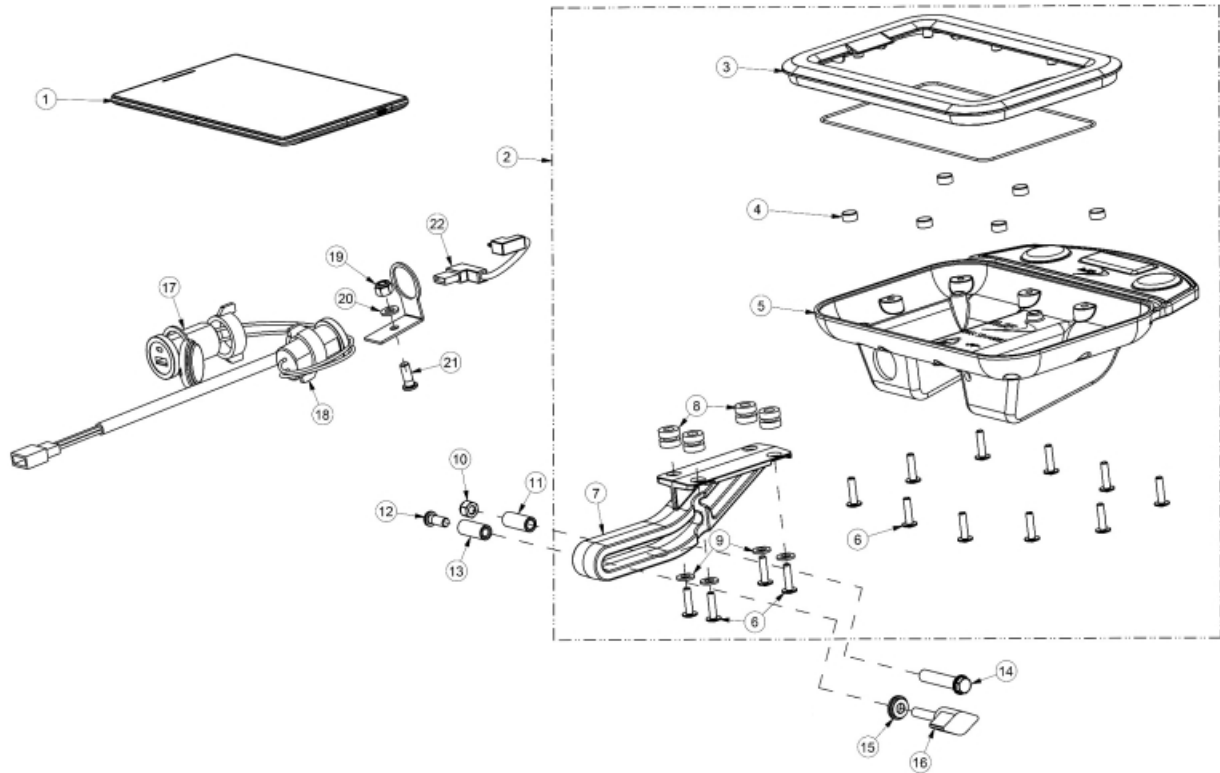 **TABLET (MICRO USB)**

 
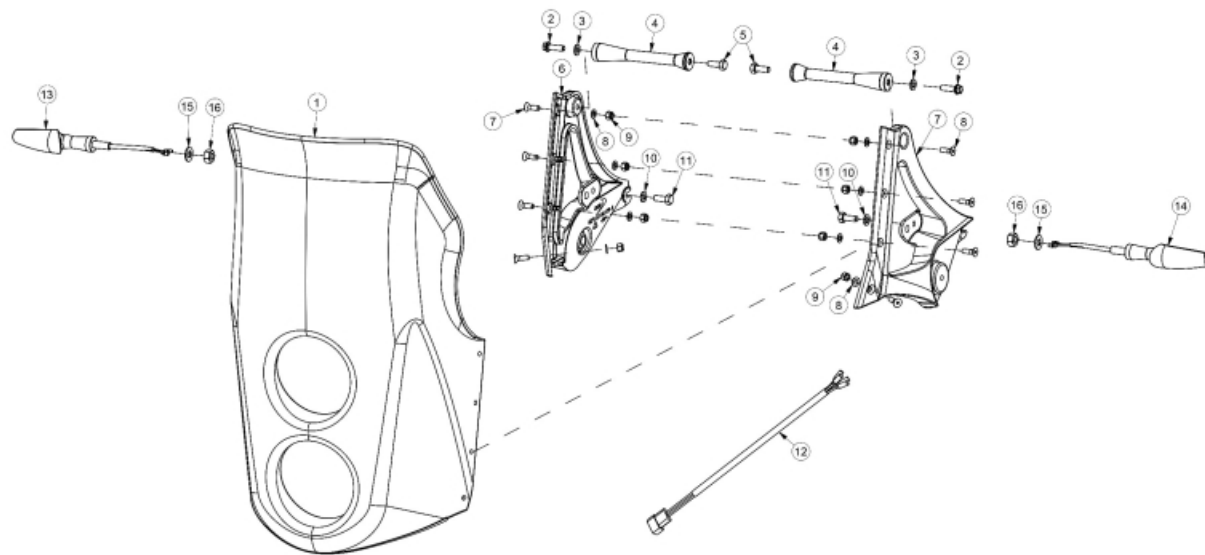 
|    |                                                                              |
|----|------------------------------------------------------------------------------|
| 1  | AJP-TABLET PR7<br>00ELS01A0083 (u. 1)                                        |
| 2  | AJP-KIT PLASTIC BASE TABLET PR7<br>00PLS01A0120 (u. 1)                       |
| 3  | AJP-COVER. TABLET CASE PR7<br>00PLS01A0123 (u. 1)                            |
| 4  | AJP-SPACER TABLET BOX PR7<br>00ELS01A0104 (u. 6)                             |
| 5  | AJP-BASE. TABLET CASE<br>00PLS01A0124 (u. 1)                                 |
| 6  | AJP-SCREW 10.9 KN6031 4X12 PR7<br>PFKN60314012 (u. 14)                       |
| 7  | AJP-SUPPORT FOR TABLET BOX PR7<br>00PLS01A0119 (u. 1)                        |
| 8  | AJP-RUBBER MOUNTING PR7<br>00COS01A0056 (u. 4)                               |
| 9  | AJP-WASHER (4.5X13.7X0.8) PR7<br>AN38065040001 (u. 4)                        |
| 10 | AJP-NUT DIN 6923 M6 FOR FUEL PUMP AFTER 10 APRIL 2015<br>PC6923006000 (u. 1) |
| 11 | AJP-SPACER GUIDE TABLET SUPPORT(25X6) PR7<br>00ELS01A0099 (u. 1)             |
| 12 | AJP-SCREW DIN69FS2 6X12 PR7<br>PF069FS26012 (u. 1)                           |
| 13 | AJP-SPACER FIXATION TABLET SUPPORT(25X6) PR7<br>00ELS01A0100 (u. 1)          |
| 14 | AJP-SCREW DIN69FS2 6X40 PR7<br>PF069FS26040 (u. 1)                           |
| 15 | AJP-SPACER 16X4.4X6<br>00COS07A0015 (u. 1)                                   |
| 16 | AJP-STUD REF 2007 M6X13 PR7<br>00COS01A0053 (u. 1)                           |

|    |                                                                   |
|----|-------------------------------------------------------------------|
| 17 | AJP-MICRO USB CABLE PR7<br>00ELS01A0082 (u. 1)                    |
| 18 | AJP-LIGHTER CHARGER FOR TABLET SAMSUNG PR7<br>00ELS01A0108 (u. 1) |
| 20 | AJP-WASHER DIN125A M6<br>AN125A06INOX (u. 1)                      |
| 21 | AJP-SCREW DIN7380 M6X12<br>PF73806012INOX (u. 1)                  |
| 22 | AJP-CABLE USB FOR TABLET PR7<br>00ELS01A0072 (u. 1)               |

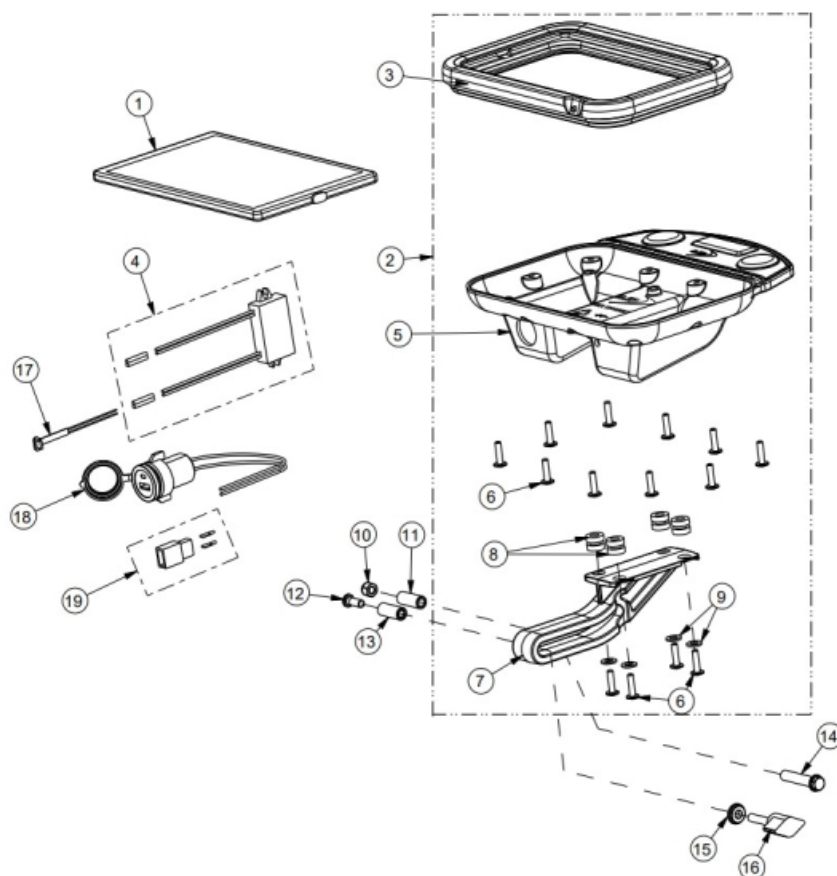**TABLET (USB C)**


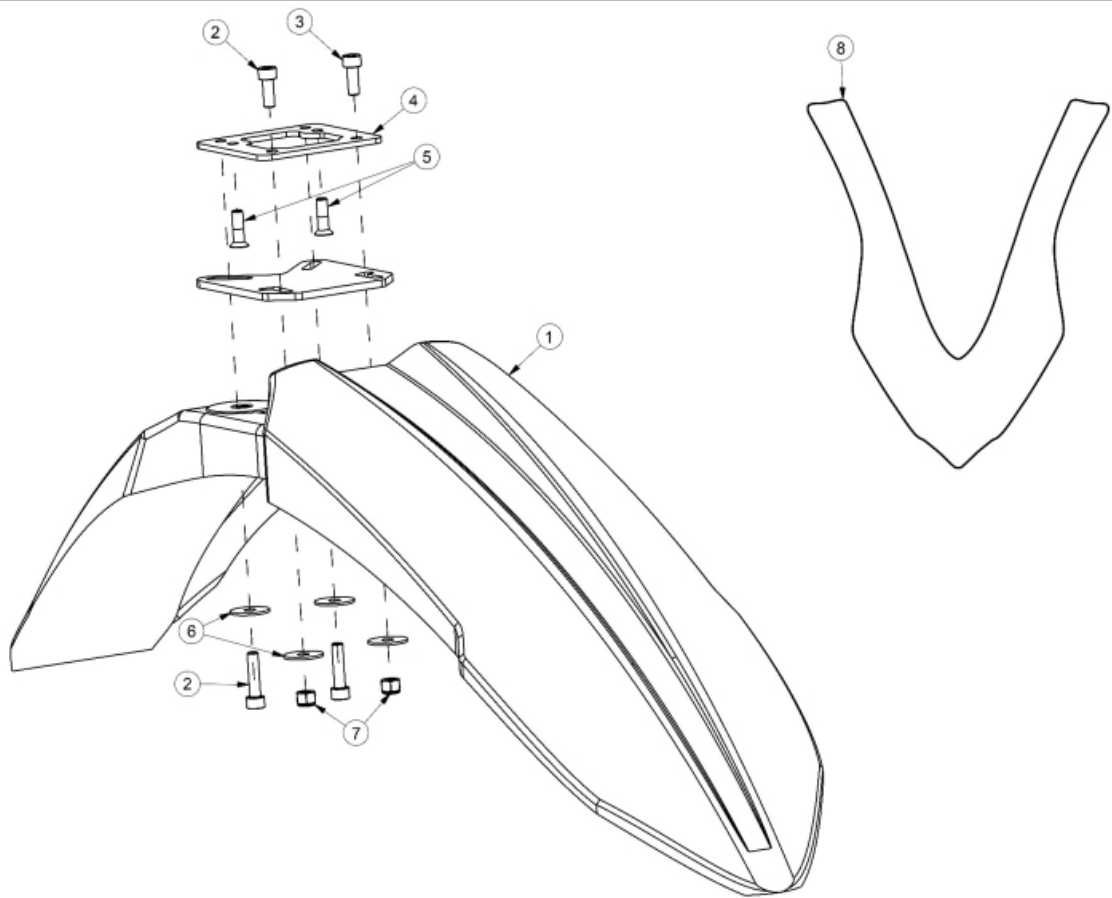 
|    |                                                                              |
|----|------------------------------------------------------------------------------|
| 1  | AJP-TABLET PR7 SAMSUNG T220<br>00ELS01A0134 (u. 1)                           |
| 2  | AJP-KIT PLASTIC BASE TABLET PR7<br>00PLS01A0120 (u. 1)                       |
| 3  | AJP-COVER. TABLET CASE SINCE 30/11/2021<br>00PLS01A047 (u. 1)                |
| 4  | AJP-KIT CABLE MICRO USB TABLET AFTER FRAME 60301<br>00ELS01A0131 (u. 1)      |
| 5  | AJP-BASE. TABLET CASE<br>00PLS01A0124 (u. 1)                                 |
| 6  | AJP-SCREW 10.9 KN6031 4X12 PR7<br>PFKN60314012 (u. 14)                       |
| 7  | AJP-SUPPORT FOR TABLET BOX PR7<br>00PLS01A0119 (u. 1)                        |
| 8  | AJP-RUBBER MOUNTING PR7<br>00COS01A0056 (u. 4)                               |
| 9  | AJP-WASHER (4.5X13.7X0.8) PR7<br>AN38065040001 (u. 4)                        |
| 10 | AJP-NUT DIN 6923 M6 FOR FUEL PUMP AFTER 10 APRIL 2015<br>PC6923006000 (u. 1) |
| 11 | AJP-SPACER GUIDE TABLET SUPPORT(25X6) PR7<br>00ELS01A0099 (u. 1)             |
| 12 | AJP-SCREW DIN69FS2 6X12 PR7<br>PF069FS26012 (u. 1)                           |
| 13 | AJP-SPACER FIXATION TABLET SUPPORT(25X6) PR7<br>00ELS01A0100 (u. 1)          |
| 14 | AJP-SCREW DIN69FS2 6X40 PR7<br>PF069FS26040 (u. 1)                           |

|    |                                                    |
|----|----------------------------------------------------|
| 15 | AJP-SPACER 16X4.4X6<br>00COS07A0015 (u. 1)         |
| 16 | AJP-STUD REF 2007 M6X13 PR7<br>00COS01A0053 (u. 1) |
| 17 | AJP-USB CABLE ( C ) PR72021<br>00ELS01A0135 (u. 1) |
| 18 | AJP-MICRO USB CABLE PR7<br>00ELS01A0082 (u. 1)     |


**WINDSHIELD**

 
|    |                                                                      |
|----|----------------------------------------------------------------------|
| 1  | AJP-GLASS/CARENAGE FOR HEADLIGHTS PR7<br>00PLS01A0110 (u. 1)         |
| 2  | AJP-SCREW DIN69FS2 6X16 PR7<br>PF069FS26016 (u. 2)                   |
| 3  | AJP-WASHER DIN125A M6<br>AN125A006000 (u. 2)                         |
| 4  | AJP-ROD FOR GLASS/CARENAGE FOR HEADLIGHTS PR7<br>00PLS01A0111 (u. 2) |
| 5  | AJP-SCREW DIN6921 M6X16<br>PF6921006016 (u. 2)                       |
| 6  | AJP-SUPPORT PR7<br>00PLS01A0109 (u. 2)                               |
| 7  | AJP-SCREW DIN7991 M5X16 INOX<br>PF799105016INOX (u. 8)               |
| 8  | AJP-WASHER DIN125A M6<br>AN125A005000 (u. 8)                         |
| 11 | AJP-SCREW DIN933 M6X12<br>PF0933006012 (u. 2)                        |
| 12 | AJP-INDICATORS CABLES PR7<br>00ELS01A0080 (u. 1)                     |
| 13 | AJP-TURN LAMP ASSEMBLY RH PR7 AFTER MAY 2019<br>00ELC01A0012 (u. 1)  |
| 14 | AJP-TURN LAMP ASSEMBLY LH PR7 AFTER MAY 2019<br>00ELC01A0013 (u. 1)  |
| 15 | AJP-WASHER 5/16<br>00MTS01A0072 (u. 2)                               |
| 16 | AJP-NUT DIN934 M8<br>PC0934008000 (u. 2)                             |

FRONT FENDER




|   |                                                                             |
|---|-----------------------------------------------------------------------------|
| - | (u. 0)                                                                      |
| 1 | AJP-FRONT FENDER SPECIAL WHITE SM PR7<br>00PLS01A0114 (u. 1)                |
| 2 | AJP-SCREW DIN912 M6X20<br>PF0912006020 (u. 3)                               |
| 3 | AJP-SCREW DIN912 M6X25<br>PF0912006025 (u. 1)                               |
| 4 | AJP-SUPPORT FRONT FENDER PR4 EXTREME E PR5 SM<br>00PLS01A0097 (u. 1)        |
| 5 | AJP-SCREW DIN7991 M6X16<br>PF7991006016 (u. 2)                              |
| 6 | AJP-WASHER DIN9021 M6<br>AN9021006000 (u. 4)                                |
| 7 | AJP-NUT DIN985 M6<br>PC0985006000 (u. 4)                                    |
| 8 | AJP-STICKER FRONT FENDER PR7 2023<br>00BAS01A0222 (u. 1)                    |
|   | AJP-STICKER FOR FRONT FENDER AFTER MAY 2019 PR7<br>00BAS01A0201 (u. 1)      |
|   | AJP-STICKER FOR FRONT FENDER AFTER DECEMBER 2020 PR7<br>00BAS01A0214 (u. 1) |

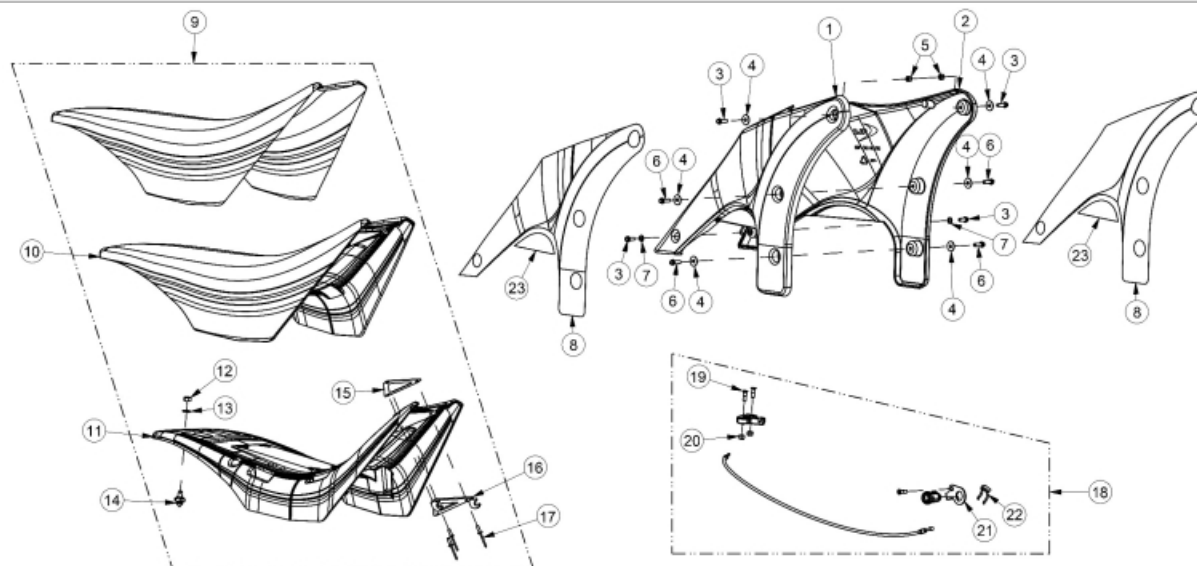**SIDE FENDERS, SEAT AND SEAT LOCK**


|    |                                                                                 |
|----|---------------------------------------------------------------------------------|
| 1  | AJP-FRONT COVER RH PR7<br>00PLS01A0099 (u. 1)                                   |
| 2  | AJP-FRONT COVER LH PR7<br>00PLS01A0100 (u. 1)                                   |
| 3  | AJP-SCREW DIN69FS2 6X16 PR7<br>PF069FS26016 (u. 4)                              |
| 4  | AJP-WASHER DIN9021 M6<br>AN9021006000 (u. 6)                                    |
| 5  | AJP-NUT DIN934 M6<br>PC0934006000 (u. 2)                                        |
| 6  | AJP-SCREW DIN69FS2 6X20 PR7<br>PF069FS26020 (u. 4)                              |
| 7  | AJP-WASHER DIN125A M6<br>AN125A006000 (u. 2)                                    |
| 8  | AJP-KIT OF STICKERS FRONT PANELS AFTER MAY 2019 PR7<br>00BAS01A0200 (u. 1)      |
|    | AJP-KIT OF STICKERS FRONT PANELS AFTER DECEMBER 2020 PR7<br>00BAS01A0212 (u. 1) |
|    | AJP-KIT STICKERS FRONT PANELS PR7 2023<br>00BAS01A0224 (u. 1)                   |
| 9  | AJP-SEAT ASSEMBLY PR7<br>00BAC01B0087 (u. 1)                                    |
| 10 | AJP-FOAM SADDLE PR7<br>00BAS01A0174 (u. 1)                                      |
| 11 | AJP-BASE. SEAT PR7<br>00BAS01A0160 (u. 1)                                       |
| 12 | AJP-NUT DIN985 M8<br>PC0985008000 (u. 1)                                        |
| 13 | AJP-WASHER 5/16<br>00MTS01A0072 (u. 1)                                          |
| 14 | AJP-PIN FOR SEAT PR7<br>00BAS01A0176 (u. 1)                                     |
| 15 | AJP-INTERIOR PLATE FOR SEAT BASE PR7<br>00BAS01A0179 (u. 1)                     |
| 16 | AJP-EXTERIOR PLATE FOR SEAT BASE PR7<br>00BAS01A0177 (u. 1)                     |

|    |                                                                                 |
|----|---------------------------------------------------------------------------------|
| 17 | AJP-REVITS DIN7337 4.8X12<br>00BAS01A0175 (u. 3)                                |
| 18 | AJP-KIT OF IGNITION SWITCH + BLOCK SEAT AND FUEL CAP PR7<br>00COS01A0050 (u. 1) |
| 19 | AJP-SCREW DIN7991 M6X16<br>PF7991006016 (u. 3)                                  |
| 20 | AJP-NUT DIN985 M6<br>PC0985006000 (u. 2)                                        |
| 21 | AJP-SUPPORT PR7<br>00BAS01A0178 (u. 1)                                          |
| 22 | AJP-SPRING FOR SEAT PR7<br>00BAS01A0170 (u. 1)                                  |
| 23 | AJP-KIT STICKER HALFMOON PR7<br>00BAS01A0203 (u. 1)                             |


## REAR FENDER

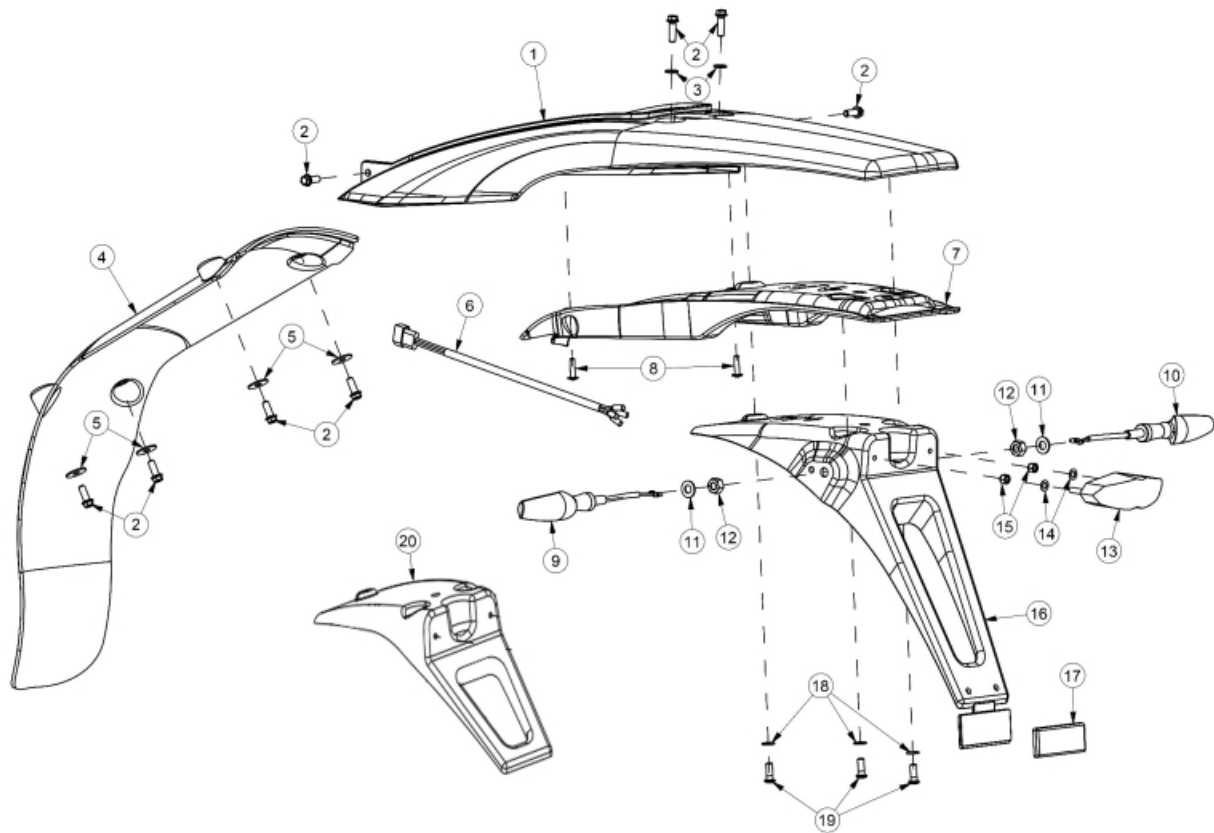 

|    |                                                                            |
|----|----------------------------------------------------------------------------|
| 1  | AJP-REAR FENDER PR7<br>00PLS01A0098 (u. 1)                                 |
| 2  | AJP-SCREW DIN69FS2 6X16 PR7<br>PF069FS26016 (u. 8)                         |
| 4  | AJP-MUD GUARD PR7<br>00PLS01A0105 (u. 1)                                   |
| 5  | AJP-WASHER DIN9021 M6<br>AN9021006000 (u. 4)                               |
| 6  | AJP-INDICATORS CABLES PR7<br>00ELS01A0080 (u. 1)                           |
| 7  | AJP-PROTECTION. REAR FENDER PR7<br>00PLS01A0106 (u. 1)                     |
| 9  | AJP-TURN LAMP ASSEMBLY RH PR7 AFTER MAY 2019<br>00ELC01A0012 (u. 1)        |
| 10 | AJP-TURN LAMP ASSEMBLY LH PR7 AFTER MAY 2019<br>00ELC01A0013 (u. 1)        |
| 11 | AJP-WASHER 5/16<br>00MTS01A0072 (u. 1)                                     |
| 12 | AJP-NUT DIN934 M8<br>PC0934008000 (u. 1)                                   |
| 13 | AJP-REAR TAIL LIGHT PR7<br>00ELS01A0090 (u. 1)                             |
| 14 | AJP-WASHER DIN125A M6<br>AN125A005000 (u. 2)                               |
| 16 | AJP-SUPPORT FOR PLATE PR7<br>00PLS01A0107 (u. 1)                           |
| 17 | AJP-REFLECTOR SIM IAE902.0079 RED PR3/PR4/PR5 E PR7<br>00ELS01A0101 (u. 1) |
| 18 | AJP-WASHER DIN9021 M6<br>AN902106INOX (u. 3)                               |

|    |                                                             |
|----|-------------------------------------------------------------|
| 19 | AJP-SCREW DIN7380 M6X16 INOX<br>PF73806016INOX (u. 3)       |
| 20 | AJP-SUPPORT MORE SHORT FOR PLATE PR7<br>00PLS01A0125 (u. 1) |

 DECALS

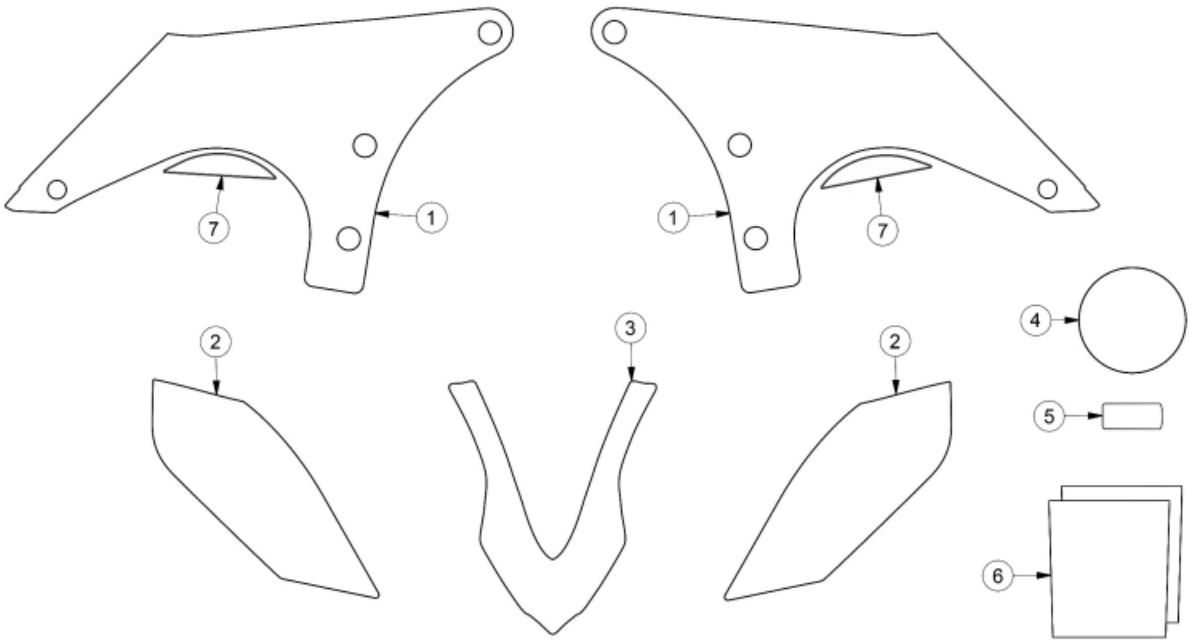

AJP-KIT STICKERS FRONT PANELS PR7 2023  
00BAS01A0224 (u. 1)

1 AJP-KIT OF STICKERS FRONT PANELS AFTER DECEMBER 2020 PR7  
00BAS01A0212 (u. 1)

AJP-KIT OF STICKERS FRONT PANELS AFTER MAY 2019 PR7  
00BAS01A0200 (u. 1)

2 AJP-KIT OF STICKERS FUEL TANK AFTER DEC.2020 PR7  
00BAS01A0213 (u. 1)

AJP-KIT STICKERS FUEL TANK AFTER PR7 2023  
00BAS01A0223 (u. 1)

AJP-KIT OF STICKERS FUEL TANK AFTER MAY 2019 PR7  
00BAS01A0199 (u. 1)

3 AJP-STICKER FOR FRONT FENDER AFTER MAY 2019 PR7  
00BAS01A0201 (u. 1)

AJP-STICKER FOR FRONT FENDER AFTER DECEMBER 2020 PR7  
00BAS01A0214 (u. 1)

AJP-STICKER FRONT FENDER PR7 2023  
00BAS01A0222 (u. 1)

4 AJP-STICKER ALTIX PR7  
00BAS01A0171 (u. 1)

5 AJP-STICKER 650 ALTIX PR7  
00BAS01A0172 (u. 1)

6 AJP-KIT STICKER FOR FORK AFTER MAY 2019 PR7  
00BAS01A0202 (u. 1)

7 AJP-KIT STICKER HALFMOON PR7  
00BAS01A0203 (u. 1)