

 


SPR 510 R 2023


Exploded




SERVICE TOOLS AND MANUALS

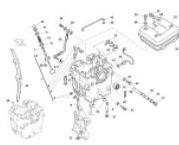


CYLINDER HEAD

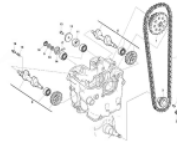 


CAMSHAFT, VALVES AND TIMING CHAIN

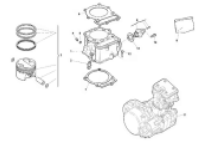 

 
CYLINDER, PISTON AND TIMING CHAIN TENSIONER

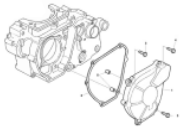


COVER GENERATOR

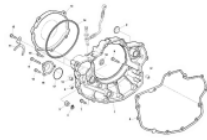 


COVER CLUTCH

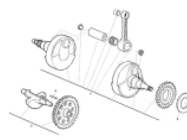 


CRANKSHAFT AND BALANCER

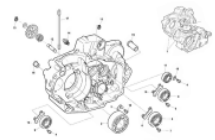 


RIGHT CRANKCASE

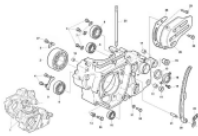 


LEFT CRANKCASE

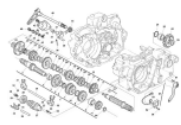 


TRANSMISSION

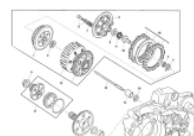 

CLUTCH

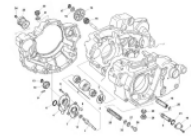 


LUBRIFICATION

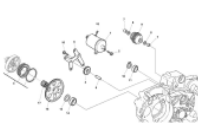 


ELECTRIC STARTER MOTOR



 
FLYWHEEL AND STATOR

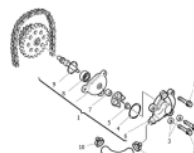


WATER PUMP

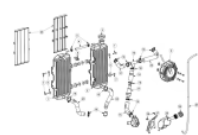 


COOLING SYSTEM

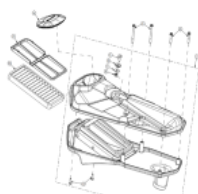 

AIR FILTER BOX

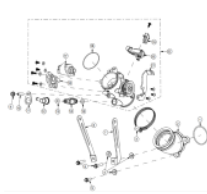 


THROTTLE BODY

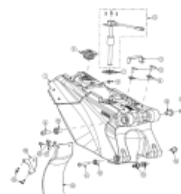 

FUEL TANK



 
FUEL PUMP

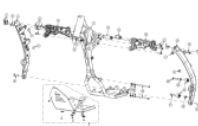


FRAME



 
FOOT RESTS AND SIDE STAND

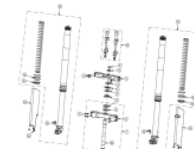


FRONT FORKS AND STEERING COLUMN

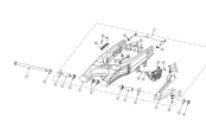 

SWING ARM

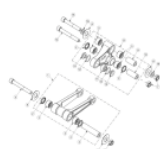 


REAR SUSPENSION LINKAGE

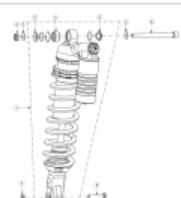 


REAR SHOCK ABSORBER



 
EXHAUST SYSTEM (STANDARD)

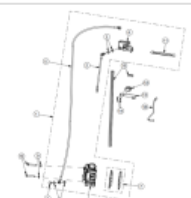


FRONT BRAKE SYSTEM (BREMBO)

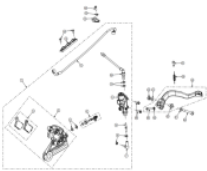 


REAR BRAKE SYSTEM (BREMBO)

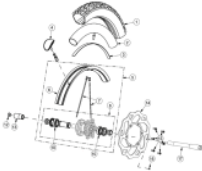 

FRONT WHEEL

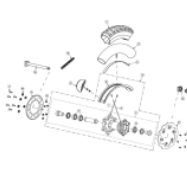 

REAR WHEEL

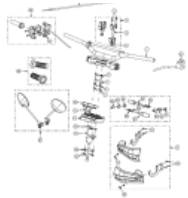 


HANDLEBAR, CONTROLS AND SWITCHES




HYDRAULIC CLUTCH CONTROL



 
ELECTRIC HARNESS

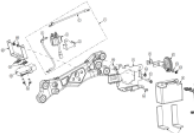

 BATTERY, VOLTAGE REGULATOR,
STARTER RELAY AND HORN



RELAYS, IGNITION COIL AND ECU

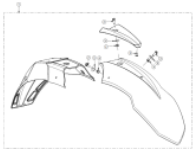 


FRONT FENDER



REAR FENDER



 SIDE FENDERS AND SEAT

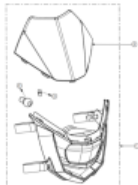


HEADLIGHT



DECALS

 
SERVICE TOOLS AND MANUALS

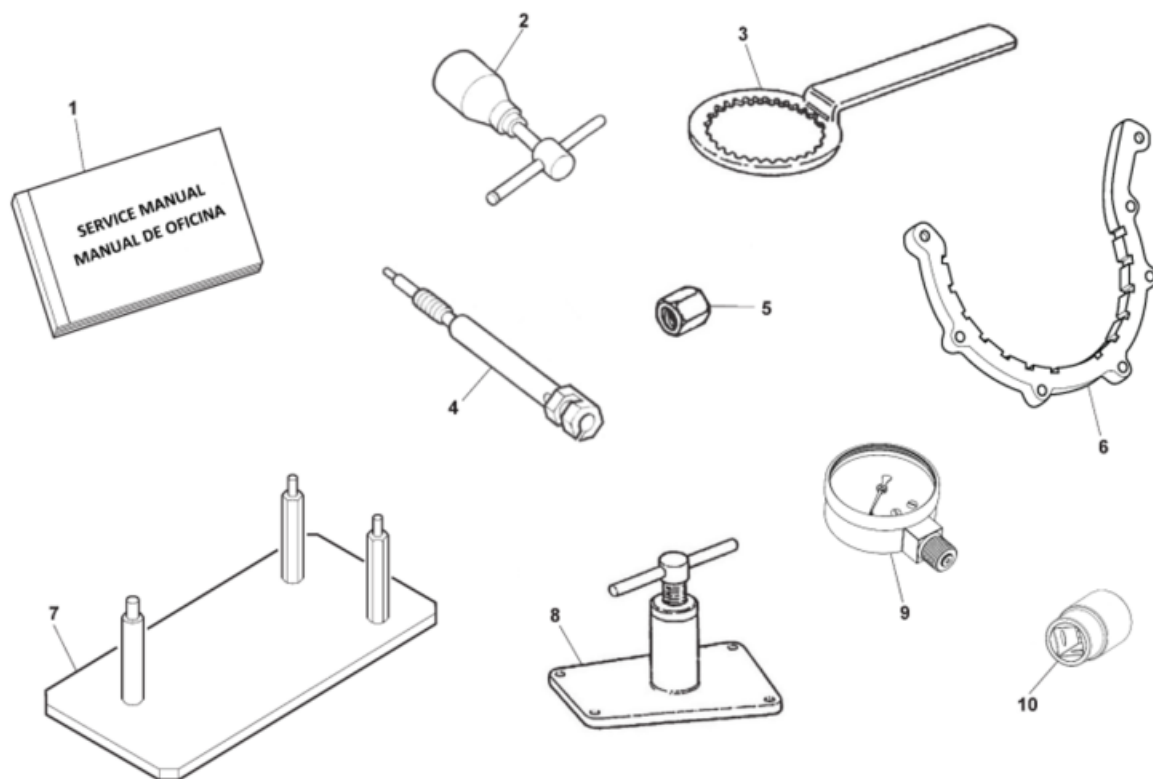

2	SWM-FLYWHEEL REMOVING TOOL SD 800039523 (u. 1)
3	SWM-WRENCH FOR CLUTCH DISK HUB 800079015 (u. 1)
4	SWM-DIAL GAUGE HOLDING TOOL 8000A1625 (u. 1)
5	SWM-F.W.M PULLER PROTECTION TOOL 800083254 (u. 1)
6	TOOL. TDC PR7 - SWM/AJP M000P00688 (u. 1)
7	OBSOLETE : 8A0090662 : SWM-ENGINE SUPPORT ASSEMBLY ASSY 800090662 (u. 1)
8	SWM-CRANK SHAFT REMOVING TOOL 800089743 (u. 1)
9	AJP-PRESSURE GAUGE FOR FUEL PUMP PR5/PR7 00DES01A0104 (u. 1)

OBSOLETE

 CYLINDER HEAD

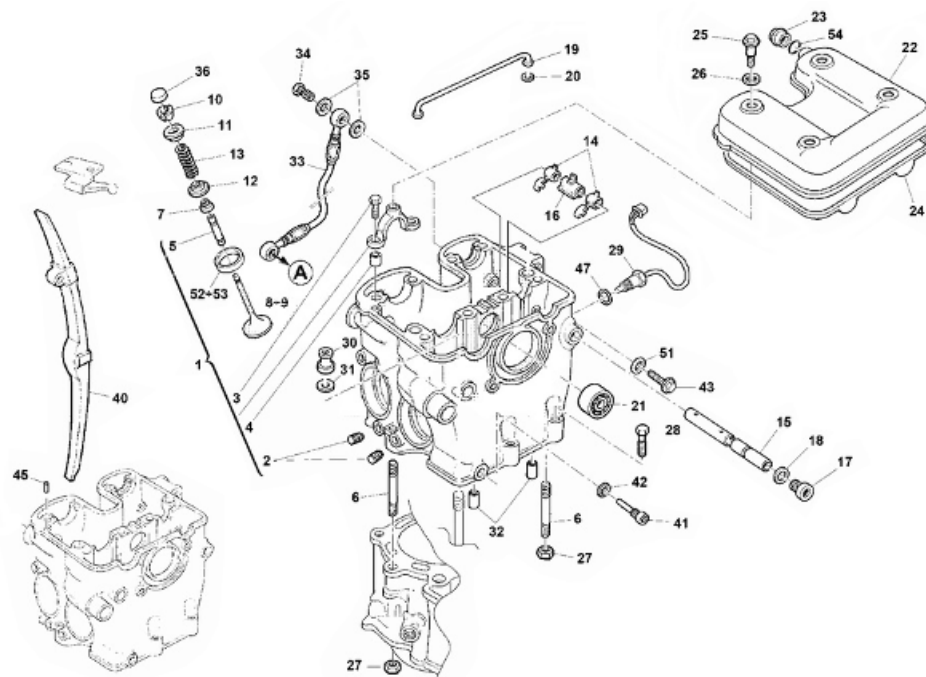


-	(u. 0)
1	SWM-CILYNDER HEAD ASSY 8000H1474_P (u. 1)
2	SWM-HELI-COIL THREAD 800049792 (u. 4)
3	SCREW TCEI M6X1X25 PR7 - SWM/AJP 8A0085071 (u. 8)
4	BUSH 8X6.4X6 PR7 - SWM/AJP 161795501 (u. 8)
5	SWM-VALVE GUIDE D5 SD 8000A4158 (u. 2) SWM-VALVE GUIDE D5.5 8000A4159 (u. 2)
6	STUD BOLT M8X51 MM PR7 - SWM/AJP 800074836 (u. 2)
7	SEAL VALVE STEM 5.5 MM - SWM/AJP 8000A4137 (u. 2) SEAL VALVE STEM 5 MM PR7 - SWM/AJP 8000A4136 (u. 2)
8	SWM-TITANIUM INTAKE VALVE 5.5x37 RS-500R 8000A5445 (u. 2)
9	VALVE. EXHAUST STEEL PR7 - SWM/AJP 8000H4194 (u. 2)
10	COTTER. VALVE 5 MM PR7 - SWM/AJP 8000A4106 (u. 4) COTTER. VALVE 5.5 MM PR7 - SWM/AJP 8000A4107 (u. 4)
11	RETAINER. EXHAUST VALVE SPRING 5 MM PR7 - SWM/AJP 8000A4151 (u. 2) RETAINER. SPRING INTAKE VALVE 5.5 MM PR7 - SWM/AJP 8000A4157 (u. 2)

12	SEAT. SPRING EXHAUST PR7 - SWM/AJP 800091578 (u. 2)
	SEAT. SPRING INTAKE PR7 - SWM/AJP 8000A4135 (u. 2)
13	SWM-VALVE SPRING SD 8000A0568 (u. 4)
14	SWM-ROCKER ARM 800091568 (u. 4)
15	AXLE. VALVE ROCKER ARM PR7 - SWM/AJP 8000A5437 (u. 2)
16	SPACER. SPRING 30.8 MM PR7 - SWM/AJP 8C00A5435 (u. 1)
	SPACER. SPRING 25.8 MM PR7 - SWM/AJP 8B00A5435 (u. 1)
17	PLUG DIN 908 M14X1.5 PR7 - SWM/AJP 800099711 (u. 2)
18	WASHER 17.9X14.2X1.5 MM PR7 - SWM/AJP 800047763 (u. 2)
19	HOSE. OIL PR7 - SWM/AJP 800099834 (u. 1)
20	O-RING 2018 1.78 D4.48 PR7 - SWM/AJP 800091584 (u. 2)
21	BEARING. BALL 12X28X8 PR7 - SWM/AJP 800034317 (u. 1)
23	JOINT. CYLINDER HEAD COVER BREATHER PR7 - SWM/AJP 8000A7039 (u. 1)
24	GASKET CYLINDER HEAD COVER PR7 + SPR510CC - SWM/AJP 800099837 (u. 1)
25	AJP-SCREW PR7 Z00091587 (u. 4)
26	WASHER PR7 - SWM/AJP 800091588 (u. 4)
27	NUT M8 PR7 - SWM/AJP Z00054700 (u. 2)
28	SWM-HEX FLANGE SCREW M6x1x40-CH8 ZE0067545 (u. 1)
	SCREW TE M6X1X30 CH8 PR7 - SWM/AJP Z00062730 (u. 2)
29	AJP-WATER TEMPERATURE SENSOR PR7 8000H3649 (u. 1)
30	NUT M10 PR7 - SWM/AJP 800091589 (u. 4)
31	WASHER PR7 - SWM/AJP Z00023374 (u. 4)
32	BUSH. CYLINDER HEAD (10.3X12.3X9.8) PR7 - SWM/AJP 8000H0278 (u. 4)
33	SWM-OIL HOSE RS-500R 8AA0A0232 (u. 1)
34	BANJO BOLT. M10X1 PR7 - SWM/AJP 8A00A0574 (u. 2)
35	SEALING WASHER PR7 - SWM/AJP 800021480 (u. 4)


36	PAD. VALVE ADJUSTING 2.10 MM PR7 - SWM/AJP 8K00A4162 (u. 4)
	PAD. VALVE ADJUSTING 1.90 MM PR7 - SWM/AJP 8F00A4162 (u. 4)
	PAD. VALVE ADJUSTING 2.25 MM PR7 - SWM/AJP 8N00A4162 (u. 4)
	PAD. VALVE ADJUSTING 2.05 MM PR7 - SWM/AJP 8J00A4162 (u. 4)
	PAD. VALVE ADJUSTING 2.15 MM PR7 - SWM/AJP 8L00A4162 (u. 4)
	PAD. VALVE ADJUSTING 1.65 MM PR7 - SWM/AJP 8A00A4162 (u. 4)
	PAD. VALVE ADJUSTING 2.40 MM PR7 - SWM/AJP 8S00A4162 (u. 4)
	PAD. VALVE ADJUSTING 1.95 MM PR7 - SWM/AJP 8G00A4162 (u. 4)
	PAD. VALVE ADJUSTING 2.50 MM PR7 - SWM/AJP 8U00A4162 (u. 4)
	PAD. VALVE ADJUSTING 2.00 MM PR7 - SWM/AJP 8H00A4162 (u. 4)
	PAD. VALVE ADJUSTING 2.30 MM PR7 - SWM/AJP 8P00A4162 (u. 4)
	PAD. VALVE ADJUSTING 1.60 MM PR7 - SWM/AJP 8000A4162 (u. 4)
	PAD. VALVE ADJUSTING 1.85 MM PR7 - SWM/AJP 8E00A4162 (u. 4)
	PAD. VALVE ADJUSTING 2.35 MM PR7 - SWM/AJP 8R00A4162 (u. 4)
	PAD. VALVE ADJUSTING 2.55 MM PR7 - SWM/AJP 8V00A4162 (u. 4)
	PAD. VALVE ADJUSTING 2.20 MM PR7 - SWM/AJP 8M00A4162 (u. 4)
	PAD. VALVE ADJUSTING 1.80 MM PR7 - SWM/AJP 8D00A4162 (u. 4)
	PAD. VALVE ADJUSTING 1.70 MM PR7 - SWM/AJP 8B00A4162 (u. 4)
	PAD. VALVE ADJUSTING 2.45 MM PR7 - SWM/AJP 8T00A4162 (u. 4)
	PAD. VALVE ADJUSTING 2.60 MM PR7 - SWM/AJP 8W00A4162 (u. 4)
	PAD. VALVE ADJUSTING 1.75 MM PR7 - SWM/AJP 8C00A4162 (u. 4)
40	SWM-CHAIN SLIDER 800091553 (u. 1)
41	SCREW PR7 - SWM/AJP 161535902 (u. 1)
42	WASHER 14X8.2X1 PR7 - SWM/AJP 800045194 (u. 1)
43	SCREW TEF M5X0.8X8 CH8 PR7 - SWM/AJP ZD0067997 (u. 1)
45	SWM-ROLLER 19.8x4 800044298 (u. 1)
47	O-RING 2037 1.78X9.25 PR7 - SWM/AJP 8A0023108 (u. 4)
51	ALUMINIUM WASHER 10X5.1X1 MM PR7 - SWM/AJP 62N015672 (u. 1)

52	SWM-INLET VALVE SEAT RS-500R 8000A5450 (u. 2)
53	SWM-EXHAUST VALVE SEAT RS-500R 8000A5449 (u. 2)
54	O-RING. CYLINDER HEAD COVER BREATHER 11X2 PR7 - SWM/AJP 800001199 (u. 1)

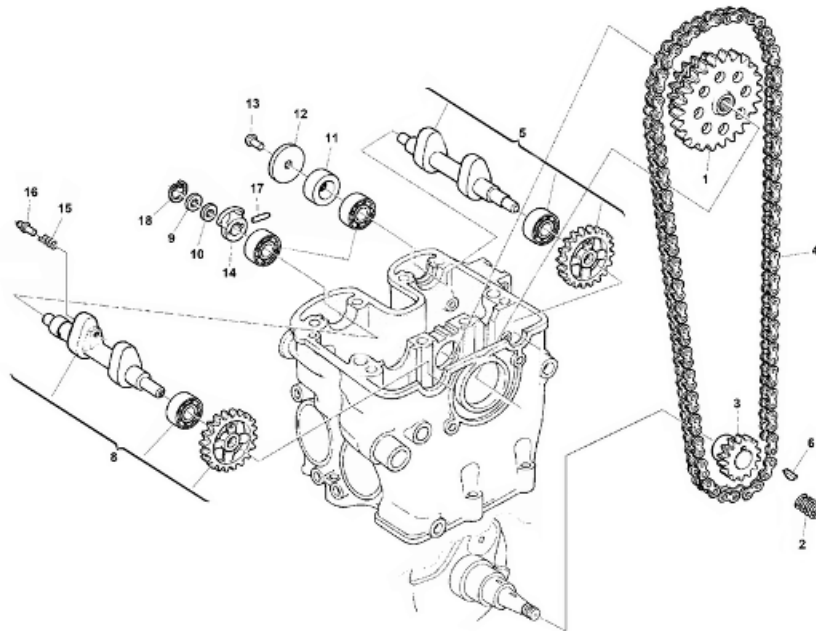 
CAMSHAFT, VALVES AND TIMING CHAIN


1	TIMING GEAR 510CC - SWM/AJP 8000A4790 (u. 1)
2	SPRING 310/510CC - SWM/AJP 800061275 (u. 1)
3	TIMING GEAR T17 310CC AND 510CC - SWM/AJP 8C0063811 (u. 1)
4	TIMING CHAIN 510CC - SWM/AJP 8B0035794 (u. 1)
5	CAM SHAFT. INTAKE PR7/510 - SWM/AJP 8000A5595 (u. 1)
6	KEY, WOODRUFF 310/510CC - SWM/AJP 161509801 (u. 1)
7	BEARING. BALL 12X28X8 PR7 - SWM/AJP 800034317 (u. 2)
8	CAM SHAFT. EXHAUST PR7/510CC - SWM/AJP 8000A4953 (u. 1)
9	WASHER. THRUST (16X19.2X0.8) PR7 - SWM/AJP 8A00H0597 (u. 1)
10	WASHER. THRUST (16X19.2X1) PR7 - SWM/AJP 8000H0597 (u. 1)
11	SPACER PR7 - SWM/AJP 8000A6271 (u. 1)
12	CENTRIFUGAL DISC PR7 - SWM/AJP 800099703 (u. 1)
13	SCREW TCEI M6X10 PR7 - SWM/AJP Z00055699 (u. 1)
14	WEIGHT. VALVE LIFTER PR7 - SWM/AJP 8000A8994 (u. 1)
15	SPRING PR7 - SWM/AJP 800099699 (u. 1)
16	SPACER PR7 - SWM/AJP 800099700 (u. 1)

17	ROLLER B (4X21.8) - SWM/AJP 800099701 (u. 1)
18	CIRCLIP 16 MM PR7 - SWM/AJP 66N021205 (u. 1)

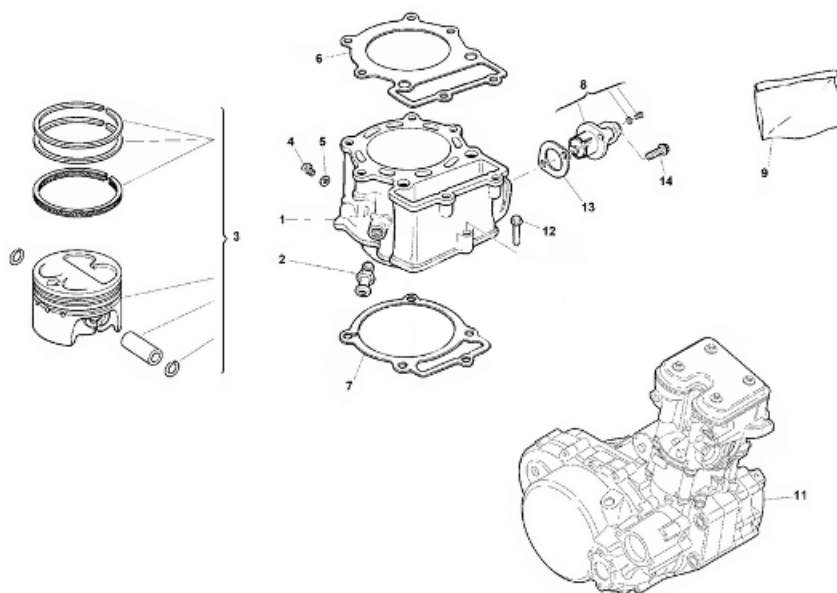 
CYLINDER, PISTON AND TIMING CHAIN TENSIONER


1	CYLINDER ASSY SPR 510 - SWM/AJP M000P00153 (u. 1)
2	JOINT PR7 - SWM/AJP 800063885 (u. 2)
3	PISTON (97MM) SPR 510 - SWM/AJP 8000A9228 (u. 1)
4	SWM-HEX FLANGE SCREW M6x1x8-CH8 ZS0067545 (u. 1)
5	GASKET 10X6.2X1 PR7 - SWM/AJP 8A0015960 (u. 1)
6	GASKET. CYLINDER HEAD (1.1 MM) SPR 510 - SWM/AJP 8B00A4195 (u. 1)
7	GASKET. CYLINDER BASE PR7 - SWM/AJP 800099841 (u. 1)
8	TENSIONER. TIMING CHAIN PR7 SPR300 - SWM/AJP 8000A6950 (u. 1)
9	SWM-ENGINE GASKETS KIT RS-500R M000A01128 (u. 1)
12	SWM-HEX FLANGE SCREW M6x1x40-CH8 ZE0067545 (u. 1)
13	GASKET. TENSIONER ADJUSTER PR7 - SWM/AJP 8000A6954 (u. 1)
14	SCREW TEF M6X1X20 CH8 PR7 - SWM/AJP Z00062728 (u. 2)

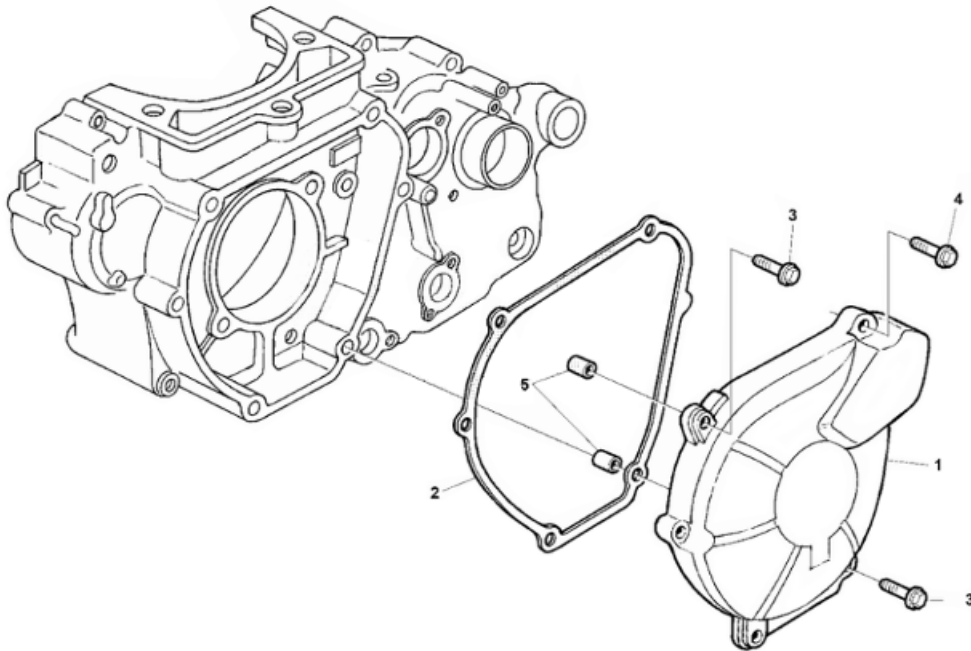 COVER GENERATOR

- | | |
|---|--|
| 1 | SWM-IGNITION COVER
M0A0P00090 (u. 1) |
| 2 | GASKET. GENERATOR COVER SPR310/510CC - SWM/AJP
800099856 (u. 1) |
| 3 | SCREW TEF M6X1X45 PR7 - SWM/AJP
ZA0067545 (u. 2) |
| 4 | SCREW TEF M6X1X25 CH8 PR7 - SWM/AJP
Z00062729 (u. 4) |
| 5 | SWM-CENTERING BUSH 10x7.2x16 RS/SD
800007719 (u. 2) |

 
COVER CLUTCH

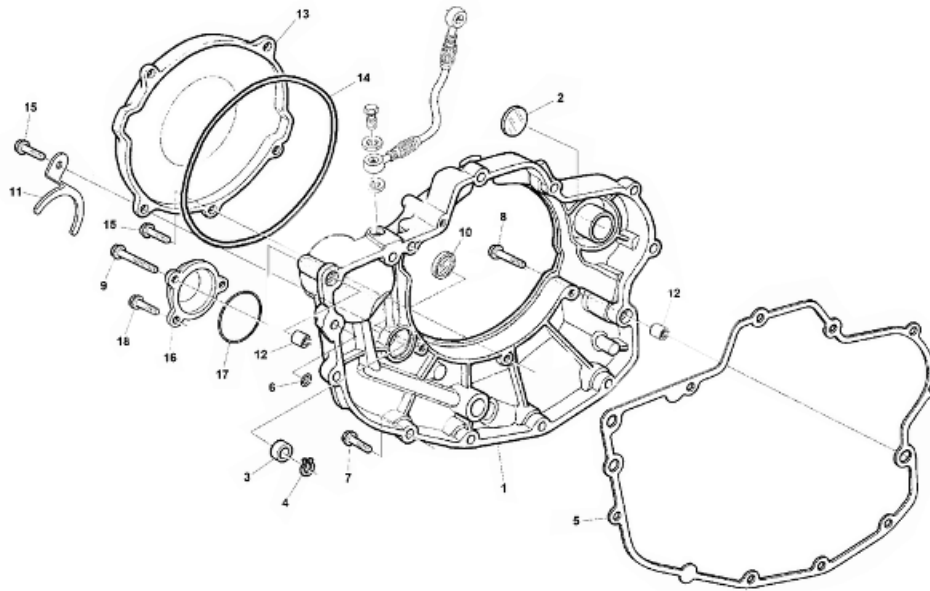

1	SWM-RH COVER PAINTED 80B0B0388 (u. 1)
2	SWM-SEALING PLUG 8000A0765 (u. 1)
3	SWM-OIL SEAL RING 8A0028855 (u. 1)
4	SWM-CIRCLIP 23.5x22x1 66N021258 (u. 1)
5	GASKET. CLUTCH COVER SPR310/510CC - SWM/AJP 8000A5906 (u. 1)
6	O-RING 108 (6.02X2.62) - SWM/AJP 800099855 (u. 1)
7	SCREW TEF M6X1X25 CH8 PR7 - SWM/AJP Z00062729 (u. 10)
8	SCREW TEF M6X1X45 PR7 - SWM/AJP ZA0067545 (u. 1)
9	SWM-HEX FLANGE SCREW M6x1x80-CH8 ZF0067545 (u. 1)
10	WINDOW. OIL LEVEL CHECK PR7 - SWM/AJP 800073529 (u. 1)
11	SWM-PORT RETENTION PLATE 8000B1507 (u. 1)
12	SWM-CENTERING BUSH 10x7.2x16 RS/SD 800007719 (u. 2)
13	SWM-CLUTCH COVER M0A0P00095 (u. 1)
14	SWM-O-RING 165x2.62 800086878 (u. 1)
15	SCREW TE M6X1X30 CH8 PR7 - SWM/AJP Z00062730 (u. 5)
16	SWM-OIL FILTER COVER, PAINTED 80B091551 (u. 1)

17	O-RING 2.62X50.47 PR7 - SWM/AJP 8A0028553 (u. 1)
18	SCREW TEF M6X1X20 CH8 PR7 - SWM/AJP Z00062728 (u. 2)

 CRANKSHAFT AND BALANCER

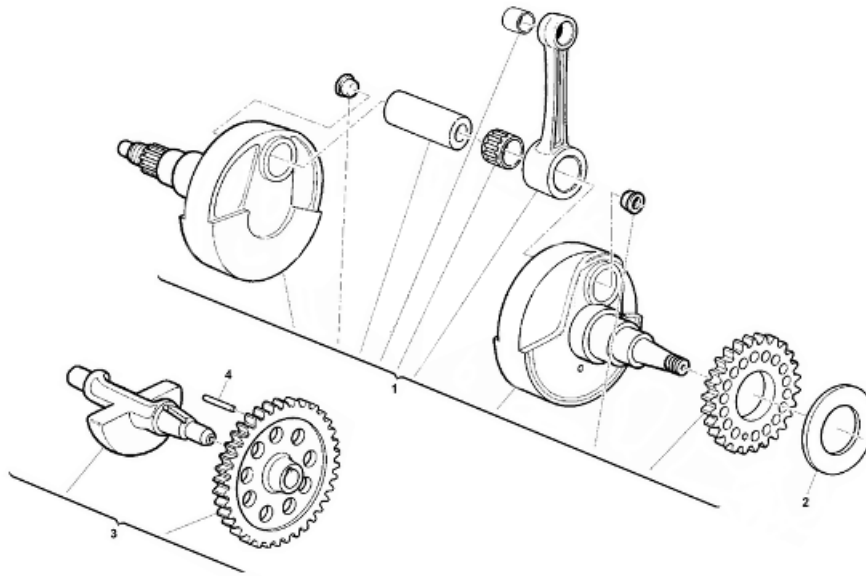

- 1** SWM-CRANK SHAFT AND GEAR, ASSY
8000A4177 (u. 1)

SWM-THRUST WASHER 0.5mm
8C0028183 (u. 1)

SWM-THRUST WASHER 40x32x1 1.0mm
8H0028183 (u. 1)

- 2** SWM-THRUST WASHER 0.8mm
8F0028183 (u. 1)

 
SWM-THRUST WASHER 0.3mm
8A0028183 (u. 1)

SWM-THRUST WASHER 0.6mm
8D0028183 (u. 1)

- 3** SWM-BALANCE SHAFT, ASSY
M000A00176 (u. 1)

- 4** ROLLER PR7 - SWM/AJP
8A0047773 (u. 1)


RIGHT CRANKCASE

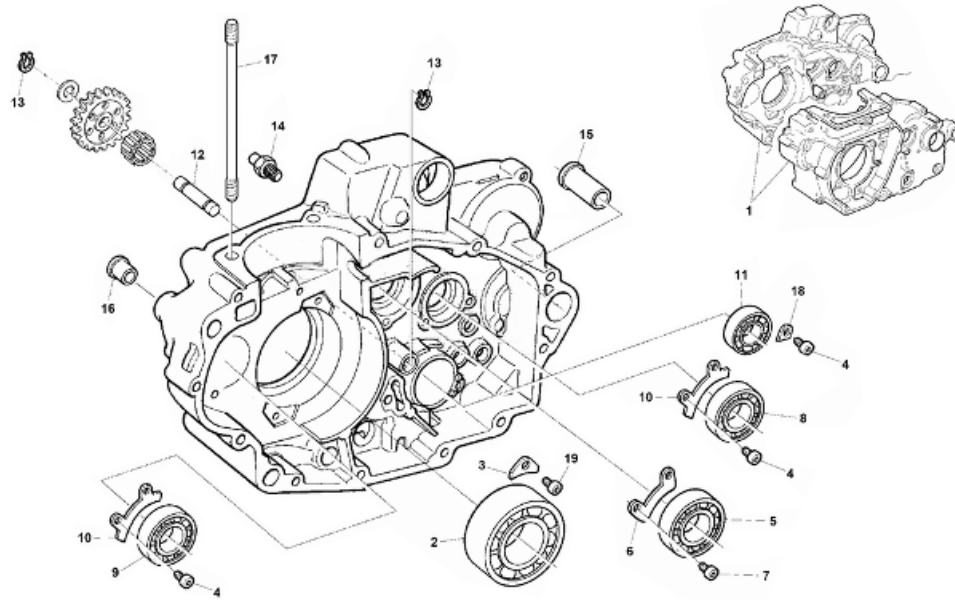

1	SWM-COUPLED BARE CRANKCASES 8A00A5665 (u. 1)
2	BALL BEARING (30X72X19 MM) SPR310/510 - SWM/AJP 800099846 (u. 1)
3	SWM-CRANKCASE BEARING PLATE RS 800097941 (u. 2)
4	SCREW (TCEI M6X1X14 CH5) SPR310/510 - SWM/AJP YA0055241 (u. 3)
5	SWM-BALL BEARING 25x52x15 8A0043567 (u. 1)
6	SWM-BEARING RETAINING PLATE 8A0042100 (u. 1)
7	SWM-TEF SCREW M6x1x10-CH5 YB0055241 (u. 2)
8	SWM-BALL BEARING 42x20x12 800017040 (u. 1)
9	BALL BEARING SPR310CC/510CC - SWM/AJP 8A0019768 (u. 1)
10	SWM-BEARING RETAINER 800091602 (u. 2)
11	BALL BEARING 25X42X9 PR7 - SWM/AJP 800085395 (u. 1)
12	SWM-PIN GEAR OIL PUMP 8000A5662 (u. 1)
13	SWM-CIRCLIP E-TYPE 18.5x9x1.1 mm DIN6799 66N021312 (u. 2)
14	SWM-SELECTOR LOCK PIN RS M000P00686 (u. 1)
15	SWM-CRANKCASE BUSHING 800073500 (u. 1)
16	SWM-FLANGE BUSHING 12.8x8.5x15 161077703 (u. 2)

17	SWM-STUD BOLT L193 8D0081650 (u. 2)
18	RETAINER. BEARING PR7 - SWM/AJP 800051746 (u. 1)
19	SCREW TSEI M6X1X14 DIN 7991 CH4 PR7 - SWM/AJP Y00028327 (u. 2)

 
LEFT CRANKCASE

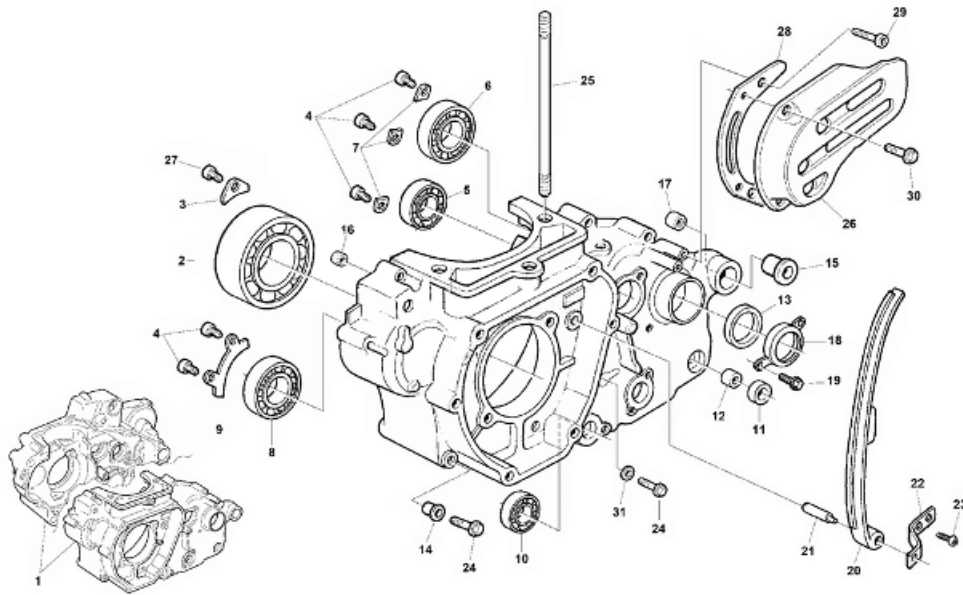

1	SWM-COUPLED BARE CRANKCASES 8A00A5665 (u. 1)
2	BALL BEARING (30X72X19 MM) SPR310/510 - SWM/AJP 800099846 (u. 1)
3	SWM-CRANKCASE BEARING PLATE RS 800097941 (u. 2)
4	SCREW (TCEI M6X1X14 CH5) SPR310/510 - SWM/AJP YA0055241 (u. 3)
5	SWM-BALL BEARING 17x40x12 800099847 (u. 1)
6	SWM-BALL BEARING 25x52x15 8A0043567 (u. 1)
7	RETAINER. BEARING PR7 - SWM/AJP 800051746 (u. 3)
8	BALL BEARING SPR310CC/510CC - SWM/AJP 8A0019768 (u. 1)
9	SWM-BEARING RETAINER 800091602 (u. 1)
10	SWM-BALL BEARING 25x37x7 800065884 (u. 1)
11	OIL SEAL 12X19X5 PR7 - SWM/AJP 800034451 (u. 1)
12	BUSH PR7 - SWM/AJP 8A0065847 (u. 1)
13	SEAL. OIL 32X40X5 PR7 - SWM/AJP 800059977 (u. 1)
14	SWM-FLANGE BUSHING 12.8x8.5x15 161077703 (u. 2)
15	SWM-CRANKCASE BUSHING 800073500 (u. 1)
16	BUSH. CRANKCASE FRONT (13X8.5X15) PR7 - SWM/AJP 161077601 (u. 1)

17	BUSH 22X17.5X15 PR7 - SWM/AJP 161459002 (u. 1)
18	SWM-OIL SEAL HOLDING PLATE RS 800099850 (u. 1)
19	SCREW TEF M5X0.8X12 CH8 PR7 - SWM/AJP Z00067997 (u. 2)
20	CAM CHAIN TENSIONER SPR 510 - SWM/AJP 8000H0285 (u. 1)
21	SWM-LH CRANKCASE PIN 800099704 (u. 1)
22	PLATE SPR 310/510 - SWM/AJP 800099705 (u. 1)
23	SWM-SCREW M4x0.7x8 Z00066774 (u. 2)
24	SWM-HEX FLANGE SCREW M6x1x45 Z00062731 (u. 12)
25	SWM-STUD BOLT L193 8D0081650 (u. 2)
26	SWM-PINION COVER 80A066973 (u. 1)
27	SCREW TSEI M6X1X14 DIN 7991 CH4 PR7 - SWM/AJP Y00028327 (u. 2)
28	CHAIN GUIDE PLATE SPR 310/510 - SWM/AJP 8000A0663 (u. 1)
29	SCREW (TCEI M6X1X14 CH5) SPR310/510 - SWM/AJP YA0055241 (u. 2)
30	SWM-TEF SCREW M6x1x10-CH8 Z00062725 (u. 2)
31	GASKET 10X6.2X1 PR7 - SWM/AJP 8A0015960 (u. 1)

 TRANSMISSION

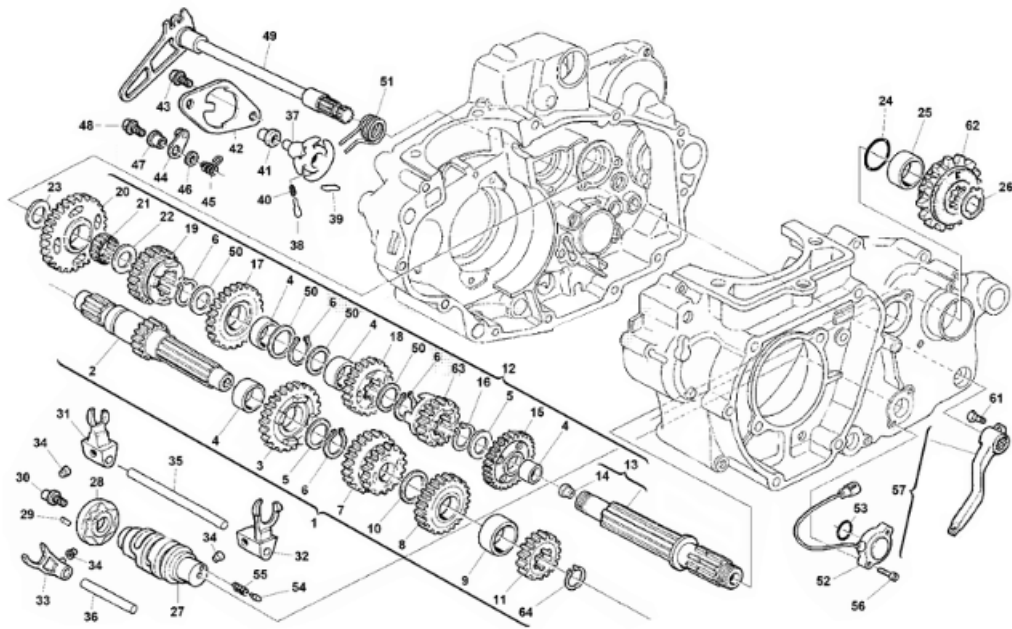


-	(u. 0)	
1	MAIN SHAFT ASSY SPR 310/510 : 8000A3972 - SWM/AJP 8000A3511 (u. 1)	
2	SWM-MAIN SHAFT 14T RS 8000A3512 (u. 1)	
3	SWM-5TH GEAR 25T RS 800088244 (u. 1)	
4	BUSH 28X25X7 PR7 - SWM/AJP 800063822 (u. 5)	
5	THRUST WASHER (32X25.1X0.5 MM) - SWM/AJP 8D0036022 (u. 2)	
6	CIRCLIP (23.2X1.2 MM) SPR 310/510 - SWM/AJP 800031772 (u. 4)	
7	AJP-GEAR DRIVE 3A-4A 18/23TSR 310/510 8000A3972 (u. 1)	
8	OBSOLETE : 8000A3511 : SWM-6TH GEAR 27T RS 800088246 (u. 1)	OBSOLETE
9	SWM-BUSHING 25x22 8A0061261 (u. 1)	
10	SWM-TRANSMISSION THRUST WASHER RS 8B0036023 (u. 1)	
11	SWM-2ND GEAR 18T RS 800088247 (u. 1)	
12	SWM-SECONDARY SHAFT ASSY RS M000A00808 (u. 1)	
13	SWM-SECONDARY SHAFT WITH CUP M000A00809 (u. 1)	
14	SWM-STABLE PLUG 12x6x10 800057196 (u. 1)	
15	SWM-2ND GEAR 29T RS 8000A1918 (u. 1)	
16	CIRCLIP 25MM DIN471 PR7 + SPR310CC/510CC - SWM/AJP 66N021211 (u. 3)	
17	DRIVEN GEAR 4TH SPEED 25T SPR 310-510 - SWM/AJP 800088254 (u. 1)	

18	SWM-3RD GEAR 8000A3970 (u. 1)
19	SWM-5TH GEAR 23T RS 8000A1920 (u. 1)
20	SWM-1ST GEAR 28T RS 8000A1921 (u. 1)
21	SWM-NEEDLE BEARING 20x24x10 800022373 (u. 1)
22	SWM-WASHER 28x20x1 8G0007989 (u. 1)
23	SWM-WASHER 28x20x1 8G0007989 (u. 1)
24	O-RING (21.95X1.78) - SWM/AJP 800041693 (u. 1)
25	SWM-CHAIN SPROCKET SPACER 800086953 (u. 1)
26	CIRCLIP 25MM DIN471 PR7 + SPR310CC/510CC - SWM/AJP 66N021211 (u. 1)
27	SWM-GEAR SHIFT CONTROL SHAFT RS 8000H0246 (u. 1)
28	CAM-CHANGE DRUM PR7 - SWM/AJP 8A0097739 (u. 1)
29	ROLLER 4X8 PR7 - SWM/AJP 800038520 (u. 1)
30	SWM-SELECTOR DRUM FIXING SCREW 800098149 (u. 1)
31	GEAR SHIFT FORK 1ST-4RD SPR 310/510 - SWM/AJP 8A0086980 (u. 1)
32	GEAR SHIFT FORK 2ND-3RD SPR 310/510 - SWM/AJP 8A0048127 (u. 1)
33	SWM-FORK 5TH, 6TH 800099738 (u. 1)
34	SWM-SPROCKET ROLLER 800071010 (u. 3)
35	SWM-PIN FORK 1ST, 4TH AND 2ND, 3RD 800038711 (u. 1)
36	SWM-PIN FORK 5TH, 6TH 800038712 (u. 1)
37	GEAR SHIFT CAM ASSY 310/510 - SWM/AJP 8000H0247 (u. 1)
38	SWM-SPROCKET PAWL RS 8000A7515 (u. 2)
39	PUSH ROD PR7 - SWM/AJP 800071008 (u. 2)
40	SPRING PR7 - SWM/AJP 800071009 (u. 2)
41	SWM-SPROCKET ROLLER 800071010 (u. 1)
42	SWM-RATCHET LOCK PLATE 8000A7514 (u. 1)
43	SWM-SCREW M6x1x14-CH8 Z00062726 (u. 2)
44	SWM-CLICK ASSY RS 800085495 (u. 1)
45	SWM-SPRING CLICK ASSY 8000A1748 (u. 1)


46	SWM-THRUST WASHER 6.2x20 800086107 (u. 1)	
47	SWM-TRANSMISSION SHIFTER BUSHING 800085493 (u. 1)	
48	SWM-SCREW M6x1x14-CH8 Z00062726 (u. 1)	
49	OBSOLETE : M000A00919 : SWM-SPROKET SHAFT ASSY 800091559 (u. 1)	OBSOLETE
50	THRUST WASHER - SWM/AJP 800088255 (u. 4)	
51	SWM-SHIFT RETURN SPRING RS 8A00A7329 (u. 1)	
52	SWM-GEAR SENSOR E000P01112 (u. 1)	
53	O-RING 2093 23.52X1.78 MM PR7 - SWM/AJP 8A0042700 (u. 1)	
54	POINT. NEUTRAL PR7 - SWM/AJP 800042676 (u. 1)	
55	SPRING PR7 - SWM/AJP 800042677 (u. 1)	
56	OBSOLETE : Z00067997 : SWM-SCREW Z00066525 (u. 2)	OBSOLETE
57	GEARSHIFT CONTROL LEVER ASSY 310CC + 510CC - SWM/AJP 8000A3488 (u. 1)	
61	SCREW TEF M6X1X20 CH8 PR7 - SWM/AJP Z00062728 (u. 1)	
62	DRIVE SPROCKET. CHAIN T13 SPR310CC/510 - SWM/AJP M000P00806 (u. 1)	
63	OBSOLETE : M000A00808 : SWM-6TH GEAR 22T RS 8000A1919 (u. 1)	OBSOLETE
64	SWM-CIRCLIP D25 D15.7 SP1 66N021206 (u. 1)	

 CLUTCH

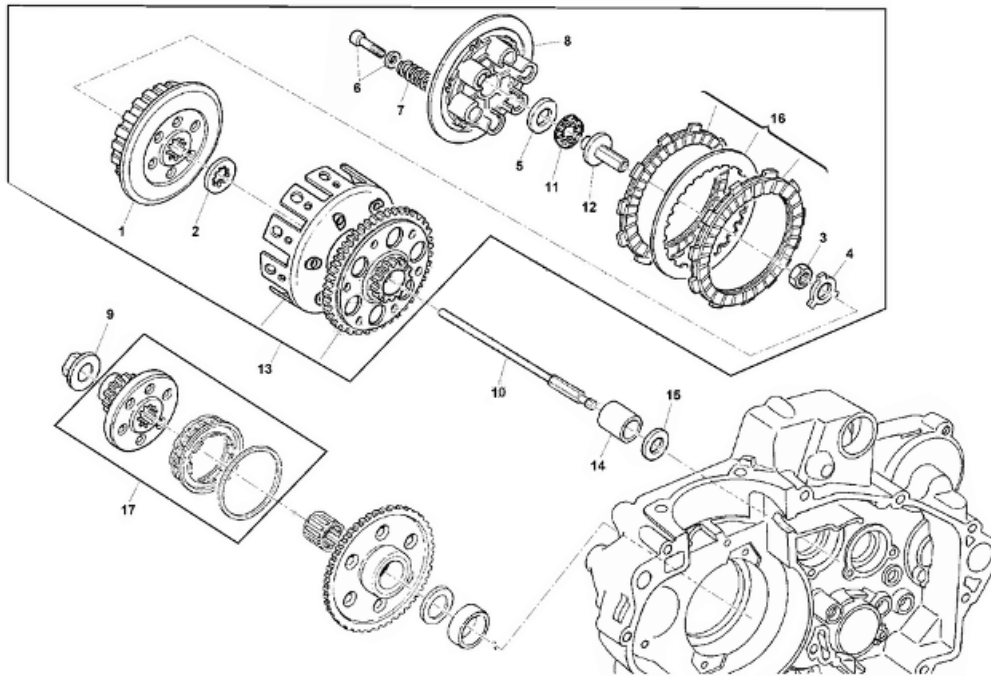


1	BOSS. CLUTCH PR7 - SWM/AJP 800085390 (u. 1)
2	WASHER 46X22X19 PR7 - SWM/AJP 800038350 (u. 1)
3	NUT M18X1 PR7 - SWM/AJP 800036856 (u. 1)
4	WASHER. LOCK 18MM PR7 - SWM/AJP 800036857 (u. 1)
5	WASHER. AXIAL BEARING PR7 - SWM/AJP 800035781 (u. 1)
6	SCREW (M6X20) WITH WASHER (17.8) - SWM/AJP M000P00464 (u. 6)
7	CLUTCH SPRING PR7 - SWM/AJP 8000A0730 (u. 6)
8	DISC. CLUTCH PRESSURE PR7 - SWM/AJP 800048138 (u. 1)
9	SWM-FLANGE NUT Y00099933 (u. 1)
10	ROD PRESSURE SPR 310/510 - SWM/AJP 8A00B0497 (u. 1)
11	THRUST BEARING PR7 - SWM/AJP 800035780 (u. 1)
12	PIECE. CLUTCH PUSH PR7 - SWM/AJP 8000A9749 (u. 1)
13	SWM-CLUTCH ASSY 510 M000A00767 (u. 1)
14	SWM-BUSHING FOR DRIVE GEAR 161538801 (u. 1)
15	THRUST WASHER 38X25.2 PR7 - SWM/AJP 8E0030053 (u. 1)
16	CLUTCH DISC SET PR7 + 310 +510 - SWM/AJP 8000A9764 (u. 1)

17	SWM-DRIVER GEAR WITH ONE WAY CLUTCH, ASSY : 8000A0709 M000A00900 (u. 1)
----	--

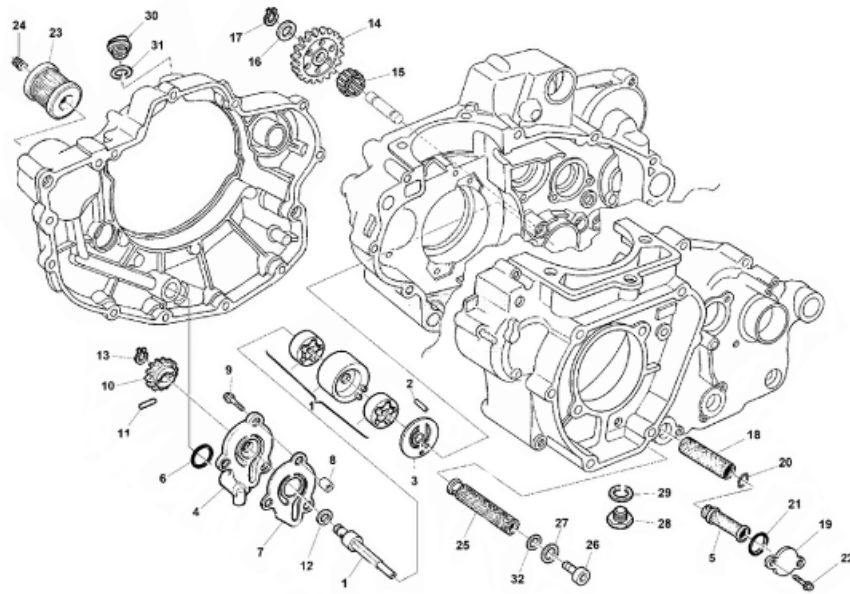 LUBRIFICATION

 
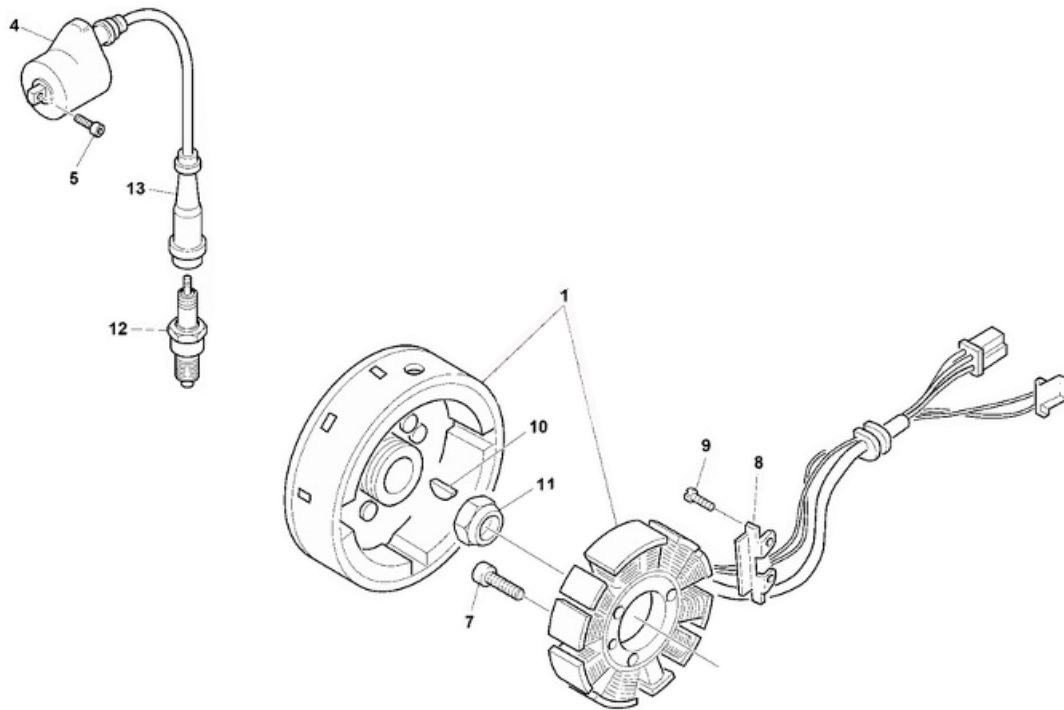 
-	(u. 0)
1	OIL PUMP ASSY WITH ROTORS 310 /510CC AND PR7 - SWM/AJP M000A03431 (u. 1)
2	ROLLER PR7 - SWM/AJP 8A0047773 (u. 2)
3	SPACER. OIL PUMP ROTOR - SWM/AJP 800099861 (u. 1)
4	SWM-COVER AND VALVE ASSY 8000H0243 (u. 1)
5	Filter, Oil, Inner, PR7, SWM/AJP - SWM/AJP 800072427 (u. 1)
6	SWM-O RING 2.62x13.95 (NBR) 800025082 (u. 1)
7	SWM-PUMP MIDDLE COVER 800099862 (u. 1)
8	SWM-BUSHING 8x6.4x10 161795502 (u. 2)
9	SCREW TEF M6X1X20 CH8 PR7 - SWM/AJP Z00062728 (u. 3)
10	SWM-OIL PUMP DRIVEN GEAR 800099863 (u. 1)
11	SWM-DRIVE ROLLER 3x15.8 800047773 (u. 1)
12	SWM-WASHER 14x8.2 8E0034292 (u. 1)
13	SWM-CIRCLIP 8mm DIN 471 800021375 (u. 1)
14	SWM-OIL PUMP IDLE GEAR 800099864 (u. 1)
15	SWM-ROLLER BEARING 800033718 (u. 1)
16	SWM-WASHER 19x12x0.3 8A0001261 (u. 1)

17	SWM-CIRCLIP 12mm 66N021202 (u. 1)
18	Filter, Oil, Outer, PR7, SWM/AJP - SWM/AJP 800072426 (u. 1)
19	COVER. OIL ELEMENT PR7 - SWM/AJP 800072425 (u. 1)
20	O-RING 3062 15.54X2.62 PR7 - SWM/AJP 800026884 (u. 1)
21	O-RING 3087 T2,62-D22,00 (GACO P5) - SWM/AJP 800034609 (u. 1)
22	SCREW TEF M5X0.8X12 CH8 PR7 - SWM/AJP Z00067997 (u. 2)
23	OIL FILTER PR7 + SPR510 + SPR310 - SWM/AJP 8000B0593 (u. 1)
24	SWM-OIL FILTER SPRING RS 800099866 (u. 1)
25	OIL FILTER SPR310CC - SWM/AJP MA00P03544 (u. 1)
26	PLUG DIN 908 M14X1.5 PR7 - SWM/AJP 800099711 (u. 1)
27	WASHER. ALUMINIUM 21X14.3X1.2 PR7 - SWM/AJP 62N015678 (u. 1)
28	PLUG. OIL DRAIN SPR 310-510 - SWM/AJP 800073011 (u. 1)
29	WASHER. ALUMINIUM (24X16.3X1.15) SPR 310 + 510CC - SWM/AJP 62N015679 (u. 1)
30	CAP. OIL FILLER SPR 310-510 - SWM/AJP 800036786 (u. 1)
31	SWM-O RING 800029171 (u. 1)
32	O-RING (8.73X1.78) - SWM/AJP 800023107 (u. 1)

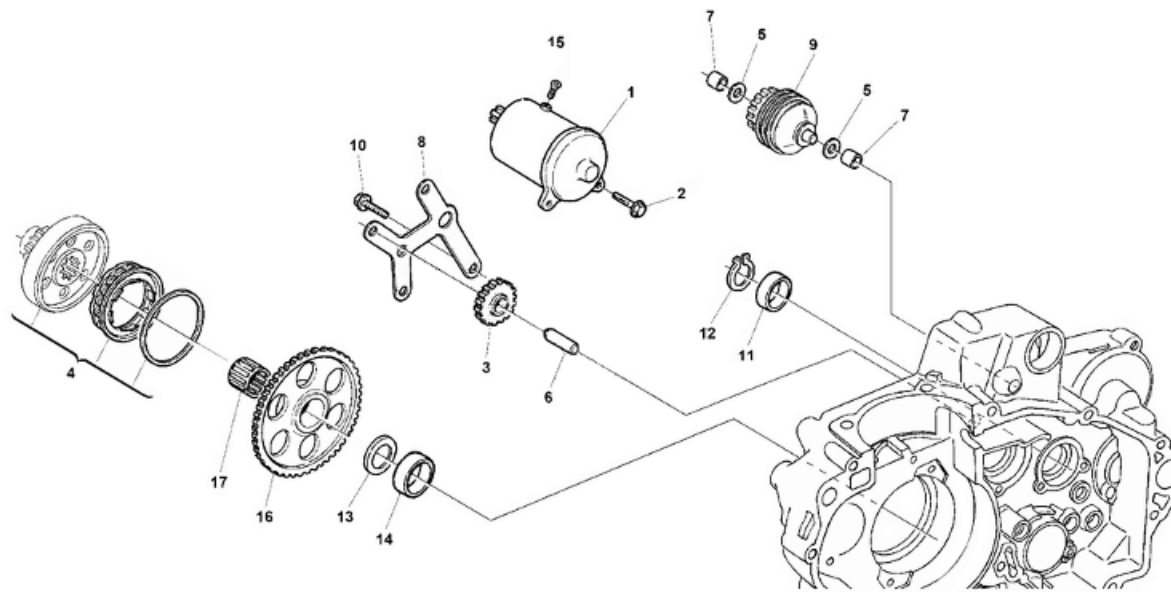ELECTRIC STARTER MOTOR


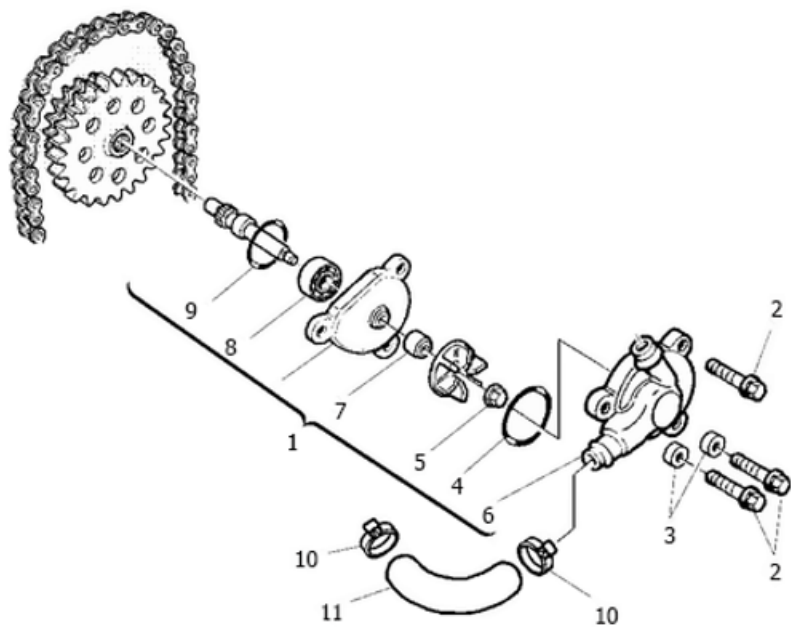 
-	(u. 0)
1	STARTING MOTOR SPR310 E 510CC - SWM/AJP 8000B1373 (u. 1)
2	SCREW TEF M6X1X25 CH8 PR7 - SWM/AJP Z00062729 (u. 2)
3	SWM-IDLE GEAR 800099958 (u. 1)
4	SWM-DRIVER GEAR WITH ONE WAY CLUTCH, ASSY : 8000A0709 M000A00900 (u. 1)
5	SWM-WASHER 18x10x0.5 800005876 (u. 2)
6	SWM-PIN REDUCTION GEAR 800099960 (u. 1)
7	BUSH PR7 - SWM/AJP 8000A1017 (u. 2)
8	SWM-PLATE ASSY 8000A1022 (u. 1)
9	SWM-STARTER CLUTCH ASSY RS 8000A1279 (u. 1)
10	SWM-HEX FLANGE SCREW M6x1x16-CH8 Z00062727 (u. 4)
11	SWM-STARTING SPACER 8000A0746 (u. 1)
12	SWM-CIRCLIP 28x16.5 mm 66N021208 (u. 1)
13	SWM-THRUST WASHER H=1.5 M000P00258 (u. 1)
14	SWM-RING GEAR SPACER 800099957 (u. 1)
15	SWM-HEX FLANGE SCREW M5x0.8x6.5-CH8 ZF0067997 (u. 1)
16	RING GEAR T70 - SWM/AJP 8000A0739 (u. 1)
17	SWM-NEEDLE BEARING 28x33x17 800035763 (u. 1)

FLYWHEEL AND STATOR




1	SWM-GENERATOR ASSY 8000A6737 (u. 1)
4	SWM-COIL ASSY 8000H0277 (u. 1)
5	SCREW TEF M6X1X20 CH8 PR7 - SWM/AJP Z00062728 (u. 2)
7	SWM-SCREW M5x0.8x25 60ND02488 (u. 3)
8	CLAMP. WIRE SPR 310/510 - SWM/AJP 800099868 (u. 1)
9	SWM-HEX FLANGE SCREW M5x0.8x16-CH8 ZA0067997 (u. 2)
10	SWM-CRANKSHAFT KEY RS/SD 151371301 (u. 1)
11	SWM-FLANGE NUT M12x1 8000A0033 (u. 1)
12	SPARK PLUG CR8EB PR7 - SWM/AJP 8000A0573 (u. 1)
13	CAP. SPARK PLUG PR7 - SWM/AJP 8000A6740 (u. 1)

WATER PUMP




1	WATER PUMP ASSEMBLY WITHOUT GASKET: M000P01959 - SWM/AJP M000A01955 (u. 1)
2	SCREW TE M6X1X30 CH8 PR7 - SWM/AJP Z00062730 (u. 3)
3	BUSH 8X6.4X6 PR7 - SWM/AJP 161795501 (u. 2)
4	GASKET CAP PR7 - SWM/AJP 800027122 (u. 1)
5	SWM-NUT M5x0.8x6-CH8 Z00056443 (u. 1)
6	SWM-PUMP BODY 8000H1958 (u. 1)
7	SEAL WATER PUMP PR7 - SWM/AJP 800053339 (u. 1)
8	BEARING. BALL 12X28X8 PR7 - SWM/AJP 800034317 (u. 1)
9	O-RING PR7 - SWM/AJP 800040007 (u. 1)
10	CLAMP. HOSE PR7 - SWM/AJP 8B0099475 (u. 2)
11	HOSE. WATER PUMP PR7 - SWM/AJP 8A0099708 (u. 1)

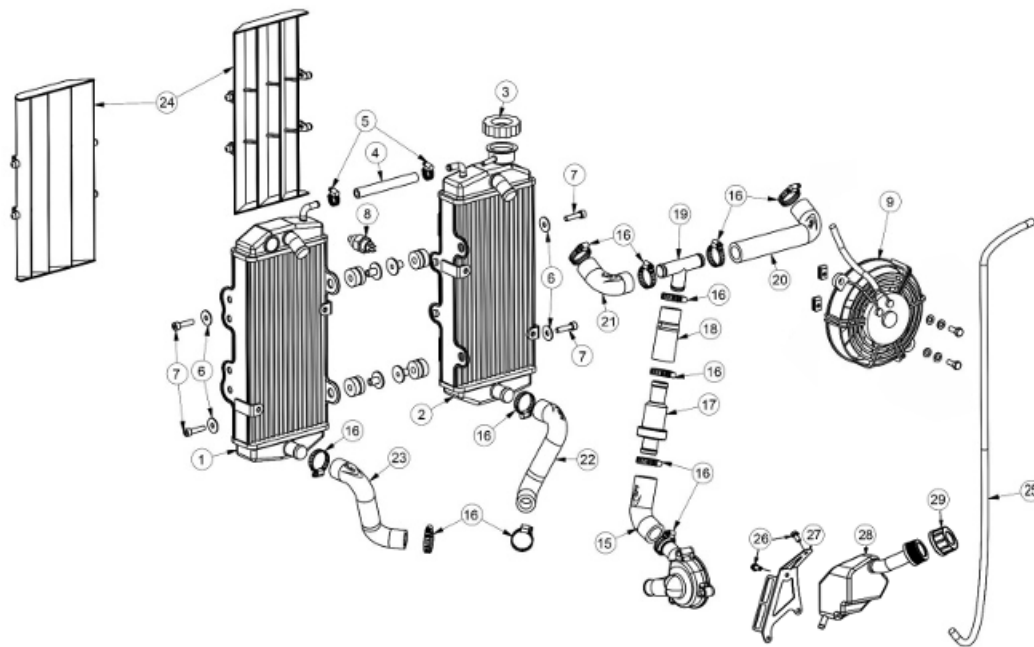 COOLING SYSTEM

 
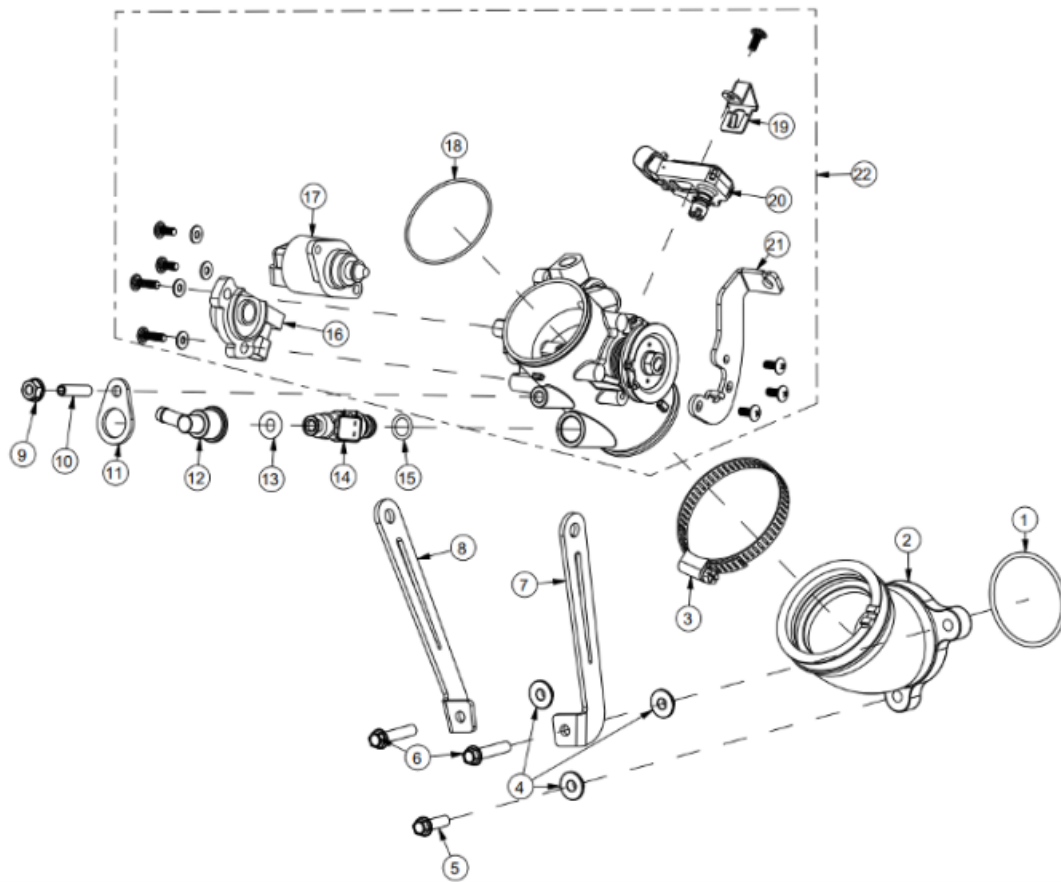 
1	AJP-RADIATOR LH PR7 00MTS01A0200 (u. 1)
2	AJP-RADIATOR RH PR7 (BIG FAN WITH TAMPON) 00MTS01A0199 (u. 1)
3	AJP-RADIATOR PLUG 2013 00MTS01A0136 (u. 1)
4	AJP-BY-PASSE HOSE (8.5X15X110MM) PR7 00MTS01A0215 (u. 1)
5	AJP-CLAMP SERFLEX SX 9 - 14 /5ZYW2B PR7 00MTS01A0216 (u. 2)
6	AJP-WASHER DIN9021 M6 AN9021006000 (u. 4)
7	AJP-SCREW DIN912 M6X25 PF0912006025 (u. 4)
8	AJP-TEMPERATURE SENSOR RADIATOR 100C° PR5 2013 00MTS01A0116 (u. 1)
9	AJP-FAN RH 2013 00MTS01A0135 (u. 1)
15	AJP-WATER TUBE OUT OF ENGINE PR7 00MTS01A0188 (u. 1)
16	AJP-WASHER FOR RADIATOR TUBE PR5 2013 00MTS01A0117 (u. 14)
17	AJP-TERMOSTATO FOR RADIATOR TUBES PR7 00MTS01A0186 (u. 1)
18	AJP-HOSE. HOSE T JOINT THERMOSTAT PR7 00MTS01A0293 (u. 1)
19	AJP-T FOR SOUNDER RADIATOR TEMPERATURE PR7 00MTS01A0218 (u. 1)
20	AJP-WATER TUBE CONNECTION BETWEEN RADIATORS PR7 00MTS01A0187 (u. 1)
21	AJP-HOSE. THERMOSTAT PR7 00MTS01A0217 (u. 1)

22	AJP-WATER TUBE CYLINDER RIGHT RADIATOR PR7 00MTS01A0190 (u. 1)
23	AJP-WATER TUBE CYLINDER LEFT RADIATOR PR7 00MTS01A0191 (u. 1)
24	AJP-FRONT FRAME COVER RH/LH PR7 PLASTIC 00PLS01A0118 (u. 2)
25	AJP-HOSE. BREATHER 9X5X685 PR7 00DES01A0102 (u. 1)
27	AJP-SUPPORT FOR RESERVOIR OF WATER 310 + 510CC 00DES01A0119 (u. 1)
28	EXPANSION TANK SPR E PR7 - SWM/AJP 8000B0612 (u. 1)
29	PLUG FOR EXPANSION TANK SPR AND PR7 - SWM/AJP 800040427 (u. 1)

AIR FILTER BOX

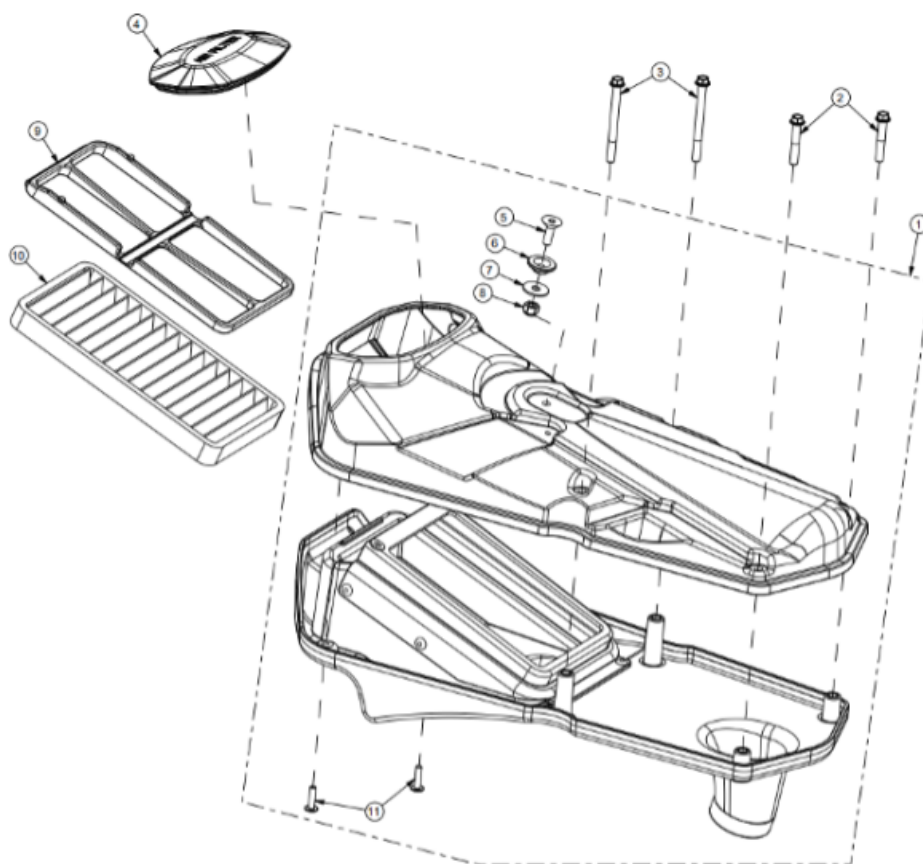


2	AJP-SCREW DIN69FS2 6X35 PR7 PF069FS26035 (u. 2)
3	AJP-SCREW DIN69FS2 6X55 PR7 PF069FS26055 (u. 2)
4	AJP-CAP FILTER PR5 310CC/510 CC 2019 00MTS01A0294 (u. 1)
5	AJP-SCREW DIN7991 M6X20 PF7991006020 (u. 1)
6	AJP-SPACER FOR GUIDE SEAT ASSEMBLY (22X6.5X6) SPR250 + 310 00DES05A0001 (u. 1)
7	AJP-WASHER DIN9021 M6 AN9021006000 (u. 1)
8	AJP-NUT DIN985 M6 PC0985006000 (u. 1)
10	AJP-AIR FILTER SPR250 + 310 + 510CC 00MTS01A0229 (u. 1)

THROTTLE BODY


1	AJP-O-RING 49X3 INTAKE PIPE PR7 00MTS01A0192 (u. 1)
2	AJP-INTAKE PIPE PR7 AND SPR510 00MTS01A0185 (u. 1)
3	AJP-CLAMP INTAKE PIPE W2 40-60PR7 INOX 00MTS01A0202 (u. 1)
5	AJP-SCREW DIN69FS2 6X20 PR7 PF069FS26020 (u. 1)
6	AJP-SCREW DIN6921 M6X25 PF6921006025 (u. 2)
9	AJP-NUT DIN 6923 M6 FOR FUEL PUMP AFTER 10 APRIL 2015 PC6923006000 (u. 1)
10	AJP-DIN916 M6X25 PF0916006025 (u. 1)
11	AJP-SUPPORT SPACER INJECTOR PR7 00MTS01A0206 (u. 1)
12	AJP-INJECTOR SPACER SPR250 +310 AND 510CC 2020 00MTS07A0086 (u. 1)
13	AJP-INJECTOR O-RING (7X4) 00MTS01A0059 (u. 1)
14	AJP-INJECTOR FOR PR7 00MTC01A0092 (u. 1)
15	AJP-O-RING NBR (10X2.5) 00MTS01A0074 (u. 1)
16	AJP-TPS FOR THROTTLE BODY PR7 00MTS01A0194 (u. 1)
17	AJP-IACV FOR TROTTLE BODY PR7 00MTS01A0195 (u. 1)

18	AJP-O-RING THROTTLE BODY 50X1.5 PR7 00MTS01A0201 (u. 1)
19	AJP-PLATE FOR FIXATION TMAP FOR THROTTLE BODY PR7 00MTS01A0204 (u. 1)
20	AJP-TMAP FOR THROTTLE BODY PR5/PR7 00MTS01A0196 (u. 1)
21	AJP-SUPPORT THROTTLE CABLE 310CC + 510CC 00COS01A0060 (u. 1)
22	AJP-THROTTLE BODY SPR 510 00MTS01B0184 (u. 1)

 
FUEL TANK

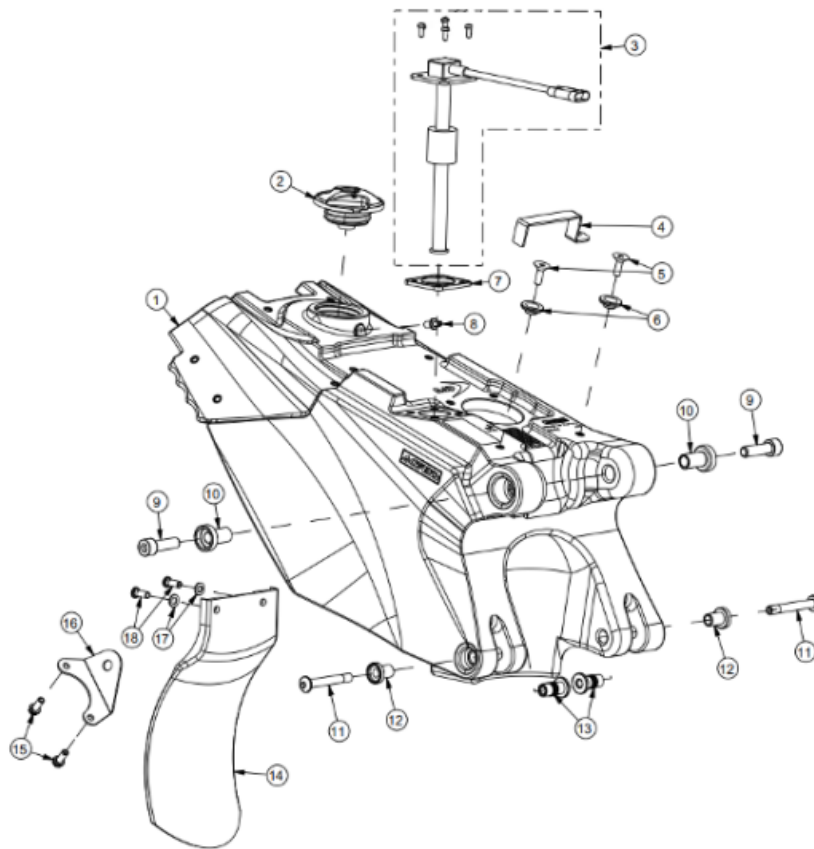

1	AJP-FUEL TANK P310/P510 AND PR5 2020 00DES01A0118 (u. 1)
2	AJP-FUEL CAP ACERBIS AFTER SPR 125/240/310/510 00DES02B0040 (u. 1)
3	AJP-FUEL LEVEL SENSOR PR7 00DES01A0085 (u. 1)
4	AJP-PLATE THREADS FUEL TANK SPR250 + 310 +510 2020 00ELS01A0128 (u. 1)
5	AJP-SCREW DIN7991 M6X16 PF7991006016 (u. 2)
6	AJP-SPACER FOR GUIDE SEAT ASSEMBLY (22X6.5X6) SPR250 + 310 00DES05A0001 (u. 2)
7	AJP-SEAL FUEL LEVEL SENSOR NBR 3MM PR7 00DES01A0042 (u. 1)
8	AJP-SPACER FUEL SPR250 + 310 +510 2020 00DES02A0042 (u. 1)
9	AJP-SCREW DIN912 M10X65 PF0912010065 (u. 2)
10	AJP-UP SPACER FOR FUEL TANK SPR250 + 310 +510CC 2020 00DES01A0124 (u. 2)
11	AJP-SCREW DIN7380 M8X50 PF7380008050 (u. 2)
12	AJP-LOWER SPACER FOR FUEL TANKS EXTERNAL SPR250 + 310 +510CC 00DES05A0002 (u. 2)
13	AJP-LOWER SPACER FOR FUEL TANKS INTERNAL SPR250 + 310 +510CC 00DES05A0003 (u. 2)
14	AJP-MUD GARD 00PLS01A0013 (u. 1)

16	AJP-REINFORCEMENT FUEL TANK FOR EXHAUST SPR250 2020 00MTS06A0068 (u. 1)
17	AJP-WASHER DIN125A M6 AN125A06INOX (u. 2)

 
FUEL PUMP

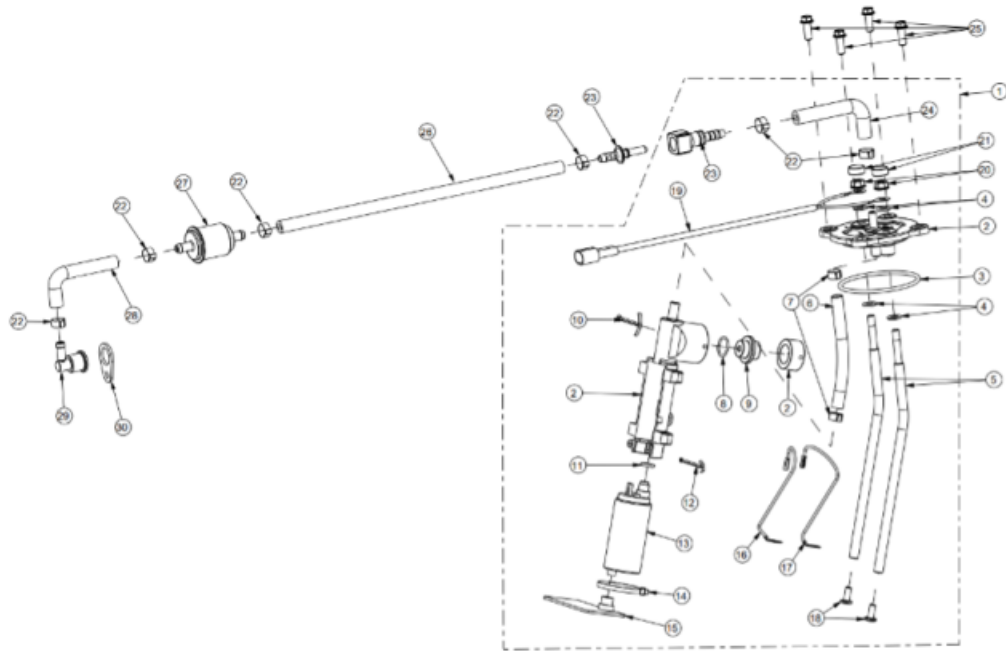

1	AJP-FUEL PUMP SPR 510 00DES01C0123 (u. 0)
2	AJP-PLASTICS PARTS FOR FUEL PUMP AFTER 10 APRIL 2015 00DES01A0069 (u. 1)
3	AJP-O-RING 65X3 NBR 70 FOR FUEL PIMP AFTER 10 APRIL 2015 00DES01A0070 (u. 1)
4	AJP-WASHER DIN125A M6 AN125A006000 (u. 2)
7	AJP-CLAMP 00DES01A0045 (u. 2)
8	AJP-O-RING (14X2) PR7 00DES01A0115 (u. 1)
9	AJP-VALVE FOR FUEL PUMP 3.00 BAR PR7 00DES01A0098 (u. 1)
11	AJP-O-RING 8.50X2 FUEL P7UMP PR5/ PR7 00DES01A0088 (u. 1)
12	AJP-LOCK PIN DIN 94 2X40 00DES01A0133 (u. 1)
13	AJP-ENGINE FOR FUEL PUMP 2015 00DES01A0075 (u. 1)
14	AJP-PLASTIC CLAMP 26 MX 00DES01A0051 (u. 1)
15	AJP-STRAINER FOR FUEL PUMP PR5 AND PR7 00DES01A0041 (u. 1)
18	AJP-SCREW DIN7380 M5X20 PF7380005020 (u. 2)
19	AJP-HARNESS FOR FUEL PUMP PR5/PR7 AFTER 15 APRIL 2015 00ELS01A0091 (u. 1)
20	AJP-NUT DIN 6923 M6 FOR FUEL PUMP AFTER 10 APRIL 2015 PC6923006000 (u. 2)
21	AJP-TAP SCREW FOR FUEL PUMP 2015 00DES01A0080 (u. 2)
22	AJP-CLAMP FUEL TUBE FOR PR5 LC FOR FUEL PUMP AFTER APRIL 2015 00DES01A0079 (u. 6)


23	AJP-FAST FIT FOR FUEL TUBE PR7 00DES01A0105 (u. 1)
25	AJP-SCREW DIN69FS2 6X16 PR7 PF069FS26016 (u. 4)
27	AJP-FUEL FILTER D8MM/ MAHLE PR7 00DES01A0095 (u. 1)
29	AJP-INJECTOR SPACER SPR250 +310 AND 510CC 2020 00MTS07A0086 (u. 1)
30	AJP-SUPPORT SPACER INJECTOR PR7 00MTS01A0206 (u. 1)

 FRAME

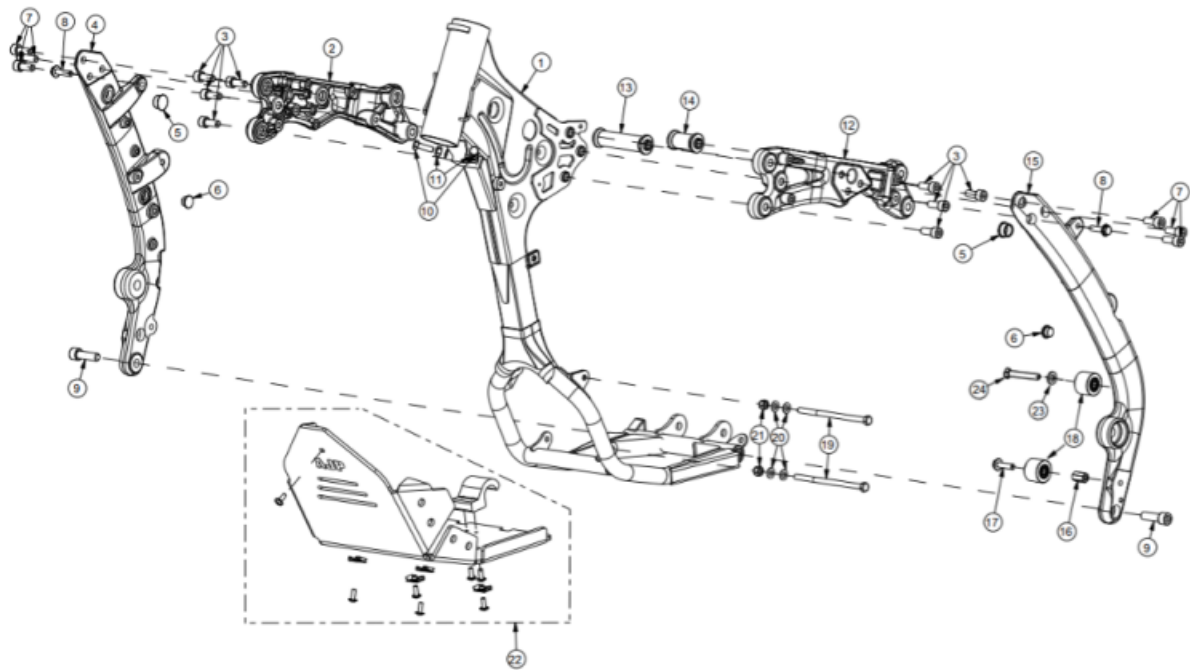

1	AJP-FRAME SPR 310 + 510 00QUS04A0082 (u. 1)
3	AJP-SCREW DIN912 M10X25 PF0912010025 (u. 8)
5	AJP-PLASTIC PLUG 16MM SPR250; 310 AND 510CC 00QUS01A0044 (u. 2)
6	AJP-PLASTIC PLUG 33MM SPR250; 310 AND 510CC 00QUS01A0043 (u. 2)
7	AJP-SCREW (DIN 6912 M10X25) PF0691201025 (u. 6)
8	AJP-SCREW DIN6921 M8X25 PF6921008025 (u. 2)
9	AJP-SCREW DIN912 M12X40 PF0912012040 (u. 2)
10	AJP-SCREW DIN7380 M8X20 PF7380008020 (u. 2)
11	AJP-NUT DIN934 M8 PC093408INOX (u. 2)
13	AJP-INTERNAL SPACER (58X24X16) PR7 & SPR 250 + 310 +510 00STS07A0090 (u. 1)
14	AJP-INTERNAL SPACER (108X24X16) PR7 & SPR 250 + 310 +510 00STS07A0096 (u. 1)
16	AJP-NUT CHAIN ROLLER (M8X22) SPR250 + 310 E 510CC 2020 00QUS07A0075 (u. 1)
17	AJP-SCREW DIN933 M8X35 PF0933008035 (u. 1)
18	AJP-CHAIN ROLLER (40MM) 00QUS01A0022 (u. 2)
20	AJP-WASHER 5/16 00MTS01A0072 (u. 4)
21	AJP-NUT DIN985 M8 PC0985008000 (u. 2)
22	AJP-FRAME COVER SPR 310CC+ 510CC 2021 00MTS01A0310 (u. 1)


24	AJP-SCREW DIN933 M8X40 PF0933008040 (u. 1)
----	---

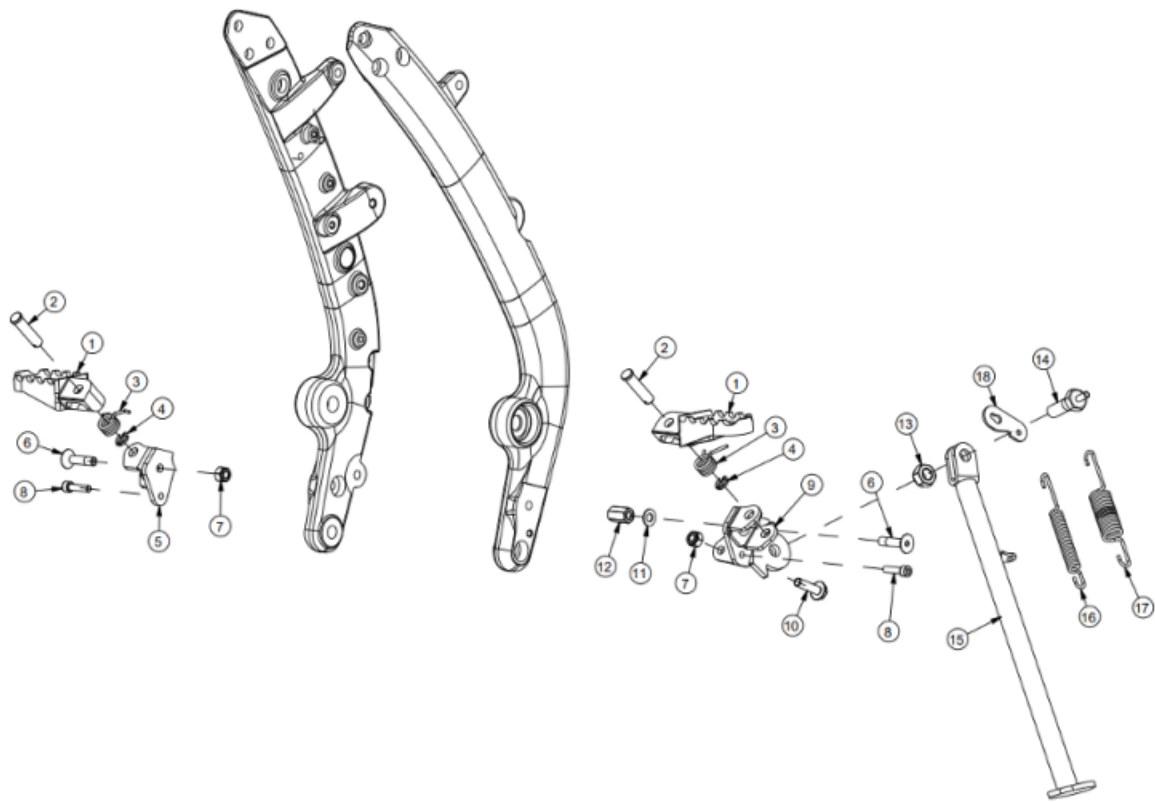 FOOT RESTS AND SIDE STAND


1	AJP-FRONT FOOTPEG LH/RH IN ALLOY EXTREME 00QUS03A0037 (u. 1)
2	AJP-DOWEL FOR FOOTPEG RED EXTREME 2013 00QUS07A0064 (u. 2)
3	AJP-FRONT FOOTPEG SPRING RH EXTREME PR4 /PR5 2013 00QUS07A0062 (u. 2)
4	AJP-SCREW 2.5X20 DIN 94 FOR FOOTPEG EXTREME 00QUS07A0065 (u. 2)
5	AJP-FRONT FOOTPEG HOLDER RH SP250; 310 E 510CC 00QUS07A0073 (u. 1)
6	AJP-SCREW DIN7380 M8X25 PF7380008025 (u. 2)
7	AJP-NUT DIN985 M8 PC0985008000 (u. 2)
8	AJP-SCREW DIN912 M6X35 PF0912006035 (u. 2)
9	AJP-FRONT FOOTPEG HOLDER LH SP250 ; 310 E 510CC 00QUS07A0072 (u. 1)
10	AJP-SCREW DIN6921 M8X25 PF6921008025 (u. 1)
11	AJP-WASHER 5/16 00MTS01A0072 (u. 1)
12	AJP-NUT CHAIN ROLLER (M8X22) SPR250 + 310 E 510CC 2020 00QUS07A0075 (u. 1)
14	AJP-STUD 00QUS04A0016 (u. 1)
15	AJP-SIDE STAND SPR250; 310CC E 510CC 00QUS04A0080 (u. 1)
16	AJP-INNER SPRING 00QUS01A0014 (u. 1)

17	AJP-RESSORT BEQUILLE EXT. 00QUS01A0013 (u. 1)
18	AJP-SPRING HOLDER 00QUS01A0017 (u. 1)

 
FRONT FORKS AND STEERING COLUMN

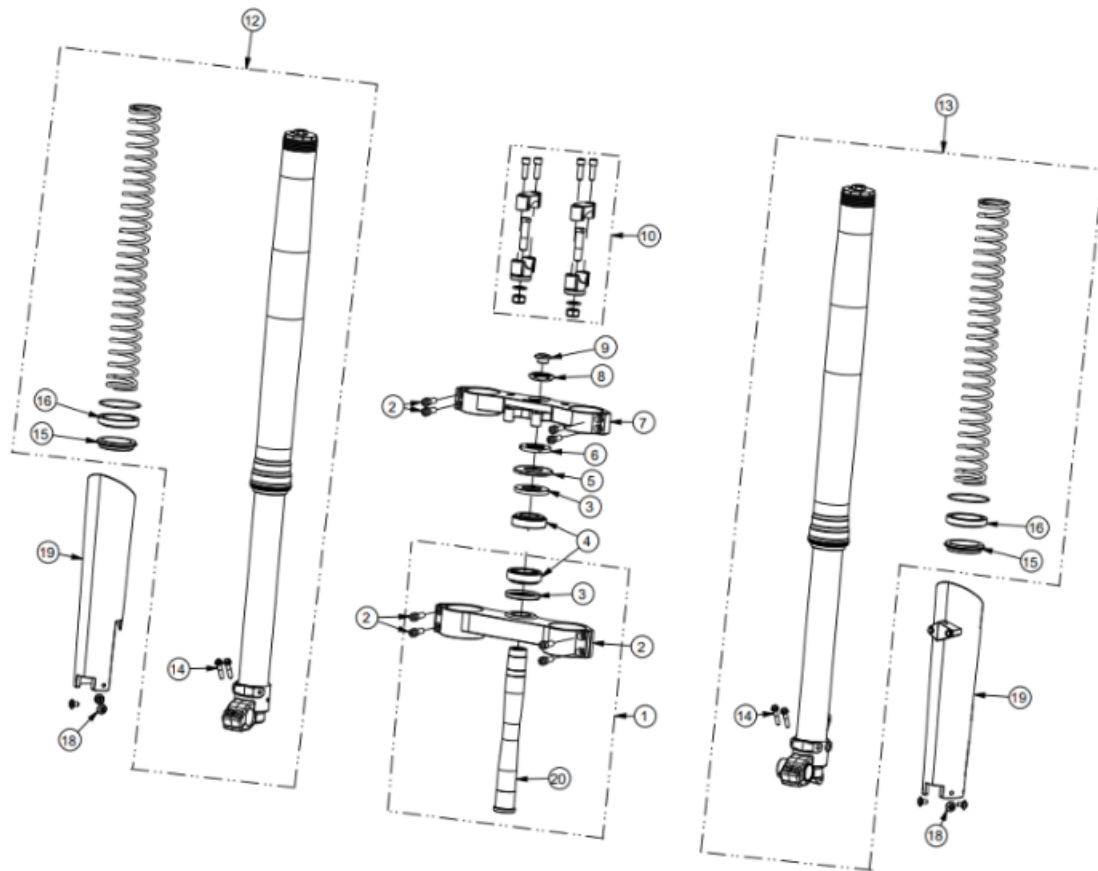

3	AJP-UPPER/LOWER STEER SEAL 00SFS01A0065 (u. 2)
4	AJP-BEARING 32006 PR7 + PR5 2020+ 310CC + 510CC RL00032006JR7 (u. 2)
5	AJP-SEAL COVER 00SFS01A0064 (u. 1)
6	AJP-STEERING NUT 49X28X8 00SFS01A0104 (u. 1)
7	AJP-UPPER BRACKET 00SFS01A0062 (u. 1)
8	AJP-NUT M28X1 00SFS07A0071 (u. 1)
9	AJP-PLUG FOR STEERING STEM FASTACE 2012 00SFS01A0088 (u. 1)
10	AJP-BAR MOUNT PR5 00SFS01A0061 (u. 1)
12	AJP-FRONT FORK RH DOUBLE CIRCUIT 2019 00SFC01A0084 (u. 1)
13	AJP-FRONT FORK LH DOUBLE CIRCUIT 2019 00SFC01A0085 (u. 1)
14	AJP-SCREW DIN6921 M6X30 PF6921006030 (u. 4)
15	AJP-DUST SEAL 00SFS01A0069 (u. 2)
16	AJP-OIL SEAL 00SFS01A0070 (u. 2)
18	AJP-SCREW FOR SET PROTECTOR FOR PR5 00PLS01A0093 (u. 6)

19	AJP-FORK PROTECTOR SET 00PLS01A0077 (u. 1)
20	AJP-STEERING STEM PR5/PR7 00SFS01A0066 (u. 1)

 
SWING ARM

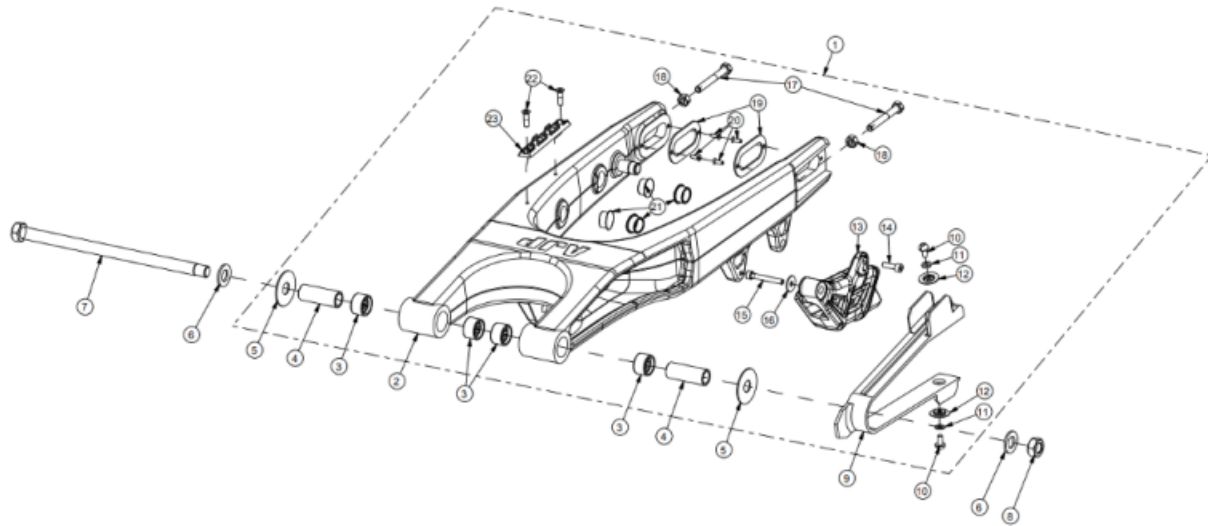

1	AJP-SWING ARM 300CC 00STS02A0088 (u. 1)
2	AJP-SWING ARM 300CC 00STS02A0088 (u. 1)
3	AJP-BEARING HK2020 RS RL00HK2020RS (u. 4)
4	AJP-SPACER 15X20X53 ARM SPR250 +300 +500 00STS07A0074 (u. 2)
5	AJP-WASHER SWINGARM 45X15X1.5 00STS01A0095 (u. 2)
6	AJP-WASHER DIN125A M14 AN125A014000 (u. 2)
7	AJP-PIVOT SHAFT SPR250; 310 E 510CC 00STS07A0094 (u. 1)
8	AJP-NUT DIN934 M14 PC0934014000 (u. 1)
9	AJP-CHAIN TOUCH DEFENSE BUFFER PR7 00PLS01A0121 (u. 1)
11	AJP-WASHER DIN125A M6 AN125A006000 (u. 2)
12	AJP-WASHER 00PLS07A0029 (u. 2)
13	AJP-CHAIN GUIDE PR5 P310 E P 510 MODELS FOR 2020 00STS01C0007 (u. 1)
14	AJP-SCREW DIN912 M6X20 PF0912006020 (u. 1)
15	AJP-SCREW DIN912 M6X40 PF0912006040 (u. 1)
16	AJP-WASHER DIN9021 M6 AN902106INOX (u. 1)
17	AJP-SCREW DIN933 M8X50 PF0933008060 (u. 2)
18	AJP-NUT DIN934 M8 PC0934008000 (u. 2)
19	AJP-PLATE SWIMING ARM SPR250 + 310 +510CC 2020 00STS07A0095 (u. 2)
20	AJP-SCREW DIN7991 M4X10 INOX PF799104010INOX (u. 4)

21	AJP-PLUG IN RUBBER TO BEAM 20MM PR7 00QUS01A0057 (u. 4)
23	AJP-GUIDE OF BRAKE HOSE PR7 + GUIDE HOSE FUEL PR7 00TRS01A0124 (u. 1)

 REAR SUSPENSION LINKAGE

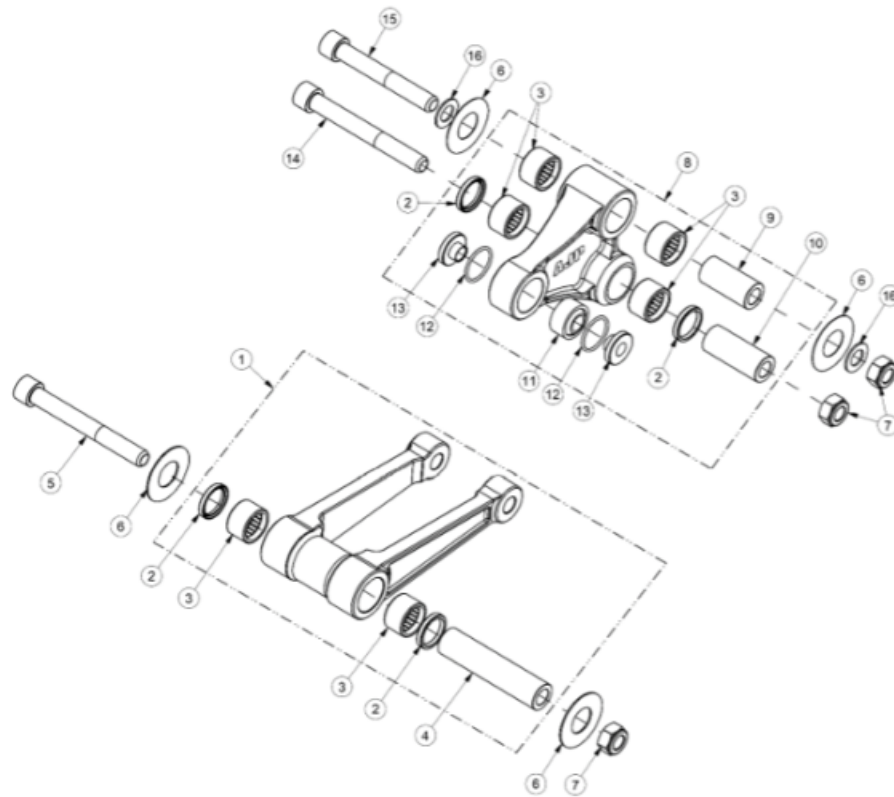

1 AJP-RED FRAME LINK ASSEMBLY MACHINED PR7 AFTER MAY 2019
00STC01A0091 (u. 1)

2 AJP-SEALING 20X26X4 PR7/SPR 250; 310CC AND 510CC
00STS01A0099 (u. 4)

3 AJP-BEARING HK2020 RS
RL00HK2020RS (u. 6)

4 AJP-SPACER 20X87X12 FRAME LINK MAQ. PR7 - AFTER MAY 2019
00STS07A0092 (u. 1)

6 AJP-WASHER 36X20X0.8 PR7/SPR 250; 310CC AND 510CC
00STS01A0098 (u. 4)

7 AJP-NUT DIN985 M12
PC0985012000 (u. 3)

8 AJP-RED ARM LINK ASSEMBLY MACHINED PR7 AFTER MAY 2019
00STC01A0090 (u. 1)

9 AJP-SPACER 12.2X20X42
00STS07A0085 (u. 1)

10 AJP-SPACER 20X87X12 ARM LINK MAQ. PR7 - AFTER MAY 2019
00STS07A0093 (u. 1)

11 AJP-ROD
00STS01A0074 (u. 1)

 
12 AJP-O-RING (22X2)
00STS01A0087 (u. 2)

13 AJP-SPACER
00STS07A0082 (u. 2)


14 AJP-SCREW DIN912 M12X105
PF09120120100 (u. 1)

16 AJP-WASHER DIN125 M12
AN0125012000 (u. 2)


REAR SHOCK ABSORBER

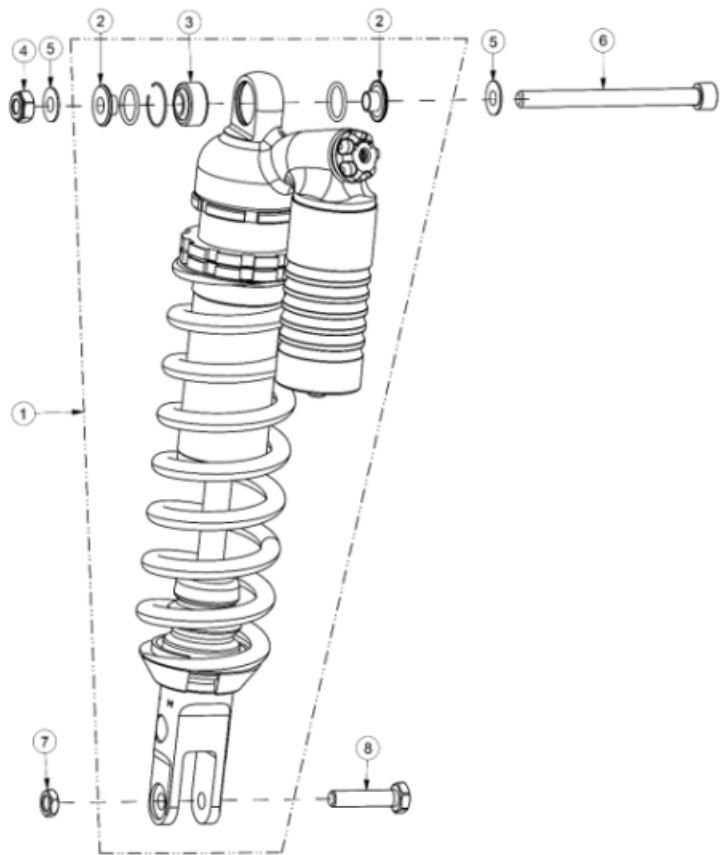

1	AJP-REAR SHOCK ABSORBER (SACHS) 20° SPR250 + 310 +510 E PR7 00STC01A0096 (u. 1)
2	AJP-BUSH (2 MM) PR7 00STS07A0091 (u. 2)
3	AJP-ROD 00STS01A0074 (u. 1)
4	AJP-NUT DIN985 M10 PC0985010000 (u. 1)
6	AJP-SCREW DIN912 M10X90 FOR FRONT ENGINE SUPPORT PR5 2013 PF0912010110 (u. 1)
7	AJP-NUT DIN934 M10 PC0934010000 (u. 1)
8	AJP-SCREW M10X43 00STS07A0076 (u. 1)

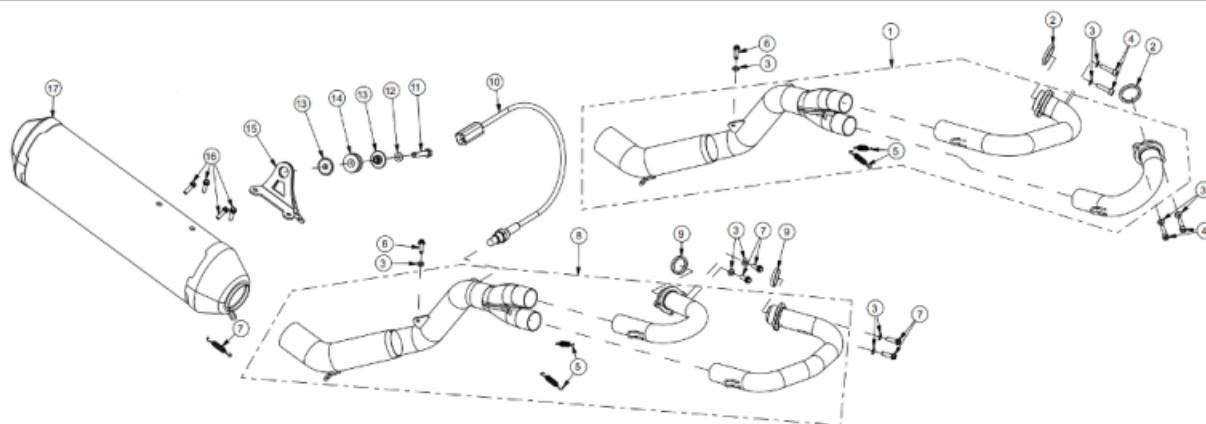 EXHAUST SYSTEM (STANDARD)

 
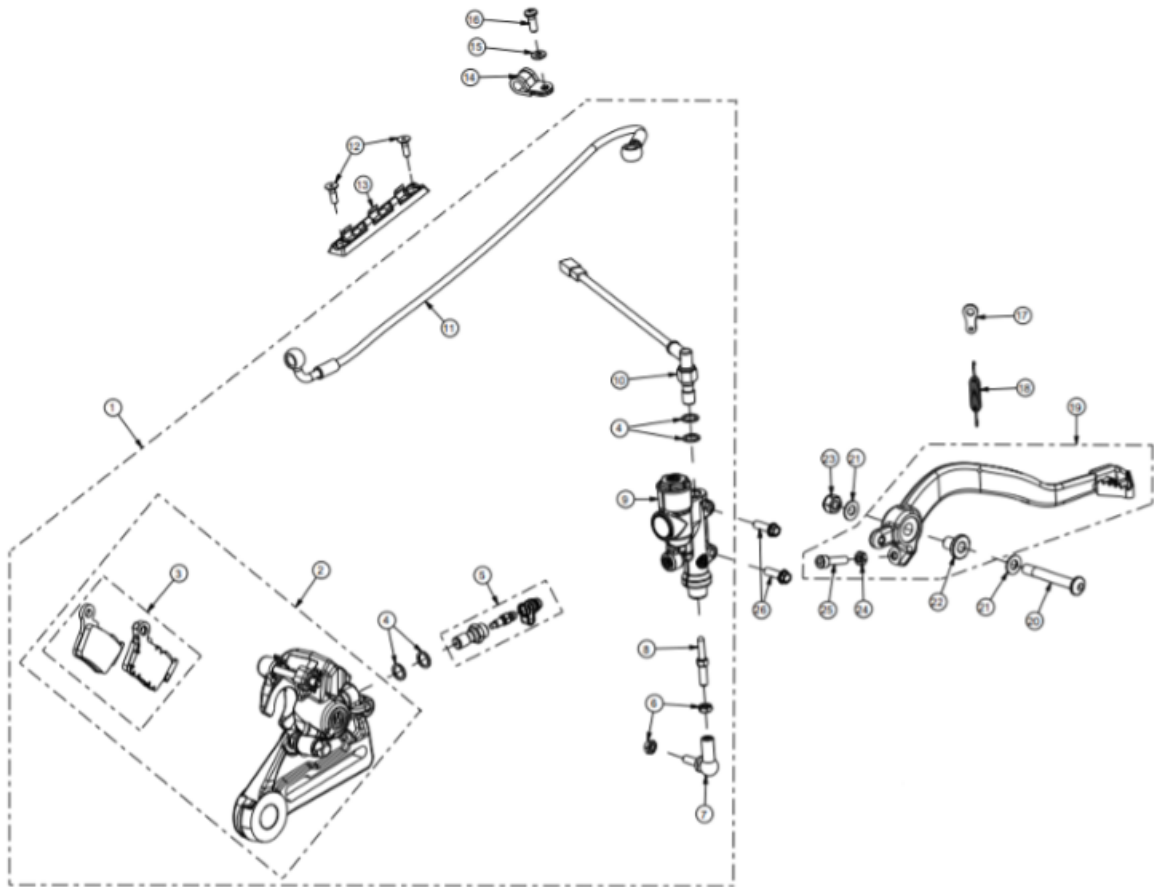 
1	AJP-EXHAUST PIPE GPR SPR 510 00MTS06A0072 (u. 1)
2	EXHAUST GASKET D38-D31 PR7 + SPR510CC - SWM/AJP 8A00A0873 (u. 2)
3	AJP-WASHER DIN127B M8 AN127B008000 (u. 5)
4	AJP-SCREW DIN912 M6X16 PF0912006016 (u. 4)
5	AJP-EXHAUST MUFFLER SPRING 00MTS01A0055 (u. 2)
6	AJP-SCREW DIN69FS2 6X12 PR7 PF069FS26012 (u. 1)
10	AJP-OXYGEN SENSOR 00MTS01A0056 (u. 1)
11	AJP-SCREW DIN933 M8X30 PF0933008030 (u. 1)
12	AJP-WASHER 5/16 00MTS01A0072 (u. 1)
13	AJP-SPACER FOR RUBBER EXHAUST SUPPORT NONE SPR 00MTS01A0325 (u. 2)
14	AJP-RUBBER EXHAUST SUPPORT NONE SPR250 + 310 AND 510CC 00MTS01A0308 (u. 1)
15	AJP-EXHAUST SUPPORT FOR GPR - SPR310 - 510CC 00MTS01A0312 (u. 1)
16	AJP-SCREW DIN69FS2 6X16 PR7 PF069FS26016 (u. 4)
17	AJP-EXHAUST MUFFLER 310/510 - GPR 00MTS03A0029 (u. 1)

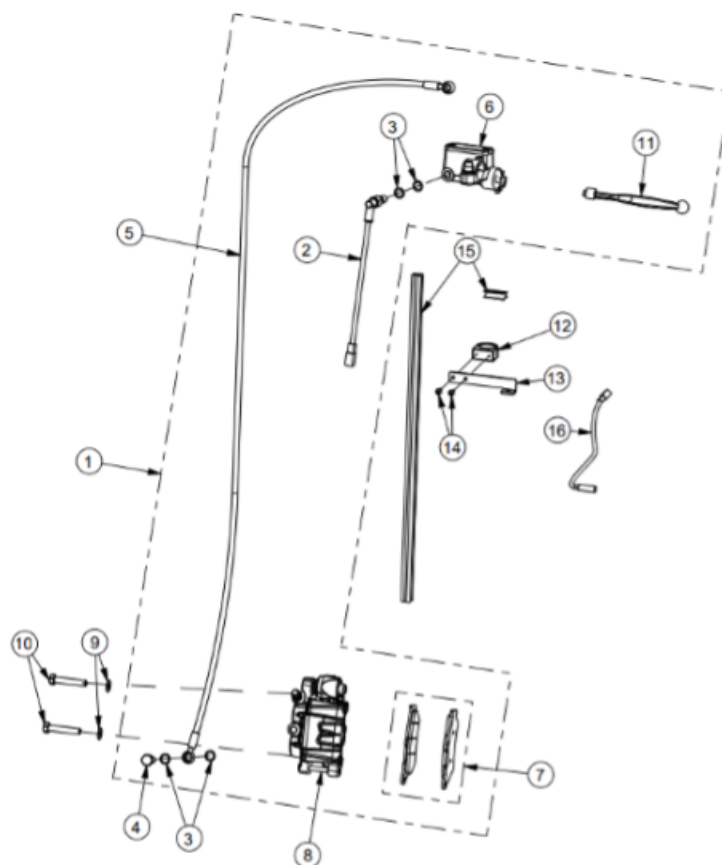FRONT BRAKE SYSTEM (BREMBO)


-	(u. 0)
2	AJP-STOP VALVE 00TRS01A0039 (u. 1)
3	AJP-WASHER 00TRS01A0103 (u. 4)
4	AJP-SCREW M10X1 PR3/PR4/PR5 2012 00TRS01A0025 (u. 1)
5	AJP-FRONT BRAKE HOSE SPR310 AND 510CC 00TRS01A0168 (u. 1)
6	AJP-FRONT MASTER CYLINDER. BREMBO SPR310/510CC 2020 00TRS01A0153 (u. 1)
7	AJP-FRONT PAD KIT SPR 00TRS01A0162 (u. 1)
8	AJP-FRONT CALIPER ASSY. BREMBO SPR310/510 2021 00TRS01A0152 (u. 1)
9	AJP-WASHER DIN6798 M8X14X0.8 AN67980801408 (u. 2)
10	AJP-SCREW DIN933 M8X35 PF0933008035 (u. 2)
11	AJP-BRAKE LEVER SPR 310/510 00TRS01A0164 (u. 1)
12	AJP-HOLDER 00PLS01A0042 (u. 1)
14	AJP-SCREW 3.5 PF7981003513 (u. 2)
15	AJP-SENSOR CABLE HOSE KIT 466MM/30MM PR7 00TRS01A0132 (u. 1)

16	AJP-SPEEDOMETER SENSOR BREMBOPR7 AFTER MAY (1400MM) 2019 00ELS01B0088 (u. 1)
----	---


REAR BRAKE SYSTEM (BREMBO)



-	(u. 0)
-	(u. 0)
2	AJP-REAR MASTER CYLINDER. BREMBO SPR310/510 2021 00TRS01A0155 (u. 1)
3	AJP-REAR PAD KIT SPR 00TRS01A0163 (u. 1)
4	AJP-WASHER 00TRS01A0103 (u. 2)
5	AJP-SCREW FOR REAR MASTER CYLINDER. BREMBO SPR310/510 2021 00TRS01A0156 (u. 1)
6	AJP-NUT DIN934 M6 PC0934006000 (u. 2)
7	AJP-PUSH ROD PA7340 M6 FOR REAR BRAKE PEDAL 00TRS06A0006 (u. 1)
8	AJP-SCREW FOR REAR BRAKE PEDAL 310 AND 510CC 00TRS07A0109 (u. 1)
9	AJP-REAR MASTER CYLINDER. BREMBO SPR310/510 2021 00TRS01A0155 (u. 1)
10	AJP-STOP VALVE 00TRS01A0039 (u. 1)
11	AJP-REAR BRAKE HOSE SPR125 AND 240CC 00TRS01A0167 (u. 1)
13	AJP-GUIDE OF BRAKE HOSE PR7 + GUIDE HOSE FUEL PR7 00TRS01A0124 (u. 1)
14	AJP-HOLDER 00TRS01A0037 (u. 1)
15	AJP-WASHER DIN125A M6 AN125A06INOX (u. 1)

16	AJP-SCREW DIN7380 M6X12 PF73806012INOX (u. 1)
17	AJP-SUPPORT SPRING REAR BRAKE PEDAL PR5 2013 END/EXTREME 00TRS07A0093 (u. 1)
18	AJP-SPRING REAR BRAKE PEDAL SPR310 AND 510CC 00TRS07A0108 (u. 1)
19	AJP-REAR BRAKE PEDAL RED 6MM PR7 00TRS07A0096 (u. 1)
20	AJP-SCREW DIN7380 M8X50 PF7380008050 (u. 1)
21	AJP-WASHER 5/16 00MTS01A0072 (u. 2)
22	AJP-SPACER REAR BRAKE PEDAL RED 17X10X8 PR7 00TRS07A0100 (u. 1)
23	AJP-NUT DIN985 M8 PC0985008000 (u. 1)
24	AJP-NUT DIN934 M6 PC0934006000 (u. 1)
25	AJP-SCREW DIN912 M6X30 PF0912006030 (u. 1)
26	AJP-SCREW DIN69FS2 6X20 PR7 PF069FS26020 (u. 2)

 FRONT WHEEL

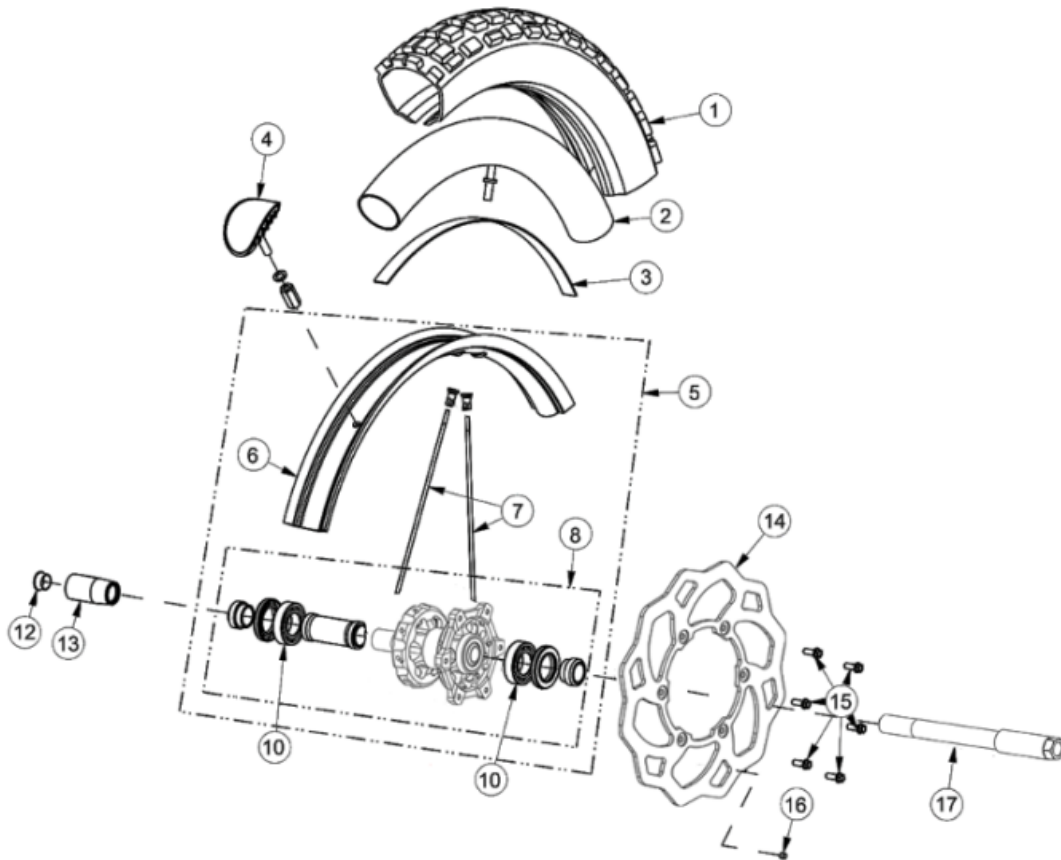

- (u. 0)

1 AJP-TIRE MICHELIN EN 90/90-21"
00RFS01A0002 (u. 1)

2 AJP-INNER TUBE EN
00RFS01A0005 (u. 1)

3 AJP-WHEEL RIM TAPE 21"
00RFS01A0023 (u. 1)

4 AJP-FRONT TIRE FIXATION 1.60
00RFS01A0061 (u. 1)

5 AJP-FRONT WHEEL BLACK RIM + RED HUB 1.60X21 SPR310 + 510
00RFS01A0144 (u. 1)

6 AJP-FRONT RIM BLACK 1.60X21 PR7
00RFS01A0132 (u. 1)

7 AJP-SPOKE + NIPPLE FRONT WHEEL 228X4MM 310/P510 2020
00RFS01A0142 (u. 36)

8 AJP-FRONT HUB P310/P510 2020
00RFS01A0141 (u. 1)

10 AJP-BEARING 6005 2RS
RL00060052RS (u. 2)

12 AJP-PLASTIC PLUG. AXLE (20 MM) PR7
00RFS01A0139 (u. 1)


13 AJP-SPACER FRONT AXLE PR7
00RFS05A0060 (u. 1)

14 AJP-FRONT DISC 260MM FOR 310/P510 2020
00RFS01A0143 (u. 1)

15 AJP-SCREW DIN69FS2 6X16 PR7
PF069FS26016 (u. 6)

16	AJP-FRONT DISC MAGNET 00RFS01A0042 (u. 1)
17	AJP-FRONT AXLE PR7 + 310 E 510CC 00RFS05A0059 (u. 1)

 
REAR WHEEL

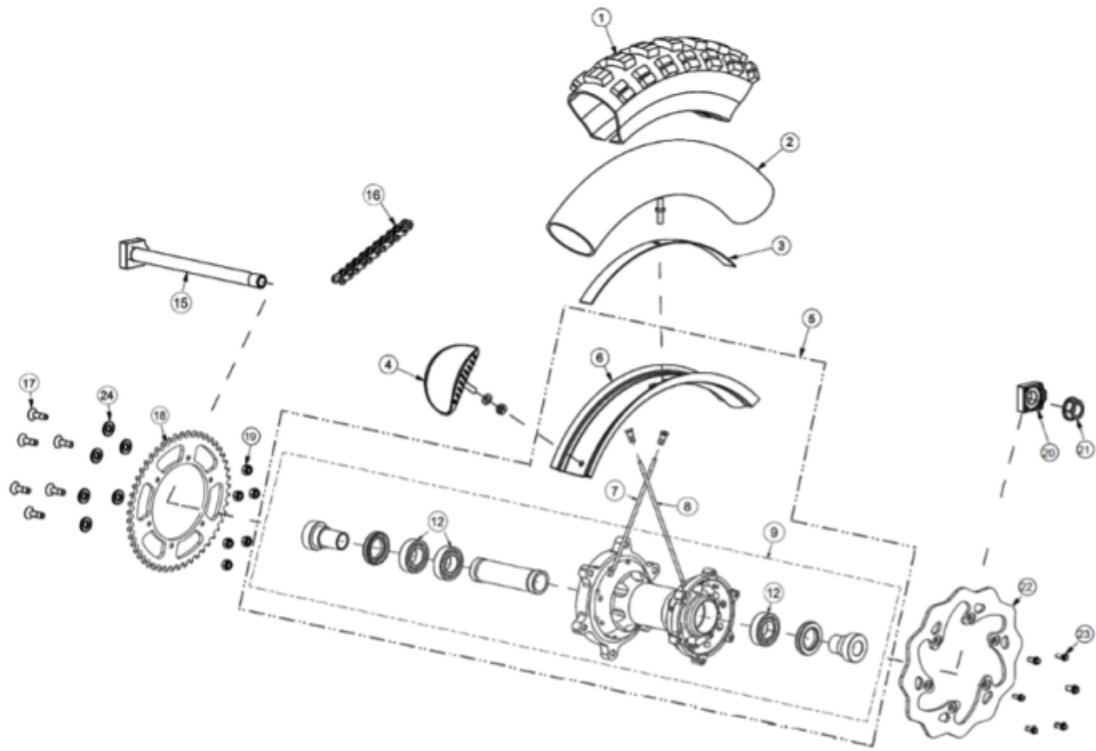

1	AJP- Tire, Rear, SPR310 00RTS01A0093 (u. 1)
2	AJP-INNER TUBE TR 120/90-18 00RTS01A0005 (u. 1)
3	AJP-WHEEL RIM TAPE 1.60/2.00X 18/19 00RTS01A0025 (u. 1)
4	AJP-RIM LOCK 2.15 00RTS01A0052 (u. 1)
5	AJP-REAR WHEEL BLACK RIM + RED HUB 2.15X18 SPR310+ 510CC 00RTS01A0164 (u. 1)
6	AJP-REAR RIM BLACK 2.15X18 300CC+ 500CC 00RTS01A0158 (u. 1)
7	AJP-SPOKE + NIPPLE REAR WHEEL LEFT SIDE 198X4MM 310/P510 2020 00RTS01A0161 (u. 18)
8	AJP-SPOKE + NIPPLE REAR WHEEL RIGHT SIDE 195X4MM 310/P510 2020 00RTS01A0162 (u. 18)
9	AJP-REAR HUB P310/P510 2020 00RTS01A0160 (u. 1)
12	AJP-BEARING 6005 2RS RL00060052RS (u. 3)
15	AJP-REAR SHAFT 265MM SPR250; 310 + 510CC 00RTS07A0086 (u. 1)
16	AJP-CHAIN 520H - 112 ORMX GOLD 00RTS01A0145 (u. 1)
17	AJP-VIS DIN79914 M8X30 PF7991008030 (u. 6)
18	AJP-SPROCKET JTR822-48 PR4 BRASIL MORAD 00RTS01A0122 (u. 1)
19	AJP-NUT DIN985 M8 PC0985008000 (u. 6)

20	AJP-CHAIN ADJUSTER REAR WHEEL PR7 00RTS02A0043 (u. 1)
21	AJP-NUT REAR WHEEL DIN74361-2 M20X1.5 PR7 00RTS01A0139 (u. 1)
22	AJP-REAR BRAKE DISC FOR SPR310 + P510 00RTS01A0163 (u. 1)
23	AJP-SCREW DIN69FS2 6X16 PR7 PF069FS26016 (u. 6)

 
HANDLEBAR, CONTROLS AND SWITCHES

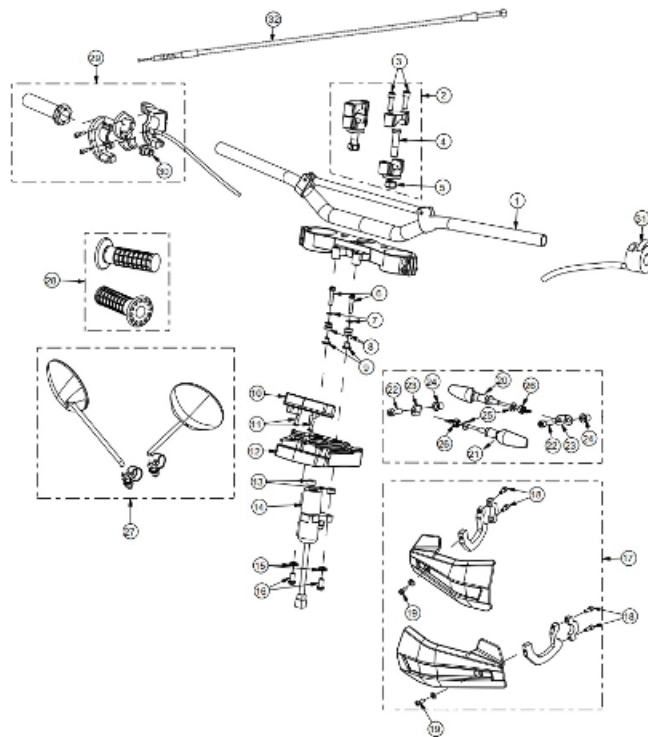

1	AJP-HANDLEBAR PR5 + P310 + P510 2020 (JOBA R9012BK) 00COS01A0059 (u. 1)
2	AJP-BAR MOUNT PR5 00SFS01A0061 (u. 1)
3	AJP-SCREW DIN912 M8X20 PF0912008020 (u. 2)
6	AJP-SCREW DIN69FS2 6X16 PR7 PF069FS26016 (u. 2)
8	AJP-CUSHION 00COS01A0016 (u. 2)
9	AJP-SPACER 00COS07A0030 (u. 2)
10	AJP-SPEEDOMETER SPR250 + P310 E P510 2020 00ELS01A0113 (u. 1)
12	AJP-SPEEDOMETER COVER PR5 +310 +510CC 2020 00ELS01A0114 (u. 1)
13	AJP-SPACER IGNITION SPR 250 + 310 + 510CC (8X15X6.5) 2020 00ELS07A0051 (u. 2)
14	AJP-IGNITION SWITCH ASSEMBLY SPR 250 + 310 + 510CC 2020 00COS01A0061 (u. 2)
15	AJP-SPACER 16X4.4X6 00COS07A0015 (u. 2)
16	AJP-SCREW DIN6921 M6X30 PF6921006030 (u. 1)
17	AJP-HAND GARDS WHITE 00PLS01A0073 (u. 1)
20	AJP-TURN LAMP ASSEMBLY LH PR7 AFTER MAY 2019 00ELC01A0013 (u. 1)
21	AJP-TURN LAMP ASSEMBLY RH PR7 AFTER MAY 2019 00ELC01A0012 (u. 1)
25	AJP-WASHER DIN9021 M8 AN9021008000 (u. 2)


26	AJP-NUT DIN934 M8 PC0934008000 (u. 2)
27	AJP-REAR VIEW MIRROR 00COS01A0021 (u. 1)
28	AJP-SET OF GRIPS PR7 00COC01C0003 (u. 1)
29	AJP-THROTTLE CONTROL ASSEMBLY RED/BLACKSPR240 EXTREME +310CC + 5 00COC01B0002 (u. 1)
30	AJP-THROTTLE CABLE TUNNER 00COS01A0037 (u. 1)
31	AJP-LIGHTS SWITCH SPR250/310 AND 510 00ELC01A0058 (u. 1)
32	AJP-THROTTLE CABLE PR5 00COS01A0032 (u. 1)

 HYDRAULIC CLUTCH CONTROL

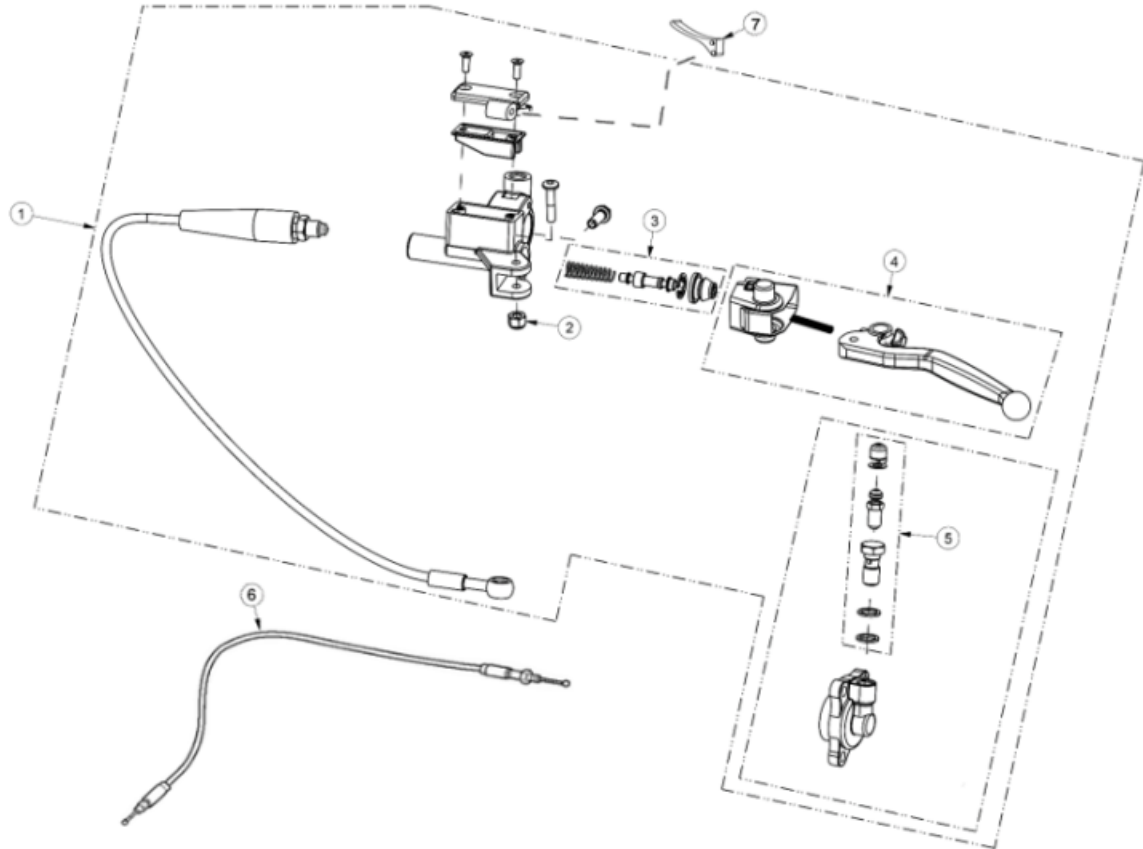


- | | |
|---|---|
| 1 | CLUTCH CONTROL SYSTEM PR7 + 310 + 510CC - SWM/AJP
F000A00036 (u. 1) |
| 2 | AJP-NUT DIN985 M5
PC0985050000 (u. 1) |
| 3 | KIT PISTON PUMP CLUTCH (9.5MM) PR7 AND SPR 510 + 310 - SWM/AJP
F000A00797 (u. 1) |
| 4 | CLUTCH LEVER KIT PR7 - SWM/AJP
F000A00800 (u. 1) |
| 5 | RACORD KIT PR7 + SPR310/510CC - SWM/AJP
F000A00799 (u. 1) |
| 6 | CONTROL CABLE SPR 310 /510 - SWM/AJP
8000A7777 (u. 1) |
| 7 | AJP-DECOMPRESSION LEVER SPR 310/510
00COS01A0064 (u. 1) |

 ELECTRIC HARNESS

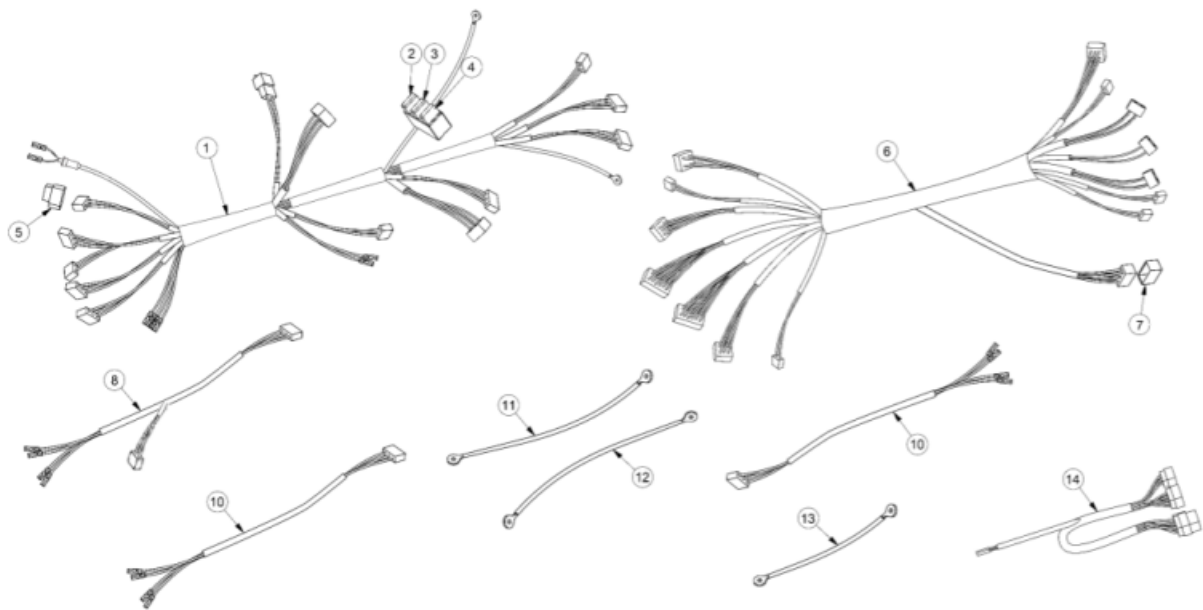


1	AJP-ELECTRICAL SYSTEM HARNESS SPR250 + 310 E 510 2020 00ELS01A0115 (u. 1)
2	AJP-FUSE 00ELS01A0017 (u. 1)
3	AJP-FUSE 15A 00ELS01A0047 (u. 1)
4	AJP-FUSE. 10A (RED) PR7 00ELS01A0109 (u. 1)
5	AJP-DIOD. RADIATOR FAN PR5/PR7 00ELS01A0110 (u. 1)
6	AJP-INJECTION SYSTEM HARNESS SPR250 +310 + 510CC 2020 00ELS01A0116 (u. 1)
14	AJP-SPEEDOMETER WIRING SPR250 + 310 +510 2020 00ELS01A0126 (u. 1)

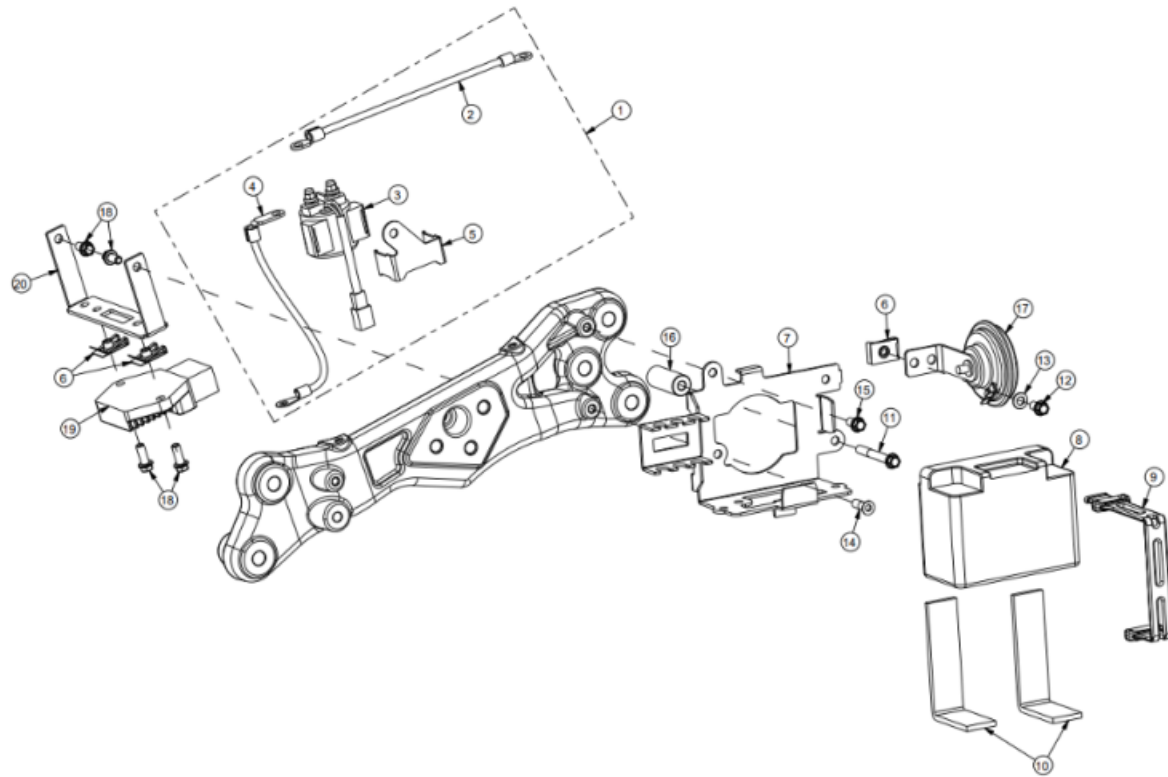  BATTERY, VOLTAGE REGULATOR, STARTER RELAY AND HORN


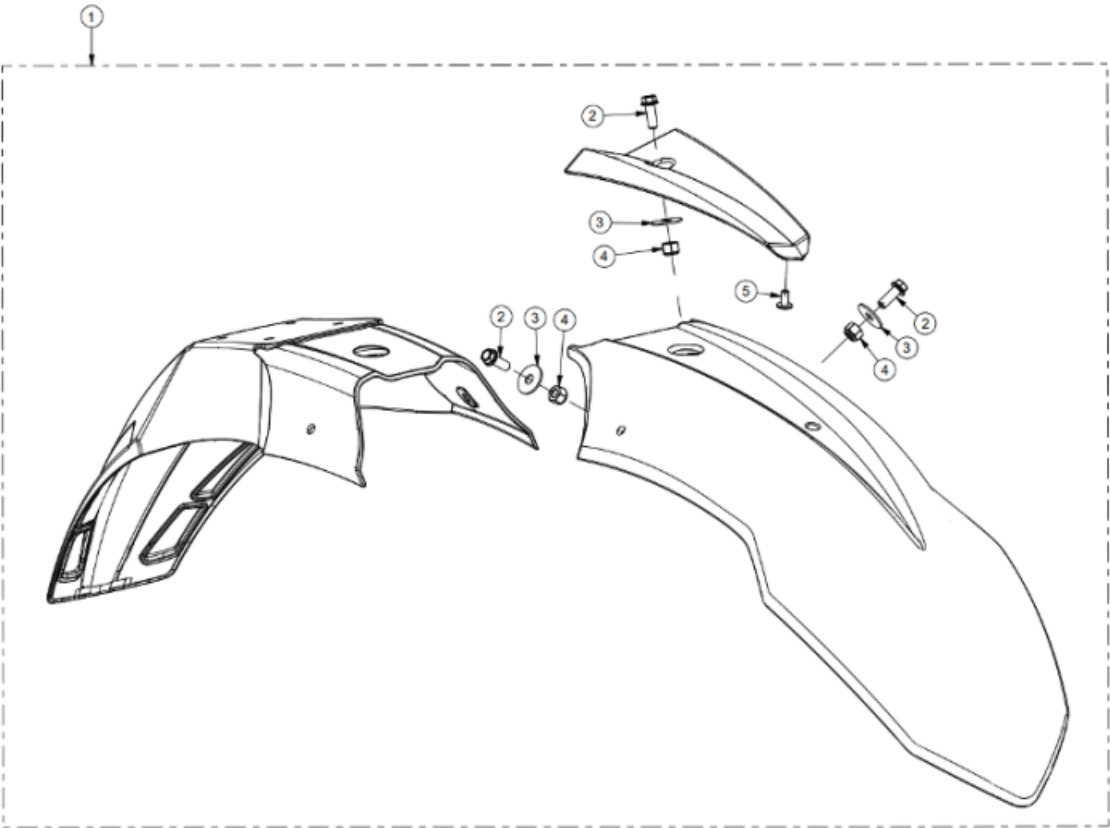 
1	AJP-COMPLETE STARTER ASSEMBLY 00ELC01A0052 (u. 1)
3	AJP-STARTER RELAY 93A283100000 (u. 1)
5	AJP-SUPPORT FOR STARTER RELAY SP 250/310 E 510CC 00ELS07A0047 (u. 1)
6	AJP-SPRING FOR FAN PR5 2013 00MTS01A0123 (u. 3)
7	AJP-BATTERY HOLDER SP 250 ; 310 AND 510CC 00ELS04A0044 (u. 1)
8	AJP-BATTERY BSLI-02 SPR 250 + 300 + 500 2020 00ELS01A0125 (u. 1)
9	AJP-BAND 00ELS01A0004 (u. 1)
11	AJP-SCREW DIN69FS2 6X50 PR7 PF069FS26050 (u. 1)
13	AJP-WASHER DIN125A M6 AN125A06INOX (u. 1)
14	AJP-SCREW DIN7991 M6X16 PF7991006016 (u. 1)
15	AJP-SCREW DIN69FS2 6X12 PR7 PF069FS26012 (u. 1)
16	AJP-SPACER FOR BATTERY SUPPORT (39X16X6.5) SPR250 + 310 + 510CC 00MTS07A0088 (u. 1)
17	AJP-HORN 12V CC 00ELS01A0005 (u. 1)
18	AJP-SCREW DIN69FS2 6X16 PR7 PF069FS26016 (u. 4)
19	AJP-RECTIFIER SPR310+ 510CC 00ELS01A0133 (u. 1)

RELAYS, IGNITION COIL AND ECU

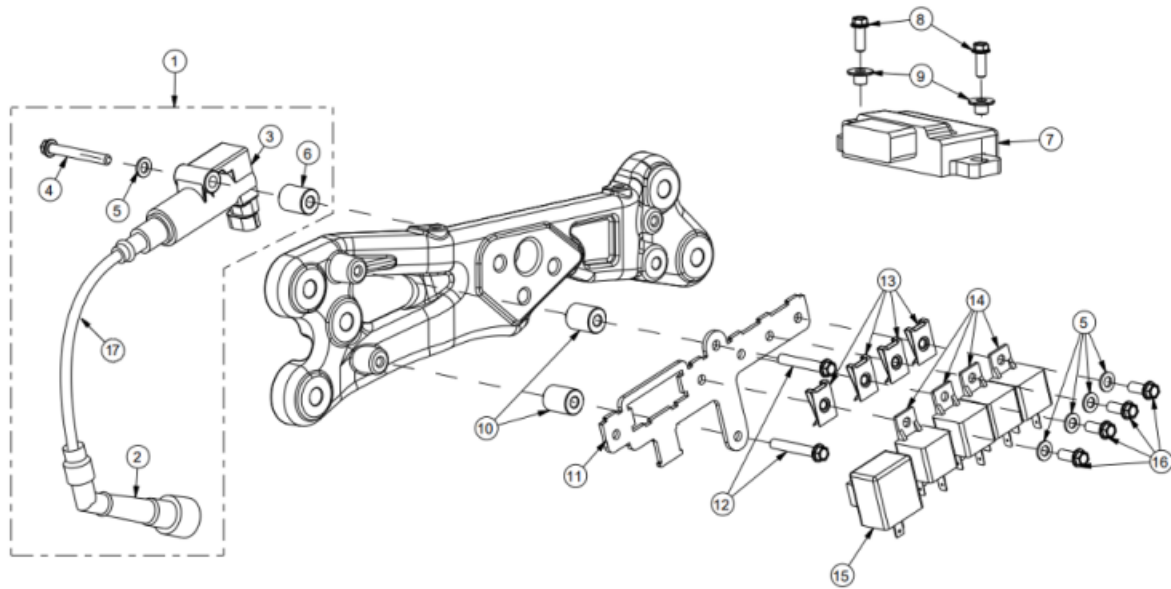

1	AJP-IGNITION COIL 00ELS01A0043 (u. 1)
2	CAP. SPARK PLUG PR7 - SWM/AJP 8000A6740 (u. 1)
3	AJP-IGNITION COIL 00ELS01A0043 (u. 1)
4	AJP-SCREW DIN69FS2 6X50 PR7 PF069FS26050 (u. 1)
5	AJP-WASHER DIN125A M6 AN125A06INOX (u. 5)
6	AJP-SPACER IGNITION SPR 250 + 310 + 510CC (8X15X6.5) 2020 00ELS07A0051 (u. 1)
7	AJP-ECU ATHENA SINCE JUNE 2020 00MTS01M0038 (u. 1)
8	AJP-SCREW DIN69FS2 6X16 PR7 PF069FS26016 (u. 2)
9	AJP-ECU SPACER SPR 250 + 310 + 510 2020 00MTS01A0306 (u. 2)
10	AJP-SPACER RELAY SUPPORT SPR 250 + 310 + 510CC (20X16X6.5) 2020 00ELS07A0052 (u. 2)
11	AJP-RELAY SUPPORT OBD SPR250 + 310 +510 2020 00ELS01A0127 (u. 1)
12	AJP-SCREW DIN69FS2 6X35 PR7 PF069FS26035 (u. 2)
13	AJP-SPRING FOR FAN PR5 2013 00MTS01A0123 (u. 4)
14	AJP-INJECTION RELAY 00ELS01A0045 (u. 4)
15	AJP-TURN LIGHTS RELAY LEDS AFTER MAY 2019 00ELS01A0112 (u. 1)
17	AJP-CABLE. IGNITION COIL (7X320MM) SPR 250 / 310 / 510 00ELS01A0138 (u. 1)

FRONT FENDER



AJP-FRONT FENDER SPR125 +240 +250 P310/P510
00PLS01A0130 (u. 1)

1 AJP-FRONT FENDER SPR250/310/510 BLACK
00PLS01B0130 (u. 1)

 
AJP-FRONT FENDER SM WHITE
00PLS01A0072 (u. 1)

3 AJP-WASHER DIN9021 M6
AN902106INOX (u. 3)

4 AJP-NUT DIN985 M6
PC0985006000 (u. 3)

5 AJP-SCREW 3.5
PF7981003513 (u. 1)


REAR FENDER

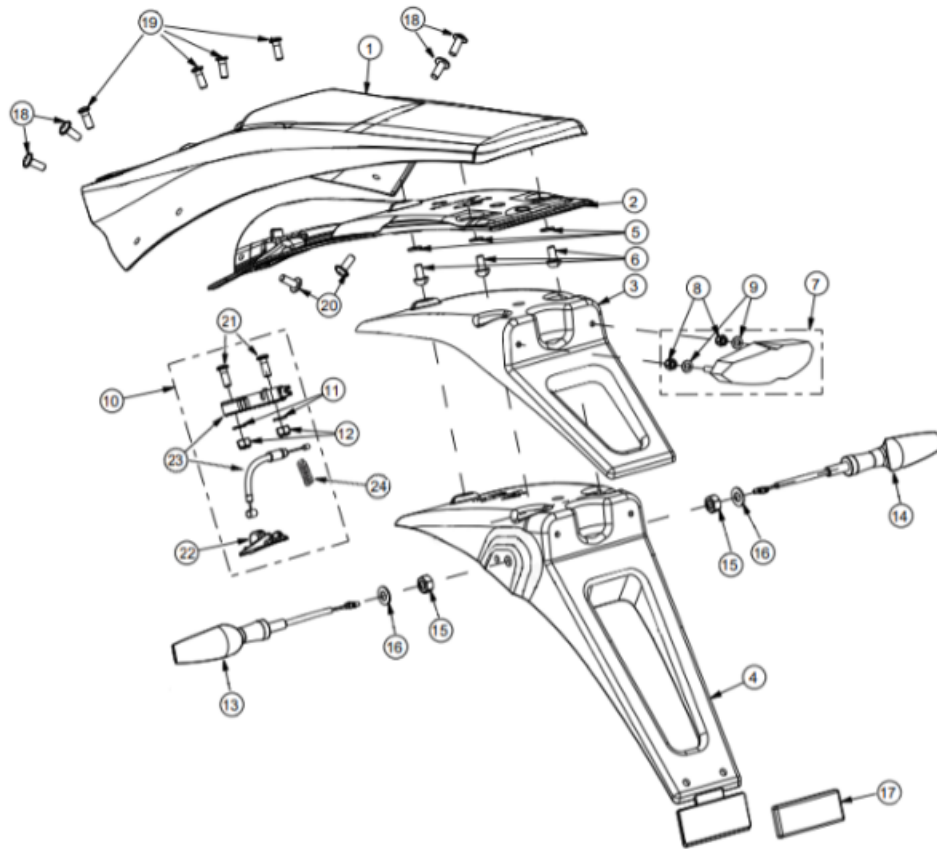

1	AJP-REAR FENDER SPR125 + 240 + 250 E P310/P510 00PLS01A0129 (u. 1)
	AJP-REAR FENDER SPR 250 E P310/P510 BLACK 00PLS01B0129 (u. 0)
2	AJP-FRONT COVER RH PR5 AND P310/P510 2020 00PLS01A0132 (u. 1)
3	AJP-SUPPORT MORE SHORT FOR PLATE PR7 00PLS01A0125 (u. 1)
4	AJP-SUPPORT FOR PLATE SPR 00PLS01B0107 (u. 1)
5	AJP-WASHER DIN9021 M6 AN902106INOX (u. 3)
6	AJP-SCREW DIN7380 M6X16 INOX PF73806016INOX (u. 3)
7	AJP-REAR TAIL LIGHT PR7 00ELS01A0090 (u. 1)
9	AJP-WASHER DIN125A M6 AN125A005000 (u. 2)
10	AJP-SEAT LOCK SET 00COS01A0066 (u. 1)
12	AJP-NUT DIN985 M6 PC0985006000 (u. 2)
13	AJP-TURN LAMP ASSEMBLY LH PR7 AFTER MAY 2019 00ELC01A0013 (u. 1)
14	AJP-TURN LAMP ASSEMBLY RH PR7 AFTER MAY 2019 00ELC01A0012 (u. 1)
15	AJP-NUT DIN934 M8 PC0934008000 (u. 2)


16	AJP-WASHER DIN9021 M8 AN9021008000 (u. 2)
17	AJP-REFLECTOR SIM IAE902.0079 RED PR3/PR4/PR5 E PR7 00ELS01A0101 (u. 1)
19	AJP-SCREW DIN7380 M6X12 PF73806012INOX (u. 4)
20	AJP-SCREW DIN7380 M6X12 PF73806012INOX (u. 2)
21	AJP-SCREW DIN7380 M6X20 PF73806020INOX (u. 2)
22	AJP-HANDLE. SEAT LOCK 00COS01A0067 (u. 1)
23	AJP-CLOSE + CABLE SPR 125 +240 +250 + 310 + 510CC 2020 00COS01A0062 (u. 1)
24	AJP-SPRING FOR SEAT SPR250+ 310 E 510 2020 00BAS01A0211 (u. 1)

 SIDE FENDERS AND SEAT

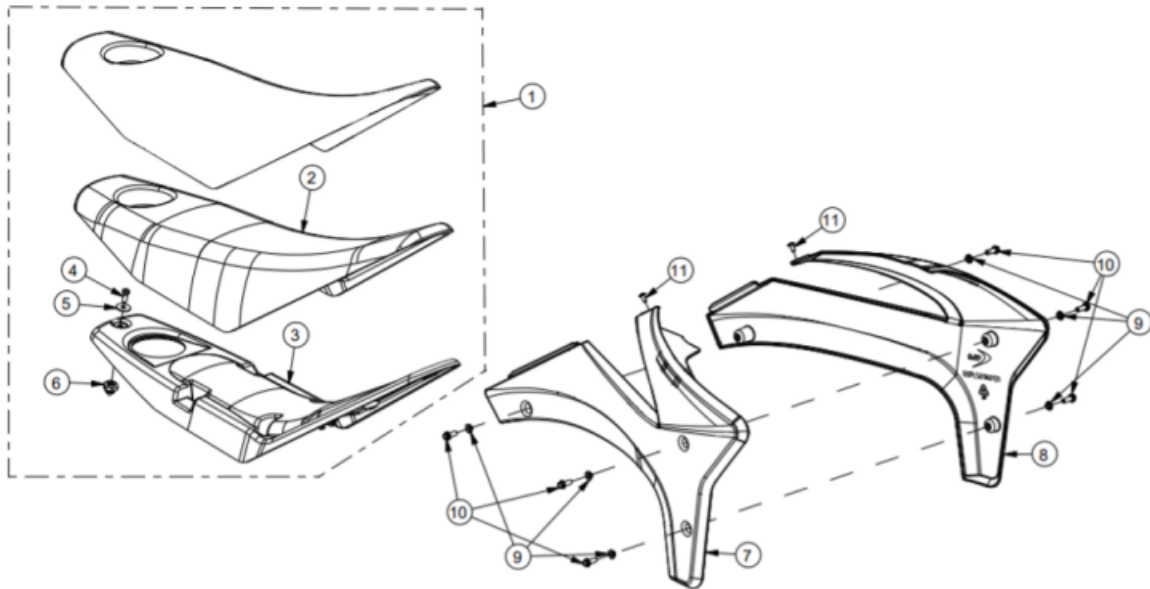


1	AJP-SEAT ASSEMBLY SPR310 SINCE APRIL 2021 00BAC01A0089 (u. 1)
2	AJP-FOAM SADDLE SPR 5 310 AND 510 2020 00BAS01A0209 (u. 1)
3	AJP-SEAT BASE P310/P510 00BAS01A0197 (u. 1)
4	AJP-SCREW ISO7380 M6X8 PF0738006008 (u. 1)
5	AJP-WASHER DIN9021 M6 AN9021006000 (u. 1)
6	AJP-BANK CLOSING PIN SPR250 +310 AND 510 2020 00BAS01A0210 (u. 1)
7	AJP-FRONT COVER RH PR5 AND P310/P510 2020 00PLS01A0132 (u. 1)
8	AJP-FRONT COVER LH PR5 AND SPR250/310/510 BLACK 00PLS01B0132 (u. 1)
9	AJP-FRONT COVER LH AND SPR 250/P310/P510 BLACK 00PLS01B0131 (u. 1)
10	AJP-FRONT COVER LH PR5 AND P310/P510 2020 00PLS01A0131 (u. 1)
10	AJP-SCREW DIN69FS2 6X16 PR7 PF069FS26016 (u. 6)
11	AJP-SCREW 10.9 KN6031 4X12 PR7 PFKN60314012 (u. 2)

 HEADLIGHT

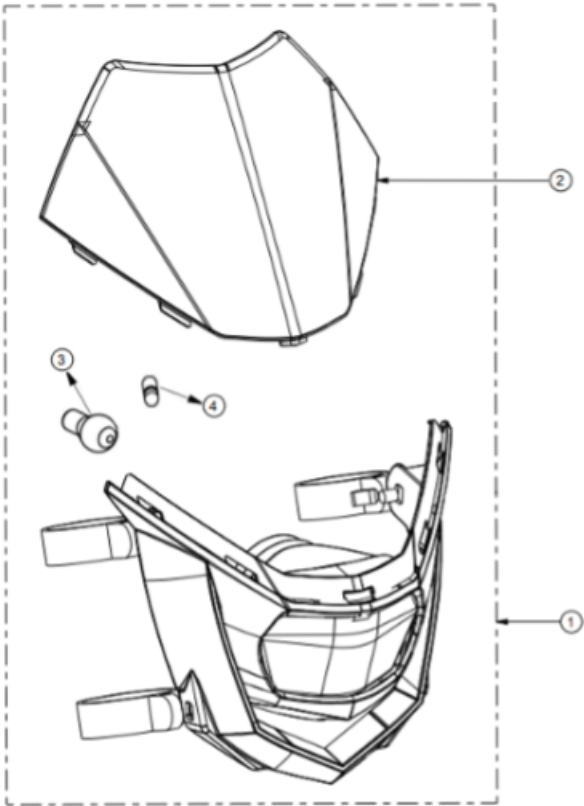

1	AJP-HEADLAMP COVER SPR125 + 240 + 250+ P310/P510 2020 00PLC01A0076 (u. 1)
2	AJP-PLATE BLACK FOR HEADLAMP SPR250/310/510 00PLS01A0141 (u. 1)
3	AJP-LAMP HS1 12V 35/35W 00ELS01A0129 (u. 1)
4	AJP-LAMP 12V 5W 00ELS01A0139 (u. 1)

 DECALS

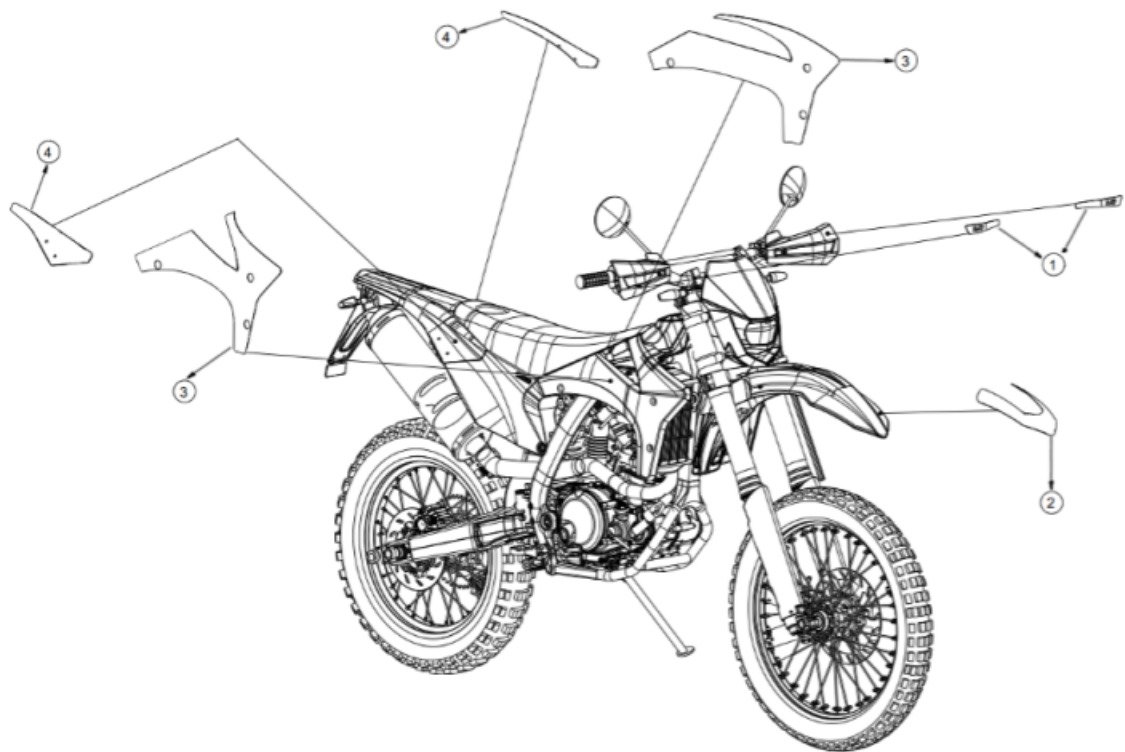

-	AJP-KIT STICKER FRONT SPR250+ 310 +510 2023 00BAS01A0232 (u. 1)
1	AJP-HAND PROTECTION STICKERS KIT AJP 2021 00BAS01A0216 (u. 1)
2	AJP-STICKER FOR FRONT FENDER SPR125+240+250+310+510 2023 00BAS01A0233 (u. 1)
	AJP-STICKER FOR FRONT FENDER SPR250+ 310 +510 2020 00BAS01A0205 (u. 1)
	AJP-STICKER FRONT FENDER SM SPR 125+240+250+310+510 2023 00BAS01A0231 (u. 1)
	AJP-STICKER FOR FRONT FENDER SM SPR 2021 00BAS01A0215 (u. 1)
3	AJP-KIT STICKER FRONT SPR250+ 310 +510 2020 00BAS01A0204 (u. 1)
4	AJP-KIT STICKER REAR FENDER SPR510 2023 00BAS01A0230 (u. 1)
	AJP-KIT STICKER FOR REAR FENDER SPR510 2020 00BAS01A0208 (u. 1)