




SPR 125 125 2023


Exploded

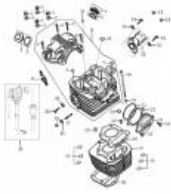


CYLINDER HEAD



CAMSHAFT, VALVES AND TIMING CHAIN

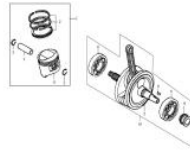


CRANKSHAFT AND PISTON

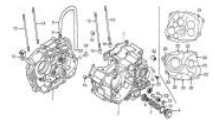


CRANKCASES



GEARBOX

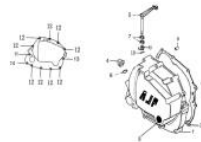


RIGHT CRANKCASE COVER

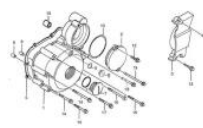

LEFT CRANKCASE COVER



CLUTCH

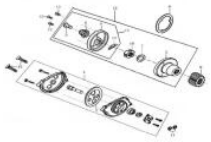

OIL PUMP




FLYWHEEL AND STATOR



ELECTRIC STARTER MOTOR



GEARSHIFT SHAFT

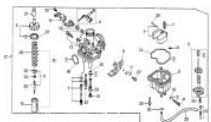

CARBURETTOR




INTAKE



MX EXHAUST SYSTEM



EXHAUST SYSTEM (STANDARD)

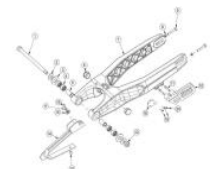

REAR SWING ARM




FRAME



FOOT RESTS AND SIDE STAND



FUEL TANK

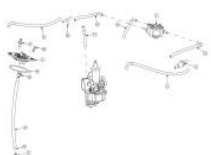

FUEL PUMP




FRONT FORKS AND STEERING COLUMN




FRONT FORKS AND STEERING COLUMN (EXTREME)



REAR SUSPENSION LINKAGE

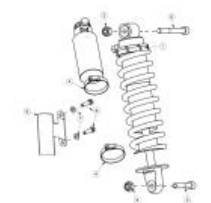

REAR SHOCK ABSORBER

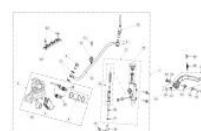


REAR BRAKE SYSTEM BRAKTEC




REAR BRAKE SYSTEM BREMBO (EXTREME)




FRONT BRAKE SYSTEM BRAKTEC

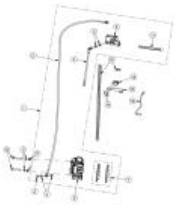


**FRONT BRAKE SYSTEM BREMBO
(EXTREME)**

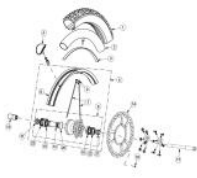


FRONT WHEEL

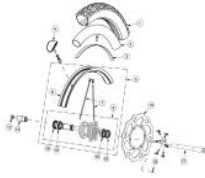

FRONT WHEEL (EXTREME)

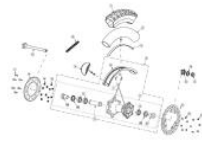

REAR WHEEL

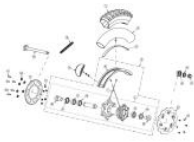

REAR WHEEL (EXTREME)




**HANDLEBAR, CONTROLS AND
SWITCHES**




CLUTCH CONTROLS




ELECTRIC HARNESS

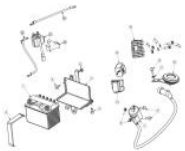


BATTERY-ELECTRIC SYSTEM

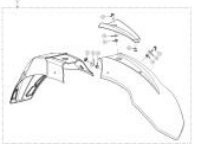

FRONT FENDER

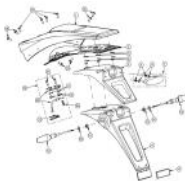

REAR FENDER

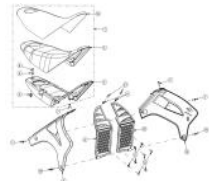

SIDE FENDERS AND SEAT




HEAD LIGHT



DECALS


CYLINDER HEAD

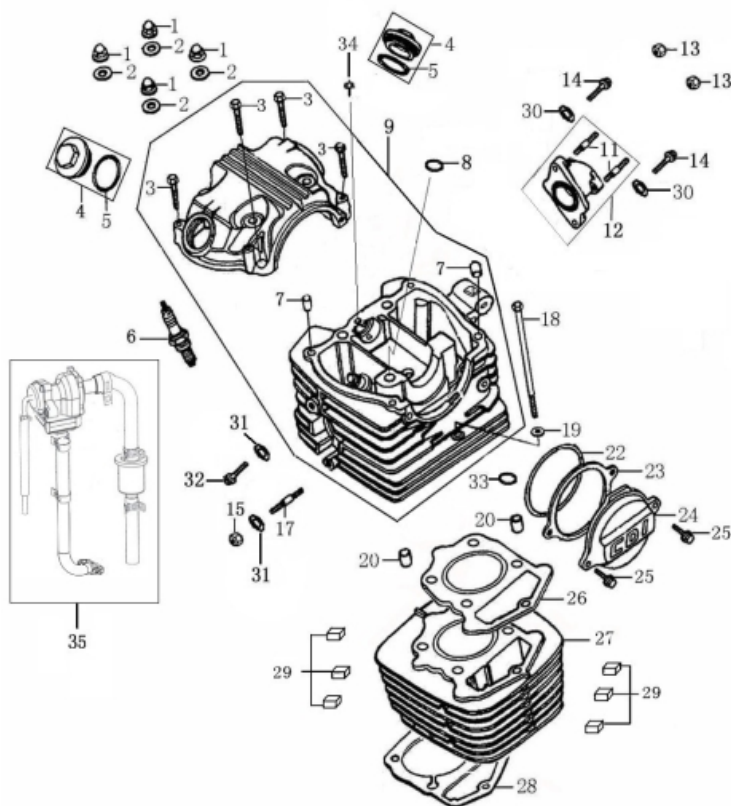

-	AJP-SCREW FOR CARBURETTOR INSULATOR EURO IV (ENGINE 125CC) 00MTS01A0219 (u. 2)
1	AJP-HEX. CUP NUT 8MM 1100810060000 (u. 4)
2	AJP-CYLINDER HEAD BOLT WASHER (8X18X2) 1100710060000 (u. 4)
3	AJP-SCREW CDI COVER M6X20MM S701300000000 (u. 4)
4	AJP-TAPPED ADJUST CAP 1123110060000 (u. 2)
5	AJP-O-RING 35X3MM 9010410060000 (u. 2)
6	AJP-SPARK CHAMPION 91A231110000 (u. 1) AJP-SPARK PLUG ENGINE 200 8130010490000 (u. 1)
7	AJP-DOWEL PIN 8X14MM 9150210060000 (u. 2)
11	AJP-BOLT M6X26 125/200/240 91127L0440000 (u. 2)
12	AJP-CARBURETTOR INSULATOR 00MTS01A0098 (u. 1)
13	AJP-NUT DIN985 M6 PC0985006000 (u. 2)
18	AJP-BOLT M6X110MM 125 9110410060000 (u. 1)
19	AJP-SEAL WASHER 6.5X12.8X2MM 9130710060000 (u. 1)

20	AJP-DOWEL PIN 10X20 91506I0080000 (u. 3)
22	AJP-O.-RING 75X2.65MM 90109I0060000 (u. 1)
23	AJP-CYLINDER HEAD SIDE COVER GASKET 11004I0060000 (u. 1)
24	AJP-CYLINDER HEAD SIDE COVER 11005I0060AJP (u. 1)
25	AJP-CYLINDER HEAD SIDE COVER 11005I0060AJP (u. 1)
	AJP-SCREW CDI COVER M6X20MM S701300000000 (u. 2)
26	AJP-CYLINDER HEAD GASKET 125 9021AI0490000 (u. 1)
	AJP-CYLINDER HEAD GASKET 150 9022BJ0250000 (u. 1)
27	AJP-CYLINDER 125 110BI0490000 (u. 1)
	AJP-CYLINDER 150 ZS 00MTS01A0108 (u. 1)
28	AJP-CYLINDER GASKET 150 90205J0250000 (u. 1)
	AJP-CYLINDER GASKET 125 90205I0060000 (u. 1)
30	AJP-WASHER DIN125 M6 AN0125006000 (u. 2)
31	AJP-WASHER DIN127 M8 AN0127008000 (u. 2)
32	AJP-SCREW DIN933 M8X25 PF0933008025 (u. 1)
	AJP-WASHER DIN127 M8 AN0127008000 (u. 2)
33	AJP-O-RING 10X1.6MM 90112I0060000 (u. 1)
34	AJP-RUBBER PIN 11015I0060000 (u. 1)


CAMSHAFT, VALVES AND TIMING CHAIN

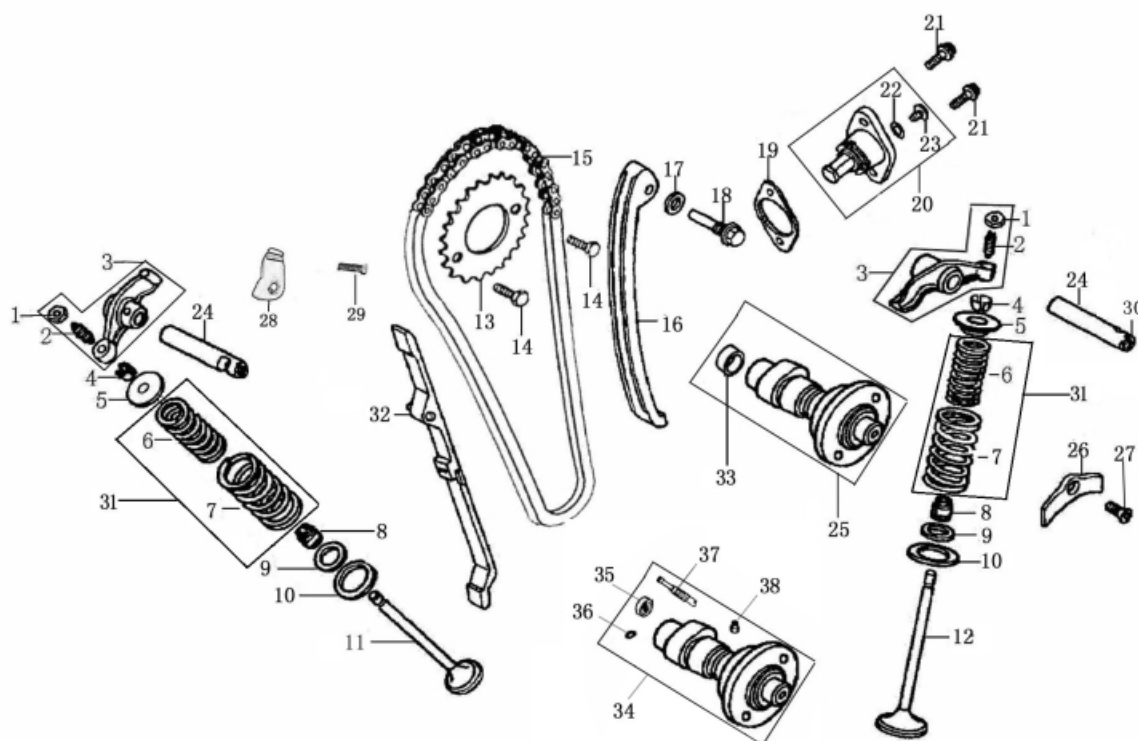

1	AJP-TAPPED ADJUST SCREW 1540310060000 (u. 2)
2	AJP-AFINADOR VÁLVULA 1540410060000 (u. 2)
3	AJP-VALVE ROCKER ARM 1540110060000 (u. 2)
4	AJP-VALVE COTTER 125 1570710060000 (u. 4)
5	AJP-VALVE SPRING CONTAINER 125 / 200 / 240 1570510060000 (u. 2)
6	AJP-INNER VALVE SPRING 125/200/240 1570410060000 (u. 2)
7	AJP-OUTER VALVE SPRING 125/200/240 1570310060000 (u. 2)
8	AJP-VALVE GUIDE SEAL 1572B10060000 (u. 2)
9	AJP-VALVE SPRING INNER SEALING 125 / 200 / 240 1570810060000 (u. 2)
10	AJP-VALVE SPRING OUTER SEALING 125 / 200 / 240 1570610060000 (u. 2)
11	AJP-EXHAUST VALVE 125 1570210060000 (u. 1)
12	AJP-INTAKE VALVE 125 1570110060000 (u. 1)
13	AJP-SPROCKET 1530110060000 (u. 1)
14	AJP-SCREW M6X10 S3073000000000 (u. 2)
15	AJP-TIMING CHAIN 125 1532B10060000 (u. 1)


16	AJP-TIMING CHAIN TENSIONER 125 1552AI0060000 (u. 1)
17	AJP-SEALING WASHER 8X14.5X2 93301708515140 (u. 1)
18	AJP-TIMING CHAIN TENSIONER PIVOT BOLT 91109I0060000 (u. 1)
19	AJP-TENSIONER ADJUSTER GASKET 90211I0490000 (u. 1)
20	AJP-TENSIONER ADJUSTER 1554BI0490000 (u. 1)
21	AJP-SCREW M6X16 B0070010600147 (u. 2)
22	AJP-O-RING 1.5X9.6 Q500100000000 (u. 1)
23	AJP-BOLT M6X6 91120I0490000 (u. 1)
24	AJP-ROCKER ARM SHAFT IN/EX 15402I0060000 (u. 2)
25	AJP-CAMSHAFT 125 15100I0060000 (u. 1)
26	AJP-SHAFT HOLDER 11200I0060000 (u. 1)
27	AJP-BOLT M6X16MM 15403L0440002 (u. 1)
28	AJP-TIMING CHAIN PROTECTION PLATE 240 2143BL0440000 (u. 1)
29	AJP-SCREW DIN933 M6X16 PF0933006016 (u. 1)
32	AJP-TIMING CHAIN GUIDE 125 1553AI0060000 (u. 1)
33	AJP-CAMSHAFT DOWEL PIN 125 1512AI0060000 (u. 1)
35	AJP-BEARING HK2212 BRASILIEN CAMSHAFT RL0000HK2212 (u. 1)
36	AJP-RACING CAMSHAFT 00MTS01A0076 (u. 1)
37	AJP-MAIN JET 110 PR3/PR4 2012 00MTS01A0174 (u. 1)
38	AJP-IDLE JET #50 00MTS01A0327 (u. 1)

CRANKSHAFT AND PISTON

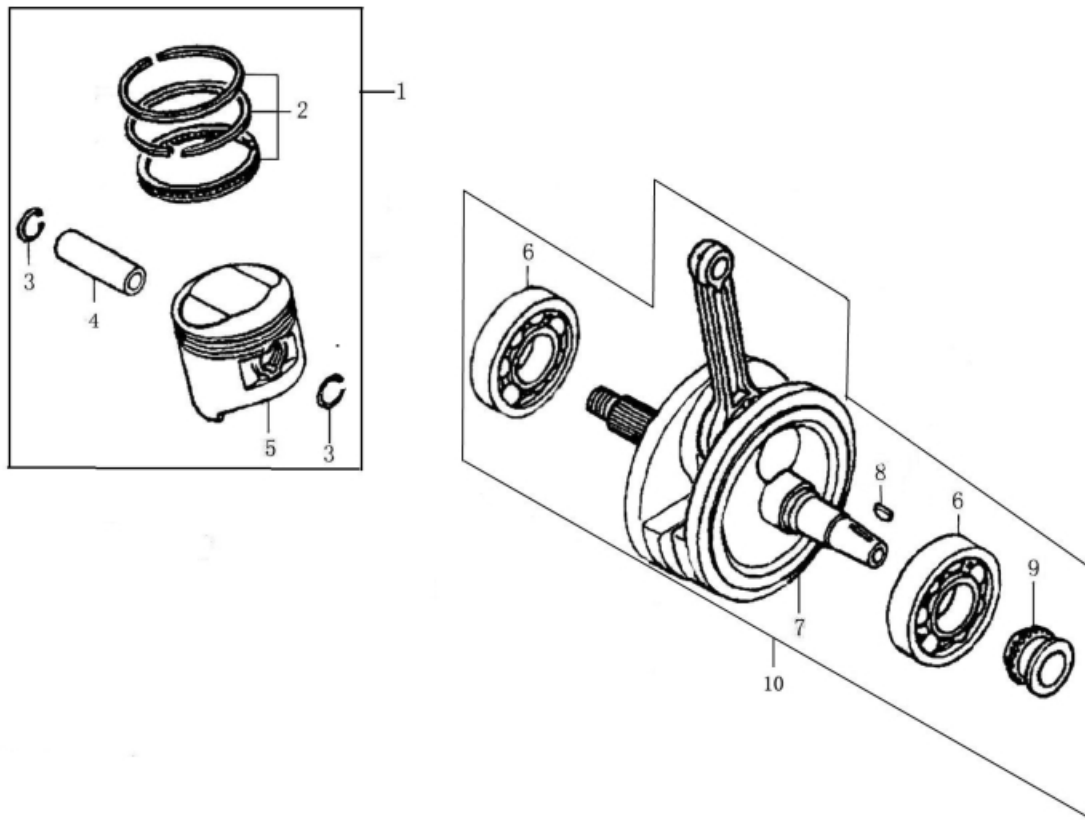

1	AJP-PISTON ASSY 150 00MTS01A0157 (u. 1)
	AJP-PISTON ASSEMBLY 125 13100I0060000 (u. 1)
2	AJP-PISTON RING SET 150 1310AJ0250000 (u. 1)
	AJP-PISTON RING SET 125 13103I0060000 (u. 1)
3	AJP-CIR-CLIP 15MM 91401I0060000 (u. 2)
4	AJP-PISTON PIN 150 13102J0250000 (u. 1)
	AJP-PISTON PIN 125 13102I0060000 (u. 1)
5	AJP-PISTON 200 13101J0250100 (u. 1)
	AJP-PISTON 125 13101I0060000 (u. 1)
6	AJP-BEARING 6328 P5 92102006328P5 (u. 2)
7	AJP-CRANKSHAFT 125 13220I0060001 (u. 1)
8	AJP-WOODRUFF KEY 25X14X4 91602I0060000 (u. 1)
9	AJP-TIMING SPROCKET 125 13203I0060000 (u. 1)
10	AJP-CRANKSHAFT CONNECTING ROD ASSY 125 (Ø22 00MTS01A0158 (u. 1)


CRANKCASES

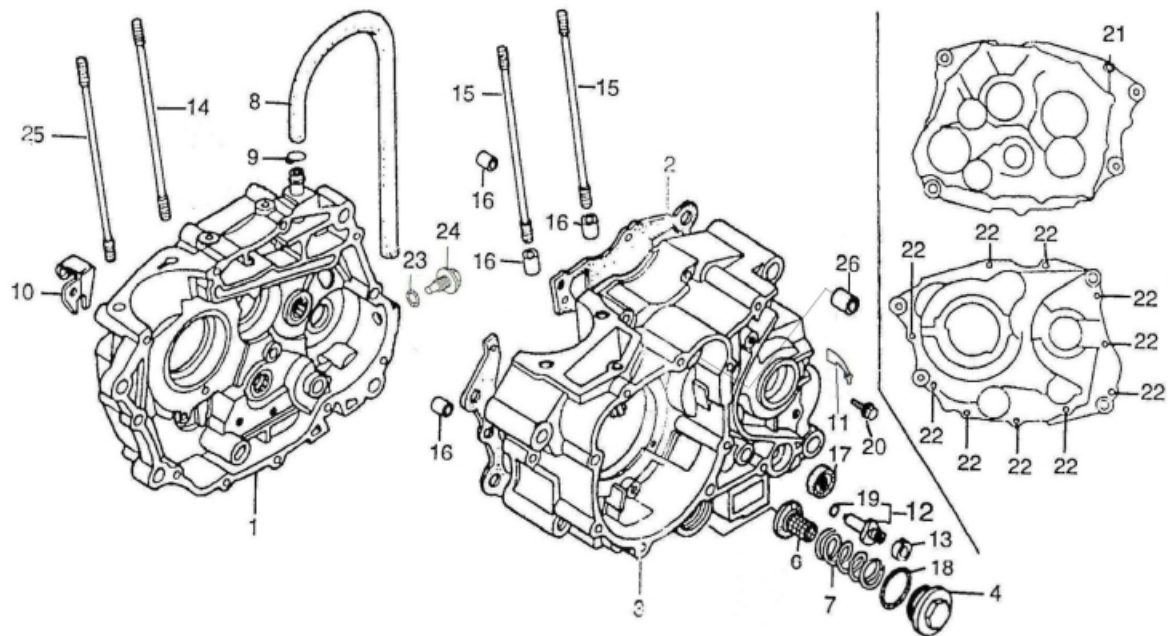

1	AJP-RIGHT CRANKCASE 12200I0490000 (u. 1)
2	AJP-CRANKCASE GASKET 90205I0490000 (u. 1)
3	AJP-LEFT CRANKCASE 12000I0490000 (u. 1)
4	AJP-OIL FILTER COVER 11229I0060000 (u. 1)
6	AJP-OIL FILTER 1413BI0490000 (u. 1)
7	AJP-OIL FILTER SPRING 14221I0490000 (u. 1)
8	AJP-BREATHER TUBE 12105I0060000 (u. 1)
10	AJP-CLUTCH WIRE HOLDER 22422I0490000 (u. 1)
11	AJP-GENERATOR WIRE HOLDER 12103I0080000 (u. 1)
12	AJP-NEUTRAL CONTACT 8802BD0020000 (u. 1)
13	AJP-NEUTRAL PIN 8801D0020000 (u. 1)
14	AJP-CYLINDER STUD BOLT M8X212 (6.5) 91102I0490000 (u. 1)
15	AJP-CYLINDER STUD BOLT M8X224 91101I0490000 (u. 2)
16	AJP-DOWEL PIN 10X14MM 91504I0490000 (u. 4)
17	AJP-GEAR OIL SEAL 90301I0060000 (u. 1)
18	AJP-O-RING 35X3MM 90104I0060000 (u. 1)


19	AJP-O RING 7X1.7 90133D0020000 (u. 2)
20	AJP-SCREW M6X14 L3102000000000 (u. 1)
21	AJP-SCREW M6X60 S702000000000 (u. 1)
22	AJP-SCREW M6X50 S701900000000 (u. 10)
24	AJP-SIDE SCREW 91108I0060000 (u. 1)
25	AJP-CYLINDER STUD BOLT 125 (M8X212) 91101I0060100 (u. 1)
26	AJP-BEARING HK1010 Z303900000000 (u. 1)

GEARBOX

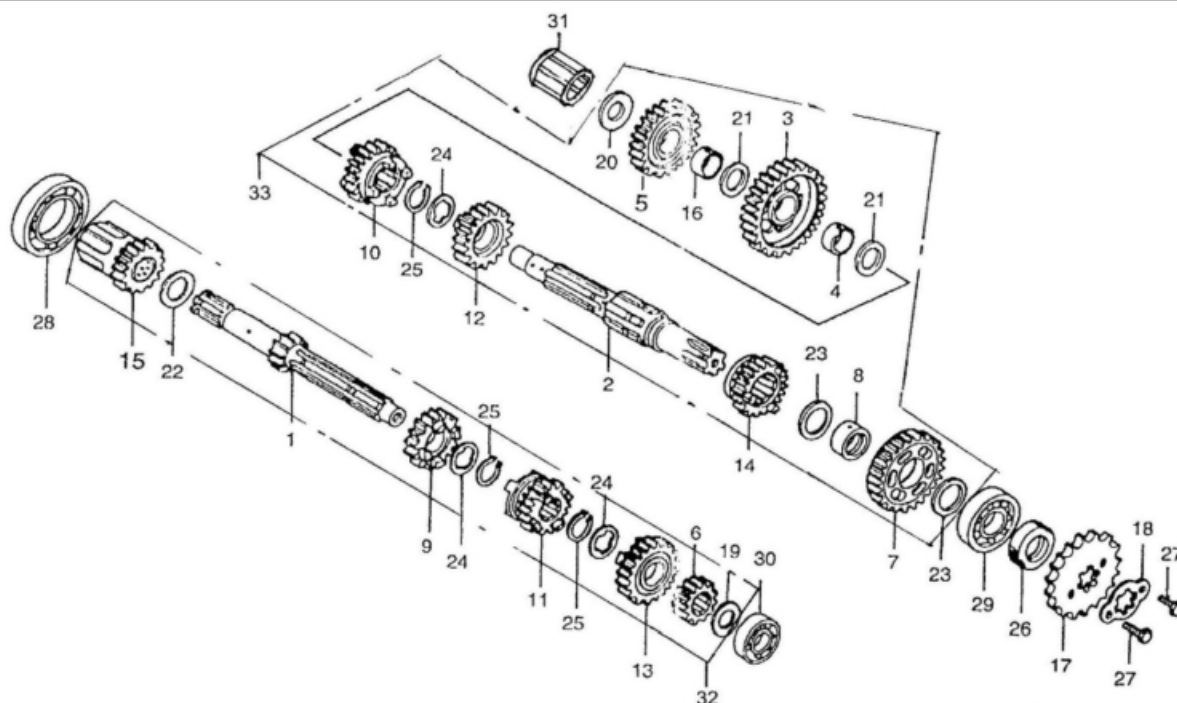


1	AJP-MAIN SHAFT (Z13) 23221I0060000 (u. 1)
2	AJP-SECONDARY SHAFT 23241I0060000 (u. 1)
3	AJP-1ST GEAR. (Z36) 23242I0060000 (u. 1)
4	AJP-DOWEL PIN 23203I0060001 (u. 1)
5	AJP-SECONDARY STARTING GEAR (Z28) 23248I0060000 (u. 1)
6	AJP-2ND GEAR. MAIN SHAFT (Z17) 23222I0060002 (u. 1)
7	AJP-2ND GEAR. SECONDARY SHAFT (Z32) 23242I0060002 (u. 1)
8	AJP-DOWEL PIN 20X23X9 23203I0060002 (u. 1)
9	AJP-3RD GEAR. MAIN SHAFT (Z20) 23222I0060003 (u. 1)
10	AJP-3RD GEAR. SECONDARY SHAFT (Z28) 23242I0060003 (u. 1)
11	AJP-4RD GEAR. MAIN SHAFT(Z23) 23222I0060004 (u. 1)
12	AJP-4RD GEAR. SECONDARY SHAFT (Z26) 23242I0060004 (u. 1)
13	AJP-5TH GEAR. MAIN SHAFT (Z25) 23222I0060005 (u. 1)
14	AJP-5TH GEAR. SECONDARY SHAFT (Z24) 23242I0060005 (u. 1)
15	AJP-MAIN STARTER GEAR (Z19) 23231I0060000 (u. 1)
16	AJP-DOWEL PIN 23203I0060003 (u. 1)

17	AJP-DRIVE SPROCKET (Z16) 00MTS01A0018 (u. 1)
	AJP-DRIVE SPROCKET (17T) 00MTS01B0018 (u. 1)
	AJP-DRIVE SPROCKET (Z13) 00MTS01A0035 (u. 1)
	AJP-DRIVE SPROCKET (Z15) 23401I0060000 (u. 1)
	AJP-DRIVE SPROCKET (Z14) 00MTS01A0036 (u. 1)
18	AJP-SPROCKET FIXING PLATE 23402I0060000 (u. 1)
19	AJP-WASHER 15MM 93301Z15010240 (u. 1)
20	AJP-WASHER 15 MM 240 9330161521030000 (u. 1)
21	AJP-WASHER 16.5MM 93301E16505240 (u. 2)
22	AJP-WASHER A20MM 93301E20005270 (u. 1)
23	AJP-WASHER 20MM 93301E20010270 (u. 2)
24	AJP-WASHER 20 MM 23223I0060000 (u. 3)
25	AJP-STOPPER RING B00893012000000 (u. 3)
26	AJP-SEAL 20X34X7 90303I0060000 (u. 1)
27	AJP-SCREW M6X12 B05783000600107 (u. 2)
29	AJP-BEARING 6204 92102000006204 (u. 1)
30	AJP-BEARING 6202Z 9210200006202Z (u. 1)
31	AJP-BEARING 152312 921020HK152312 (u. 1)
32	AJP-MAIN SHAFT ASSEMBLY 23220I0060000 (u. 1)
33	AJP-SECONDARY SHAFT ASSEMBLY 23240I0060000 (u. 1)

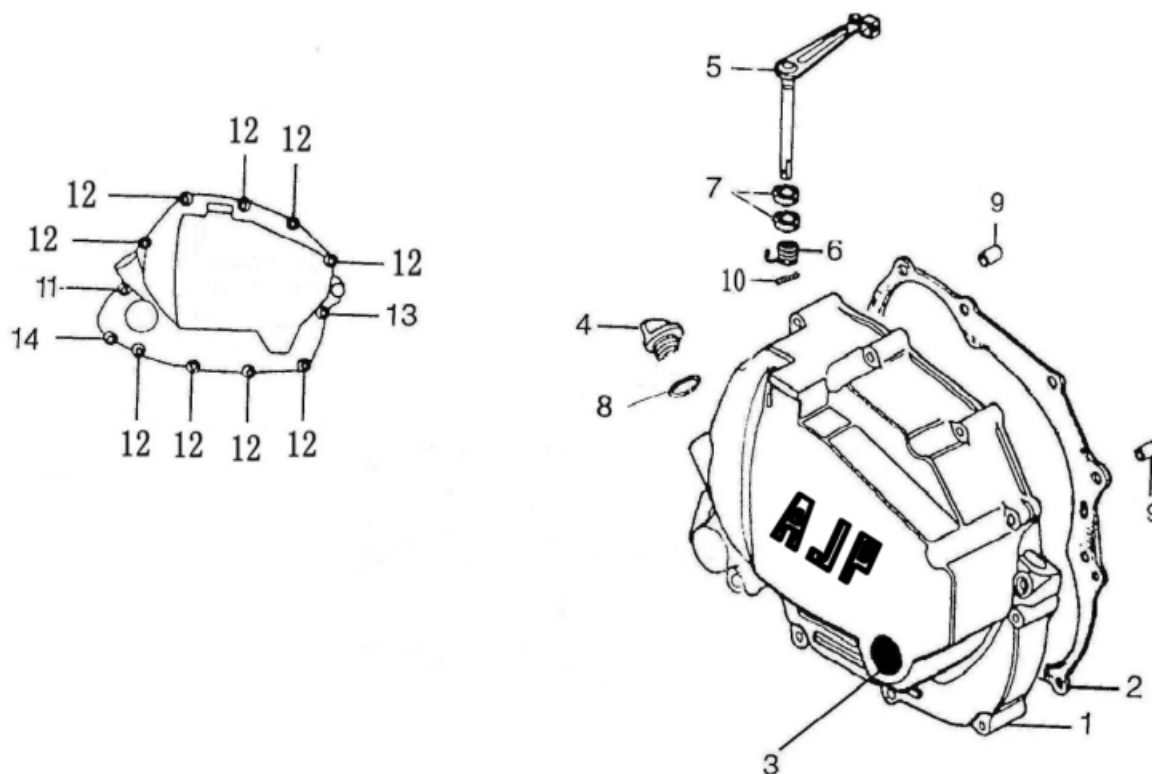RIGHT CRANKCASE COVER


1	AJP-RIGHT CRANKCASE COVER 1242150490AJP (u. 1)
2	AJP-RIGHT CRANKCASE COVER GASKET 90206I0060000 (u. 1)
3	AJP-OIL LEVEL VIEW-FINDER 12426I0080000 (u. 1)
4	AJP-OIL PLUG SPR 125CC / 240CC 00MTS01A0314 (u. 1)
5	AJP-CLUTCH LEVER 00MTS01A0007 (u. 1)
6	AJP-CLUTCH LEVER SPRING 22427I0060000 (u. 1)
7	AJP-O-RING 1.8X9 90101100900180 (u. 2)
8	AJP-O RING 18X3 90106D0020000 (u. 1)
9	AJP-DOWEL PIN 8X14 91502D0020000 (u. 2)
10	AJP-RING 3X12 XA00100000000 (u. 1)
11	AJP-CYLINDER HEAD BOLT M6X35MM S701600000000 (u. 1)
12	AJP-SCREW M6X40 S701700000000 (u. 9)
13	AJP-SCREW M6X50 S701900000000 (u. 1)
14	AJP-SCREW M6X25 S701400000000 (u. 1)


LEFT CRANKCASE COVER

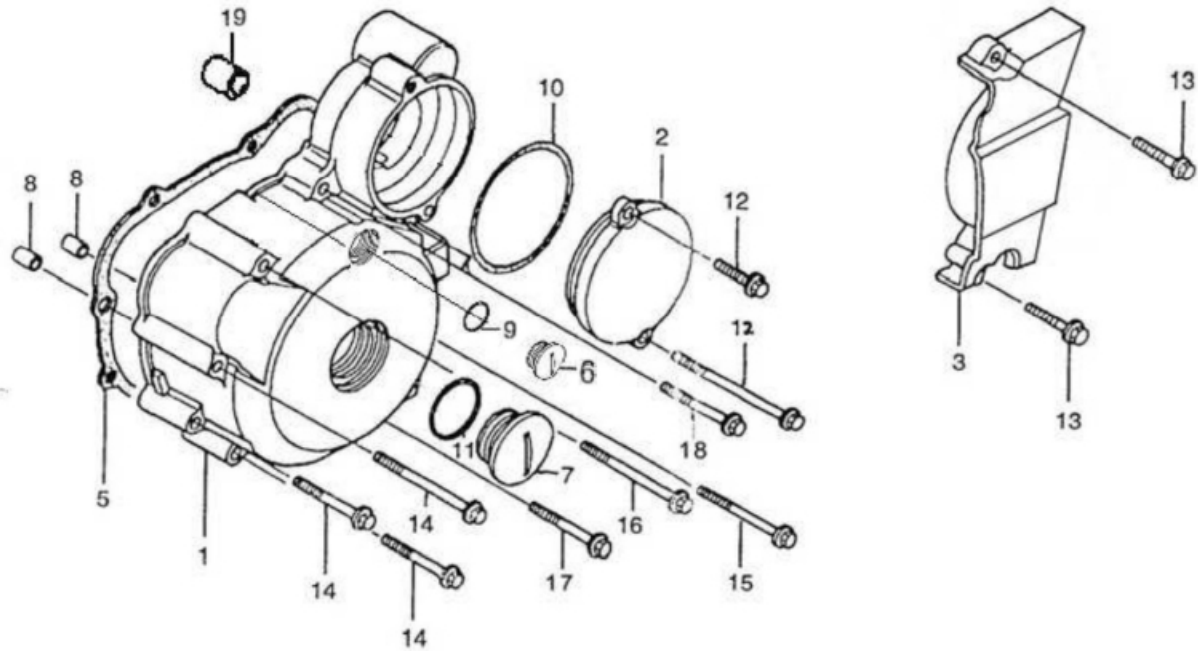

1	AJP-LEFT CRANKCASE COVER 125/200/240CC 12301I0490AJP (u. 1)
2	AJP-REDUCTION GEAR COVER 12308I0490AJP (u. 1)
3	AJP-LEFT CRANKCASE RR COVER 12302I0490AJP (u. 1)
5	AJP-LEFT CRANKCASE COVER GASKET 12001I0490000 (u. 1)
6	AJP-TOP SIGHT HOLE CAP 12303G0110AJP (u. 1)
7	AJP-SIGHT HOLE CAP 12304G0110AJP (u. 1)
8	AJP-DOWEL PIN 8X14MM 91502I0060000 (u. 2)
9	AJP-O-RING 13.8X2.5 12306I0060000 (u. 1)
10	AJP-O-RING 63X3 FOR REDUCTION GEAR COVER 12309I0490000 (u. 1)
11	AJP-O-RING 27.4X2.4 12307I0060000 (u. 1)
12	AJP-SCREW M6X20 S7013I0060000 (u. 2)
13	AJP-SCREW M6X25 S701400000000 (u. 2)
14	AJP-SCREW M6X25 S701400000000 (u. 3)
15	AJP-SCREW M6X60 S701000000000 (u. 1)
16	AJP-CYLINDER HEAD BOLT M6X35MM S701600000000 (u. 1)
17	AJP-SCREW M6X40 S701700000000 (u. 1)
18	AJP-SCREW M6X75 S706400000000 (u. 2)


19	AJP-BEARING HK1010 Z303900000000 (u. 1)
----	--

CLUTCH

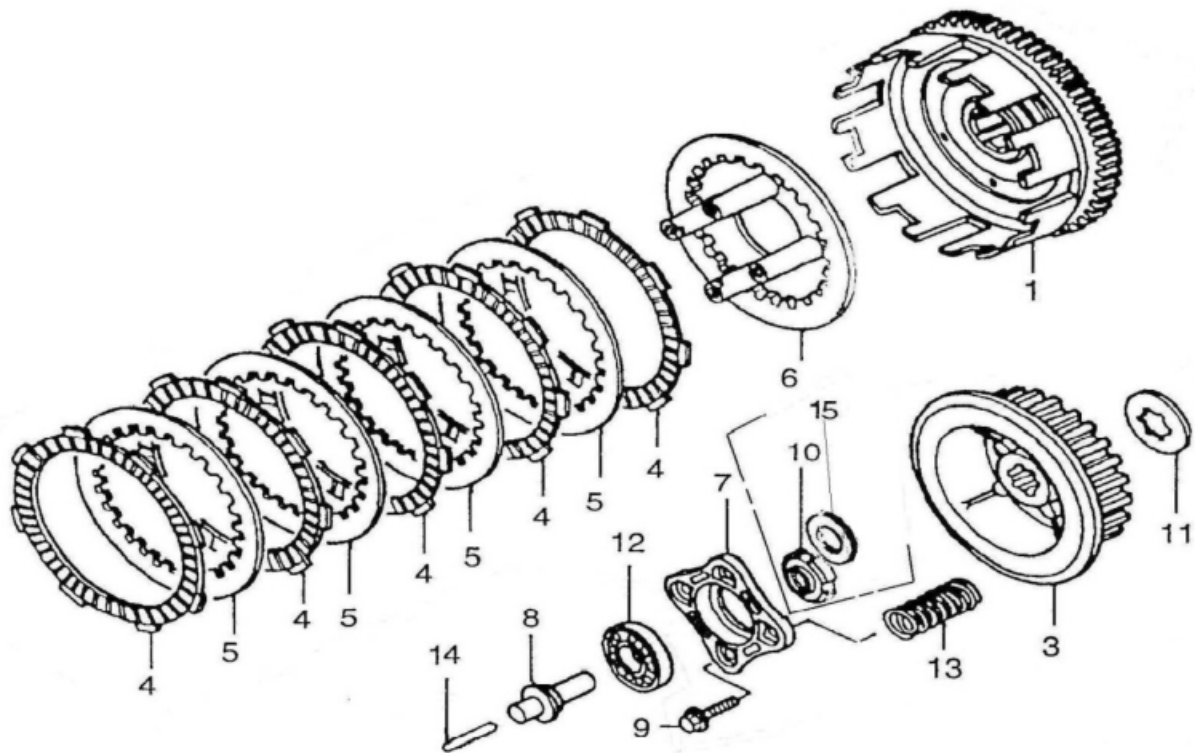


1	AJP-PRIMARY DRIVEN GEAR (Z70) 22150L0440000 (u. 1)
3	AJP-HUB. CLUCH SLEEVE 22130I0060000 (u. 1)
4	AJP-DRIVE PLATE CLUTCH 2223AI0060000 (u. 5)
5	AJP-DRIVEN PLATE. CLUTCH 125/200/240 22201I0060000 (u. 4)
6	AJP-PRESSURE DISC. CLUTCH 5 SPRINGS 22122I0060000 (u. 1)
7	AJP-END PLATE. CLUTCH 22121I0060000 (u. 1)
8	AJP-PUSH ROD CLUTCH 22404I0060000 (u. 1)
9	AJP-SCREW CLUTCH PLATE 91110I0060000 (u. 1)
10	AJP-NUT M16 14206I0060000 (u. 1)
11	AJP-WASHER B. 20MM 22205I0060000 (u. 1)
12	AJP-BEARING 16003 125/200 Z009800000000 (u. 1)
13	AJP-CLUTCH SPRING 22204I0060000 (u. 5)
14	AJP-PUSH ROD. CLUTCH. PIN 22405I0060000 (u. 1)
15	AJP-CONIC WASHER 22004I0060000 (u. 1)

OIL PUMP

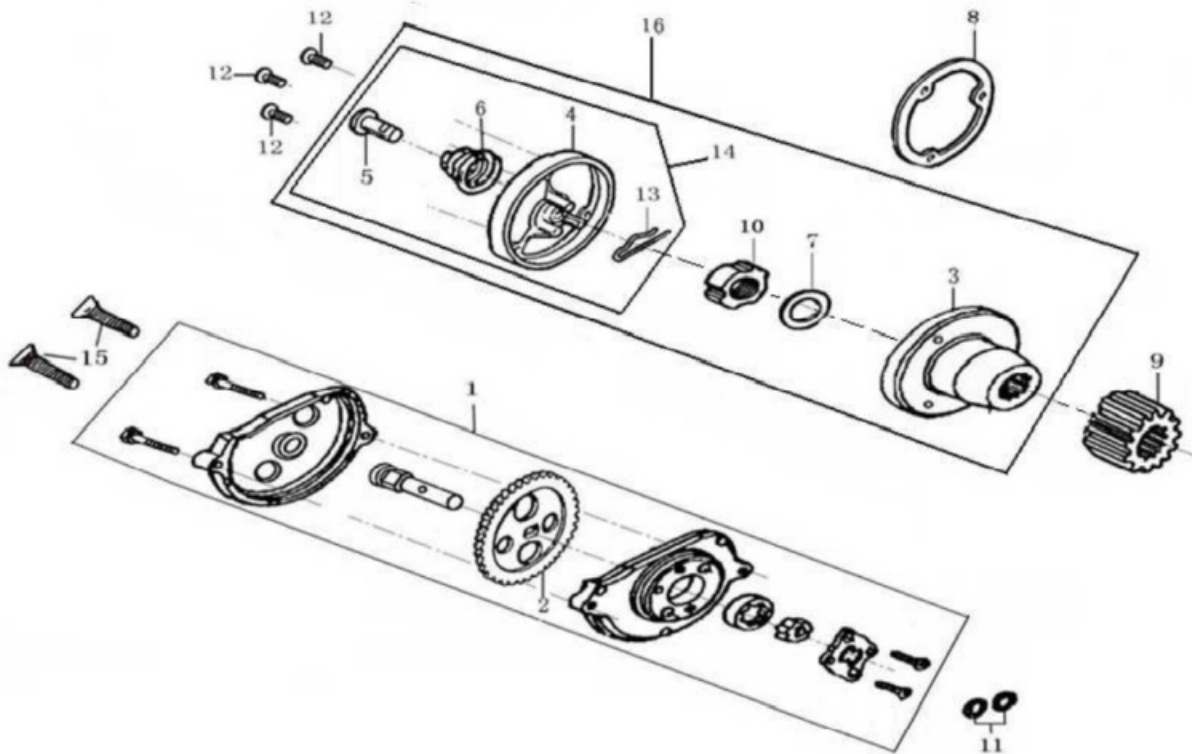


1	AJP-OIL PUMP ASSEMBLY (Z39) 14100I0060001 (u. 1)
2	AJP-OIL PUMP DRIVE GEAR T37 125CC 00MTS01A0326 (u. 1)
3	AJP-OIL FILTER ROTOR 1422AI0060000 (u. 1)
4	AJP-OIL FILTER ROTOR CAP 14201I0060000 (u. 1)
5	AJP-OIL THROUGH 14202I0060000 (u. 1)
6	AJP-OIL THROUGH SPRING 14203I0060000 (u. 1)
7	AJP-CONIC WASHER 22004I0060000 (u. 1)
8	AJP-OIL FILTER ROTOR GASKET 90208I0060000 (u. 1)
9	AJP-PRIMARY DRIVE GEAR (Z18) 23101I0060000 (u. 1)
10	AJP-NUT M16 14206I0060000 (u. 1)
11	AJP-O RING 24X3 90108I0060000 (u. 2)
12	AJP-SCREW M5X12 125/200/240 L605200000000 (u. 3)
13	AJP-CIR-CLIP 8MM 91505I0060000 (u. 1)
14	AJP-OIL FILTER ROTOR CAP ASSEMBLY 14210I0060000 (u. 1)
15	AJP-SCREW 6X30 125/200/240 B08190106003020B (u. 2)

FLYWHEEL AND STATOR

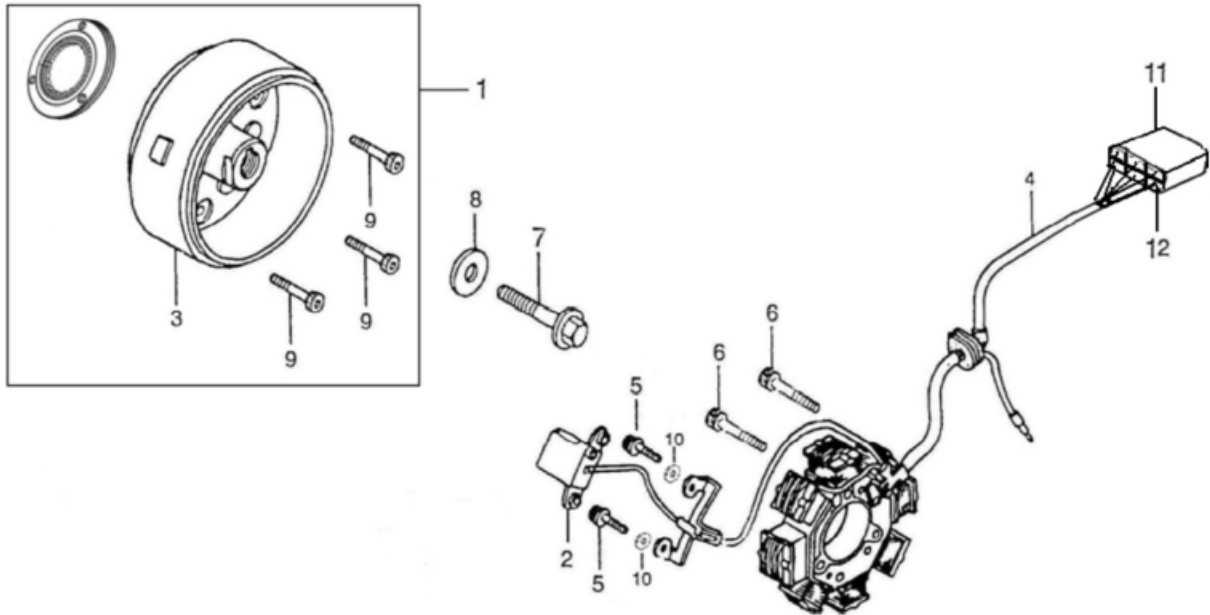


1	AJP-FLY WHEEL ASSEMBLY 82130L0440000 (u. 1)
	AJP-FLY WHEEL ASSEMBLY 22MM 82130L0440100 (u. 1)
2	AJP-PULSE GENERATOR 8210500000000 (u. 1)
3	AJP-FLY WHEEL 22MM 82101I0490AJP100 (u. 1)
4	AJP-STATOR 82120L0440000 (u. 1)
5	AJP-SCREW L304200000000 (u. 2)
6	AJP-BOLT M6X28 B166740A06001870B (u. 2)
7	AJP-SCREW M10X36 91106I0080000 (u. 1)
8	AJP-WASHER 10X24X2.5 91313I0060100 (u. 1)
9	AJP-SCREW M8X18 B0070010800187 (u. 3)
11	AJP-STATOR WIRE CONNECTOR 2013 00ELS01A0066 (u. 1)
12	AJP-STATOR CONNECTOR TERMINAL 2013 00ELS01A0067 (u. 6)

ELECTRIC STARTER MOTOR

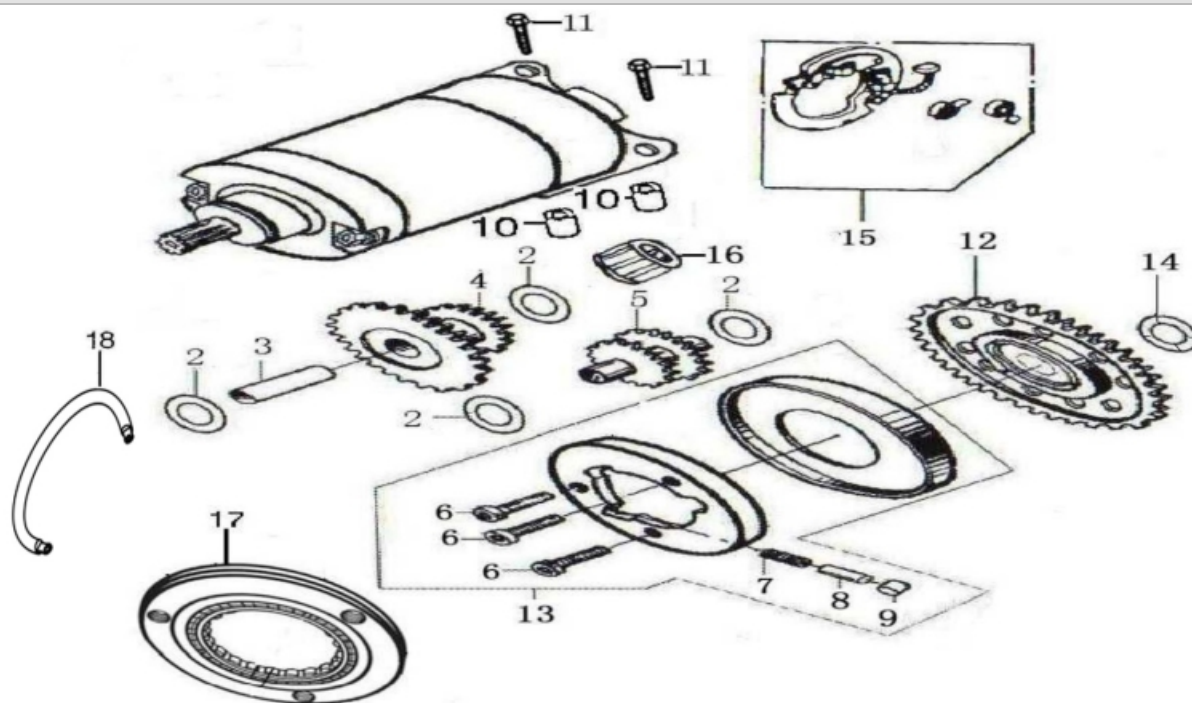

1	AJP-STARTING MOTOR 82200I0490AJP (u. 1)
2	AJP-WASHER 10.5X0.5X18 933015105051800 (u. 4)
3	AJP-STARTER REDUCTION GEAR SPACER 21402I0490000 (u. 1)
4	AJP-STARTER REDUCTION GEAR 61/21 21421I0490000 (u. 1)
5	AJP-STATOR GEAR 15/16 21401I0490000 (u. 1)
6	AJP-SCREW M8X18 B0070010800187 (u. 3)
7	AJP-CLUTCH SPRING 21303I0490000 (u. 3)
8	AJP-SPRING CAP 21305I0490000 (u. 3)
9	AJP-ROLL 10.2X11.6 21304I0490000 (u. 3)
10	AJP-STARTING MOTOR DOWEL PIN 82203I0490000 (u. 2)
12	AJP-STARTER DRIVE GEAR 22MM 125/200 CC 2142AI0490100 (u. 1)
13	AJP-STARTER DRIVE GEAR ASSEMBLY 21300I0490000 (u. 1)
14	AJP-WASHER 20X32X3.5 21421I0490001 (u. 1) AJP-STARTING MOTOR WASHER 22X34X3.5 240CC 2013 93301E2203534000 (u. 1)
15	AJP-STARTER MOTOR BRUSH HOLDER 125/200CC 82228I0490000 (u. 1)
16	AJP-BEARING HK1010 Z303900000000 (u. 2)
18	AJP-STARTING MOTOR CABLE 82231I0490000 (u. 1)


GEARSHIFT SHAFT

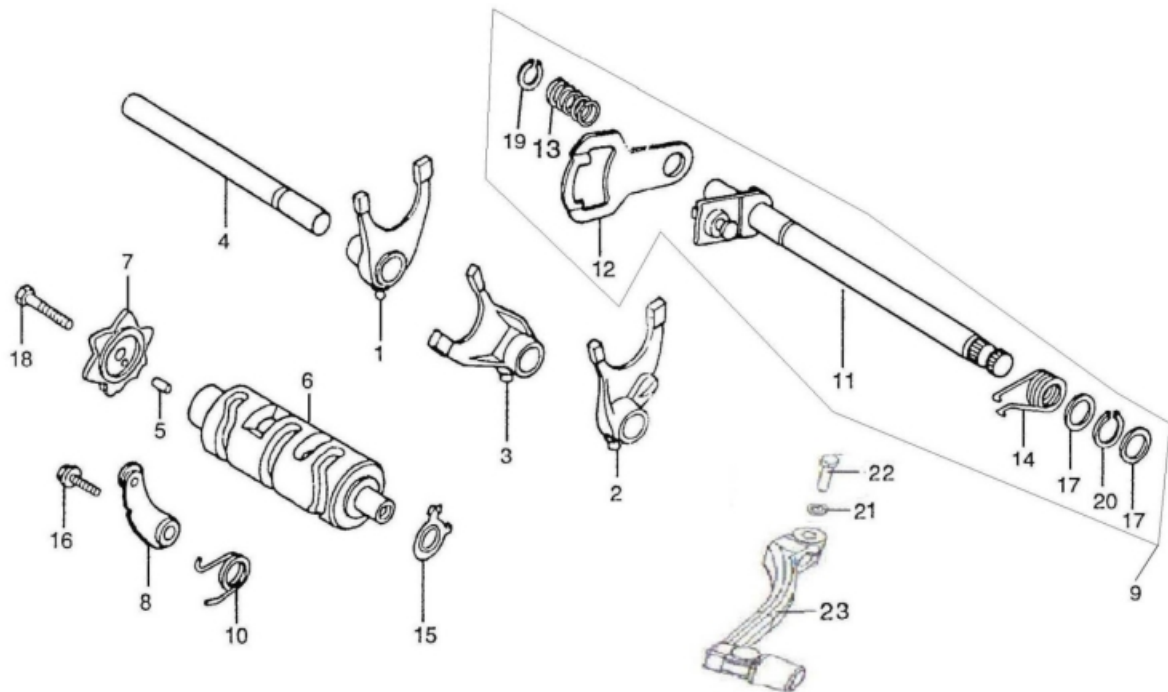

1	AJP-RIGHT GEAR SHIFT FORK 24101I0060000 (u. 1)
2	AJP-LEFT GEAR SHIFT FORK 24102I0060000 (u. 1)
3	AJP-CENTRAL GEAR SHIFT FORK 24103I0060000 (u. 1)
4	AJP-GEAR SHIFT FORK GUIDE 24104I0060000 (u. 1)
5	AJP-PIN 4X10 X306200000000 (u. 1)
6	AJP-GEAR SHIFT DRUM 24201I0060000 (u. 1)
7	AJP-GEAR SHIFT CAM 24202I0060000 (u. 1)
8	AJP-GEAR SHIFT DRUM STOPER 24221I0060000 (u. 1)
9	AJP-GEAR SHIFT SPINDLE ASSEMBLY 24300I0060000 (u. 1)
10	AJP-GEAR DRUM STOPPER SPRING 125/200/240 24302I0060000 (u. 1)
11	AJP-GEAR SHIFT SPINDLE 2432AI0060000 (u. 1)
12	AJP-GEAR SHIFT PLATE 24301I0060000 (u. 1)
13	AJP-GEAR SHIFT PLATE SPRING 24303I0080000 (u. 1)
14	AJP-GEAR SHIFT RETURN SPRING 24303I0060000 (u. 1)
15	AJP-NEUTRAL SWITCH ROTOR 88002I0060000 (u. 1)
16	AJP-SCREW M6X22 S706000000000 (u. 1)
17	AJP-WASHER 14MM 24304I0060000 (u. 2)

18	AJP-BOLT M6X25 S303100000000 (u. 1)
19	AJP-STOPPER RING 12MM D200300000000 (u. 1)
20	AJP-STOPPER RING 14 MM D200500000000 (u. 1)
21	AJP-WASHER DIN125 M6 AN0125006000 (u. 1)
22	AJP-SCREW DIN933 M6X25 PF0933006025 (u. 1)
23	AJP-GEAR SELECTOR PR3 00MTS01B0016 (u. 1)


CARBURETTOR

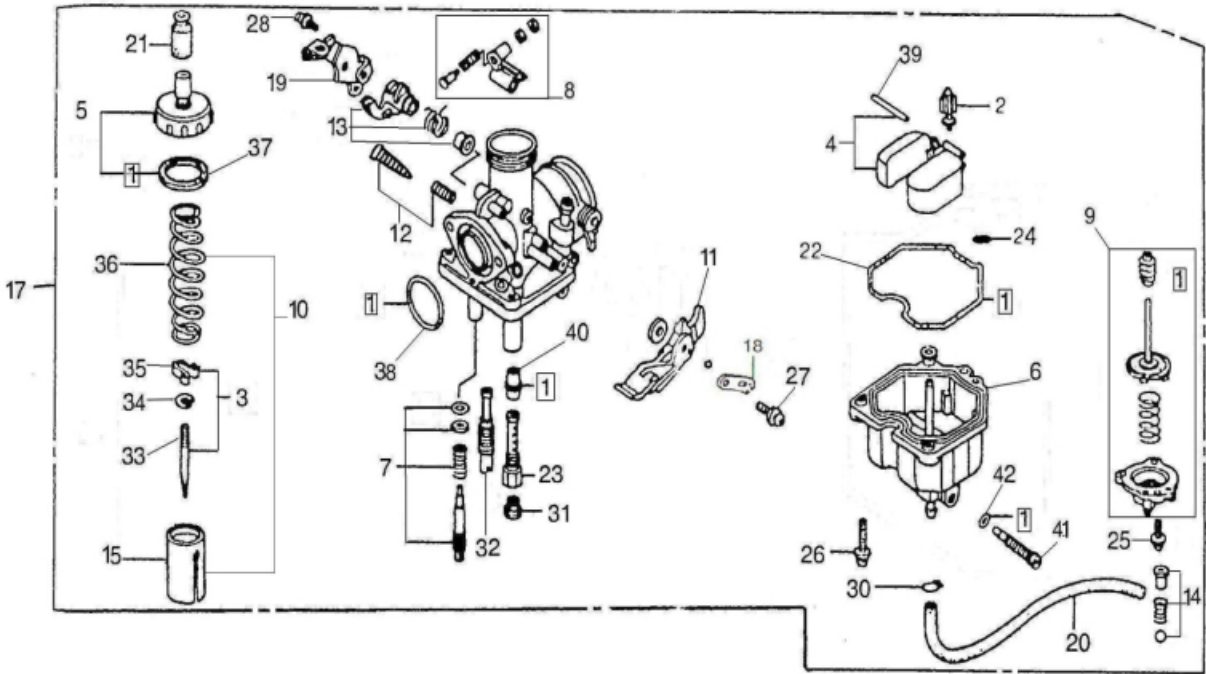


1	AJP-GASKET SET CARBURETOR 1710110060000 (u. 1)
2	AJP-CONIC VALVE 1710210060000 (u. 1)
3	AJP-NEEDLE WITH CIR-CLIP 1710310060000 (u. 1)
4	AJP-FLOAT 1710410060000 (u. 1)
5	AJP-PISTON CAP 125CC 1710510060000 (u. 1)
6	AJP-FLOAT CAMARA S/POWER JET 1710610060100 (u. 1)
7	AJP-ADJUSTING SCREW SET 1710710060000 (u. 1)
8	AJP-PUMP ARM 1710810060000 (u. 1)
9	AJP-POWER JET 1710910060000 (u. 1)
11	AJP-CHOKE CABLE BRACKET 1711210060000 (u. 1)
12	AJP-ADJUSTING SCREW 1711310060000 (u. 1)
13	AJP-PUMP ARM 1710810060000 (u. 1)
14	AJP-CHECK VALVE 1711510060000 (u. 1)
15	AJP-CARBURETTOR PISTON 17105L0440000 (u. 1)
17	AJP-CARBURETOR SPR 125-240 1711000000SPR (u. 1)
19	AJP-LINK PLATE. PUMP ARM 1711910060000 (u. 1)
20	AJP-FUEL TUBE 1712110060000 (u. 1)

21	AJP-DUST CAP 17122I0060000 (u. 1)
22	AJP-FLOAT CHAMBER GASKET 17123I0060000 (u. 1)
23	AJP-NEEDLE DIFFUSER PZ26 17124I0060000 (u. 1)
24	AJP-O-RING 3.5X2 S13052003500 (u. 1)
25	AJP-SCREW L304200000000 (u. 3)
26	AJP-SCREW M4X16MM L304300000000 (u. 3)
27	AJP-SCREW 5X12 L305200000000 (u. 1)
28	AJP-SCREW 5X14 L309400000000 (u. 1)
30	AJP-CLAMP FOR B86.5 PR3 1712900000000 (u. 1)
31	AJP-MAIN JET 105 00MTS01A0093 (u. 1)
32	AJP-IDLE JET 48 00MTS01A0092 (u. 1)
33	AJP-NEEDLE 17156L0440000 (u. 1)
34	AJP-NEEDLE CIR-CLIP 17106L0440000 (u. 1)
35	AJP-V-CLIP 17104L0440000 (u. 1)
36	AJP-THROTTLE PISTON SPRING 91A094120000 (u. 1)
	AJP-AIR THROTTLE RETURN SPRING 17165L0440000 (u. 1)
37	AJP-TOP CAP GASKET 17147L0440000 (u. 1)
38	AJP-O-RING 30X2.5 91A094390000 (u. 1)
39	AJP-FLOAT PIN 17144L0440000 (u. 1)
40	AJP-MAIN JET 17151L0440000 (u. 1)
41	AJP-DRAIN SCREW 171A5L0440000 (u. 1)


INTAKE

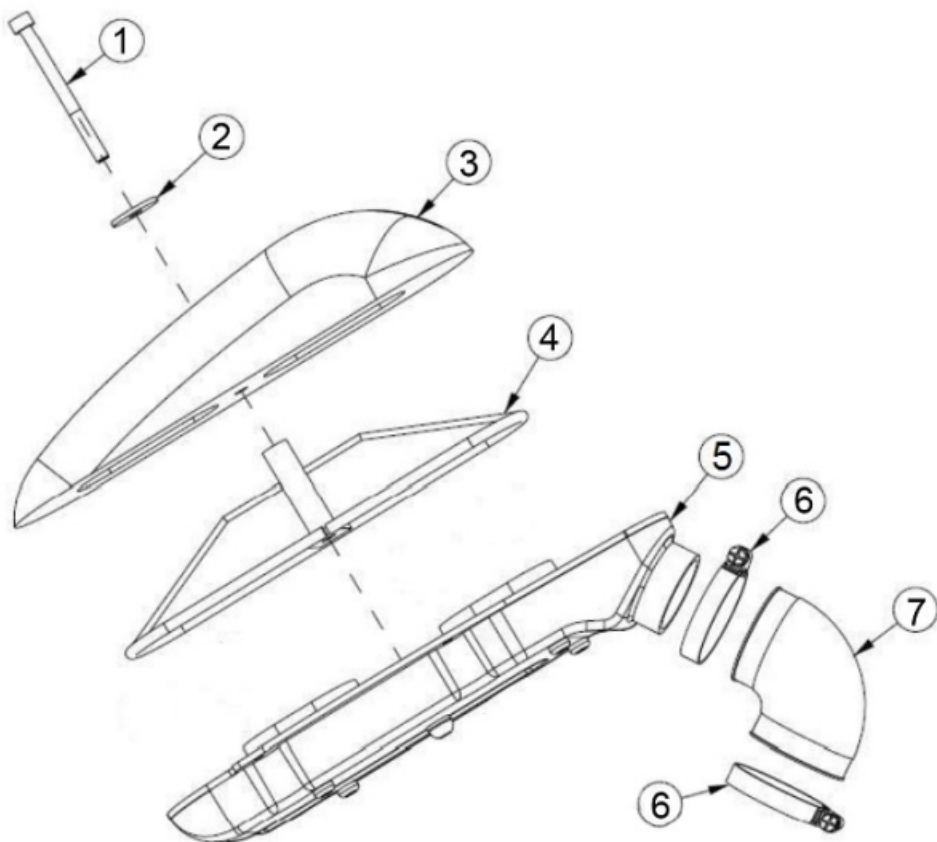


1	AJP-SCREW DIN912 M6X90 PF0912006090 (u. 1)
2	AJP-WASHER DIN9021 M6 AN9021006000 (u. 1)
3	AJP-AIR FILTER PR3/PR4 00MTS01A0004 (u. 1)
4	AJP-AIR FILTER BRACKET 00MTS01A0005 (u. 1)
5	AJP-AIR FILTER BOX 00MTC01A0028 (u. 1)
6	AJP-CLAMP 32-50 00DES01A0018 (u. 2)
7	AJP-INTAKE HOSE 00MTS01A0027 (u. 1)

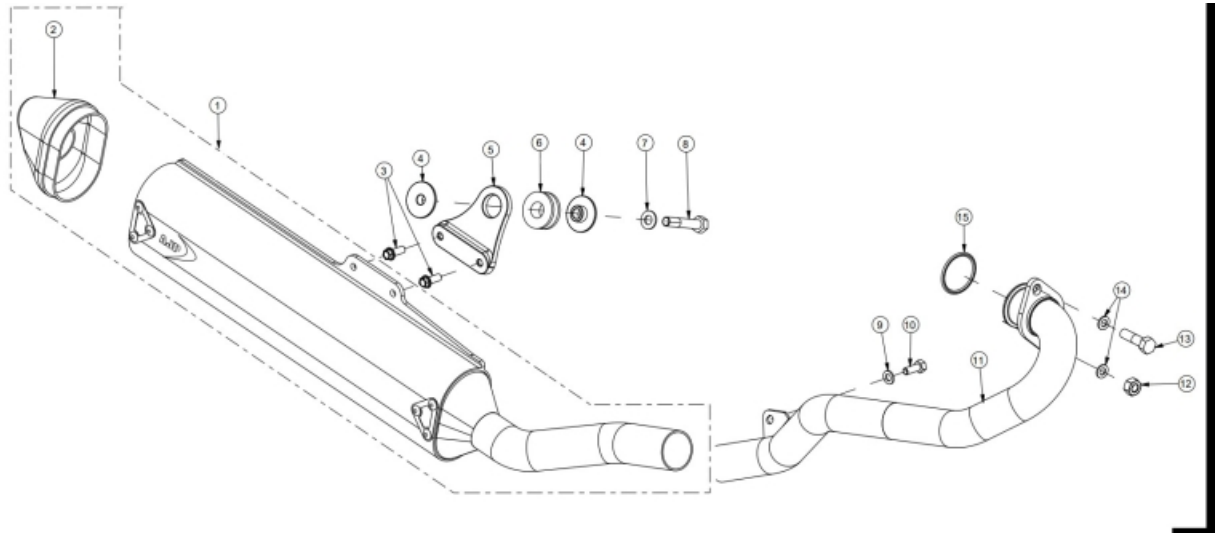MX EXHAUST SYSTEM


1	AJP-EXHAUST MUFFLER SPR125 AND 240CC 00MTS01A0317 (u. 1)
2	AJP-EXHAUST MUFFLER END 00MTS01A0010 (u. 1)
3	AJP-SCREW DIN69FS2 6X12 PR7 PF069FS26012 (u. 2)
4	AJP-SPACER FOR RUBBER EXHAUST SUPPORT NONE SPR 00MTS01A0325 (u. 2)
5	AJP-SUPPORT FOR EXHAUST SPR125 AND 240CC 00MTS01A0316 (u. 1)
6	AJP-RUBBER EXHAUST SUPPORT NONE SPR250 + 310 AND 510CC 00MTS01A0308 (u. 1)
7	AJP-WASHER 5/16 00MTS01A0072 (u. 1)
8	AJP-SCREW DIN933 M8X30 PF0933008030 (u. 1)
9	AJP-WASHER DIN127B M8 AN127B008000 (u. 1)
10	AJP-SCREW DIN69FS2 6X12 PR7 PF069FS26012 (u. 1)
11	AJP-EXHAUST PIPE SPR125CC AND 240CC 00MTS01A0318 (u. 1)
12	AJP-NUT DIN 934 M8 PC0934008001 (u. 1)
13	AJP-SCREW DIN933 M8X20 PF0933008020 (u. 1)
14	AJP-WASHER DIN127B M8 AN127B008000 (u. 2)
15	AJP-EXHAUST PIPE GASKET 00MTS01A0001 (u. 1)

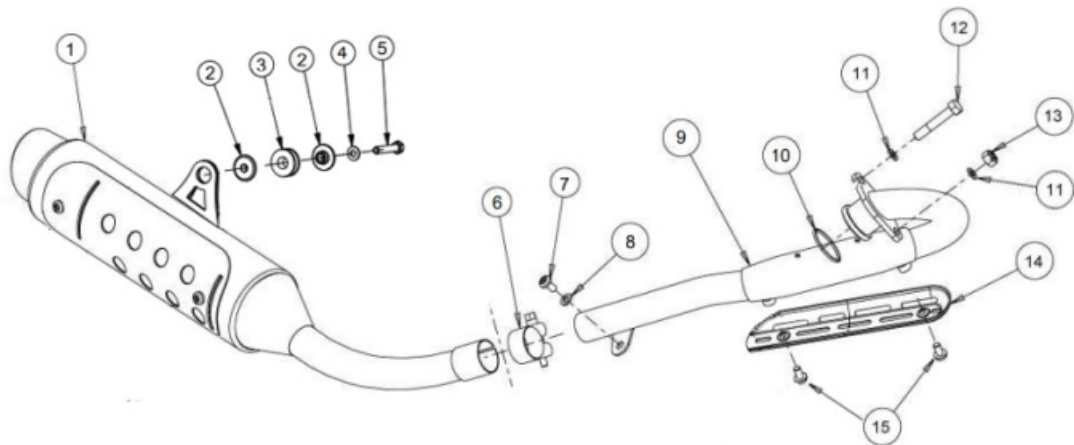EXHAUST SYSTEM (STANDARD)


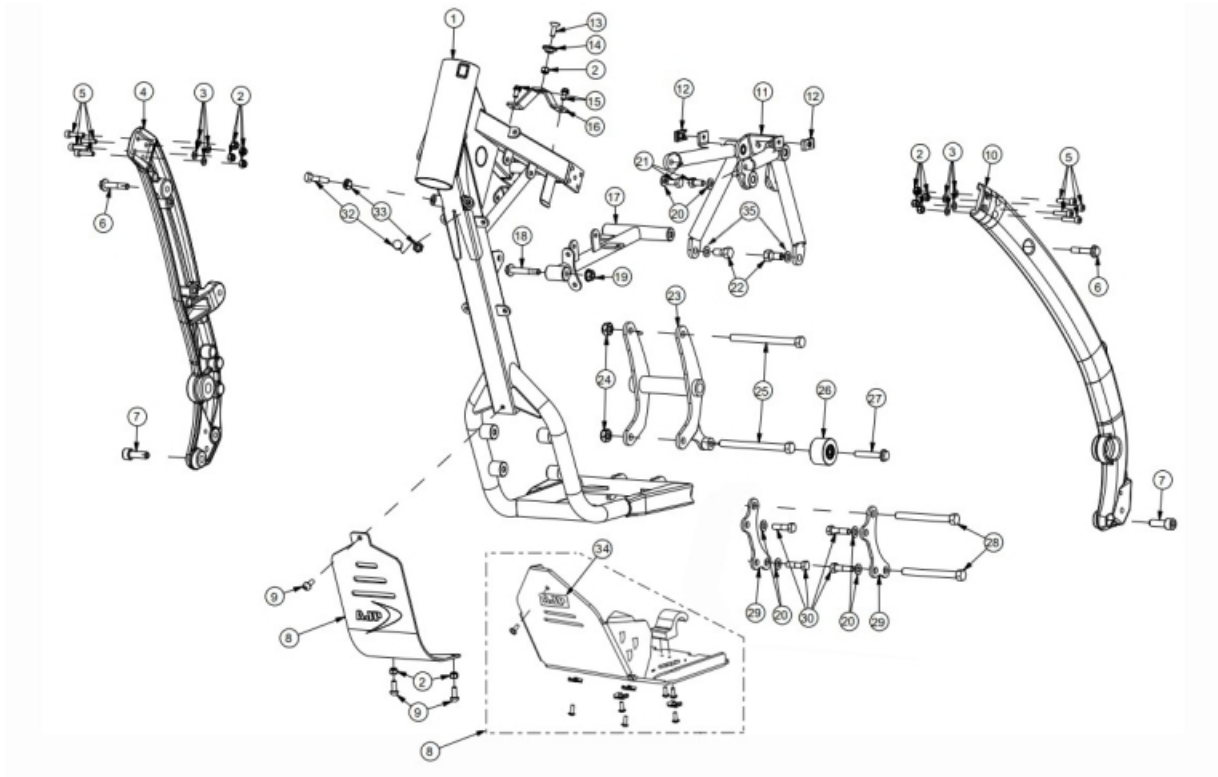
1	AJP-EXHAUST MUFFLER SPR 125/240 00MTS04A0059 (u. 1)
2	AJP-SPACER FOR RUBBER EXHAUST SUPPORT NONE SPR 00MTS01A0325 (u. 2)
3	AJP-RUBBER EXHAUST SUPPORT NONE SPR250 + 310 AND 510CC 00MTS01A0308 (u. 1)
4	AJP-WASHER 5/16 00MTS01A0072 (u. 1)
5	AJP-SCREW DIN933 M8X30 PF0933008030 (u. 1)
6	AJP-HOLDER ND30 00MTS01A0024 (u. 1)
7	AJP-SCREW DIN933 M6X16 PF0933006016 (u. 1)
8	AJP-WASHER DIN125 M6 AN0125006000 (u. 1)
9	AJP-EXHAUST PIPE SPR 125/240 00MTS06A0076 (u. 1)
10	AJP-EXHAUST PIPE GASKET 00MTS01A0001 (u. 1)
11	AJP-WASHER DIN127 M8 AN0127008000 (u. 2)
12	AJP-SCREW DIN933 M8X25 PF0933008025 (u. 1)
14	AJP-EXHAUST PIPE PROTECTION 00MTS06A0037 (u. 1)
15	AJP-SCREW ISO7380 M6X8 PF0738006008 (u. 2)

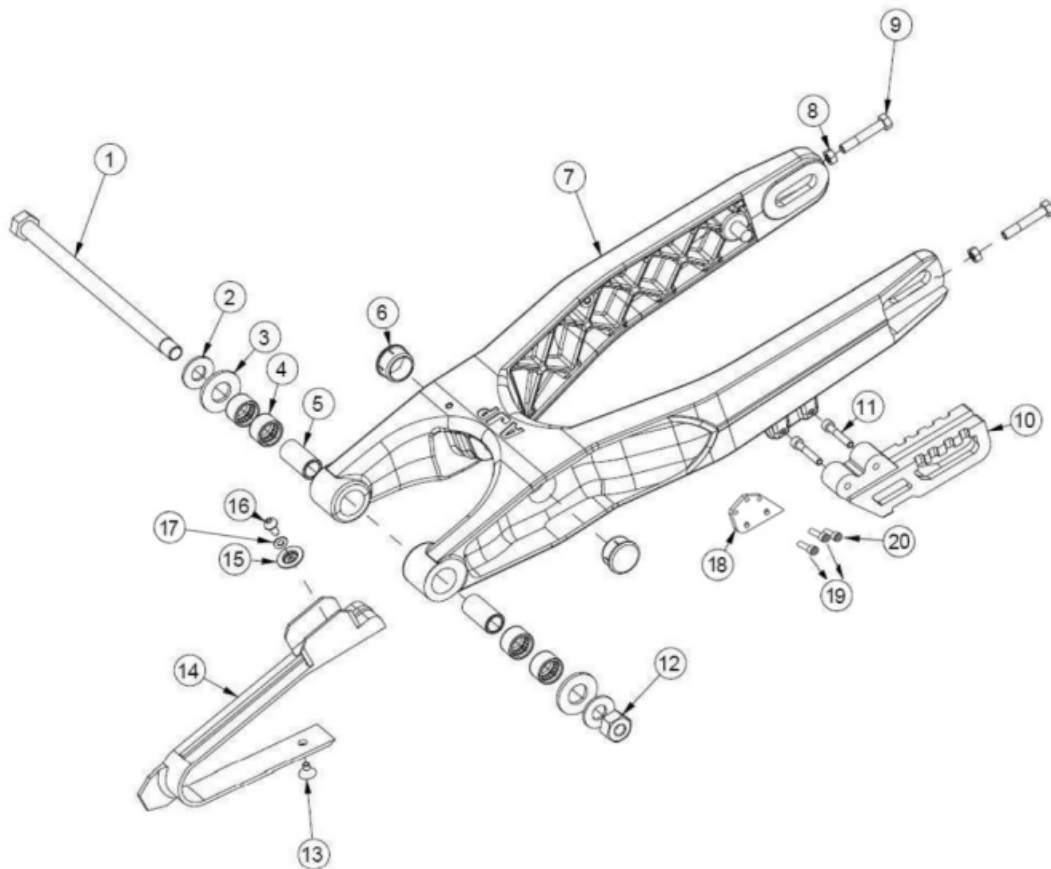REAR SWING ARM


1	AJP-PIVOT SHAFT PR3/PR4 00STS07A0027 (u. 1)
2	AJP-WASHER DIN125A M14 AN125A014000 (u. 2)
3	AJP-WASHER 40X20X3 00STS01A0003 (u. 2)
4	AJP-BEARING HK2016 RS RL00HK2016RS (u. 4)
5	AJP-SPACER 15X20X40 00STS01A0002 (u. 2)
6	AJP-PLUG 00STS01A0004 (u. 2)
7	AJP-REAR SWING ARM 00STS01A0071 (u. 1)
8	AJP-NUT DIN934 M8 PC0934008000 (u. 2)
9	AJP-SCREW DIN933 M8X35 PF0933008035 (u. 2)
10	AJP-CHAIN GUIDE 00STS01B0007 (u. 1)
11	AJP-SCREW DIN912 M6X40 PF0912006040 (u. 2)
12	AJP-NUT DIN934 M14 PC0934014000 (u. 1)
13	AJP-SCREW DIN7991 M6X12 PF7991006012 (u. 1)
14	AJP-CHAIN TOUCH DEFENSE BUFFER 00PLS01A0049 (u. 1)

15	AJP-WASHER 00PLS07A0029 (u. 1)
16	AJP-SCREW DIN7380 M6X12 PF73806012INOX (u. 1)
17	AJP-WASHER DIN125A M6 AN125A06INOX (u. 1)

FRAME



AJP-STEEL FRAME SPR 240 EXTREME BORDEAUX
 00QUS04A0083 (u. 1)

1
AJP-FRAME PR4 RED PRO 2013
 00QUS04A0059 (u. 1)

2
AJP-NUT DIN985 M6
 PC0985006000 (u. 10)

3
AJP-WASHER DIN125A M6
 AN125A06INOX (u. 8)

5
AJP-SCREW DIN912 M6X20
 PF0912006020 (u. 8)

6
AJP-SCREW DIN6921 M8X25
 PF6921008025 (u. 2)

7
AJP-SCREW DIN912 M10X35
 PF0912010035 (u. 2)

8
AJP-FRAME COVER PR4 EXTREME PLASTIC
 00MTS01A0106 (u. 1)

AJP-FRAME COVER PR3/PR
 00QUS03A0036 (u. 1)

9
AJP-SCREW DIN7380 M6X16 INOX
 PF73806016INOX (u. 3)

12
AJP-SPRING FOR FAN PR5 2013
 00MTS01A0123 (u. 2)


13
AJP-SCREW DIN7991 M6X16
 PF7991006016 (u. 1)

14
AJP-SPACER FOR GUIDE SEAT ASSEMBLY (22X6.5X6) SPR250 + 310
 00DES05A0001 (u. 1)

15
AJP-SCREW DIN69FS2 6X16 PR7
 PF069FS26016 (u. 2)

16
AJP-SUPPORT GUIDE SEAT SPR125 AND 240CC
 00BAS01A0217 (u. 1)


17	AJP-FRAME REINFORCEMENT PR3/PR4 RED PRO 2013 00QUS04A0062 (u. 1)
	AJP-FRAME REINFORCEMENT PR4 EXTREME 2013 00QUS04A0063 (u. 1)
18	AJP-SCREW DIN6921 M8X50 PF6921008050 (u. 1)
19	AJP-NUT DIN985 M10 PC0985010000 (u. 1)
20	AJP-WASHER DIN127B M8 AN127B008000 (u. 4)
21	AJP-SCREW DIN933 M8X20 PF0933008020 (u. 2)
22	AJP-SCREW DIN931 M10X25 PF0933010025 (u. 2)
23	AJP-REAR ENGINE MOUNT 00QUS07B0021 (u. 1)
24	AJP-NUT DIN985 M10 PC0985010000 (u. 1)
26	AJP-CHAIN ROLLER (40MM) 00QUS01A0022 (u. 1)
27	AJP-SCREW DIN6921 M8X50 PF6921008050 (u. 1)
28	AJP-SCREW DIN931 M10X100 PF0931010100 (u. 2)
29	AJP-FRONT ENGINE MOUNT 00QUS07A0020 (u. 2)
30	AJP-SCREW DIN933 M8X20 PF0933008020 (u. 4)
32	AJP-SCREW DIN933 M8X16 PF0933008016 (u. 2)
33	AJP-WASHER DIN6798 M8X14X0.8 AN67980801408 (u. 2)
34	AJP-STICKER FOR FRAME COVER EXTREME PLASTIC 00BAS01A0131 (u. 1)
35	AJP-WASHER DIN127B M10 FOR SCRE OF ENGINE PR5 2013 AN127B001000 (u. 2)

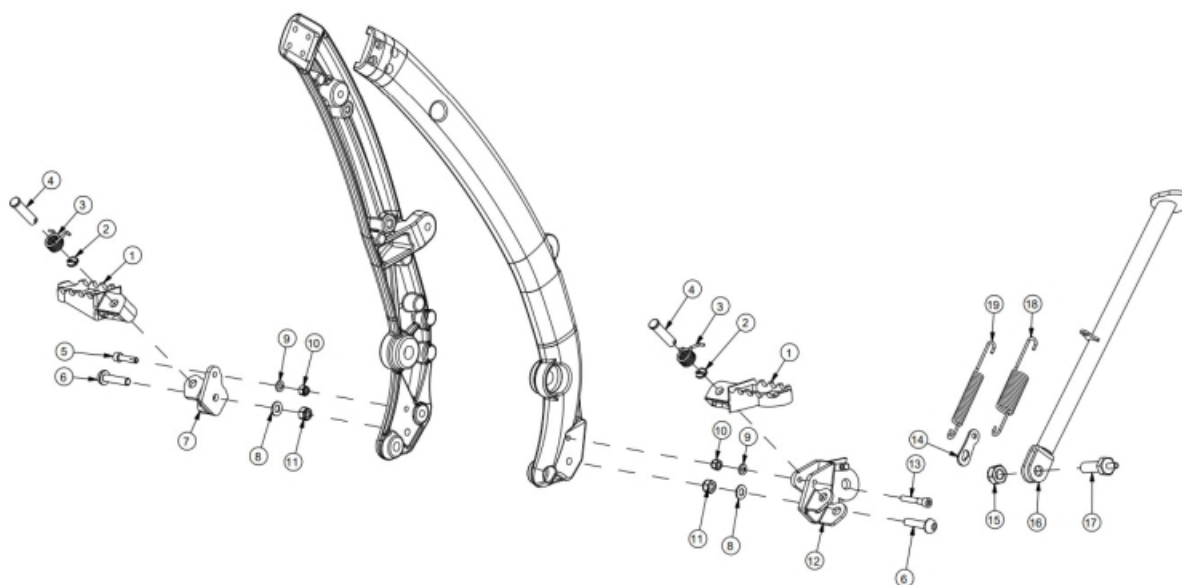FOOT RESTS AND SIDE STAND


-	AJP-FRONT FOOTPEG LH/RH IN ALLOY EXTREME 00QUS03A0037 (u. 1)
1	AJP-FRONT FOOTPEG LH/RH IN STEEL 00QUS03A0038 (u. 1)
2	AJP-SCREW 2.5X20 DIN 94 FOR FOOTPEG EXTREME 00QUS07A0065 (u. 2)
3	AJP-FRONT FOOTPEG SPRING RH EXTREME PR4 /PR5 2013 00QUS07A0062 (u. 2)
4	AJP-DOWEL FOR FOOTPEG RED EXTREME 2013 00QUS07A0064 (u. 2)
5	AJP-SCREW DIN912 M6X25 PF0912006025 (u. 1)
6	AJP-SCREW DIN7380 M8X35 PF7380008035 (u. 2)
7	AJP-FRONT FOOTPEG HOLDER LH SPR 125 AND 240CC 00QUS07A0078 (u. 1)
8	AJP-WASHER 5/16 00MTS01A0072 (u. 2)
9	AJP-WASHER DIN125A M6 AN125A06INOX (u. 2)
10	AJP-NUT DIN985 M6 PC0985006000 (u. 2)
11	AJP-NUT DIN985 M8 PC0985008000 (u. 2)
12	AJP-FRONT FOOTPEG HOLDER LH SPR125 AND 240 00QUS07A0079 (u. 1)
13	AJP-SCREW DIN912 M6X35 PF0912006035 (u. 1)
14	AJP-SPRING HOLDER 00QUS01A0017 (u. 1)
16	AJP-SIDE STAND SPR250; 310CC E 510CC 00QUS04A0080 (u. 1)
17	AJP-STUD 00QUS04A0016 (u. 1)
18	AJP-RESSORT BEQUILLE EXT. 00QUS01A0013 (u. 1)

19	AJP-INNER SPRING 00QUS01A0014 (u. 1)
----	---


FUEL TANK

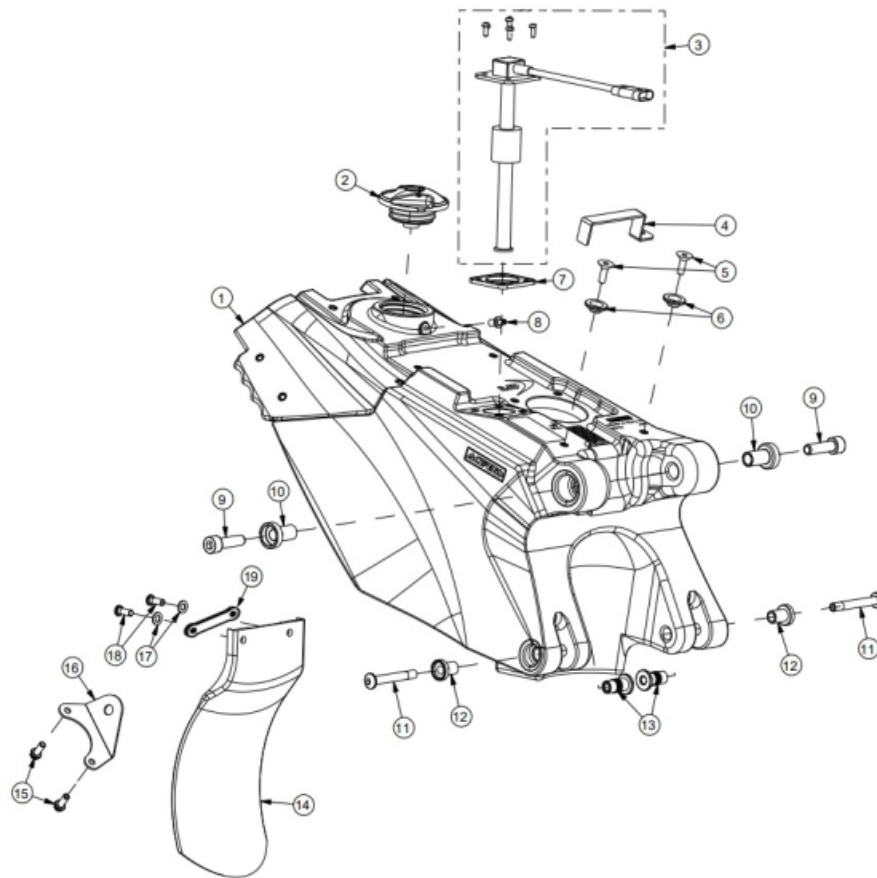

1	AJP-FUEL TANK P310/P510 AND PR5 2020 00DES01A0118 (u. 1)
2	AJP-FUEL CAP ACERBIS AFTER SPR 125/240/310/510 00DES02B0040 (u. 1)
3	AJP-FUEL LEVEL SENSOR PR7 00DES01A0085 (u. 1)
4	AJP-PLATE THREADS FUEL TANK SPR250 + 310 +510 2020 00ELS01A0128 (u. 1)
5	AJP-SCREW DIN7991 M6X16 PF7991006016 (u. 2)
6	AJP-SPACER FOR GUIDE SEAT ASSEMBLY (22X6.5X6) SPR250 + 310 00DES05A0001 (u. 2)
7	AJP-SEAL FUEL LEVEL SENSOR NBR 3MM PR7 00DES01A0042 (u. 1)
8	AJP-SPACER FUEL SPR250 + 310 +510 2020 00DES02A0042 (u. 1)
9	AJP-SCREW DIN912 M10X65 PF0912010065 (u. 2)
10	AJP-UP SPACER FOR FUEL TANK SPR250 + 310 +510CC 2020 00DES01A0124 (u. 2)
11	AJP-SCREW DIN7380 M8X50 PF7380008050 (u. 2)
12	AJP-LOWER SPACER FOR FUEL TANKS EXTERNAL SPR250 + 310 +510CC 00DES05A0002 (u. 2)
13	AJP-LOWER SPACER FOR FUEL TANKS INTERNAL SPR250 + 310 +510CC 00DES05A0003 (u. 2)
14	AJP-MUD GARD SPR 125-240 00PLS01B0013 (u. 1)


16	AJP-REINFORCEMENT FUEL TANK FOR EXHAUST SPR250 2020 00MTS06A0068 (u. 1)
17	AJP-WASHER DIN125A M6 AN125A06INOX (u. 2)
19	AJP-FIXING PLATE DEPOSIT PAD SPR 125-240 00DES01A0147 (u. 1)

FUEL PUMP

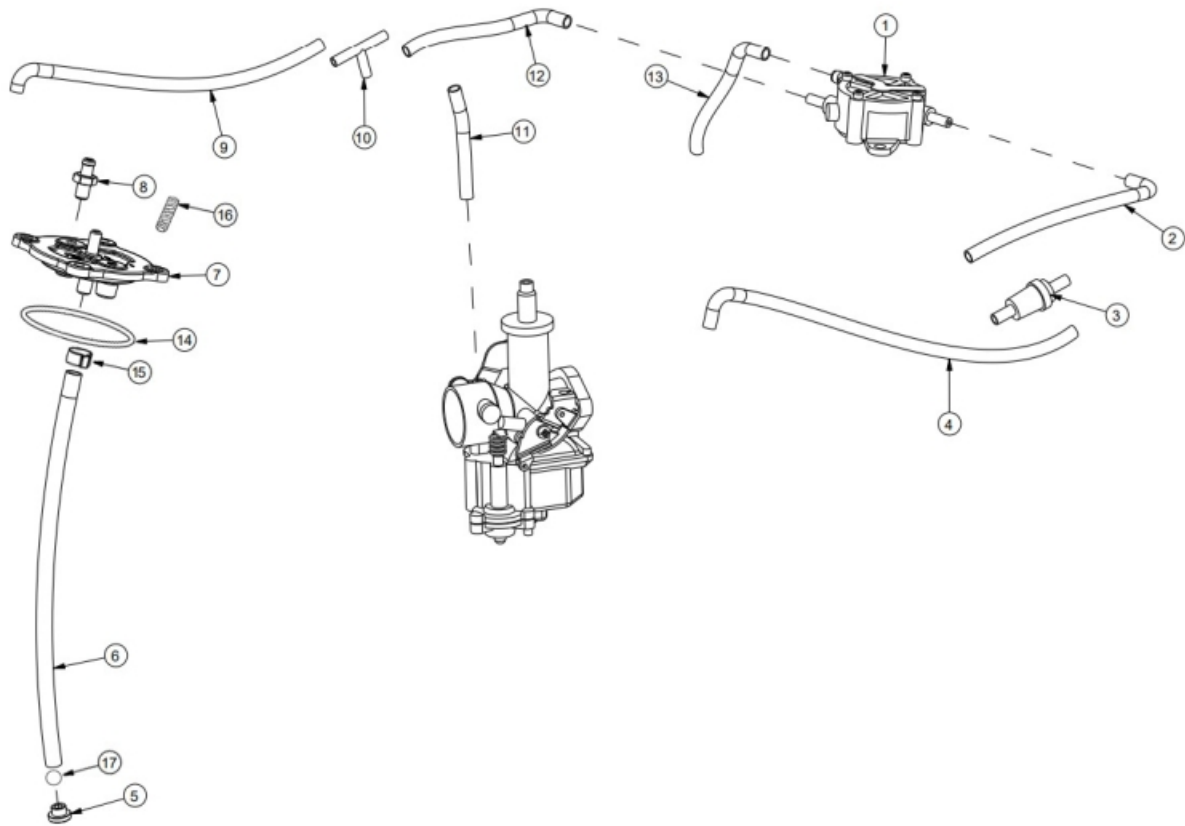


1	AJP-FUEL PUMP SPR125 AND SPR240 00DES01A0013 (u. 1)
2	AJP-HOSE(200MM) SPR 125-240 00DES01A0140 (u. 1)
3	AJP-FUEL FILTER 00DES01A0007 (u. 1)
4	AJP-FUEL HOSE (280MM) SPR 125-240 00DES01A0141 (u. 1)
5	AJP-SAPACER FOR MAXIMUM AND MINIMUM HEADLIGHT PR7 00ELS01A0102 (u. 1)
6	AJP-HOSE FISHING (250MM) SPR 125-240 00DES01A0142 (u. 1)
9	AJP-FUEL HOSE (250MM) SPR 125-240 00DES01A0143 (u. 1)
10	AJP-CONNECTOR 00DES01A0008 (u. 1)
11	AJP-FUEL HOSE (85MM) SPR125-240 00DES01A0144 (u. 1)
12	AJP-FUEL HOSE (160MM) SPR 125-240 00DES01A0145 (u. 1)
13	AJP-FUEL HOSE (210MM) SPR 125-240 00DES01A0146 (u. 1)
14	AJP-O-RING 65X3 NBR 70 FOR FUEL PIMP AFTER 10 APRIL 2015 00DES01A0070 (u. 1)
15	AJP-CLAMP 00DES01A0045 (u. 1)

FRONT FORKS AND STEERING COLUMN

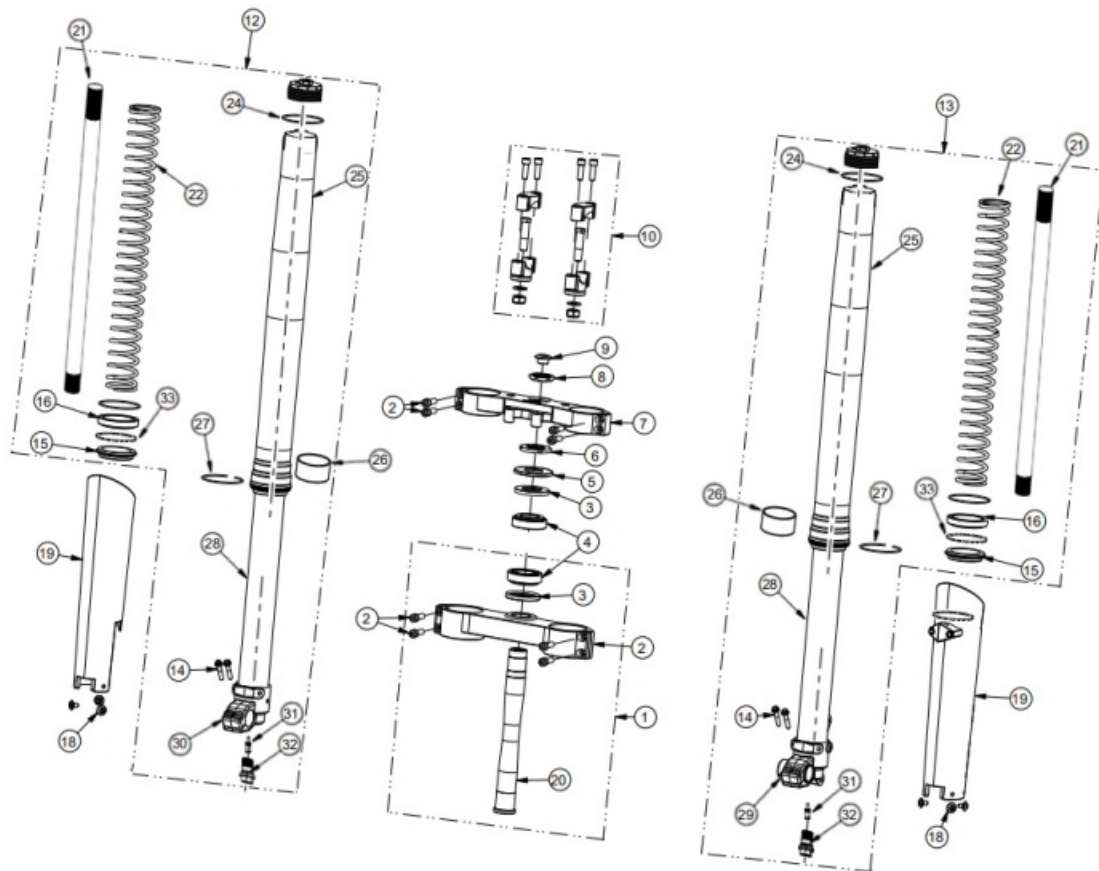

1	AJP-DOWN BRACKET FASTACE FORK PR4 SINCE MAY 2017 00SFS01A0107 (u. 1)
3	AJP-SEAL 00SFS01A0071 (u. 2)
4	AJP-BEARING 30205C RL000032005C (u. 2)
5	AJP-SEAL COVER 00SFS01A0072 (u. 1)
6	AJP-STEERING NUT 00SFS01A0007 (u. 1)
7	AJP-UP BRACKET FASTACE FORK PR4 SINCE MAY 2017 00SFS01A0106 (u. 1)
8	AJP-NUT FASTACE FORK (24X1) PR4 00SFS01A0112 (u. 1)
9	AJP-PLUG FOR STEERING STEM FASTACE 2012 00SFS01A0088 (u. 1)
10	AJP-BAR MOUNT PR5 00SFS01A0061 (u. 1)
12	AJP-FORK RH FASTACE (43MM - 900MM) PR4 JUNE 2017 00SFS01A0110 (u. 1)
13	AJP-FORK LH FASTACE (43MM - 900MM) PR4 JUNE 2017 00SFS01A0109 (u. 1)
14	AJP-SCREW DIN912 M8X25 PF0912008025 (u. 4)
15	AJP-DUST SEAL FASTACE FORK PR4 (43X54.3X59*6/14.5) 00SFS01A0116 (u. 2)
16	AJP-OIL SEAL FASTACE FORK PR4 (43X54X11) 00SFS01A0115 (u. 2)


18	AJP-SCREW FOR SET PROTECTOR FOR PR5 00PLS01A0093 (u. 6)
19	AJP-FORK PROTECTOR SET FASTACE WHITE PR4 00PLC01A0077 (u. 1)
20	AJP-STEERING STEM FASTACE PR4 2012 00SFS01A0113 (u. 1)
21	AJP-THREADED TUBE FRONT FORK FASTACE 43MM 00SFS01A0130 (u. 2)
22	AJP-SPRING FRONT FORK FASTACE 43MM 00SFS01A0129 (u. 2)
24	AJP-O-RING TOP FASTACE (42X2.62) 43MM 00SFS01A0136 (u. 2)
25	AJP-EXTERNAL TUBE FRONT FORK FASTACE 43MM 00SFS01A0123 (u. 2)
26	AJP-SPACER - GUIDE FOR FORK FASTACE (47X43X20) 43MM 00SFS01A0134 (u. 2)
27	AJP-EXTERIOR RING FORK FASTACE (55X3) 43MM 00SFS01A0138 (u. 2)
28	AJP-FASTACE INNER TUBE PR4 43MM 00SFS01A0120 (u. 2)
29	AJP-LEFT BOTTOM FASTACE 43MM 00SFS01A0126 (u. 1)
30	AJP-RIGHT BOTTOM FASTACE 43MM 00SFS01A0125 (u. 1)
31	AJP-TUNER OF COMPRESSION FORK FASTACE 43MM 00SFS01A0140 (u. 2)
32	AJP-SCREW FORK FASTACE (27.9X12X32) 43MM 00SFS01A0139 (u. 2)
33	AJP-CLIP FOR SEAL FRONT FORK FASTACE 43MM 00SFS01A0131 (u. 2)

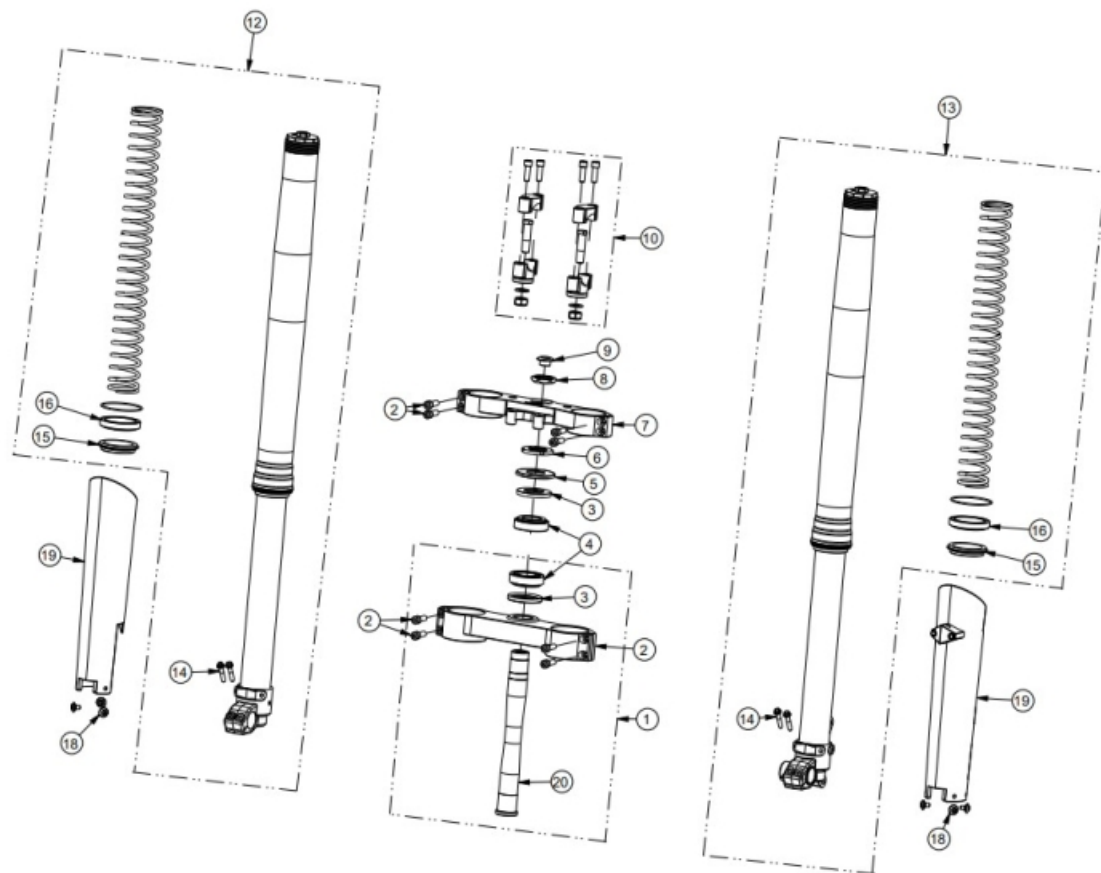FRONT FORKS AND STEERING COLUMN (EXTREM)


3	AJP-UPPER/LOWER STEER SEAL 00SFS01A0065 (u. 2)
4	AJP-BEARING 32006JR PR5 RL00032006JR (u. 2)
5	AJP-SEAL COVER 00SFS01A0064 (u. 1)
6	AJP-STEERING NUT 49X28X8 00SFS01A0104 (u. 1)
7	AJP-UPPER BRACKET 00SFS01A0062 (u. 1)
8	AJP-NUT M28X1 00SFS07A0071 (u. 1)
9	AJP-PLUG FOR STEERING STEM FASTACE 2012 00SFS01A0088 (u. 1)
10	AJP-BAR MOUNT PR5 00SFS01A0061 (u. 1)
12	AJP-FRONT FORK RH DOUBLE CIRCUIT 2019 00SFC01A0084 (u. 1)
13	AJP-FRONT FORK LH DOUBLE CIRCUIT 2019 00SFC01A0085 (u. 1)
14	AJP-SCREW DIN6921 M6X30 PF6921006030 (u. 4)
15	AJP-DUST SEAL 00SFS01A0069 (u. 2)
16	AJP-OIL SEAL 00SFS01A0070 (u. 2)
18	AJP-SCREW FOR SET PROTECTOR FOR PR5 00PLS01A0093 (u. 6)

19	AJP-FORK PROTECTOR SET 00PLS01A0077 (u. 1)
20	AJP-STEERING STEM PR5/PR7 00SFS01A0066 (u. 1)


REAR SUSPENSION LINKAGE

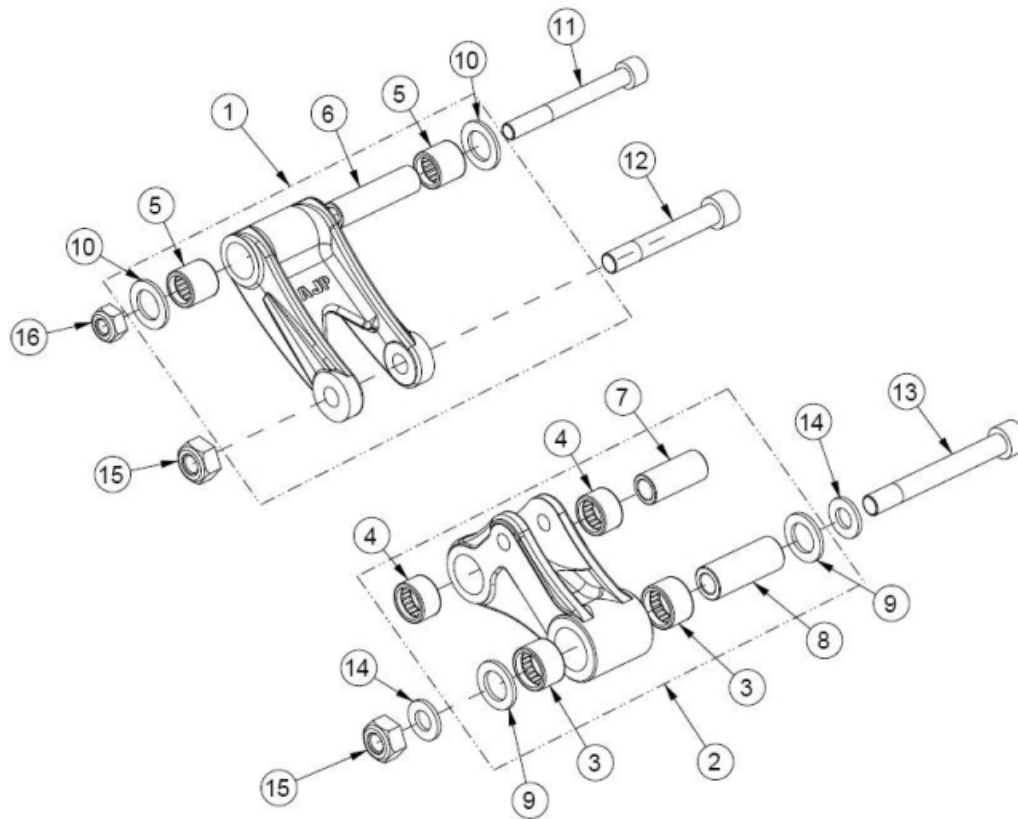


1	AJP-FRAME LINK ASSEMBLY 00STC07A0004 (u. 1)
2	AJP-REAR ARM LINK ASSEMBLY 00STC07A0005 (u. 1)
3	AJP-BEARING HK2020 RS RL00HK2020RS (u. 2)
4	AJP-BEARING HK1814 RS RL00HK1814RS (u. 2)
5	AJP-BEARING HK1620 RS RL00HK1620RS (u. 2)
6	AJP-SPACER 10X16X65 00STS07A0025 (u. 1)
7	AJP-SPACER 12X18X41 00STS07A0022 (u. 1)
8	AJP-SPACER 12X20X50 00STS07A0021 (u. 1)
9	AJP-WASHER 30X16X2 00STS01B0020 (u. 2)
10	AJP-WASHER FOR FRAME LINK PR3/PR4 00STS01A0020 (u. 2)
11	AJP-SCREW DIN912 M10X90 PF0912010090 (u. 1)
12	AJP-SCREW DIN912 M12X80 PF0912012080 (u. 1)
13	AJP-SCREW DIN912 M12X100 PF0912012100 (u. 1)
14	AJP-WASHER DIN125 M12 AN0125012000 (u. 2)

15	AJP-NUT DIN985 M12 PC0985012000 (u. 2)
16	AJP-NUT DIN985 M10 PC0985010000 (u. 1)

REAR SHOCK ABSORBER

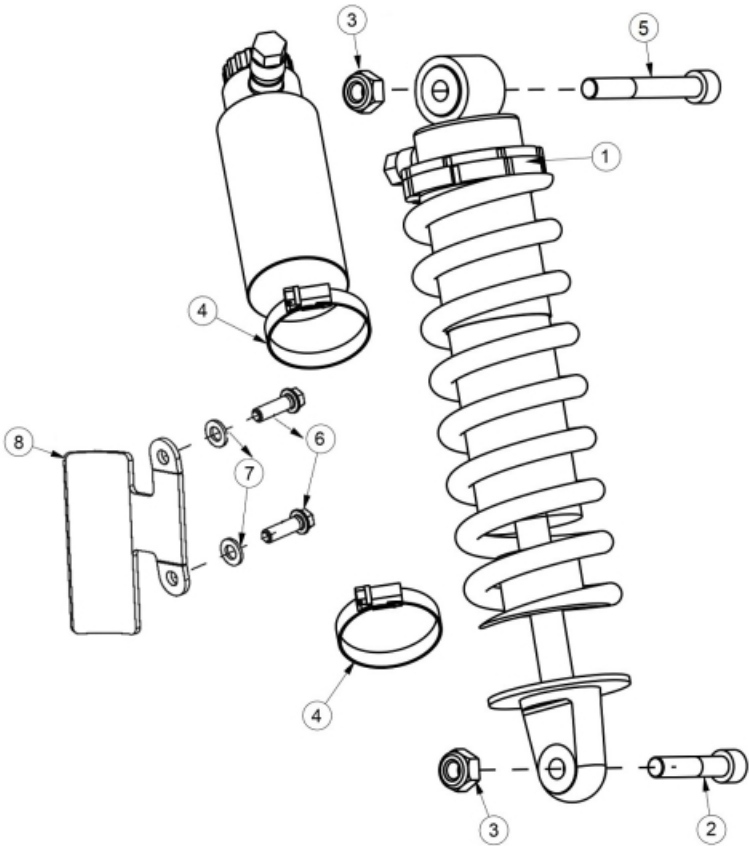


1	AJP-REAR SHOCK ABSORBER PR3 PRO SACHS 00STC01A0028 (u. 1)
2	AJP-SCREW DIN912 M10X50 PF0912010050 (u. 1)
3	AJP-NUT DIN985 M10 PC0985010000 (u. 2)
4	AJP-CLAMP 32-50 00DES01A0018 (u. 2)
6	AJP-SCREW DIN933 M6X12 PF0933006012 (u. 2)
7	AJP-WASHER DIN125A M6 AN125A006000 (u. 2)
8	AJP-RESERVOIR BRACKET 00QUS07A0080 (u. 1)

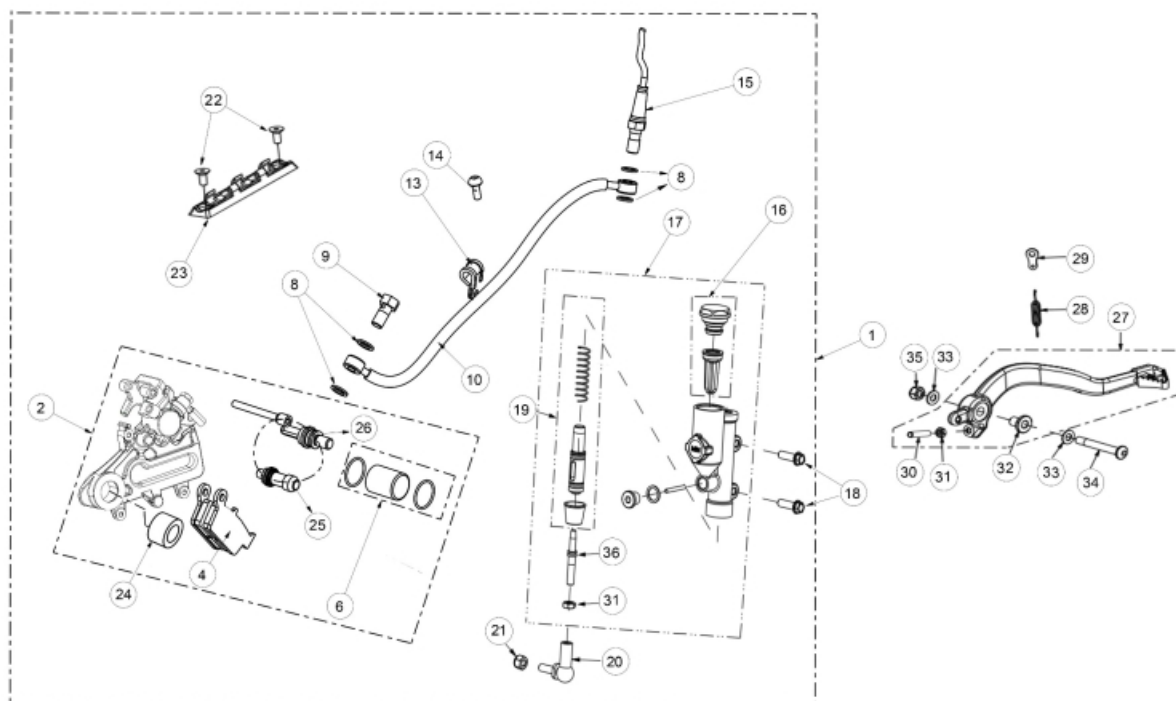REAR BRAKE SYSTEM BRAKTEC


1	AJP-REAR BRAKE CALIPER ASSEMBLY SPR 125 AND 240 00TRC01A0116 (u. 1)
2	AJP-REAR CALIPER ASSEMBLY PR4 AJP SET. 2014 00TRC01A0100 (u. 1)
4	AJP-REAR PAD SET PR3/PR4/PR5 BRAKTEC SINCE SEPTEMBER 2015 00TRS01A0075 (u. 1)
6	AJP-REAR PISTON SET BRAKTEC FROM OCT. 2014 00TRS01A0115 (u. 1)
8	AJP-WASHER 00TRS01A0103 (u. 4)
9	AJP-SCREW M10X1 PR3/PR4/PR5 2012 00TRS01A0025 (u. 1)
10	AJP-REAR BRAKE HOSE PR3/PR4/PR5 SINCE SEPTEMBER 2015 BRAKTEC 00TRS01A0111 (u. 1)
13	AJP-HOLDER 00TRS01A0037 (u. 1)
14	AJP-SCREW DIN7380 M6X12 PF73806012INOX (u. 1)
15	AJP-STOP VALVE 00TRS01A0039 (u. 1)
16	AJP-DIAPHRAGMA KIT REPAIR (FOR REF. 00TRS01A0122) 00TRS01A0161 (u. 1)
17	AJP-REAR MASTER CYLINDER 12.7MM PR7 00TRS01A0122 (u. 1)
18	AJP-SCREW DIN69FS2 6X20 PR7 PF069FS26020 (u. 2)
19	AJP-PISTON & CUP SET BRAKTEC PR7 00TRS01A0129 (u. 1)
20	AJP-PUSH ROD PA7340 M6 FOR REAR BRAKE PEDAL 00TRS06A0006 (u. 1)
21	AJP-NUT DIN934 M6 PC0934006000 (u. 1)


23	AJP-GUIDE OF BRAKE HOSE PR7 + GUIDE HOSE FUEL PR7 00TRS01A0124 (u. 1)
24	AJP-SPACER SUPPORT OF REAR CALIPER PR4 AJP SET 2014 (15X20X15) 00TRS07A0089 (u. 1)
25	AJP-BOOT 00TRS01A0017 (u. 1)
26	AJP-BOOT 00TRS01A0018 (u. 1)
27	AJP-PEDAL. REAR BRKE SPR 125-240 00TRS07A0113 (u. 1)
28	AJP-SUPPORT SPRING REAR BRAKE PEDAL PR5 2013 END/EXTREME 00TRS07A0094 (u. 1)
29	AJP-SUPPORT SPRING REAR BRAKE PEDAL SPR 125-240 00TRS07A0112 (u. 1)
31	AJP-NUT DIN934 M6 PC0934006000 (u. 2)
32	AJP-SPACER REAR BRAKE PEDAL RED 17X10X8 PR7 00TRS07A0100 (u. 1)
33	AJP-WASHER 5/16 00MTS01A0072 (u. 2)
34	AJP-SCREW DIN7380 M8X50 PF7380008050 (u. 1)
35	AJP-NUT DIN985 M8 PC0985008000 (u. 1)
36	AJP-SCREW FOR REAR BRAKE PEDAL 310 AND 510CC 00TRS07A0109 (u. 1)

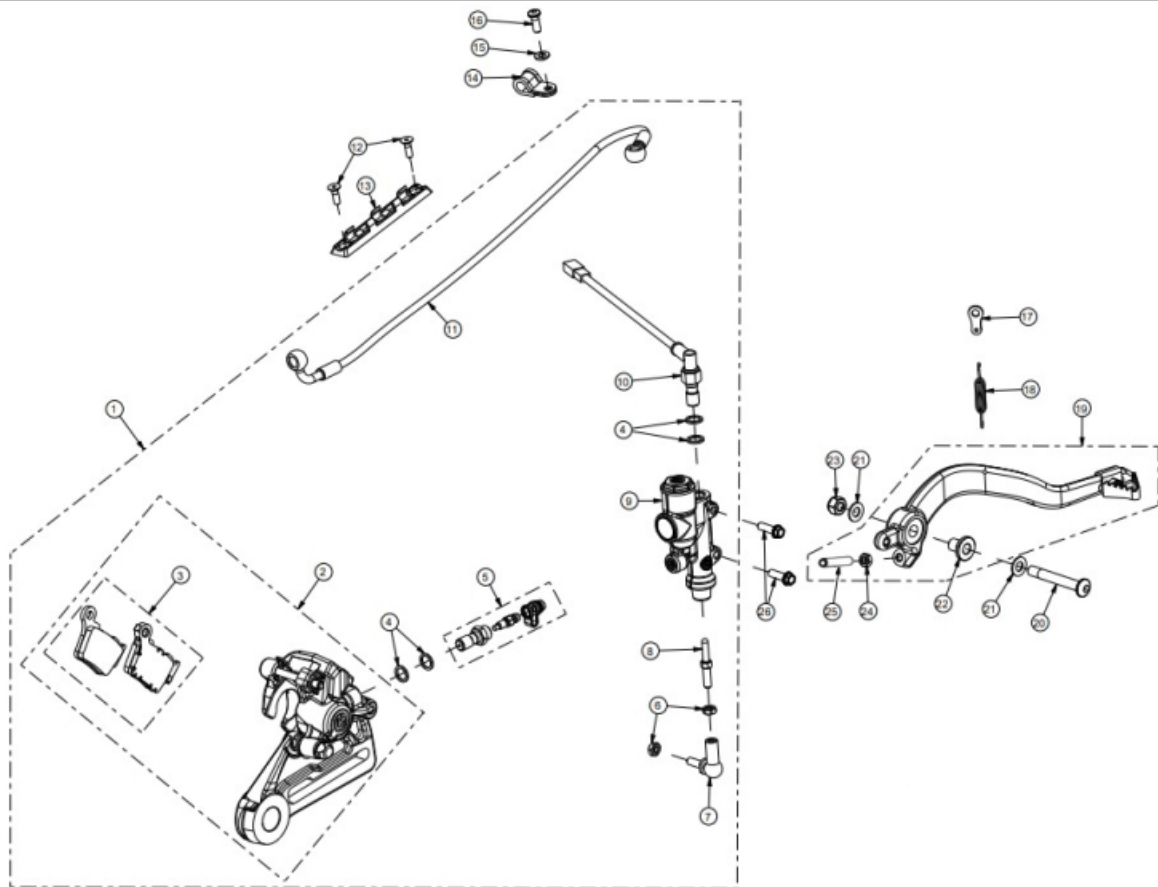REAR BRAKE SYSTEM BREMBO (EXTREME)


3	AJP-REAR PAD KIT SPR 00TRS01A0163 (u. 1)
4	AJP-WASHER 00TRS01A0103 (u. 2)
5	AJP-SCREW FOR REAR MASTER CYLINDER. BREMBO SPR310/510 2021 00TRS01A0156 (u. 1)
6	AJP-NUT DIN934 M6 PC0934006000 (u. 2)
7	AJP-PUSH ROD PA7340 M6 FOR REAR BRAKE PEDAL 00TRS06A0006 (u. 1)
8	AJP-SCREW FOR REAR BRAKE PEDAL 310 AND 510CC 00TRS07A0109 (u. 1)
9	AJP-REAR MASTER CYLINDER. BREMBO SPR310/510 2021 00TRS01A0155 (u. 1)
10	AJP-STOP VALVE 00TRS01A0039 (u. 1)
11	AJP-REAR BRAKE HOSE SPR125 AND 240CC 00TRS01A0167 (u. 1)
13	AJP-GUIDE OF BRAKE HOSE PR7 + GUIDE HOSE FUEL PR7 00TRS01A0124 (u. 1)
14	AJP-HOLDER 00TRS01A0037 (u. 1)
15	AJP-WASHER DIN125A M6 AN125A06INOX (u. 1)
16	AJP-SCREW DIN7380 M6X12 PF73806012INOX (u. 1)
17	AJP-SUPPORT SPRING REAR BRAKE PEDAL SPR 125-240 00TRS07A0112 (u. 1)

18	AJP-SUPPORT SPRING REAR BRAKE PEDAL PR5 2013 END/EXTREME 00TRS07A0094 (u. 1)
19	AJP-PEDAL. REAR BRKE SPR 240 EXTREME 00TRS07A0114 (u. 1)
20	AJP-SCREW DIN7380 M8X50 PF7380008050 (u. 1)
21	AJP-WASHER 5/16 00MTS01A0072 (u. 2)
22	AJP-SPACER REAR BRAKE PEDAL RED 17X10X8 PR7 00TRS07A0100 (u. 1)
23	AJP-NUT DIN985 M8 PC0985008000 (u. 1)
24	AJP-NUT DIN934 M6 PC0934006000 (u. 1)
26	AJP-SCREW DIN69FS2 6X20 PR7 PF069FS26020 (u. 2)

FRONT BRAKE SYSTEM BRAKTEC

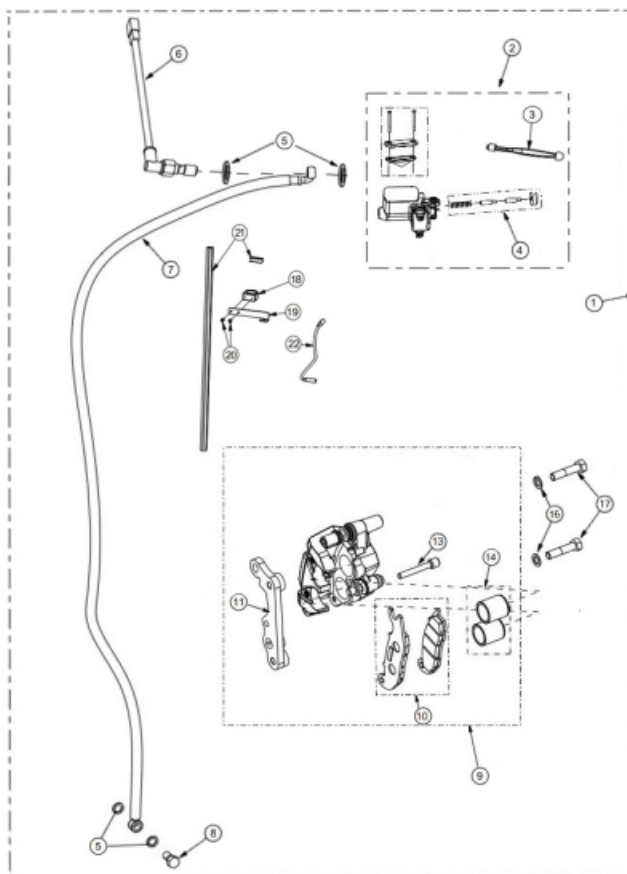

1 AJP-FRONT BRAKE ASSEMBLY BRAKTEC SPR125 AND 240CC AFTER 12,2021
00TRC01A0115 (u. 1)

2 AJP-FRONT MASTER CYLINDER ASSEMBLY PR4/PR5 2014 BRAKTEC
00TRS01A0109 (u. 1)

3 AJP-BRAKE LEVER PR4/PR5 2015 BRAKTEC 2015
00TRS01E0001 (u. 1)

4 AJP-PISTON & CUP SET BRAKTEC FROM OCT. 2014
00TRS01A0117 (u. 1)

5 AJP-WASHER
00TRS01A0103 (u. 4)

6 AJP-STOP VALVE
00TRS01A0039 (u. 1)

7 AJP-FRONT BRAKE HOSE PR4 SINCE SEPTEMBER 2015 BRAKTEC
00TRS01A0121 (u. 1)

8 AJP-SCREW M10X1 PR3/PR4/PR5 2012
00TRS01A0025 (u. 1)

9 AJP-FRONT CALIPER ASSEMBLY PR3/PR4/PR5 JUNE 2014
00TRC01A0078 (u. 1)

10 AJP-FRONT PAD SET PR3/PR4/PR5 BRAKTEC 2015
00TRS01A0074 (u. 1)


11 AJP-SUPPORT FRONT CALIPER AJP PR4 JUNE 2017 FASTACE
00TRS07A0101 (u. 1)

13 AJP-FRONT PAD FIXATION SCREW PR3/PR4/PR5 2012
00TRS01A0064 (u. 1)

14 AJP-FRONT PISTON SET
00TRS01A0079 (u. 1)


16 AJP-WASHER DIN127 M8
AN0127008000 (u. 2)

17	AJP-SCREW DIN933 M8X40 PF0933008040 (u. 2)
18	AJP-HOLDER 00PLS01A0042 (u. 1)
20	AJP-SCREW 3.5 PF7981003513 (u. 2)
21	AJP-SENSOR CABLE HOSE KIT 460MM/120MM PR4 00TRS01A0130 (u. 1)
22	AJP-SPEEDOMETER SENSOR DB-01 PR7/ SPR250+310+510 00ELS01A0088 (u. 1)

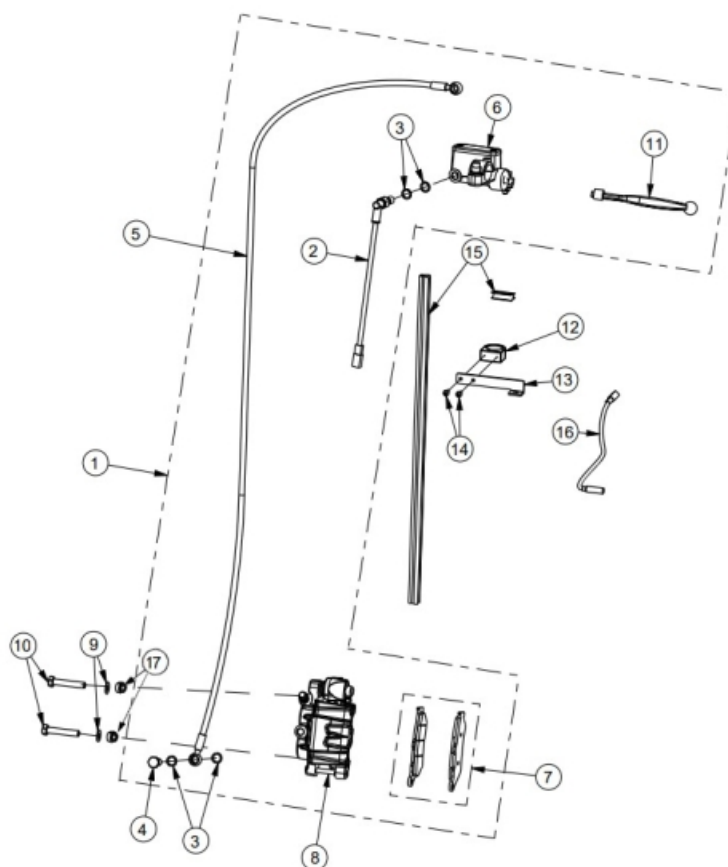FRONT BRAKE SYSTEM BREMBO (EXTREME)


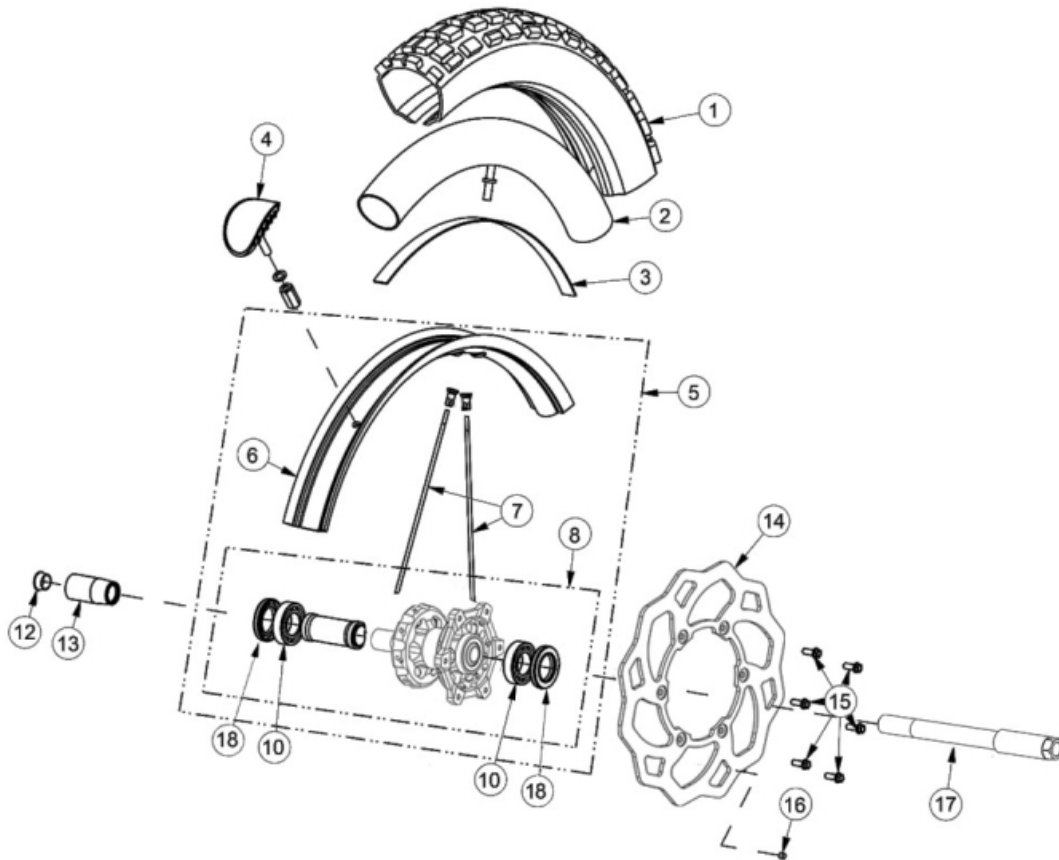
2	AJP-STOP VALVE 00TRS01A0039 (u. 1)
3	AJP-WASHER 00TRS01A0103 (u. 4)
4	AJP-SCREW M10X1 PR3/PR4/PR5 2012 00TRS01A0025 (u. 1)
5	AJP-FRONT BRAKE HOSE SPR310 AND 510CC 00TRS01A0168 (u. 1)
6	AJP-FRONT MASTER CYLINDER. BREMBO SPR310/510CC 2020 00TRS01A0153 (u. 1)
7	AJP-FRONT PAD KIT SPR 00TRS01A0162 (u. 1)
8	AJP-FRONT CALIPER ASSY. BREMBO SPR310/510 2021 00TRS01A0152 (u. 1)
9	AJP-WASHER DIN6798 M8X14X0.8 AN67980801408 (u. 2)
10	AJP-SCREW DIN933 M8X35 PF0933008035 (u. 2)
11	AJP-BRAKE LEVER SPR 310/510 00TRS01A0164 (u. 1)
12	AJP-HOLDER 00PLS01A0042 (u. 1)
14	AJP-SCREW 3.5 PF7981003513 (u. 2)
15	AJP-SENSOR CABLE HOSE KIT 466MM/30MM PR7 00TRS01A0132 (u. 1)
16	AJP-SPEEDOMETER SENSOR BREMBOPR7 AFTER MAY (1400MM) 2019 00ELS01B0088 (u. 1)

FRONT WHEEL

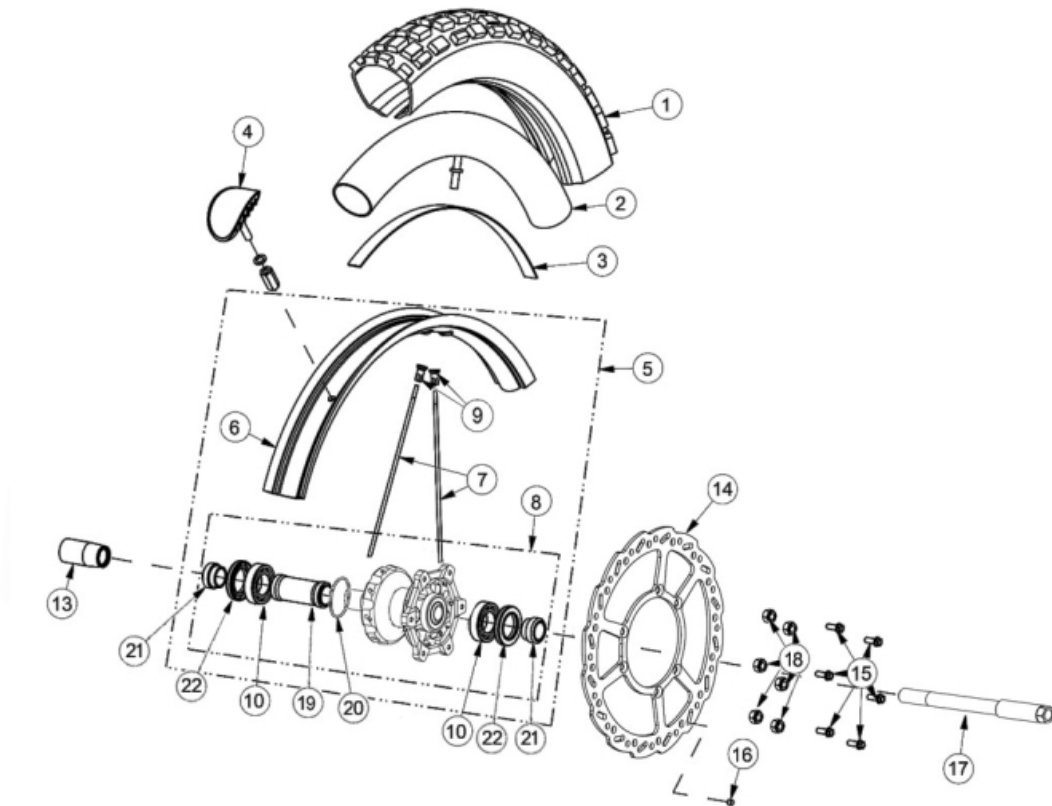

-	AJP-TIRE MICHELIN SM 100/80-17" 00RFS01A0003 (u. 1)
1	AJP-TIRE MICHELIN EN 90/90-21" 00RFS01A0002 (u. 1)
2	AJP-INNER TUBE EN 00RFS01A0005 (u. 1) AJP-INNER TUBE SM 00RFS01A0006 (u. 1)
3	AJP-WHEEL RIM TAPE 1.35/1.85X17" 00RFS01A0046 (u. 1) AJP-WHEEL RIM TAPE 21" 00RFS01A0023 (u. 1)
4	AJP-FRONT TIRE FIXATION 1.60 00RFS01A0061 (u. 1)
5	AJP-FRONT WHEEL SM PR3/PR4/PR5 2.50X17 2012 00RFC01A0060 (u. 1) AJP-FRONT WHEEL BLACK RIM 1.60X21 PR4/PR5 2012 00RFC01A0009 (u. 1)
6	AJP-RIM EN BLACK 1.60"X21" 2012 PR4/PR5 00RFS01A0068 (u. 1) AJP-RIM BLACK SM 2.50-17 36T 2012 00RFS01A0021 (u. 1)
7	AJP-SPOKE 240X3.8 PR4/PR5 2011-2013 00RFS01A0079 (u. 36) AJP-SPOKE INOX REAR WHEEL 190X4MM PR7 00RTS01A0143 (u. 36)
8	AJP-HUB FOR PR4/PR5 2012 00RFS01A0075 (u. 1)


9	AJP-SPOKE NUT 3.5 00RTS01A0051 (u. 36)
10	AJP-BEARING 6004-2RS RL00060042RS (u. 2)
13	AJP-SPACER FORK PR4/PR3 FASTACE LH SIZE (25X53 M14X1.5) 00SFS01B0111 (u. 1)
14	AJP-FRONT BRAKE DISC 260MM PR4/PR5 2012 00RFS01A0067 (u. 1)
15	AJP-SCREW DIN7991 M6X20 PF7991006020 (u. 6)
16	AJP-FRONT DISC MAGNET 00RFS01A0042 (u. 1)
17	AJP-FRONT AXLE PR4 2012 00RFS07A0019 (u. 1)
18	AJP-NUT DIN985 M6 PC0985006000 (u. 6)
19	AJP-INNER TUBE (62MM) FRONT HUB SPR 125/240/250 00RFS01A0146 (u. 1)
20	AJP-O- RING 28X5 00RFS01A0066 (u. 1)
21	AJP-SPACER FRONT WHEEL LH PR4 FASTACE (25X14.5X15) 00RFS01A0092 (u. 2)
22	AJP-DUST SEAL 25X42X7 00RFS01A0057 (u. 2)

FRONT WHEEL (EXTREME)


1	AJP-TIRE MICHELIN EN 90/90-21" 00RFS01A0002 (u. 1)
2	AJP-INNER TUBE EN 00RFS01A0005 (u. 1)
3	AJP-WHEEL RIM TAPE 21" 00RFS01A0023 (u. 1)
4	AJP-FRONT TIRE FIXATION 1.60 00RFS01A0061 (u. 1)
5	AJP-FRONT WHEEL BLACK RIM 1.60X21 PR4/PR5 EXTREME 2012 00RFC01A0061 (u. 1)
6	AJP-RIM EN BLACK 1.60"X21" EXTREME 00RFS01A0056 (u. 1)
7	AJP-SPOKE + NIPPLES EN 250X 4.00 PR4/PR5 FEBRUARY 2020 00RFS01C0082 (u. 36)
8	AJP-HUB RED PR4/PR5 2013 00RFS07A0053 (u. 1)
10	AJP-BEARING 6004-2RS RL00060042RS (u. 2)
12	AJP-PLASTIC PLUG. AXLE (20 MM) PR7 00RFS01A0139 (u. 1)
13	AJP-FRONT AXLE RH 00RFS05A0054 (u. 1)
14	AJP-FRONT DISC 260MM FOR 310/P510 2020 00RFS01A0143 (u. 1)
15	AJP-SCREW DIN69FS2 6X16 PR7 PF069FS26016 (u. 6)
16	AJP-FRONT DISC MAGNET 00RFS01A0042 (u. 1)


17	AJP-FRONT AXLE LH 00RFS05A0055 (u. 1)
18	AJP-DUST SEAL 25X42X7 00RFS01A0057 (u. 2)

REAR WHEEL

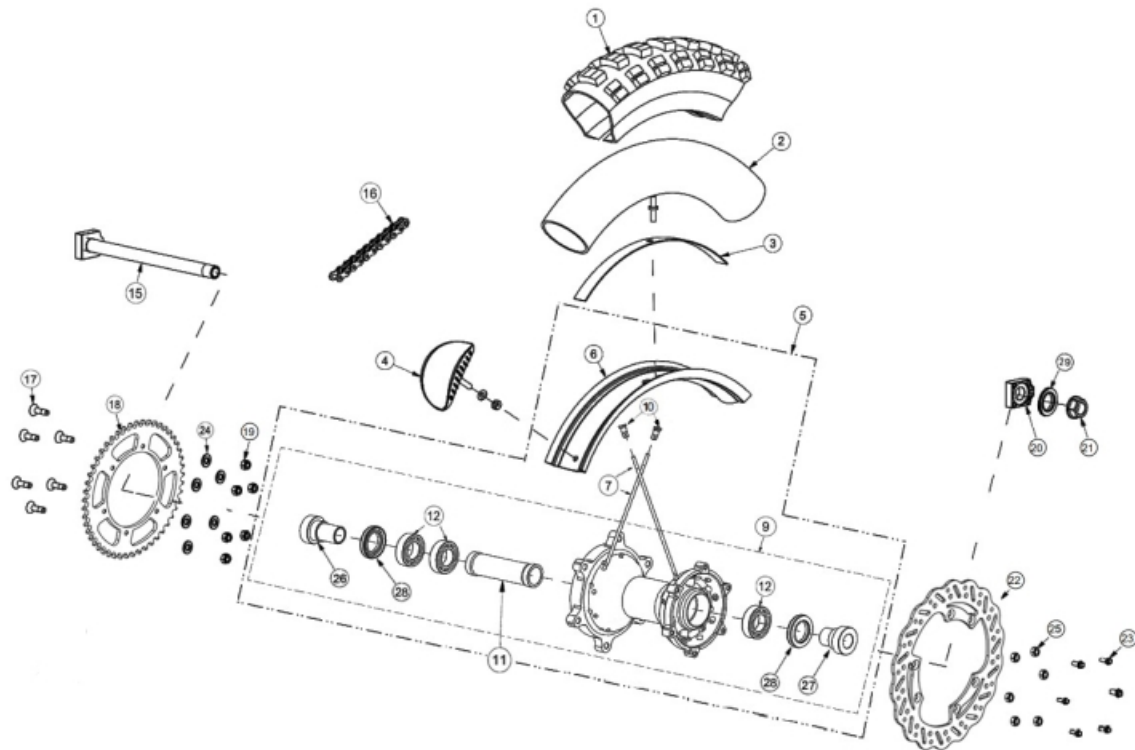

-	(u. 0)
1	AJP-TYRE MICHELIN 120/90-18 00RTS01A0002 (u. 1) AJP-TYRE MICHELIN 130/70-17" 00RTS01A0003 (u. 1)
2	AJP-INNER TUBE TR 120/90-18 00RTS01A0005 (u. 1) AJP-INNER TUBE SM 17" 00RTS01A0006 (u. 1)
3	AJP-WHEEL RIM TAPE 1.60/2.00X 18/19 00RTS01A0025 (u. 1) AJP-WHEEL RIM TAPE 2.15/3.00-17" 00RTS01A0060 (u. 1)
4	AJP-RIM LOCK 2.15 00RTS01A0052 (u. 1)
5	AJP-REAR WHEEL SM PR4 2012 00RTC01A0080 (u. 1) AJP-REAR WHEEL RIM BLACK 2.15X18 PR4 2012 00RTC01A0005 (u. 1)
6	AJP-WHEEL RIM BLACK EN 2.15X18 PR4/PR5 2012 00RTS01A0075 (u. 1) AJP-RIM BLACK SM 3.50-17 36T PR4/PR5 2012 00RTS01A0026 (u. 1)
7	AJP-SPOKE INOX REAR WHEEL 190X4MM PR7 00RTS01A0143 (u. 36) AJP-SPOKE EN LH 207X3.8 2011-2013 00RTS01A0112 (u. 36)
9	AJP-REAR HUB PR4 2012 MACHINED SIDE DISC AND SPROCKET 00RTS01A0126 (u. 1)
10	AJP-SPOKE NUT 3.5 00RTS01A0051 (u. 36)


11	AJP-INNER TUBE (98MM) REAR HUB SPR125/240/250 00RTS01A0166 (u. 1)
12	AJP-BEARING 6005 2RS RL00060052RS (u. 3)
15	AJP-REAR SHAFT 00RTS07A0040 (u. 1)
16	AJP-CHAIN RK 482-132 00MTS01A0019 (u. 1)
17	AJP-SCREW DIN7380 M8X25 PF7380008025 (u. 6)
18	AJP-SPROCKET Z50 PR4 2012 00RTS01A0096 (u. 1)
	AJP-SPROCKET Z48 PR4 2012 00RTS01A0017 (u. 1)
19	AJP-NUT DIN985 M8 PC0985008000 (u. 6)
20	AJP-CHAIN ADJUSTER RH 00RTS02A0042 (u. 1)
21	AJP-NUT DIN934 M14 PC0934014000 (u. 1)
22	AJP-REAR BRAKE DISC 240MM PR5 00RTS01A0067 (u. 1)
23	AJP-SCREW DIN7991 M6X20 PF7991006020 (u. 6)
25	AJP-NUT DIN985 M6 PC0985006000 (u. 6)
26	AJP-SPACER REAR WHEEL LH 2012 PR4 00RTS07A0075 (u. 1)
27	AJP-SPACER REAR WHEEL RH 2012 PR4/PR5 (2015) 00RTS07A0076 (u. 1)
28	AJP-DUST SEAL 47X7X30 00RTS01A0022 (u. 2)
29	AJP-WASHER DIN125A M14 AN125A014000 (u. 1)

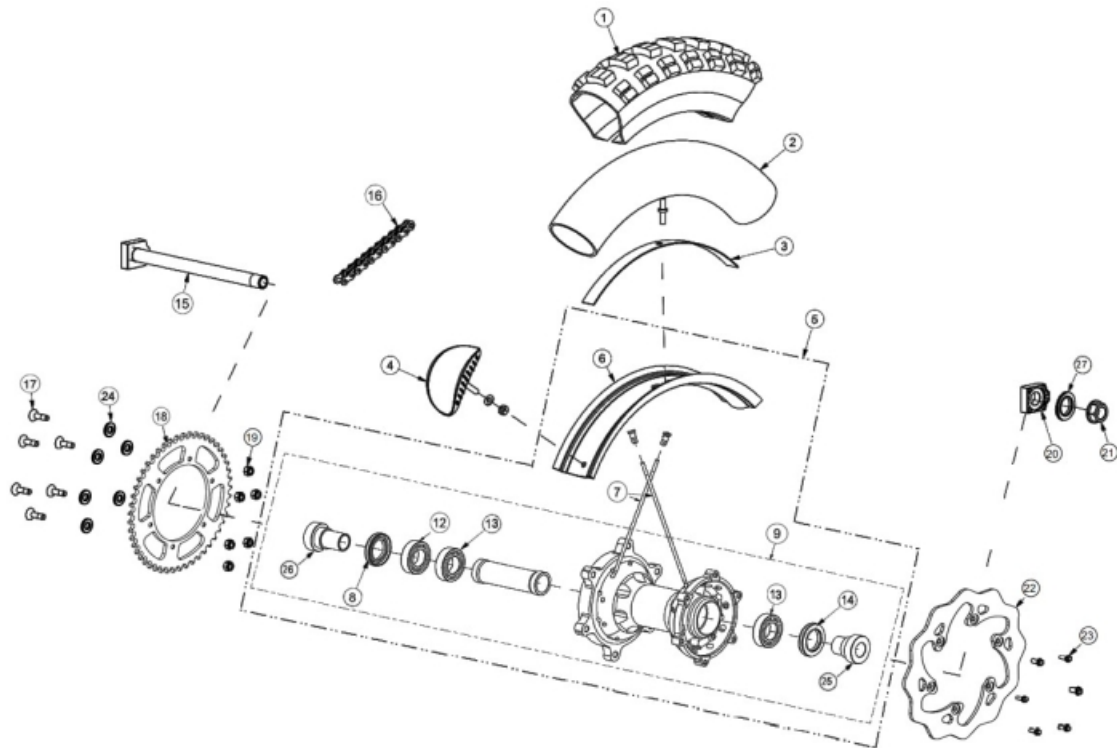REAR WHEEL (EXTREME)


1	AJP-TYRE MICHELIN 120/90-18 00RTS01A0002 (u. 1)
2	AJP-INNER TUBE TR 120/90-18 00RTS01A0005 (u. 1)
3	AJP-WHEEL RIM TAPE 1.60/2.00X 18/19 00RTS01A0025 (u. 1)
4	AJP-RIM LOCK 2.15 00RTS01A0052 (u. 1)
5	AJP-REAR WHEEL RIM BLACK 2.15X18 PR4 EN EXTREME 2012 00RTC01A0079 (u. 1)
6	AJP-WHEEL RIM BLACK EN 2.15X18 EXTREME 00RTS01A0074 (u. 1)
7	AJP-SPOKE EN RH 192X4 PR4/PR5 EXTREME AFTER OCTOBER 2015 00RTS01B0079 (u. 36)
8	AJP-DUST SEAL 47X7X30 00RTS01A0022 (u. 1)
9	AJP-REAR HUB RED FOR EXTREME PR4 2013 00RTS01A0156 (u. 1)
12	AJP-BEARING 6005 2RS RL00060052RS (u. 1)
13	AJP-BEARING 6004-2RS RL00060042RS (u. 2)
14	AJP-DUST SEAL 30X42X7 00RTS01B0024 (u. 1)
15	AJP-REAR SHAFT 00RTS07A0040 (u. 1)
16	AJP-CHAIN 520H - 110 ORMX GOLD 00RTS01A0152 (u. 1)
17	AJP-VIS DIN79914 M8X30 PF7991008030 (u. 6)

18	AJP-SPROCKET JTR822-48 PR4 BRASIL MORAD 00RTS01A0122 (u. 1)
19	AJP-NUT DIN985 M8 PC0985008000 (u. 6)
20	AJP-CHAIN ADJUSTER RH 00RTS02A0042 (u. 1)
21	AJP-NUT DIN934 M14 PC0934014000 (u. 1)
22	AJP-REAR BRAKE DISC FOR SPR310 + P510 00RTS01A0163 (u. 1)
23	AJP-SCREW DIN69FS2 6X16 PR7 PF069FS26016 (u. 6)
25	AJP-SPACER REAR WHEEL RH 14.5MM RH. SPR 240 EXTREME 00RTS07B0081 (u. 1)
26	AJP-SPACER REAR WHEEL RH PR4 EXTREME 00RTS07A0082 (u. 1)
27	AJP-WASHER DIN125A M14 AN125A014000 (u. 1)


HANDLEBAR, CONTROLS AND SWITCHES

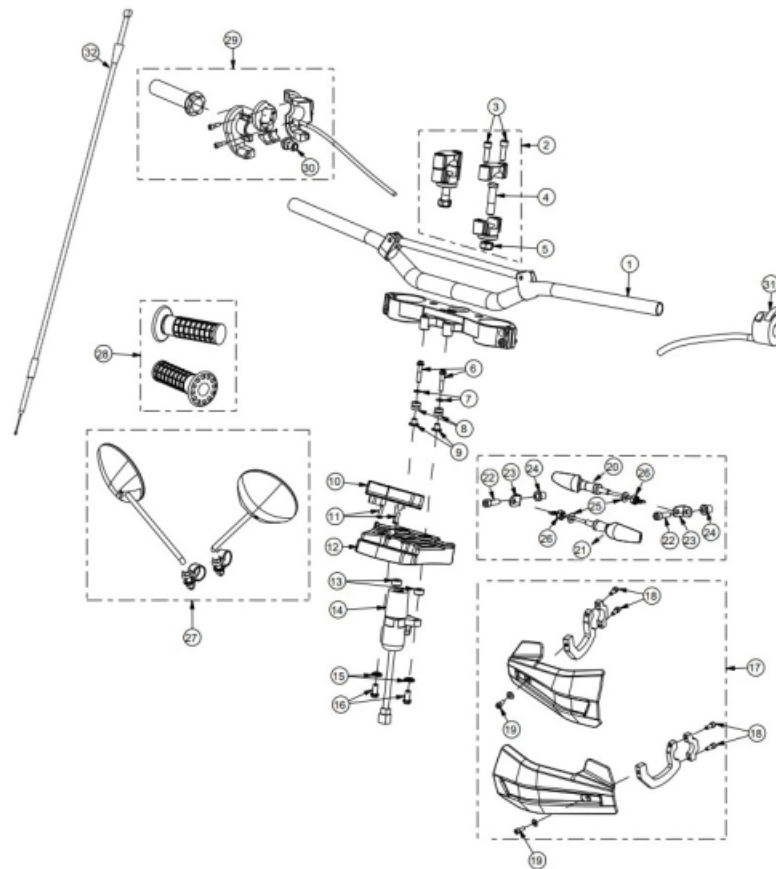

1	AJP-HANDLEBAR PR5 + P310 + P510 2020 (JOBA R9012BK) 00COS01A0059 (u. 1)
2	AJP-BAR MOUNT PR5 00SFS01A0061 (u. 1)
3	AJP-SCREW DIN912 M8X20 PF0912008020 (u. 2)
6	AJP-SCREW DIN69FS2 6X16 PR7 PF069FS26016 (u. 2)
8	AJP-CUSHION 00COS01A0016 (u. 2)
9	AJP-SPACER 00COS07A0030 (u. 2)
10	AJP-SPEEDOMETER SPR250 + P310 E P510 2020 00ELS01A0113 (u. 1)
12	AJP-SPEEDOMETER COVER PR5 +310 +510CC 2020 00ELS01A0114 (u. 1)
13	AJP-SPACER IGNITION SPR 250 + 310 + 510CC (8X15X6.5) 2020 00ELS07A0051 (u. 2)
14	AJP-IGNITION SWITCH ASSEMBLY SPR MODELS 125/ 240 00COS01A0065 (u. 2)
15	AJP-SPACER 16X4.4X6 00COS07A0015 (u. 2)
16	AJP-SCREW DIN6921 M6X30 PF6921006030 (u. 2)
17	AJP-HAND GARDS WHITE 00PLS01A0073 (u. 1)
20	AJP-TURN LAMP ASSEMBLY LH PR7 AFTER MAY 2019 00ELC01A0013 (u. 1)


21	AJP-TURN LAMP ASSEMBLY RH PR7 AFTER MAY 2019 00ELC01A0012 (u. 1)
25	AJP-WASHER DIN9021 M8 AN9021008000 (u. 2)
26	AJP-NUT DIN934 M8 PC0934008000 (u. 2)
27	AJP-REAR VIEW MIRROR 00COS01A0021 (u. 1)
29	AJP-THROTTLE CONTROL ASSEMBLY 00COC01A0002 (u. 1)
	AJP-THROTTLE CONTROL ASSEMBLY RED/BLACKSPR240 EXTREME +310CC + 5 00COC01B0002 (u. 1)
30	AJP-THROTTLE CABLE TUNNER 00COS01A0037 (u. 1)
31	AJP-LIGHTS SWITCH SPR250/310 AND 510 00ELC01A0058 (u. 1)
32	AJP-THROTTLE CABLE PR3 125 TRAIL 2013 00COS01C0005 (u. 1)

CLUTCH CONTROLS

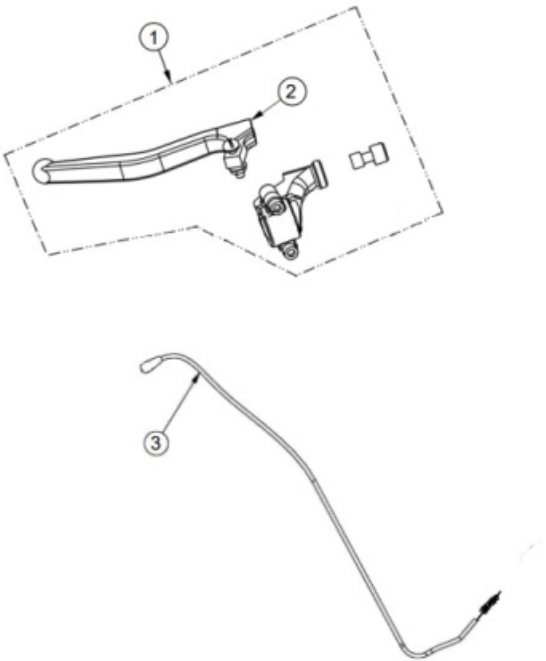


1	AJP-CLUTCH LEVER ASSEMBLY 2013 00COC01A0044 (u. 1)
2	AJP-CLUTCH LEVER 2013 (OCTOBER) 00COS01A0043 (u. 1)
3	AJP-CLUTCH CABLE PR3/PR4 00COS01C0007 (u. 1)

ELECTRIC HARNESS

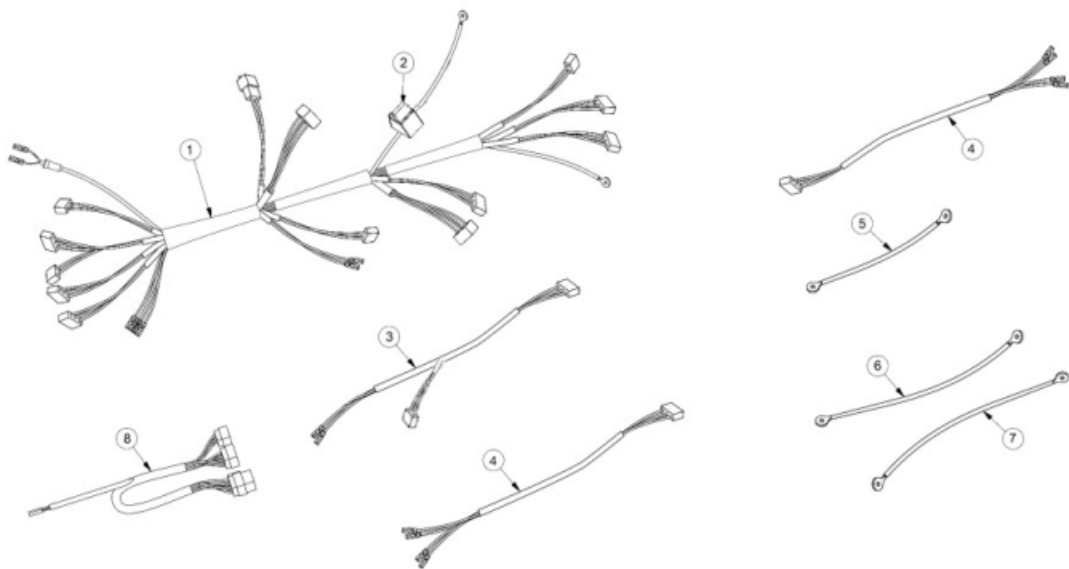


1	AJP-WIRING HARNESS SPR125/SPR240 00ELC01B0038 (u. 1)
2	AJP-FUSE 00ELS01A0017 (u. 1)
6	AJP-GROUND CONNECTION CABLE (250MM) 00ELS01A0051 (u. 1)
7	AJP-STARTING MOTOR CABLE 8223110490000 (u. 1)
8	AJP-SPEEDOMETER WIRING SPR250 + 310 +510 2020 00ELS01A0126 (u. 1)

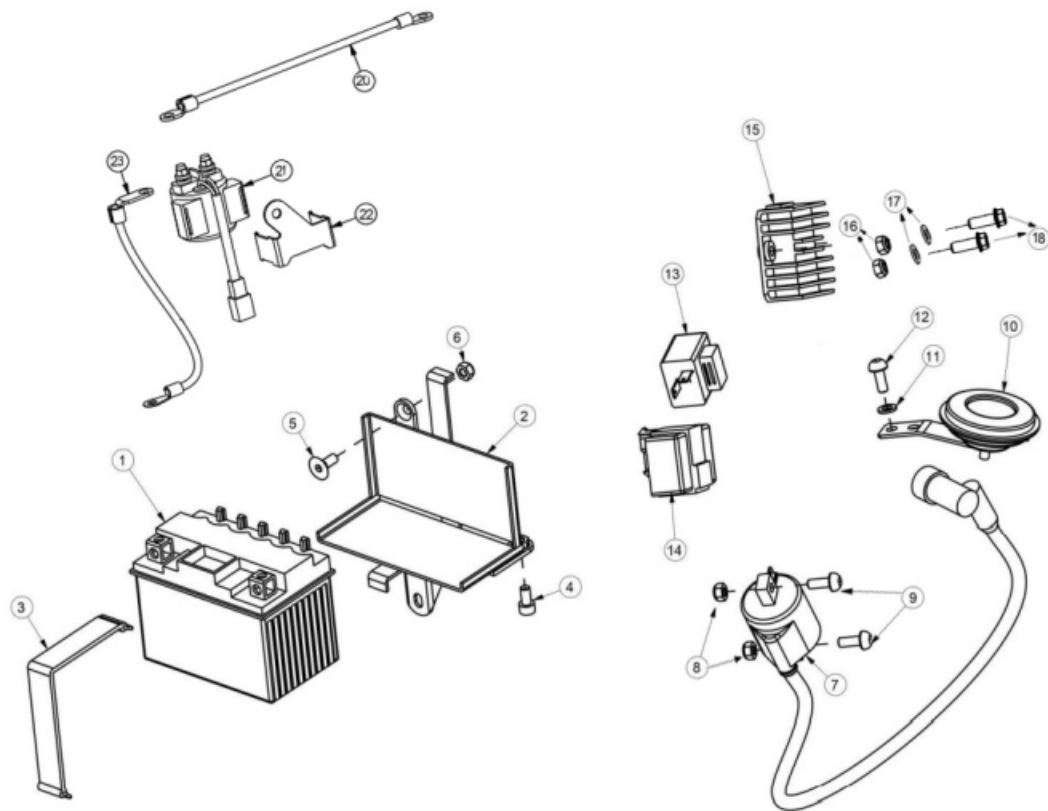BATTERY-ELECTRIC SYSTEM


1	AJP-BATTERY YTZ7-S (12V 6AH) 00ELS01A0039 (u. 1)
2	AJP-BATTERY HOLDER 00ELS04A0003 (u. 1)
3	AJP-BAND 00ELS01A0004 (u. 1)
4	AJP-SCREW DIN912 M6X12 PF0912006012 (u. 1)
5	AJP-SCREW DIN7991 M6X16 PF7991006016 (u. 1)
6	AJP-NUT DIN985 M6 PC0985006000 (u. 1)
7	AJP-IGNITION COIL ASSEMBLY 91A231400000 (u. 1)
8	AJP-NUT DIN985 M6 PC0985006000 (u. 2)
9	AJP-SCREW DIN912 M6X12 PF0912006012 (u. 2)
10	AJP-HORN 12V CC 00ELS01A0005 (u. 1)
11	AJP-WASHER DIN125A M6 AN125A06INOX (u. 1)
12	AJP-SCREW DIN7380 M6X16 INOX PF73806016INOX (u. 1)
13	AJP-TURN LIGHTS RELAY LEDS AFTER MAY 2019 00ELS01A0112 (u. 1)
14	AJP-CDI 93A231000000 (u. 1)

15	AJP-REGULATEUR 94A231100000 (u. 1)
16	AJP-NUT DIN985 M6 PC0985006000 (u. 2)
17	AJP-WASHER DIN125A M6 AN125A06INOX (u. 2)
18	AJP-SCREW DIN7380 M6X16 INOX PF73806016INOX (u. 1)
21	AJP-STARTER RELAY 93A283100000 (u. 1)
22	AJP-SUPPORT FOR STARTER RELAY PR3/PR4 E PR5 00ELS07A0046 (u. 1)
23	AJP-STARTING MOTOR CABLE 82231I0490000 (u. 1)

FRONT FENDER

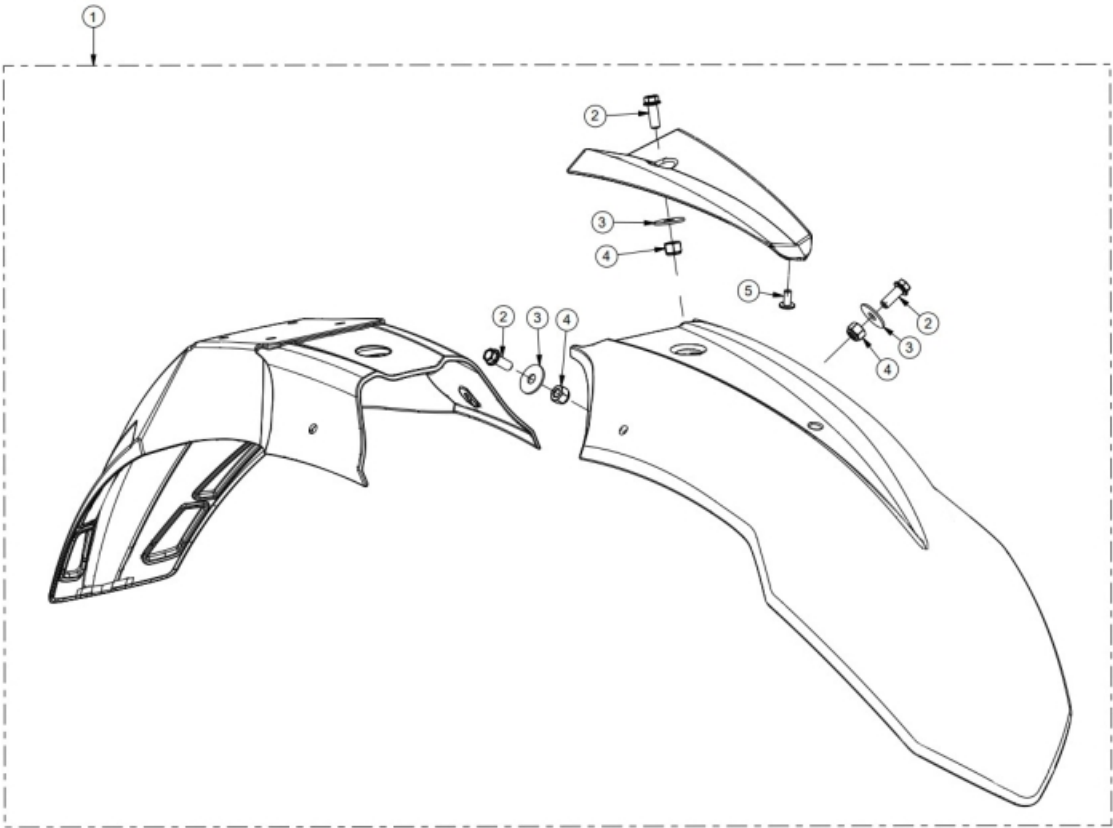

AJP-FRONT FENDER SM WHITE
00PLS01A0072 (u. 1)

1 AJP-FRONT FENDER SPR125 +240 +250 P310/P510
00PLS01A0130 (u. 1)


AJP-FRONT FENDER SPR250/310/510 BLACK
00PLS01B0130 (u. 1)

3 AJP-WASHER DIN9021 M6
AN902106INOX (u. 3)

4 AJP-NUT DIN985 M6
PC0985006000 (u. 3)

5 AJP-SCREW 3.5
PF7981003513 (u. 1)


REAR FENDER

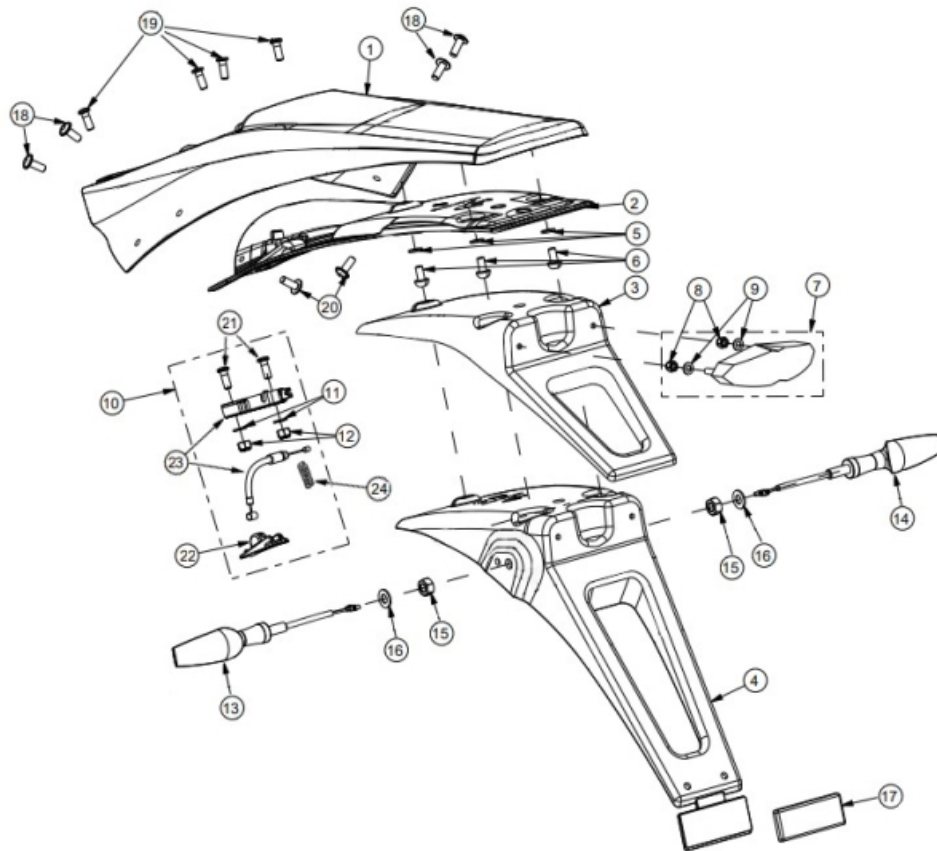

1	AJP-REAR FENDER SPR 250 E P310/P510 BLACK 00PLS01B0129 (u. 1)
2	AJP-REAR FENDER SPR125 + 240 + 250 E P310/P510 00PLS01A0129 (u. 1)
3	AJP-FRONT COVER RH PR5 AND P310/P510 2020 00PLS01A0132 (u. 1)
4	AJP-SUPPORT MORE SHORT FOR PLATE PR7 00PLS01A0125 (u. 1)
5	AJP-SUPPORT FOR PLATE SPR 00PLS01B0107 (u. 1)
6	AJP-WASHER DIN9021 M6 AN902106INOX (u. 3)
7	AJP-SCREW DIN7380 M6X16 INOX PF73806016INOX (u. 3)
9	AJP-REAR TAIL LIGHT PR7 00ELS01A0090 (u. 1)
10	AJP-WASHER DIN125A M6 AN125A005000 (u. 2)
12	AJP-SEAT LOCK SET 00COS01A0066 (u. 1)
13	AJP-NUT DIN985 M6 PC0985006000 (u. 2)
14	AJP-TURN LAMP ASSEMBLY LH PR7 AFTER MAY 2019 00ELC01A0013 (u. 1)
15	AJP-TURN LAMP ASSEMBLY RH PR7 AFTER MAY 2019 00ELC01A0012 (u. 1)
16	AJP-NUT DIN934 M8 PC0934008000 (u. 2)

16	AJP-WASHER DIN9021 M8 AN9021008000 (u. 2)
17	AJP-REFLECTOR SIM IAE902.0079 RED PR3/PR4/PR5 E PR7 00ELS01A0101 (u. 1)
19	AJP-SCREW DIN7380 M6X12 PF73806012INOX (u. 4)
20	AJP-SCREW DIN7380 M6X12 PF73806012INOX (u. 2)
21	AJP-SCREW DIN7380 M6X20 PF73806020INOX (u. 2)
22	AJP-HANDLE. SEAT LOCK 00COS01A0067 (u. 1)
23	AJP-CLOSE + CABLE SPR 125 +240 +250 + 310 + 510CC 2020 00COS01A0062 (u. 1)
24	AJP-SPRING FOR SEAT SPR250+ 310 E 510 2020 00BAS01A0211 (u. 1)


SIDE FENDERS AND SEAT

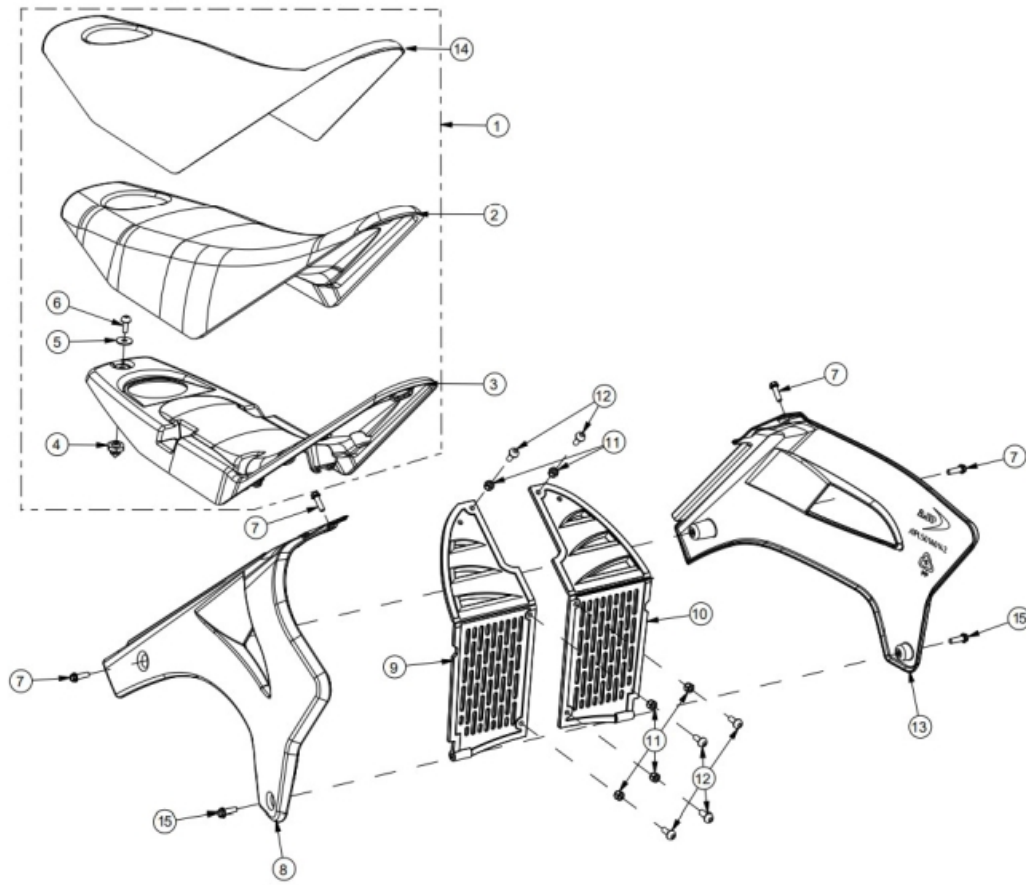

1	AJP-SEAT ASSEMBLY SPR310 SINCE APRIL 2021 00BAC01A0089 (u. 1)
	AJP-SEAT ASSEMBLY SPR 125 + 240 E 250CC 00BAC01A0088 (u. 1)
2	AJP-FOAM SADDLE SPR 5 310 AND 510 2020 00BAS01A0209 (u. 1)
3	AJP-SEAT BASE P310/P510 00BAS01A0197 (u. 1)
4	AJP-BANK CLOSING PIN SPR250 +310 AND 510 2020 00BAS01A0210 (u. 1)
5	AJP-WASHER DIN9021 M6 AN9021006000 (u. 1)
6	AJP-SCREW ISO7380 M6X8 PF0738006008 (u. 1)
7	AJP-SCREW DIN69FS2 6X16 PR7 PF069FS26016 (u. 4)
8	AJP-FRONT COVER RH SPR125/240CC 00PLS01A0143 (u. 1)
9	AJP-FRONT FRAME COVER RH. 00PLS01A0055 (u. 1)
10	AJP-FRONT FRAME COVER RH. 00PLS01A0055 (u. 1)
11	AJP-NUT DIN985 M6 PC0985006000 (u. 6)
12	AJP-SCREW DIN7380 M6X16 PF7380006016P (u. 6)
13	AJP-FRONT COVER LH SPR125/240CC 00PLS01A0142 (u. 1)


14	AJP-SEAT COVER SPR 125/240/250 00BAS01B0094 (u. 1)
15	AJP-SCREW DIN69FS2 6X20 PR7 PF069FS26020 (u. 2)

HEAD LIGHT

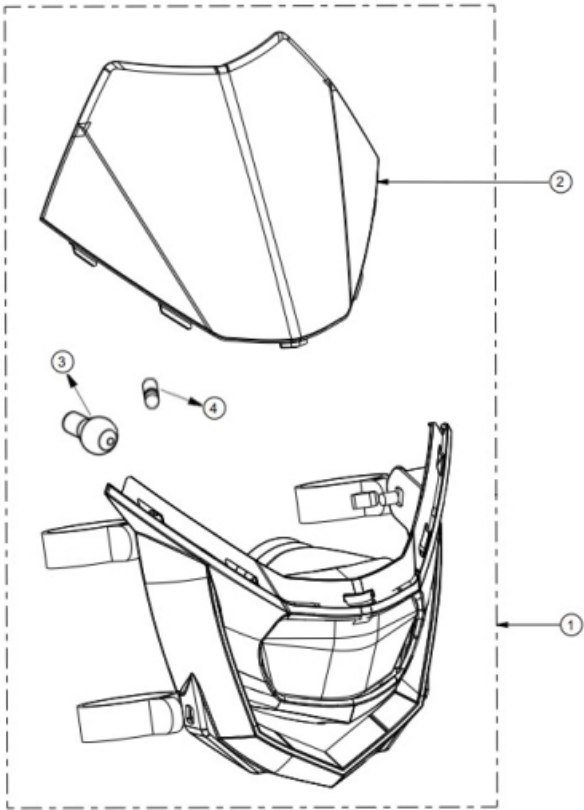

1	AJP-HEADLAMP COVER SPR125 + 240 + 250+ P310/P510 2020 00PLC01A0076 (u. 1)
2	AJP-PLATE BLACK FOR HEADLAMP SPR250/310/510 00PLS01A0141 (u. 1)
3	AJP-LAMP HS1 12V 35/35W 00ELS01A0129 (u. 1)
4	AJP-LAMP 12V 5W 00ELS01A0139 (u. 1)

DECALS

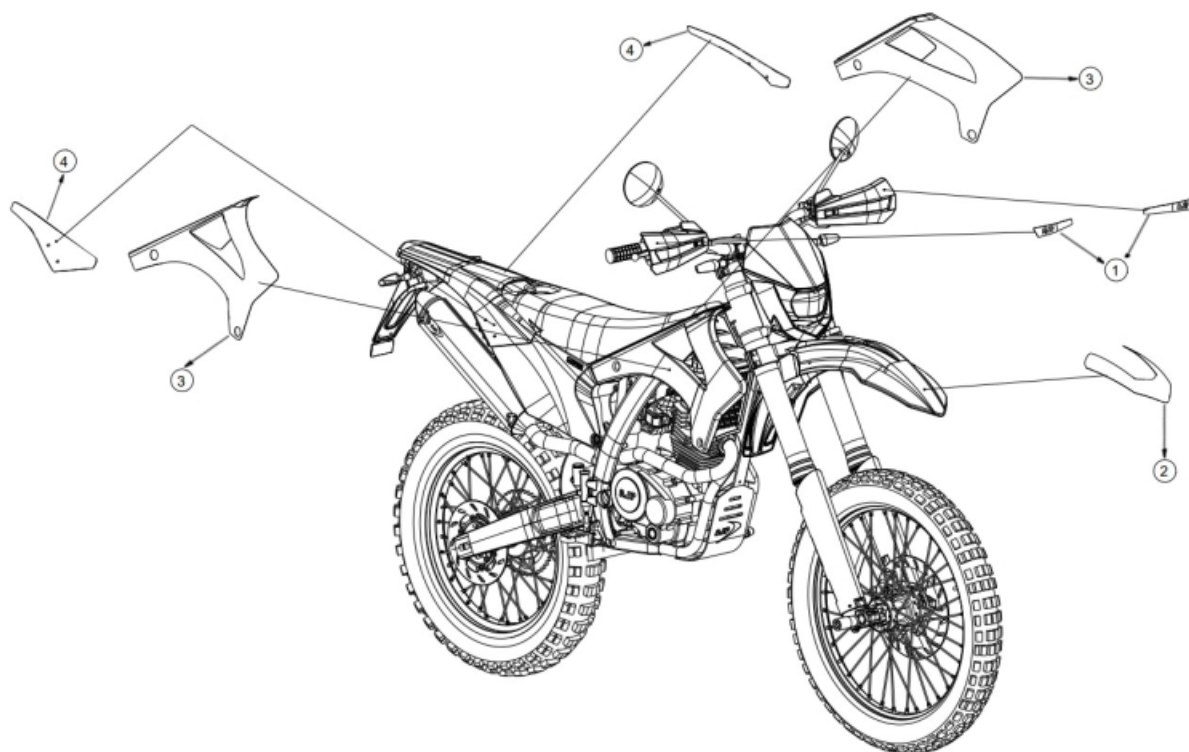

- | | |
|---|---|
| 1 | AJP-HAND PROTECTION STICKERS KIT AJP 2021
00BAS01A0216 (u. 1) |
| 2 | AJP-STICKER FOR FRONT FENDER SM SPR 2021
00BAS01A0215 (u. 1) |
| | AJP-STICKER FOR FRONT FENDER SPR125/240 MARCH 2022
00BAS01A0221 (u. 1) |
| | AJP-STICKER FRONT FENDER SM SPR 125+240+250+310+510 2023
00BAS01A0231 (u. 1) |
| 3 | AJP-STICKER FOR FRONT FENDER SPR125+240+250+310+510 2023
00BAS01A0233 (u. 1) |
| | AJP-KIT STICKER FRONT PANELS SPR125+240 2023
00BAS01A0225 (u. 1) |
| | AJP-KIT STICKER FRONT SPR240 MARCH 2022
00BAS01A0220 (u. 1) |
| 4 | AJP-KIT STICKER FOR REAR FENDER SPR240 MARCH 2022
00BAS01A0218 (u. 1) |
| | AJP-KIT STICKER FRONT SPR240 MARCH 2022
00BAS01A0220 (u. 1) |
| | AJP-KIT STICKER FOR REAR FENDER SPR125 MARCH 2022
00BAS01A0219 (u. 1) |
| | AJP-KIT STICKER FOR REAR FENDER SPR125 MARCH 2022
00BAS01A0219 (u. 1) |
| | AJP-KIT STICKER REAR FENDER SPR240 2023
00BAS01A0227 (u. 1) |
| | AJP-KIT STICKER REAR FENDER SPR310 2023
00BAS01A0228 (u. 1) |