




SPR 240 E Extreme 2023


Exploded

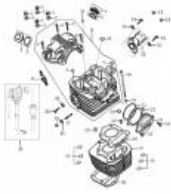


CYLINDER HEAD




CAMSHAFT, VALVES AND TIMING CHAIN

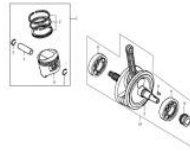


CRANKSHAFT AND PISTON

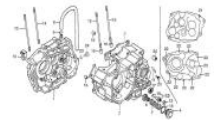


CRANKCASES



GEARBOX

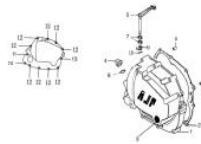


RIGHT CRANKCASE COVER

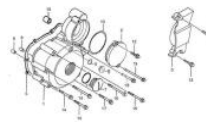


LEFT CRANKCASE COVER



CLUTCH

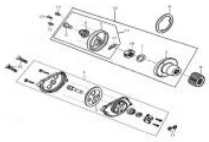

OIL PUMP




FLYWHEEL AND STATOR




ELECTRIC STARTER MOTOR



GEARSHIFT SHAFT

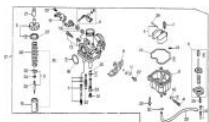

CARBURETTOR

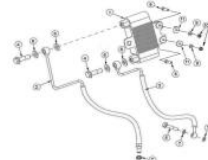

OIL RADIATOR



INTAKE




MX EXHAUST SYSTEM



EXHAUST SYSTEM (STANDARD)



REAR SWING ARM

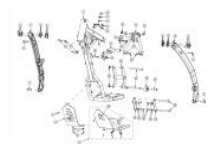


FRAME




FOOT RESTS AND SIDE STAND



FUEL TANK

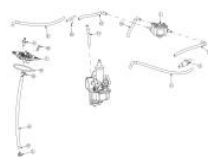

FUEL PUMP

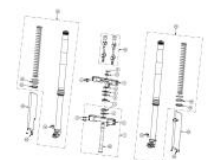

FRONT FORKS AND STEERING COLUMN




REAR SUSPENSION LINKAGE



REAR SHOCK ABSORBER




REAR BRAKE SYSTEM BREMBO

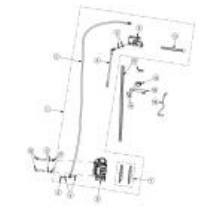

FRONT BRAKE SYSTEM BREMBO



FRONT WHEEL

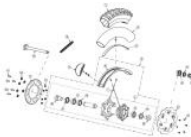

REAR WHEEL




HANDLEBAR, CONTROLS AND SWITCHES




CLUTCH CONTROLS




ELECTRIC HARNESS

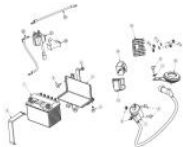


BATTERY-ELECTRIC SYSTEM

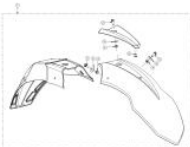


FRONT FENDER

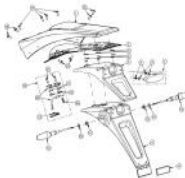

REAR FENDER

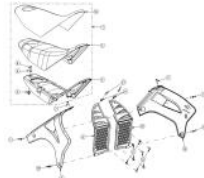

SIDE FENDERS AND SEAT

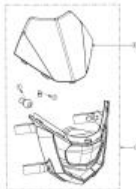


HEAD LIGHT



DECALS


CYLINDER HEAD

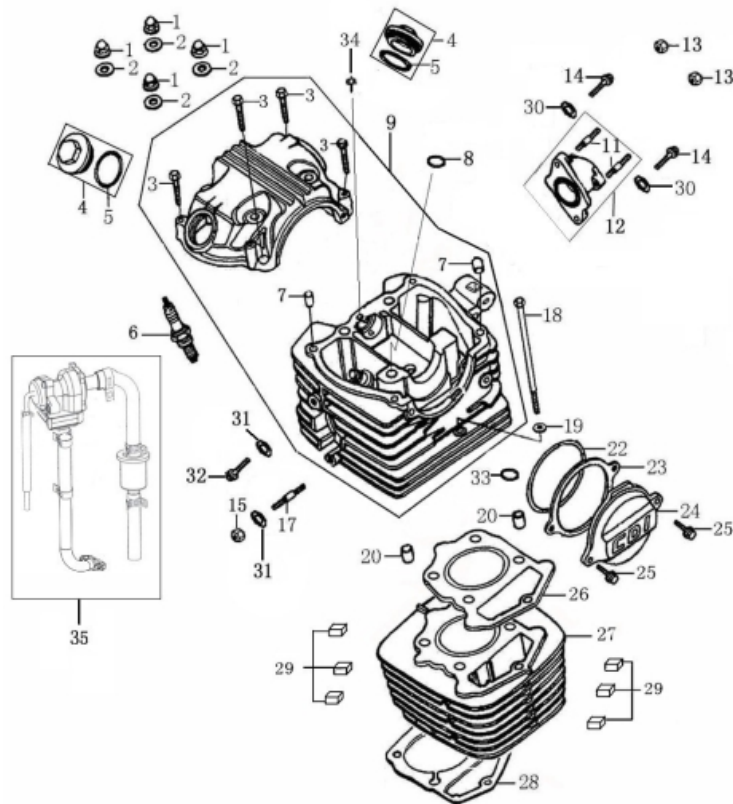

1	AJP-HEX. CUP NUT 8MM 11008I0060000 (u. 4)
2	AJP-CYLINDER HEAD BOLT WASHER (8X18X2) 11007I0060000 (u. 4)
3	AJP-SCREW CDI COVER M6X20MM S701300000000 (u. 4)
4	AJP-TAPPED ADJUST CAP 11231I0060000 (u. 2)
5	AJP-O-RING 35X3MM 90104I0060000 (u. 2)
6	AJP-SPARK CHAMPION 91A231110000 (u. 1)
7	AJP-DOWEL PIN 8X14MM 91502I0060000 (u. 2)
8	AJP-O-RING FOR CYLINDER HEAD 240CC 10X3 00MTS01A0176 (u. 1)
11	AJP-BOLT M6X26 125/200/240 91127L0440000 (u. 2)
12	AJP-CARBURETTOR INSULATOR 00MTS01A0098 (u. 1)
13	AJP-NUT DIN985 M6 PC0985006000 (u. 2)
14	AJP-SCREW DIN7380 M6X20 PF73806020INOX (u. 2)
18	AJP-SCREW 240(M6X119) 91165IA2000000X (u. 1)
19	AJP-SEAL WASHER 6.5X12.8X2MM 91307I0060000 (u. 1)

22	AJP-O.-RING 75X2.65MM 90109I0060000 (u. 1)
23	AJP-CYLINDER HEAD SIDE COVER GASKET 11004I0060000 (u. 1)
24	AJP-CYLINDER HEAD SIDE COVER 11005I0060AJP (u. 1)
25	AJP-SCREW CDI COVER M6X20MM S701300000000 (u. 2)
	(u. 0)
26	AJP-CYLINDER HEAD GASKET 200/240CC 9022BL0440000 (u. 1)
27	AJP-CYLINDER 240 1110BMA96000086 (u. 1)
28	AJP-CYLINDER GASKET 200/240CC 90205L0440000 (u. 1)
29	AJP-TACO CALCO CILINDRO 200 11211L0440001 (u. 27)
30	AJP-WASHER DIN125 M6 AN0125006000 (u. 2)
31	AJP-WASHER DIN127 M8 AN0127008000 (u. 2)
	(u. 0)
32	AJP-SCREW DIN933 M8X25 PF0933008025 (u. 1)


CAMSHAFT, VALVES AND TIMING CHAIN

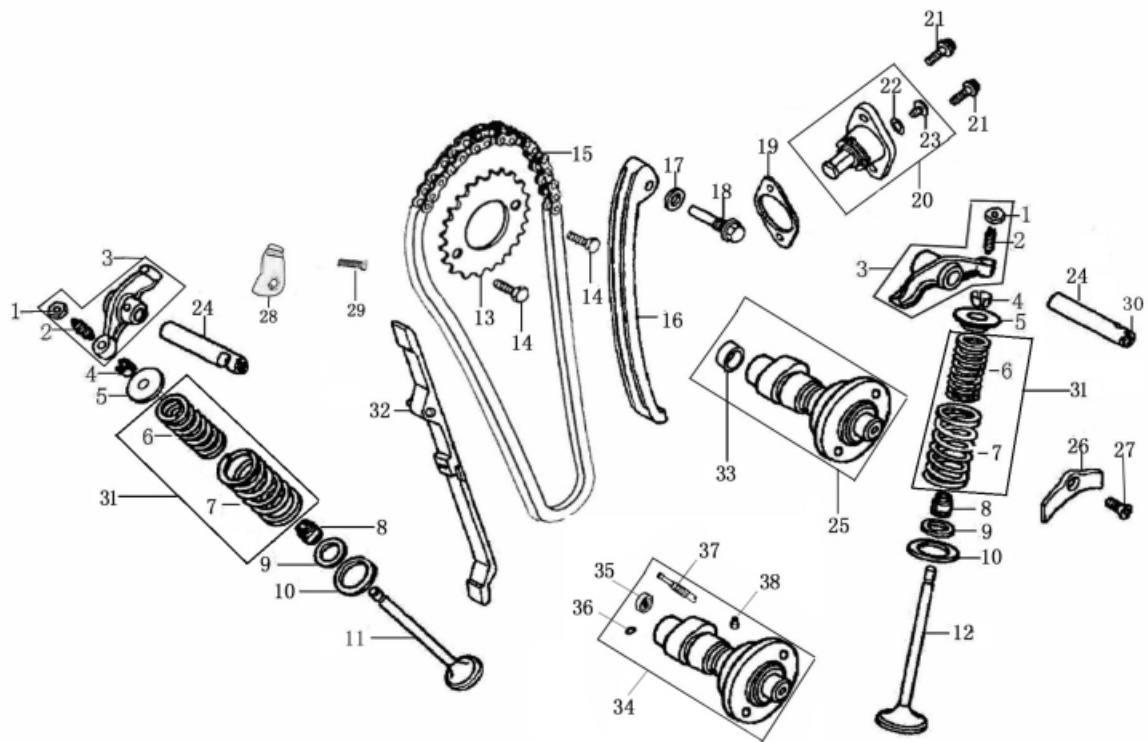

1	AJP-TAPPED ADJUST SCREW 1540310060000 (u. 2)
2	AJP-AFINADOR VÁLVULA 1540410060000 (u. 2)
3	AJP-VALVE ROCKER ARM 1540110060000 (u. 2)
4	AJP-VALVE COTTER 125 / 200 / 240 1570710080000 (u. 4)
5	AJP-VALVE SPRING CONTAINER 125 / 200 / 240 1570510060000 (u. 2)
6	AJP-INNER VALVE SPRING 125/200/240 1570410060000 (u. 2)
7	AJP-OUTER VALVE SPRING 125/200/240 1570310060000 (u. 2)
8	AJP-VALVE GUIDE SEAL 1572B10060000 (u. 2)
9	AJP-VALVE SPRING INNER SEALING 125 / 200 / 240 1570810060000 (u. 2)
10	AJP-VALVE SPRING OUTER SEALING 125 / 200 / 240 1570610060000 (u. 2)
11	AJP-EXHAUST VALVE 200/240CC 15702LA010000 (u. 1)
12	AJP-INTAKE VALVE 200/240CC 15701LA010000 (u. 1)
13	AJP-SPROCKET 15301L0440000 (u. 1)
14	AJP-SCREW M6X12 B05783000600107 (u. 2)
15	AJP-TIMING CHAIN 240 102L 1532BLA740000 (u. 1)


16	AJP-TIMING CHAIN TENSIONER 240 1552ALA740000 (u. 1)
17	AJP-SEALING WASHER 8X14.5X2 93301708515140 (u. 1)
18	AJP-TIMING CHAIN TENSIONER PIVOT BOLT 91109I0060000 (u. 1)
19	AJP-TENSIONER ADJUSTER GASKET 90211I0490000 (u. 1)
20	AJP-TENSIONER ADJUSTER 1554BI0490000 (u. 1)
21	AJP-SCREW M6X16 B0070010600147 (u. 2)
22	AJP-O-RING 1.5X9.6 Q500100000000 (u. 1)
23	AJP-BOLT M6X6 91120I0490000 (u. 1)
24	AJP-ROCKER ARM SHAFT EX 15402L0440000 (u. 1)
25	AJP-CAMSHAFT 200/240 CC 15100L0440000 (u. 1)
26	AJP-SHAFT HOLDER 11200I0060000 (u. 1)
27	AJP-BOLT M6X16MM 15403L0440002 (u. 1)
28	AJP-TIMING CHAIN PROTECTION PLATE 240 2143BL0440000 (u. 1)
29	AJP-SCREW DIN933 M6X16 PF0933006016 (u. 1)
30	AJP-ROCKER ARM SHAFT IN 15402L0440002 (u. 1)
31	AJP-VALVE SPRING. ASSY 240 15710I0060000 (u. 1)
32	AJP-TIMING CHAIN GUIDE 200 1553ALA740000 (u. 1)
33	AJP-CAMSHAFT DOWEL PIN 200 1512AL0440000 (u. 1)
34	AJP-CAMSHAFT WITH RACING PROFILE 00MTS01A0172 (u. 1)
35	AJP-BEARING HK2212 BRASILIEN CAMSHAFT RL0000HK2212 (u. 1)
36	AJP-RACING CAMSHAFT 00MTS01A0076 (u. 1)
37	AJP-MAIN JET 110 PR3/PR4 2012 00MTS01A0174 (u. 1)
38	AJP-IDLE JET #50 00MTS01A0327 (u. 1)

CRANKSHAFT AND PISTON

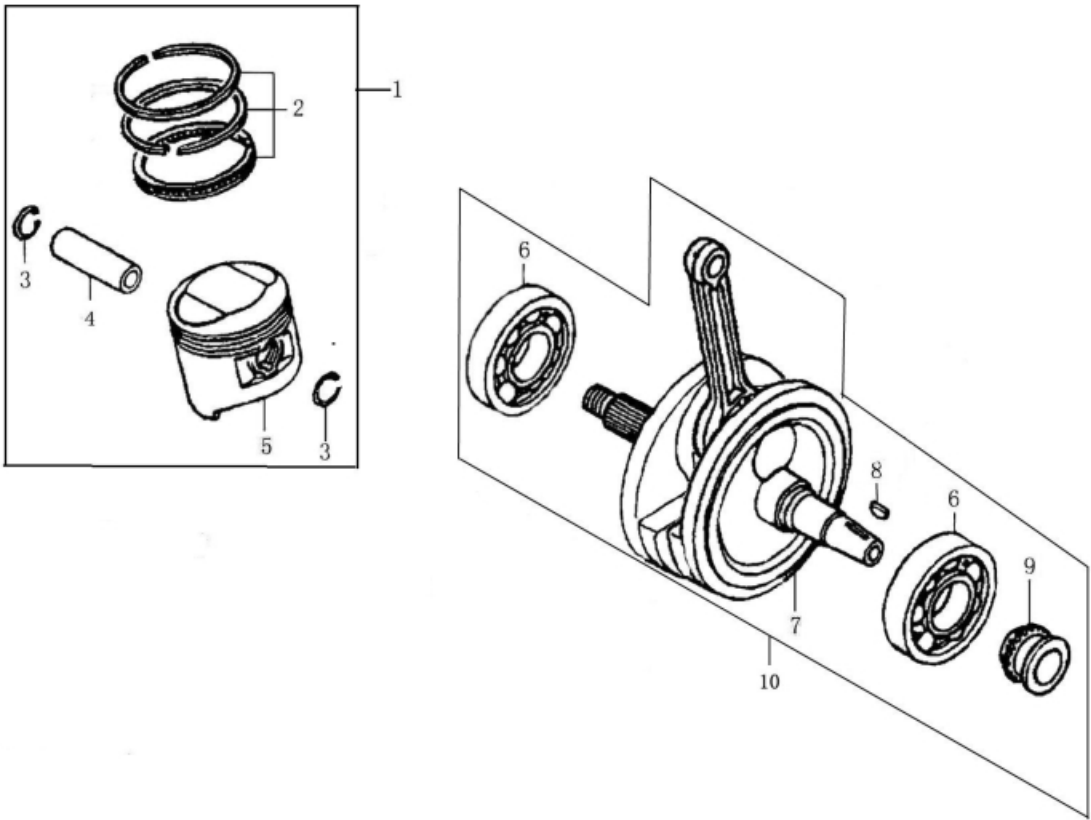

1	AJP-PISTON ASSY 240 00MTS01A0153 (u. 1)
2	AJP-PISTON RING SET 240 1310AMA960000 (u. 1)
3	AJP-CIR-CLIP 17MM 200/240 91401LA010000 (u. 2)
4	AJP-PISTON PIN D17 13102LA010000 (u. 1)
5	AJP-PISTON 240 13101MA960000 (u. 1)
6	AJP-BEARING 6328 P5 92102006328P5 (u. 2)
8	AJP-WOODRUFF KEY 25X14X4 91602I0060000 (u. 1)
9	AJP-TIMING SPROCKET 200 15101L0440000 (u. 1)
10	AJP-CRANKSHAFT ASSEMBLY 240 1320BMA960100 (u. 1)


CRANKCASES

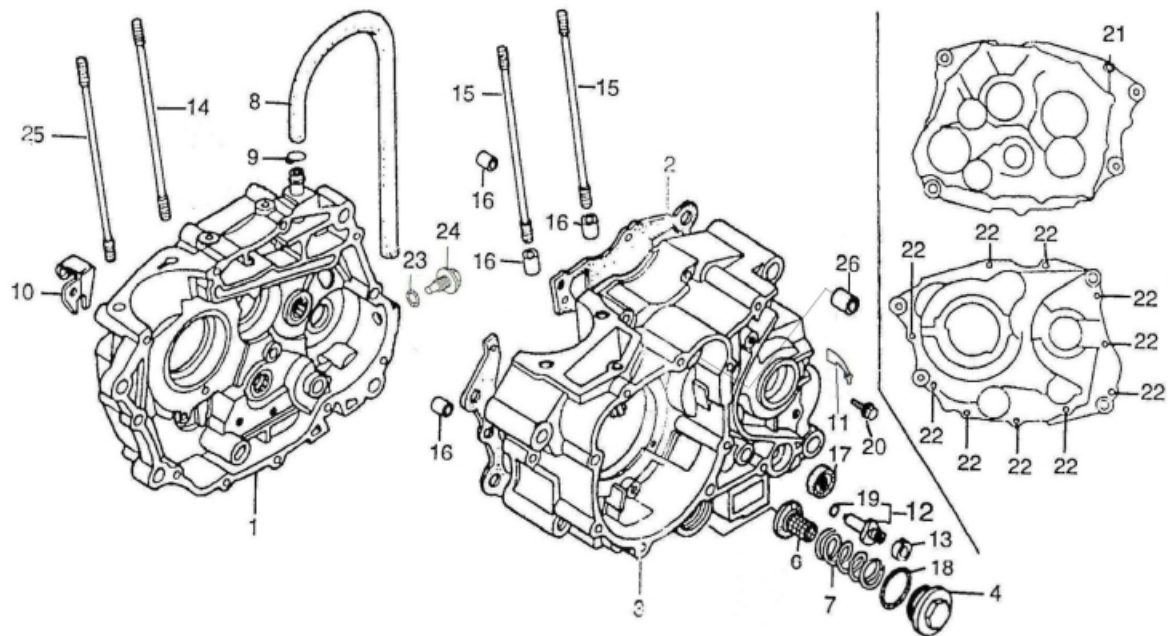

1	AJP-RIGHT CRANKCASE 1222BLA220000 (u. 1)
2	AJP-CRANKCASE GASKET 90208L0440000 (u. 1)
3	AJP-LEFT CRANKCASE 1212BL0440000 (u. 1)
4	AJP-OIL FILTER COVER 11229I0060000 (u. 1)
6	AJP-OIL FILTER 1413BI0490000 (u. 1)
7	AJP-OIL FILTER SPRING 14221I0490000 (u. 1)
8	AJP-BREATHER TUBE 12105I0060000 (u. 1)
10	AJP-CLUTCH WIRE HOLDER 22422I0490000 (u. 1)
11	AJP-GENERATOR WIRE HOLDER 12103I0080000 (u. 1)
12	AJP-NEUTRAL CONTACT 8802BD0020000 (u. 1)
13	AJP-NEUTRAL PIN 8801D0020000 (u. 1)
14	AJP-CYLINDER STUD BOLT 240 (M8X222) 91101LA740000 (u. 1)
15	AJP-CYLINDER STUD BOLT 240 (M8X235) 91102LA740100 (u. 2)
16	AJP-DOWEL PIN 10X14MM 91504I0490000 (u. 4)
17	AJP-GEAR OIL SEAL 90301I0060000 (u. 1)
18	AJP-O-RING 35X3MM 90104I0060000 (u. 1)

19	AJP-O RING 7X1.7 90133D0020000 (u. 2)
20	AJP-SCREW M6X14 L3102000000000 (u. 1)
21	AJP-SCREW M6X60 S7020000000000 (u. 1)
22	AJP-SCREW M6X50 S7019000000000 (u. 10)
24	AJP-SIDE SCREW 91108I0060000 (u. 1)
25	AJP-CYLINDER STUD BOLT 240 (M8X222) 91101LA740100 (u. 1)
26	AJP-BEARING HK1010 Z3039000000000 (u. 1)


GEARBOX

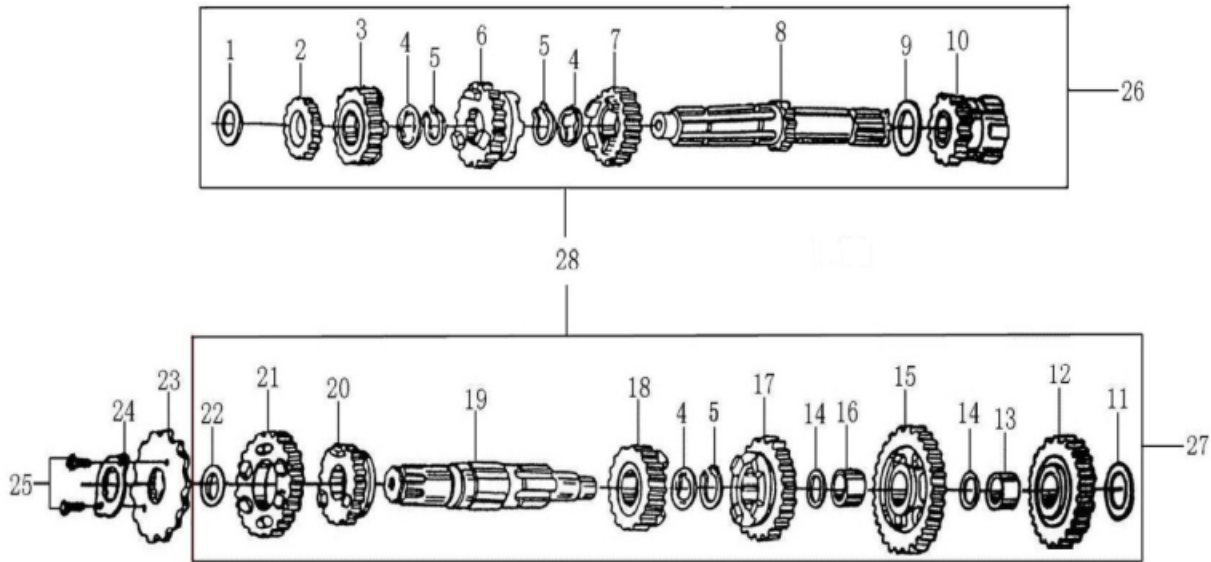

1	AJP-WASHER 15MM 93301Z15010240 (u. 1)
2	AJP-GEAR M-2 240 23222LA730002 (u. 1)
3	AJP-GEAR M-5 240 23222LA730005 (u. 1)
4	AJP-WASHER 20 MM 23223I0060000 (u. 3)
5	AJP-STOPPER RING B00893012000000 (u. 3)
6	AJP-GEAR M-4 240 23222LA730004 (u. 1)
7	AJP-GEAR M-3 240 23222LA730003 (u. 1)
8	AJP-TRANSMISSION MAIN SHAFT 23221LA730000 (u. 1)
9	AJP-WASHER A20MM 93301E20005270 (u. 1)
10	AJP-MAIN STARTER GEAR (Z19) 23231I0060000 (u. 1)
12	AJP-SECONDARY STARTING GEAR (Z28) 23248I0060000 (u. 1)
13	AJP-DOWEL PIN 23203I0060003 (u. 1)
14	AJP-WASHER 16.5MM 93301E16505240 (u. 2)
15	AJP-GEAR C-1 23242LA730001 (u. 1)
16	AJP-DOWEL PIN 23203I0060001 (u. 1)
17	AJP-GEAR C-3 23242LA730003 (u. 1)
18	AJP-GEAR C-4 23242LA730004 (u. 1)
19	AJP-SECONDARY SHAFT 240 23241I0080000 (u. 1)


20	AJP-GEAR C-5 23242LA730005 (u. 1)
21	AJP-GEAR C-2 23242LA730002 (u. 1)
22	AJP-WASHER 20MM 93301E20010270 (u. 1)
23	AJP-DRIVE SPROCKET (Z13) 00MTS01A0084 (u. 1)
24	AJP-SPROCKET FIXING PLATE 23402I0060000 (u. 1)
25	AJP-SCREW M6X12 B05783000600107 (u. 2)
26	AJP-MAIN SHAFT. TRANSMISSION 240 23220LA730000 (u. 1)
27	AJP-COUTERSHAFT 240 23240LA730000 (u. 1)
28	AJP-COMPLETE TRANSMISSION 240 23200LA730100 (u. 1)

RIGHT CRANKCASE COVER

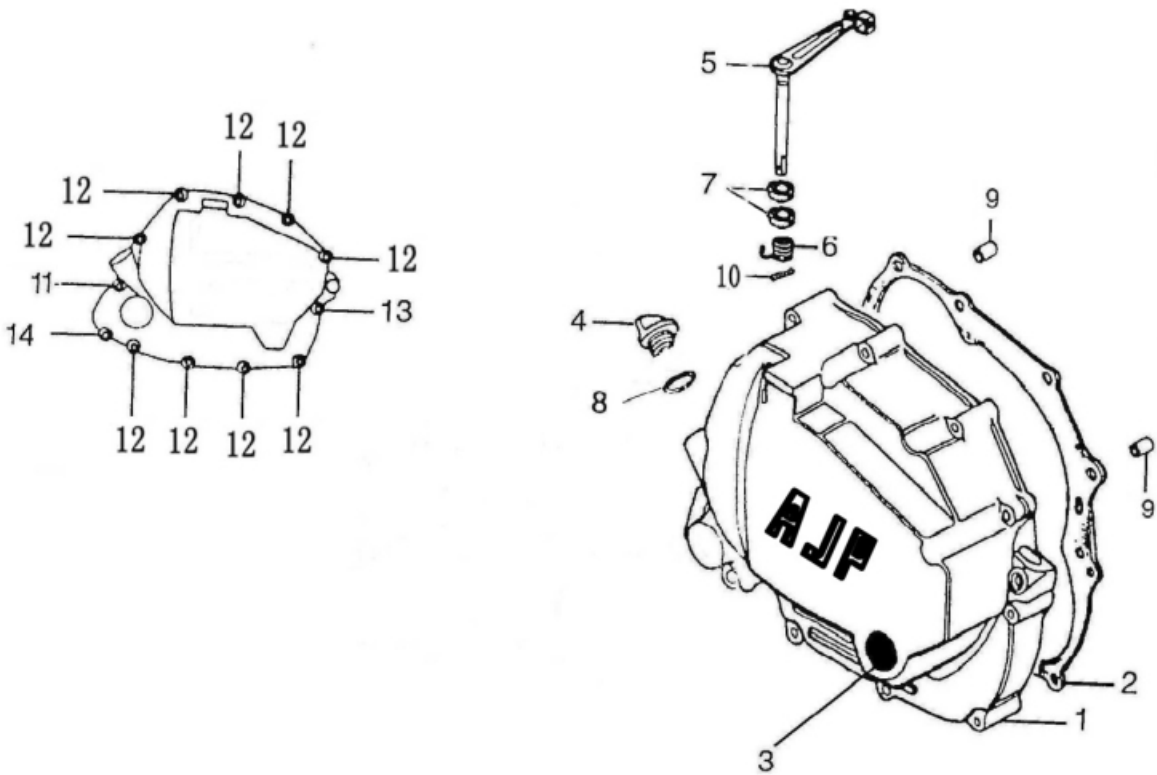

1	AJP-RIGHT CRANKCASE COVER - 200 12421I0060AJP (u. 1)
2	AJP-RIGHT CRANKCASE COVER GASKET 90206I0060000 (u. 1)
3	AJP-OIL LEVEL VIEW-FINDER 12426I0080000 (u. 1)
4	AJP-OIL PLUG SPR 125CC / 240CC 00MTS01A0314 (u. 1)
5	AJP-CLUTCH LEVER 00MTS01A0007 (u. 1)
6	AJP-CLUTCH LEVER SPRING 22427I0060000 (u. 1)
7	AJP-O-RING 1.8X9 90101100900180 (u. 2)
8	AJP-O RING 18X3 90106D0020000 (u. 1)
9	AJP-DOWEL PIN 8X14 91502D0020000 (u. 2)
10	AJP-RING 3X12 XA00100000000 (u. 1)
11	AJP-CYLINDER HEAD BOLT M6X35MM S701600000000 (u. 1)
12	AJP-SCREW M6X40 S701700000000 (u. 9)
13	AJP-SCREW M6X50 S701900000000 (u. 1)
14	AJP-SCREW M6X25 S701400000000 (u. 1)


LEFT CRANKCASE COVER

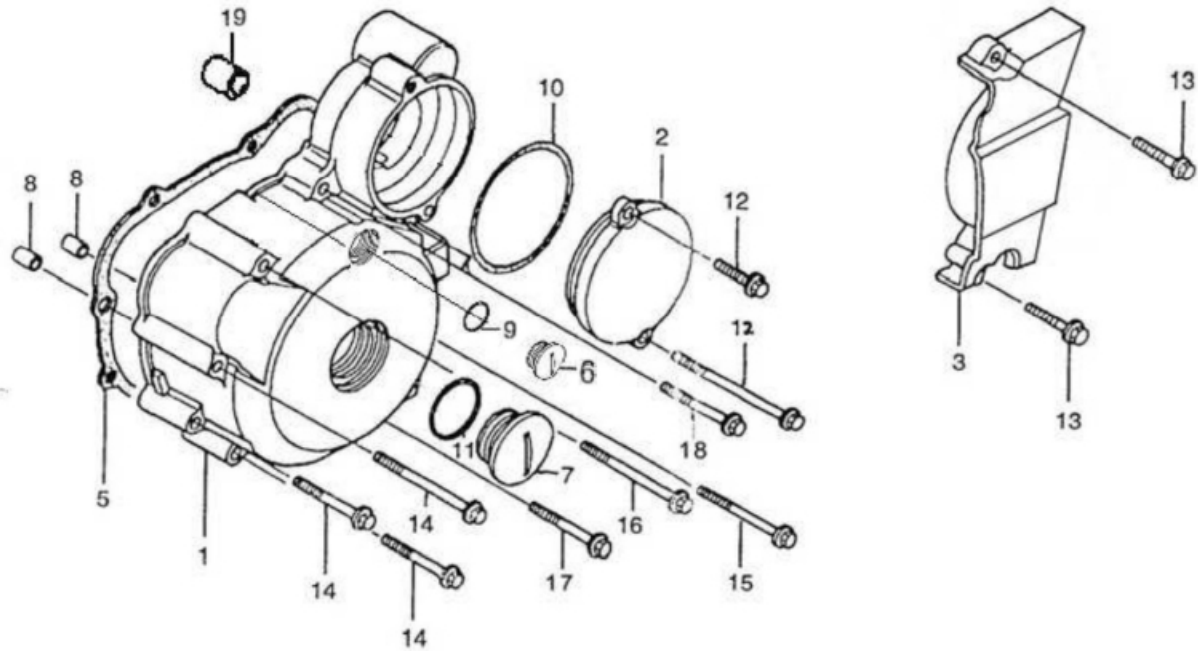

1	AJP-LEFT CRANKCASE COVER 125/200/240CC 12301I0490AJP (u. 1)
2	AJP-REDUCTION GEAR COVER 12308I0490AJP (u. 1)
3	AJP-LEFT CRANKCASE RR COVER 12302I0490AJP (u. 1)
5	AJP-LEFT CRANKCASE COVER GASKET 12001I0490000 (u. 1)
6	AJP-TOP SIGHT HOLE CAP 12303G0110AJP (u. 1)
7	AJP-SIGHT HOLE CAP 12304G0110AJP (u. 1)
8	AJP-DOWEL PIN 8X14MM 91502I0060000 (u. 2)
9	AJP-O-RING 13.8X2.5 12306I0060000 (u. 1)
10	AJP-O-RING 63X3 FOR REDUCTION GEAR COVER 12309I0490000 (u. 1)
11	AJP-O-RING 27.4X2.4 12307I0060000 (u. 1)
12	AJP-SCREW M6X20 S7013I0060000 (u. 2)
13	AJP-SCREW M6X25 S701400000000 (u. 2)
14	AJP-SCREW M6X25 S701400000000 (u. 3)
15	AJP-SCREW M6X60 S701000000000 (u. 1)
16	AJP-CYLINDER HEAD BOLT M6X35MM S701600000000 (u. 1)
17	AJP-SCREW M6X40 S701700000000 (u. 1)
18	AJP-SCREW M6X75 S706400000000 (u. 2)


19	AJP-BEARING HK1010 Z303900000000 (u. 1)
----	--

CLUTCH

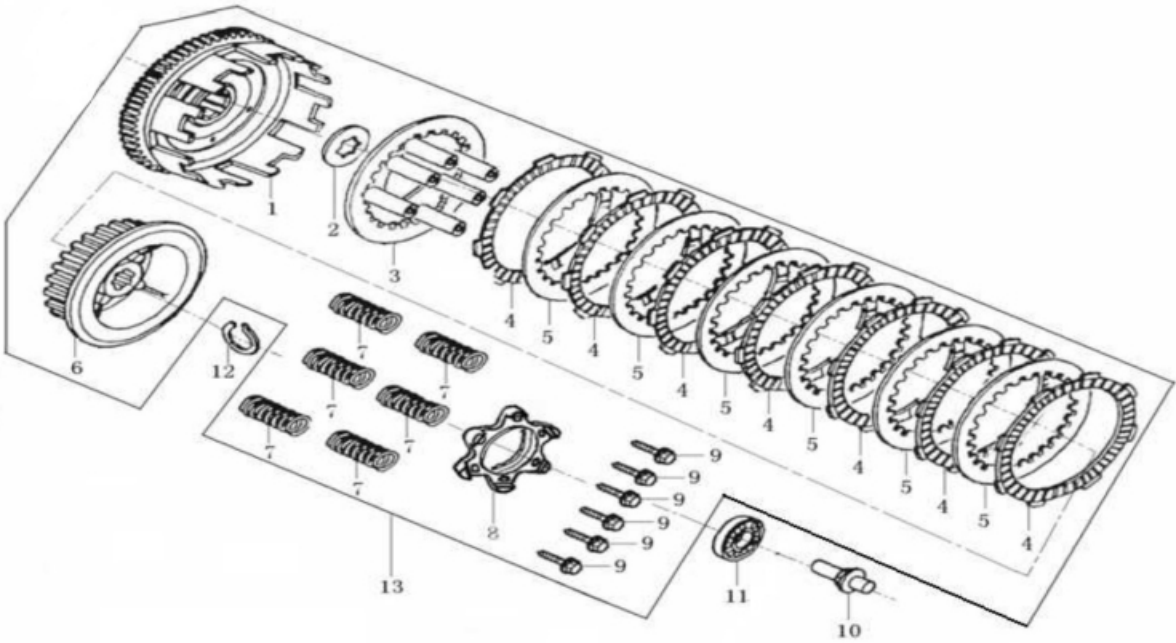


1	AJP-PRIMARY DRIVEN GEAR 240 (Z70) 22150LA730100 (u. 1)
2	AJP-WASHER B. 20MM 22205I0060000 (u. 1)
3	AJP-PRESSURE DISC. CLUTCH 240 22122LA730000 (u. 1)
4	AJP-DRIVE PLATE CLUTCH 240 22214LA730000 (u. 7)
5	AJP-DRIVEN PLATE. CLUTCH 240 22215J0340000 (u. 6)
6	AJP-HUB. CLUCH SLEEVE 240CC 22105LA730100 (u. 1)
7	AJP-CLUTCH SPRING 240 22142LA730000 (u. 6)
8	AJP-END COVER CLUTCH 22121LA120000 (u. 1)
9	AJP-BOLT M5×20 240 91129J03400000B (u. 6)
10	AJP-PUSH ROD. CLUTCH 22403I0060000 (u. 1)
12	AJP-ELASTIC CHECK RING 18MM 240CC 91403I0080000 (u. 1)
13	AJP-CLUTC ASSY 240CC 22000LA730906 (u. 1)

OIL PUMP

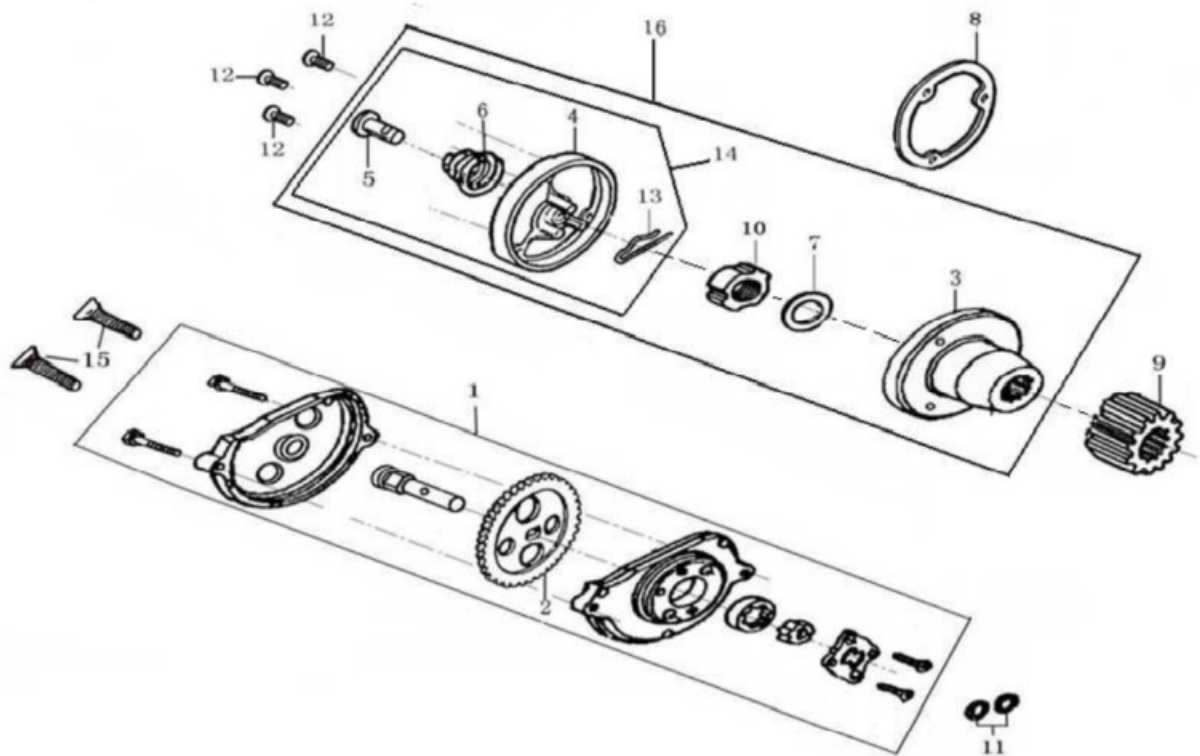


1	AJP-OIL PUMP ASSEMBLY 240 (Z37) 14100L0440001 (u. 1)
3	AJP-OIL FILTER ROTOR 240 14203IA200100 (u. 1)
4	AJP-OIL FILTER ROTOR CAP 14207IA2000000W (u. 1)
5	AJP-OIL THROUGH 14202I0060000 (u. 1)
6	AJP-OIL THROUGH SPRING 14203I0060000 (u. 1)
7	AJP-CONIC WASHER 22004I0060000 (u. 1)
8	AJP-OIL FILTER ROTOR GASKET 240 90209IA200000 (u. 1)
9	AJP-PRIMARY DRIVE GEAR (Z21) 23101L0440000 (u. 1)
10	AJP-NUT 240 91203IA200000 (u. 1)
11	AJP-O RING 24X3 90108I0060000 (u. 2)
12	AJP-SCREW M5X12 125/200/240 L605200000000 (u. 3)
13	AJP-CIR-CLIP 8MM 91505I0060000 (u. 1)
14	AJP-OIL FILTER ROTOR CAP ASSEMBLY 240CC 14200IA200100 (u. 1)
15	AJP-SCREW 6X30 125/200/240 B08190106003020B (u. 2)
16	AJP-OIL FILTER ROTOR CAP ASSEMBLY 240CC 14200IA200100 (u. 1)

FLYWHEEL AND STATOR

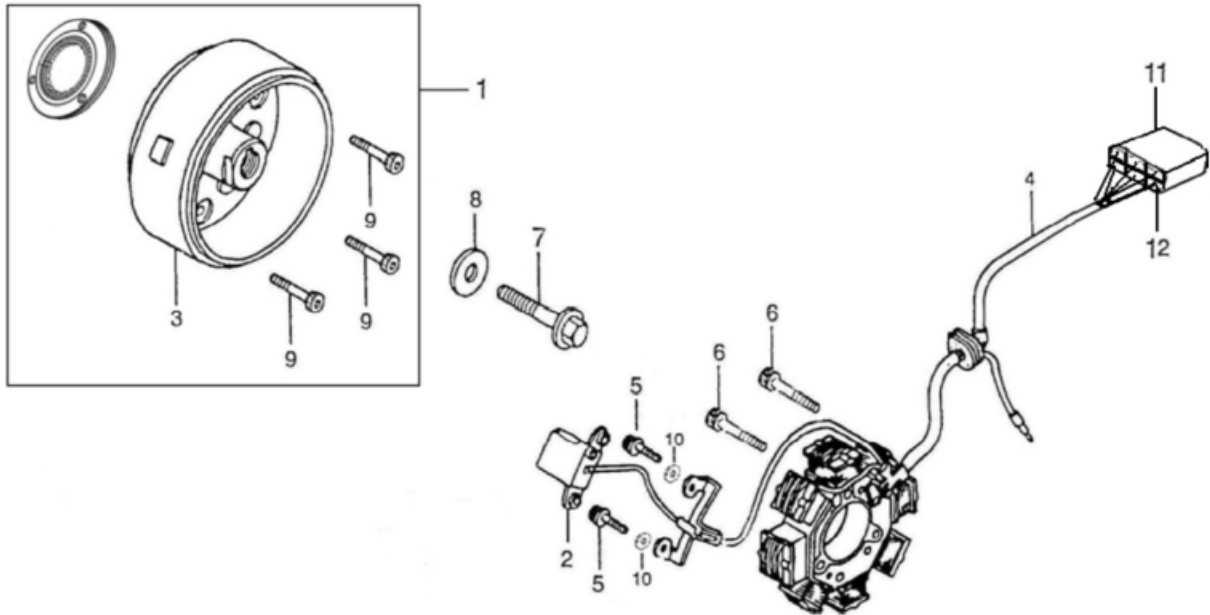


1	AJP-FLY WHEEL ASSEMBLY 22MM 82130L0440100 (u. 1)
	AJP-FLY WHEEL ASSEMBLY 240 240 2013 82130I0490400 (u. 1)
2	AJP-PULSE GENERATOR 8210500000000 (u. 1)
3	AJP-FLY WHEEL 22MM 82101I0490AJP100 (u. 1)
4	AJP-STATOR 82120L0440000 (u. 1)
5	AJP-SCREW L304200000000 (u. 2)
6	AJP-BOLT M6X28 B166740A06001870B (u. 2)
7	AJP-SCREW M10X36 91106I0080000 (u. 1)
8	AJP-WASHER 10X24X2.5 91313I0060100 (u. 1)
9	AJP-SCREW M8X18 B0070010800187 (u. 3)
11	AJP-STATOR WIRE CONNECTOR 2013 00ELS01A0066 (u. 1)
12	AJP-STATOR CONNECTOR TERMINAL 2013 00ELS01A0067 (u. 6)

ELECTRIC STARTER MOTOR

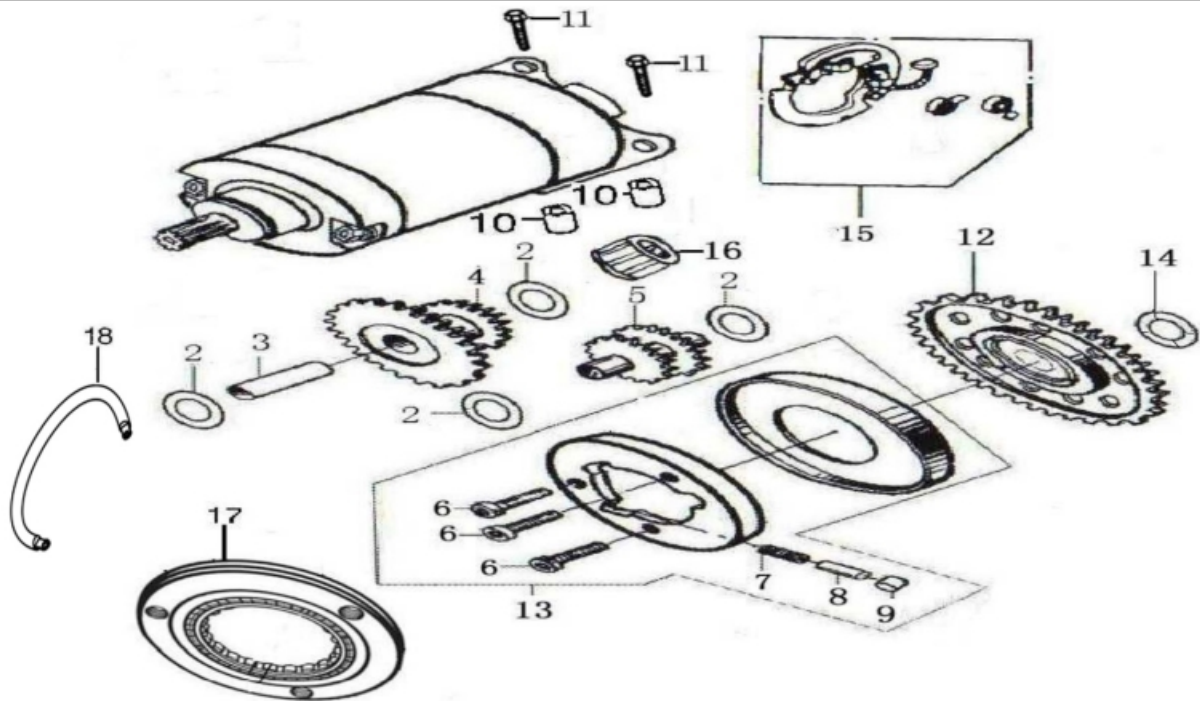


1	AJP-STARTING MOTOR 240 82200L044210251 (u. 1)
2	AJP-WASHER 10.5X0.5X18 933015105051800 (u. 4)
3	AJP-STARTER REDUCTION GEAR SPACER 21402I0490000 (u. 1)
4	AJP-STARTER REDUCTION GEAR 60/24 240CC 2013 2140AL0440100 (u. 1)
5	AJP-STARTER GEAR 15/22 240CC 2013 21401L0440000 (u. 1)
6	AJP-SCREW M8X18 B0070010800187 (u. 3)
10	AJP-STARTING MOTOR DOWEL PIN 82203I0490000 (u. 2)
12	AJP-STARTER DRIVE GEAR 240 (Z56) 2142AI0270000 (u. 1)
14	AJP-STARTING MOTOR WASHER 22X34X3.5 240CC 2013 93301E2203534000 (u. 1)
15	AJP-STARTER MOTOR BRUSH HOLDER 240CC AND 250CC LC 00MTS01A0297 (u. 1)
16	AJP-BEARING HK1010 Z3039000000000 (u. 2)
17	AJP-STARTER DRIVE GEAR ASSEMBLY 240 21300LA730000 (u. 1)
18	AJP-STARTING MOTOR CABLE 82231I0490000 (u. 1)

GEARSHIFT SHAFT

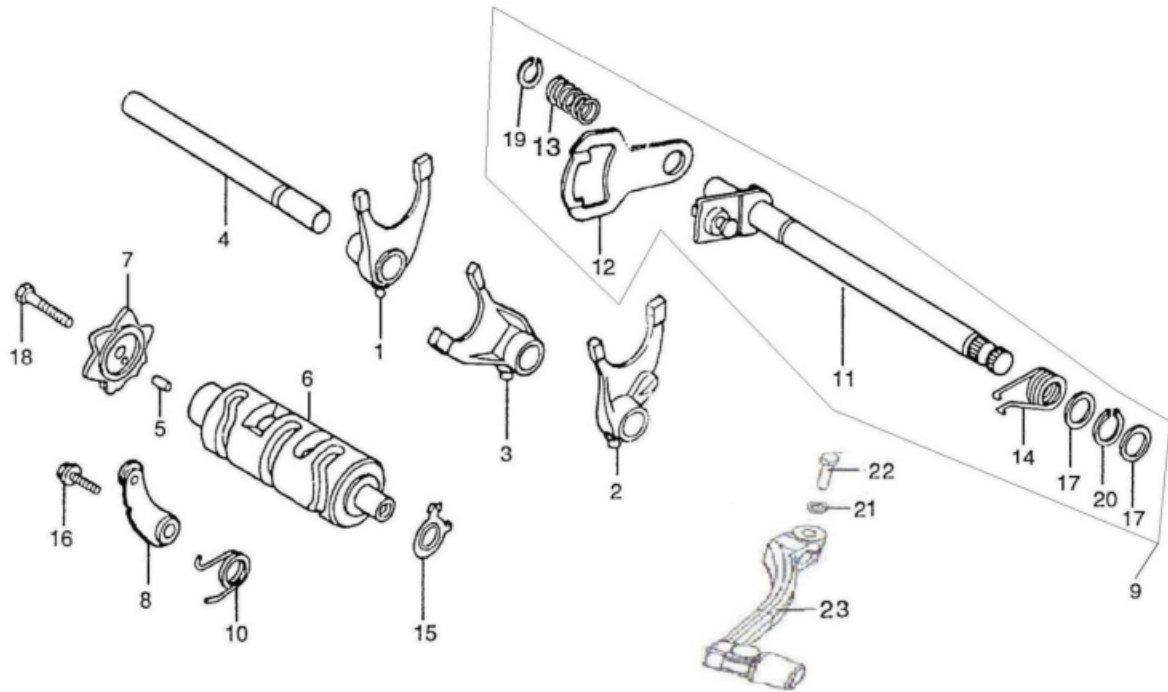

1	AJP-RIGHT GEAR SHIFT FORK 24101I0060000 (u. 1)
2	AJP-LEFT GEAR SHIFT FORK 24102I0060000 (u. 1)
3	AJP-CENTRAL GEAR SHIFT FORK 24103I0060000 (u. 1)
4	AJP-GEAR SHIFT FORK GUIDE 24104I0060000 (u. 1)
5	AJP-PIN 4X10 X306200000000 (u. 1)
6	AJP-GEAR SHIFT DRUM 24201I0060000 (u. 1)
7	AJP-GEAR SHIFT CAM 24202I0060000 (u. 1)
8	AJP-GEAR SHIFT DRUM STOPER 24221I0060000 (u. 1)
9	AJP-GEAR SHIFT SPINDLE ASSEMBLY 24300I0060000 (u. 1)
10	AJP-GEAR DRUM STOPPER SPRING 125/200/240 24302I0060000 (u. 1)
11	AJP-GEAR SHIFT SPINDLE 2432AI0060000 (u. 1)
12	AJP-GEAR SHIFT PLATE 24301I0060000 (u. 1)
13	AJP-GEAR SHIFT PLATE SPRING 24303I0080000 (u. 1)
14	AJP-GEAR SHIFT RETURN SPRING 24303I0060000 (u. 1)
15	AJP-NEUTRAL SWITCH ROTOR 88002I0060000 (u. 1)
16	AJP-SCREW M6X22 S706000000000 (u. 1)
17	AJP-WASHER 14MM 24304I0060000 (u. 2)

18	AJP-BOLT M6X25 S303100000000 (u. 1)
19	AJP-STOPPER RING 12MM D200300000000 (u. 1)
20	AJP-STOPPER RING 14 MM D200500000000 (u. 1)
21	AJP-WASHER DIN125 M6 AN0125006000 (u. 1)
22	AJP-SCREW DIN933 M6X25 PF0933006025 (u. 1)
23	AJP-GEAR SELECTOR PR3 00MTS01B0016 (u. 1)

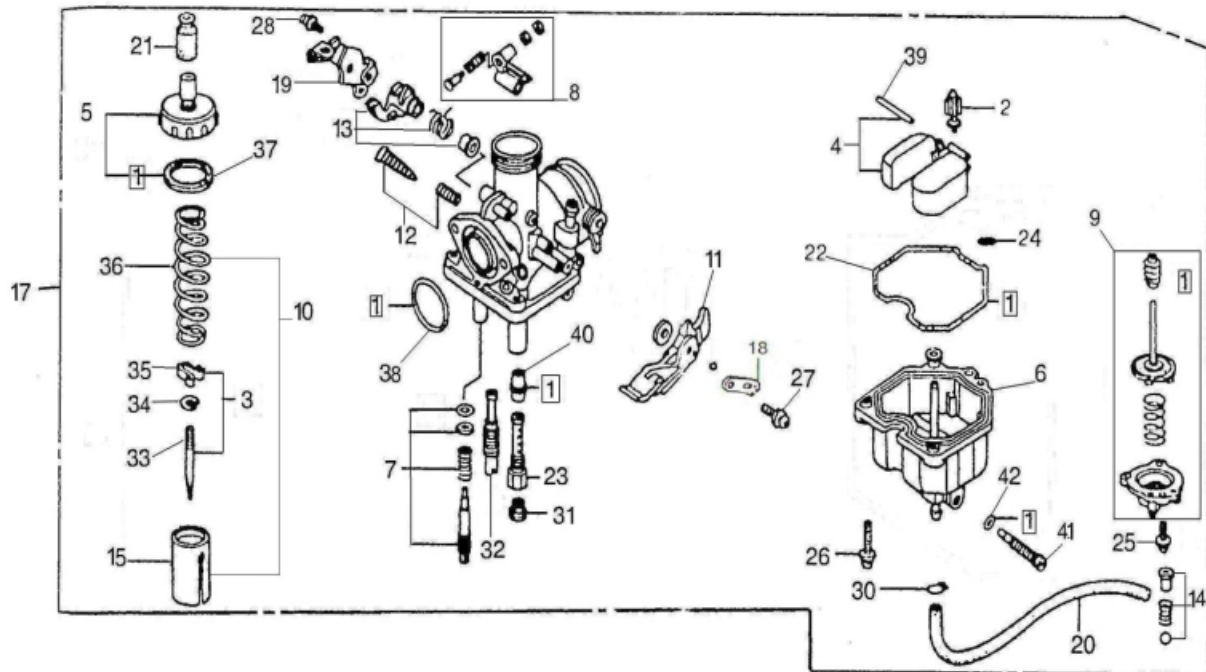CARBURETTOR


1 AJP-GASKET SET CARBURETOR
1710110060000 (u. 1)

2 AJP-CONIC VALVE
1710210060000 (u. 1)

3 AJP-NEEDLE WITH CIR-CLIP
1710310060000 (u. 1)

4 AJP-FLOAT
1710410060000 (u. 1)

5 AJP-PISTON CAP 125CC
1710510060000 (u. 1)

6 AJP-FLOAT CAMARA
1710610060000 (u. 1)

7 AJP-ADJUSTING SCREW SET
1710710060000 (u. 1)

8 AJP-PUMP ARM
1710810060000 (u. 1)

9 AJP-POWER JET
1710910060000 (u. 1)

11 AJP-CHOKE CABLE BRACKET
1711210060000 (u. 1)

12 AJP-ADJUSTING SCREW
1711310060000 (u. 1)

13 AJP-PUMP ARM
1710810060000 (u. 1)

14 AJP-CHECK VALVE
1711510060000 (u. 1)

15 AJP-CARBURETTOR PISTON
17105L0440000 (u. 1)


17 AJP-CARBURETOR SPR 125-240
1711000000SPR (u. 1)

19 AJP-LINK PLATE. PUMP ARM
1711910060000 (u. 1)

20 AJP-FUEL TUBE
1712110060000 (u. 1)


21	AJP-DUST CAP 17122I0060000 (u. 1)
22	AJP-FLOAT CHAMBER GASKET 17123I0060000 (u. 1)
23	AJP-NEEDLE DIFFUSER PZ30 171A2L0440000 (u. 1)
24	AJP-O-RING 4.5X1.6 S13051604500 (u. 1)
25	AJP-SCREW L304200000000 (u. 3)
26	AJP-SCREW M4X16MM L304300000000 (u. 3)
27	AJP-SCREW 5X12 L305200000000 (u. 1)
28	AJP-SCREW 5X14 L309400000000 (u. 1)
30	AJP-CLAMP FOR B86.5 PR3 1712900000000 (u. 1)
31	AJP-MAIN JET 105 00MTS01A0093 (u. 1)
32	AJP-IDLE JET 48 00MTS01A0092 (u. 1)
33	AJP-NEEDLE 17156L0440000 (u. 1)
34	AJP-NEEDLE CIR-CLIP 17106L0440000 (u. 1)
35	AJP-V-CLIP 17104L0440000 (u. 1)
36	AJP-THROTTLE PISTON SPRING 91A094120000 (u. 1)
	AJP-AIR THROTTLE RETURN SPRING 17165L0440000 (u. 1)
37	AJP-TOP CAP GASKET 17147L0440000 (u. 1)
38	AJP-O-RING 34X2.5 9010110300000150 (u. 1)
39	AJP-FLOAT PIN 17144L0440000 (u. 1)
40	AJP-MAIN JET 17151L0440000 (u. 1)
41	AJP-DRAIN SCREW 171A5L0440000 (u. 1)
42	AJP-O-RING DRAIN SCREW 4.5X1 9010110045000100 (u. 1)

OIL RADIATOR

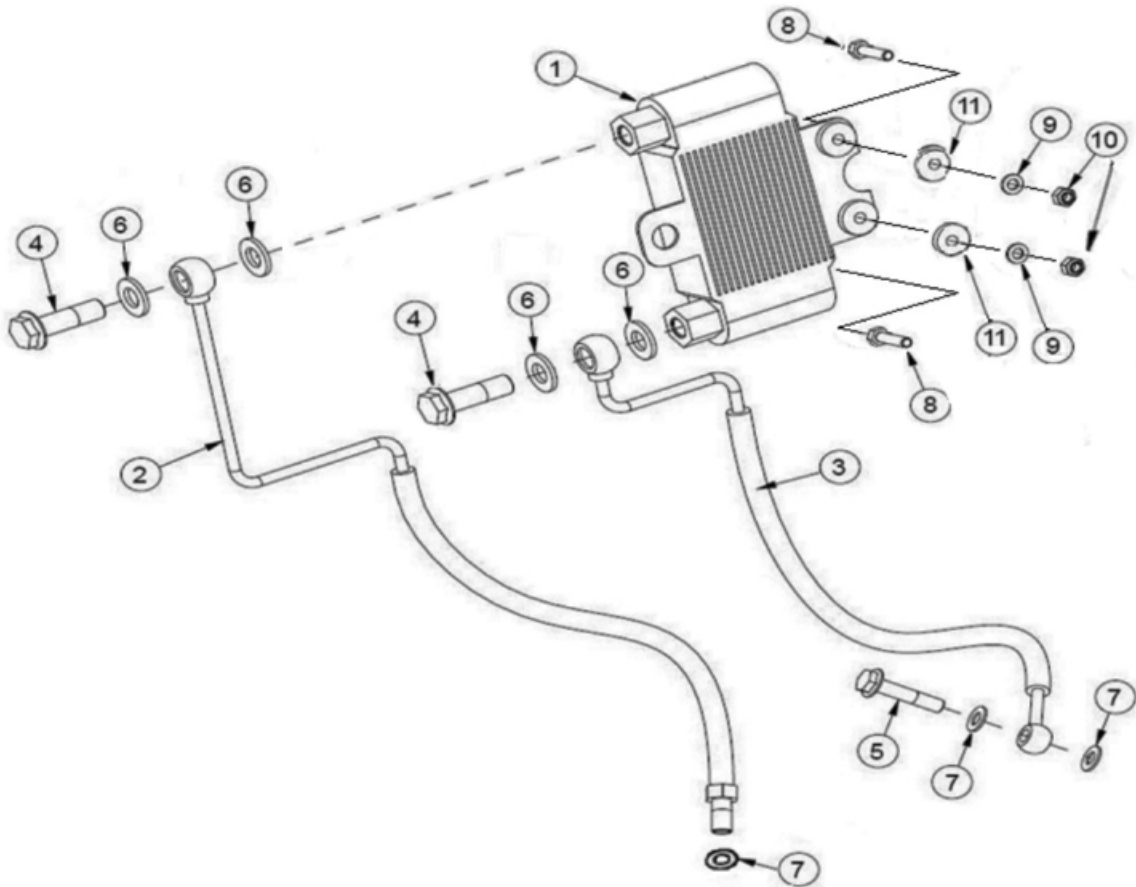


1	AJP-RADIATOR PR3/PR4 19300L0440AJP (u. 1)
2	AJP-OIL COOLER LONG TUBE PR3 00MTS01A0032 (u. 1)
3	AJP-OIL COOLER SHORT TUBE PR3 00MTS01A0031 (u. 1)
4	AJP-SCREW M12X1.25 91107I0060AJP (u. 2)
5	AJP-SCREW M10X1.25 91107I0060100 (u. 1)
6	AJP-SEALING WASHER 12X20X1.5 9330180821014 (u. 4)
7	AJP-SEALING WASHER 10X16X1 200/240 00MTS01A0164 (u. 3)
9	AJP-WASHER DIN125 M6 AN0125006000 (u. 2)
10	AJP-NUT DIN985 M6 PC0985006000 (u. 2)
11	AJP-SPACER SUPERIOR FOR RADIATOR 240 2013 00MTS01A0120 (u. 2)


INTAKE

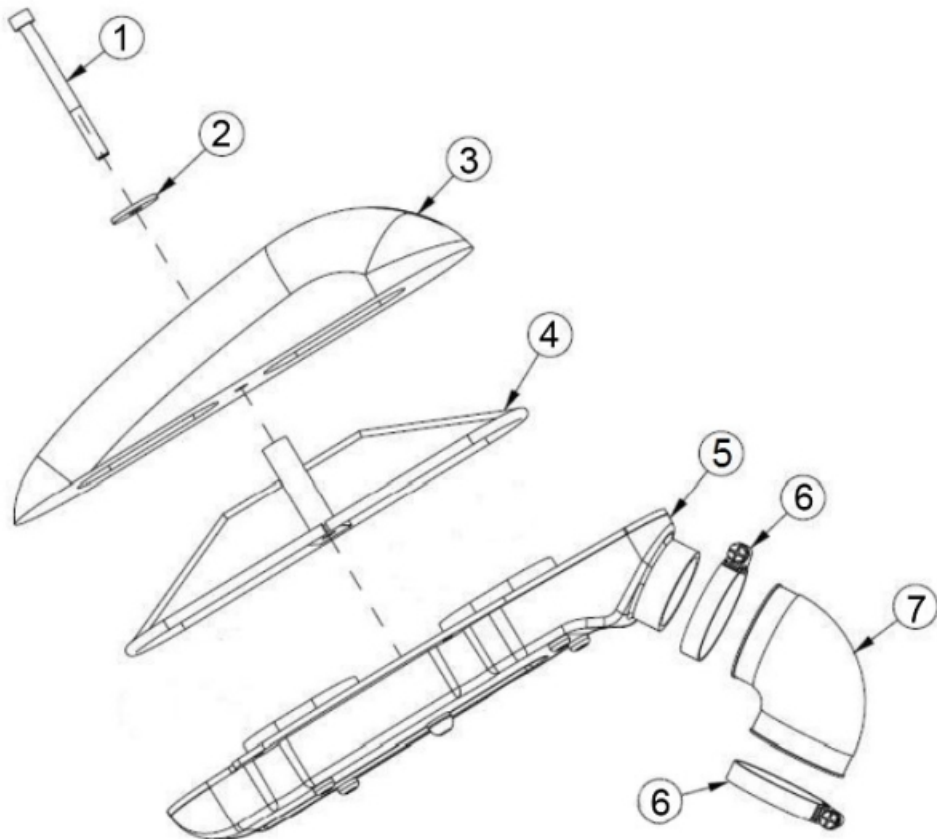

1	AJP-SCREW DIN912 M6X90 PF0912006090 (u. 1)
2	AJP-WASHER DIN9021 M6 AN9021006000 (u. 1)
3	AJP-AIR FILTER PR3/PR4 00MTS01A0004 (u. 1)
4	AJP-AIR FILTER BRACKET 00MTS01A0005 (u. 1)
5	AJP-AIR FILTER BOX 00MTC01A0028 (u. 1)
6	AJP-CLAMP 32-50 00DES01A0018 (u. 2)
7	AJP-INTAKE HOSE 00MTS01A0027 (u. 1)

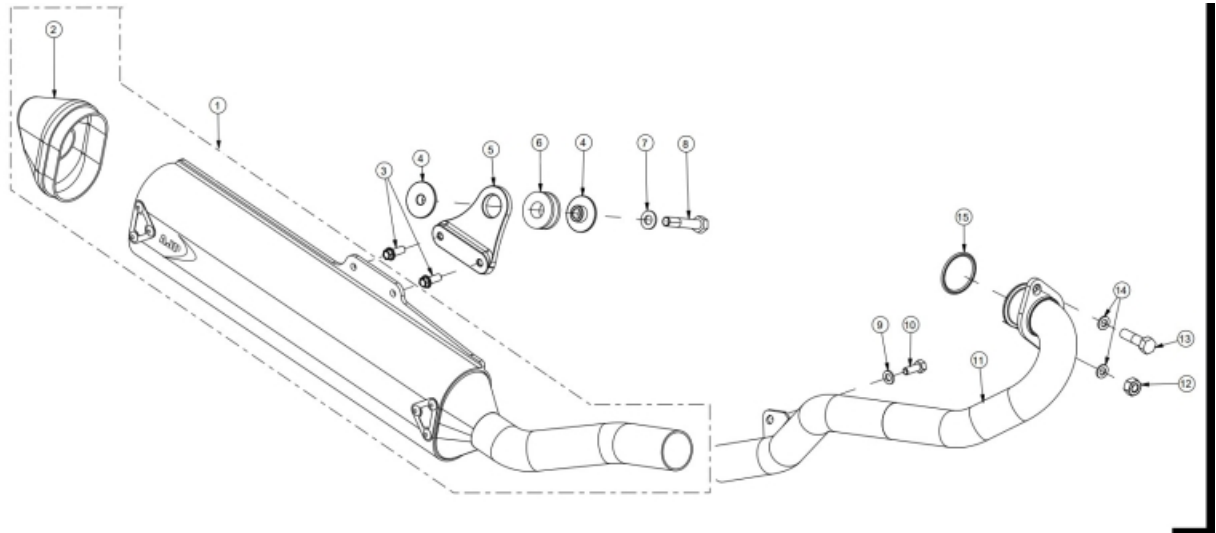
MX EXHAUST SYSTEM


1	AJP-EXHAUST MUFFLER SPR125 AND 240CC 00MTS01A0317 (u. 1)
2	AJP-EXHAUST MUFFLER END 00MTS01A0010 (u. 1)
3	AJP-SCREW DIN69FS2 6X12 PR7 PF069FS26012 (u. 2)
4	AJP-SPACER FOR RUBBER EXHAUST SUPPORT NONE SPR 00MTS01A0325 (u. 2)
5	AJP-SUPPORT FOR EXHAUST SPR125 AND 240CC 00MTS01A0316 (u. 1)
6	AJP-RUBBER EXHAUST SUPPORT NONE SPR250 + 310 AND 510CC 00MTS01A0308 (u. 1)
7	AJP-WASHER 5/16 00MTS01A0072 (u. 1)
8	AJP-SCREW DIN933 M8X30 PF0933008030 (u. 1)
9	AJP-WASHER DIN127B M8 AN127B008000 (u. 1)
10	AJP-SCREW DIN69FS2 6X12 PR7 PF069FS26012 (u. 1)
11	AJP-EXHAUST PIPE SPR125CC AND 240CC 00MTS01A0318 (u. 1)
12	AJP-NUT DIN 934 M8 PC0934008001 (u. 1)
13	AJP-SCREW DIN933 M8X20 PF0933008020 (u. 1)
14	AJP-WASHER DIN127B M8 AN127B008000 (u. 2)
15	AJP-EXHAUST PIPE GASKET 00MTS01A0001 (u. 1)

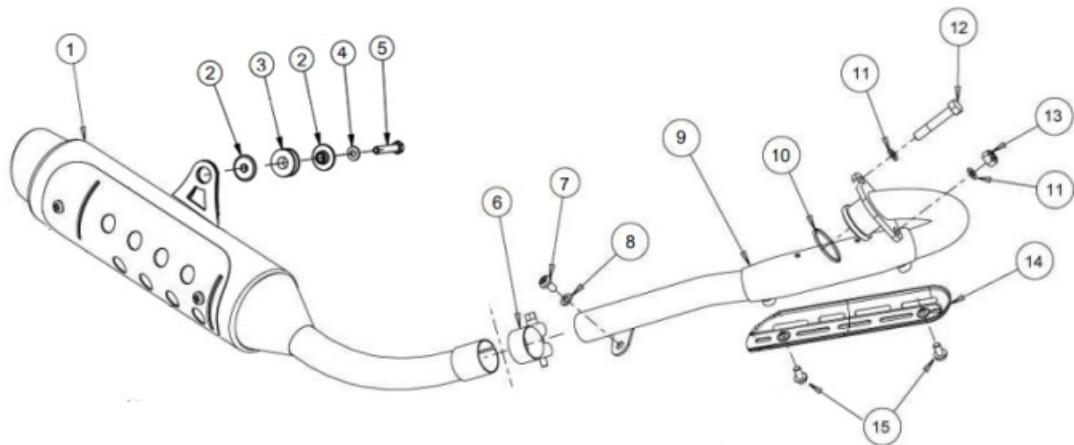EXHAUST SYSTEM (STANDARD)


1	AJP-EXHAUST MUFFLER SPR 125/240 00MTS04A0059 (u. 1)
2	AJP-SPACER FOR RUBBER EXHAUST SUPPORT NONE SPR 00MTS01A0325 (u. 2)
3	AJP-RUBBER EXHAUST SUPPORT NONE SPR250 + 310 AND 510CC 00MTS01A0308 (u. 1)
4	AJP-WASHER 5/16 00MTS01A0072 (u. 1)
5	AJP-SCREW DIN933 M8X30 PF0933008030 (u. 1)
6	AJP-HOLDER ND30 00MTS01A0024 (u. 1)
7	AJP-SCREW DIN933 M6X16 PF0933006016 (u. 1)
8	AJP-WASHER DIN125 M6 AN0125006000 (u. 1)
9	AJP-EXHAUST PIPE SPR 125/240 00MTS06A0076 (u. 1)
10	AJP-EXHAUST PIPE GASKET 00MTS01A0001 (u. 1)
11	AJP-WASHER DIN127 M8 AN0127008000 (u. 2)
12	AJP-SCREW DIN933 M8X25 PF0933008025 (u. 1)
14	AJP-EXHAUST PIPE PROTECTION 00MTS06A0037 (u. 1)
15	AJP-SCREW ISO7380 M6X8 PF0738006008 (u. 2)


REAR SWING ARM

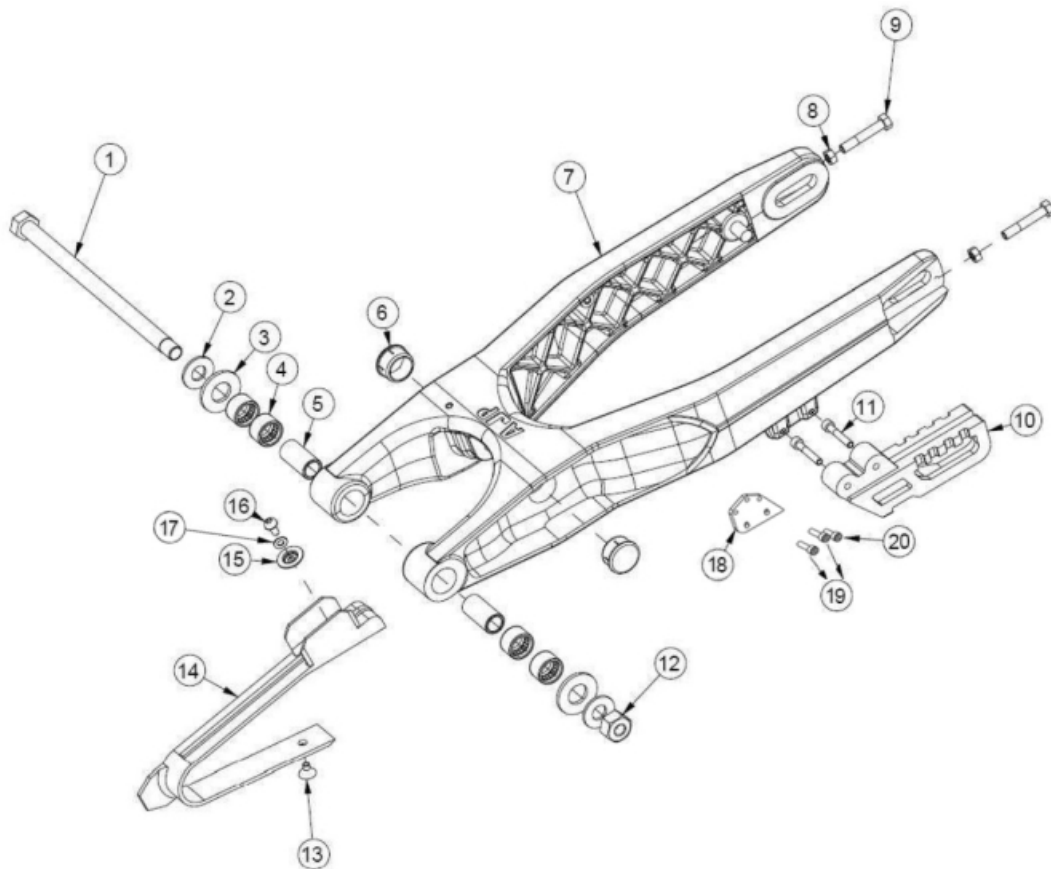

1	AJP-PIVOT SHAFT PR3/PR4 00STS07A0027 (u. 1)
2	AJP-WASHER DIN125A M14 AN125A014000 (u. 2)
3	AJP-WASHER 40X20X3 00STS01A0003 (u. 2)
4	AJP-BEARING HK2016 RS RL00HK2016RS (u. 4)
5	AJP-SPACER 15X20X40 00STS01A0002 (u. 2)
6	AJP-PLUG 00STS01A0004 (u. 2)
7	AJP-REAR SWING ARM 00STS01A0071 (u. 1)
8	AJP-NUT DIN934 M8 PC0934008000 (u. 2)
9	AJP-SCREW DIN933 M8X35 PF0933008035 (u. 2)
10	AJP-CHAIN GUIDE 00STS01B0007 (u. 1)
11	AJP-SCREW DIN912 M6X40 PF0912006040 (u. 2)
12	AJP-NUT DIN934 M14 PC0934014000 (u. 1)
13	AJP-SCREW DIN7991 M6X12 PF7991006012 (u. 1)
14	AJP-CHAIN TOUCH DEFENSE BUFFER 00PLS01A0049 (u. 1)


15	AJP-WASHER 00PLS07A0029 (u. 1)
16	AJP-SCREW DIN7380 M6X12 PF73806012INOX (u. 1)
17	AJP-WASHER DIN125A M6 AN125A06INOX (u. 1)
18	AJP-SUPPORT FOR CHAIN GUIDE 00STS01A0090 (u. 1)
19	AJP-SCREW DIN912 M6X20 PF0912006020 (u. 2)
20	AJP-SCREW DIN912 M6X16 PF0912006016 (u. 1)

FRAME

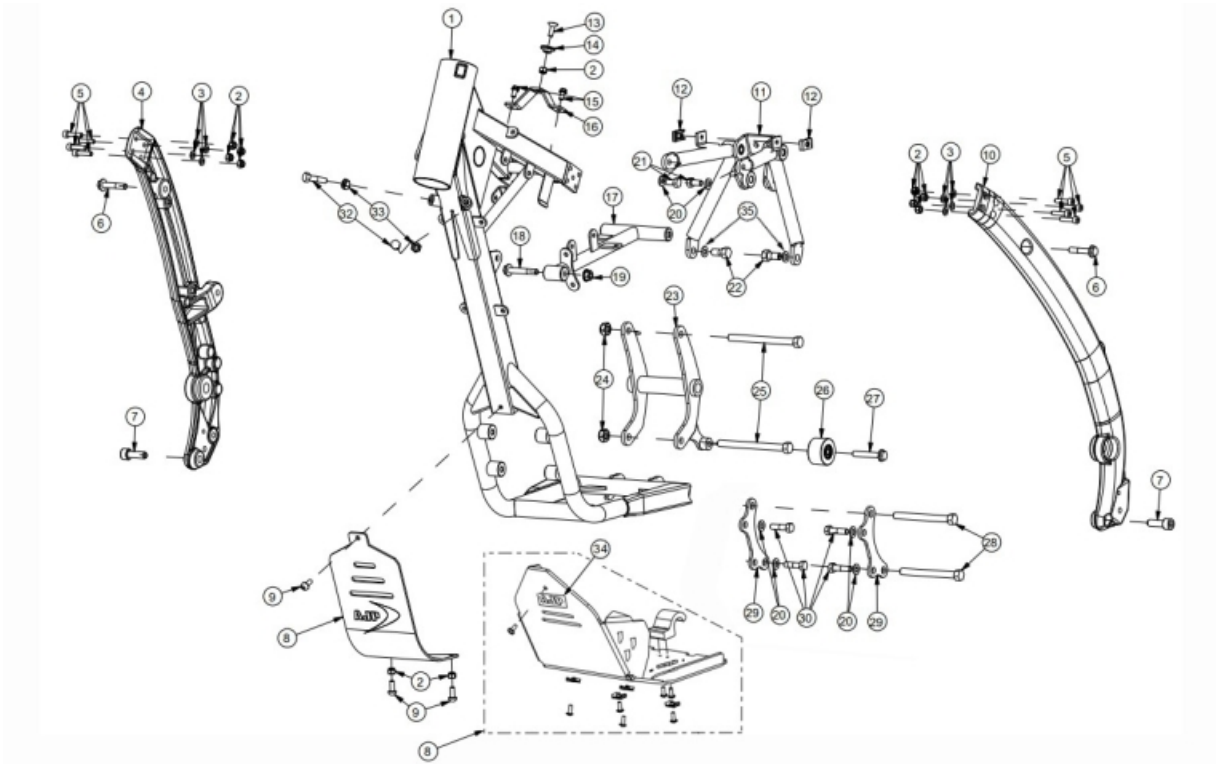


-	AJP-STEEL FRAME SPR 240 EXTREME BORDEAUX 00QUS04A0083 (u. 1)
1	AJP-FRAME PR4 RED PRO 2013 00QUS04A0059 (u. 1)
2	AJP-NUT DIN985 M6 PC0985006000 (u. 10)
3	AJP-WASHER DIN125A M6 AN125A06INOX (u. 8)
5	AJP-SCREW DIN912 M6X20 PF0912006020 (u. 8)
6	AJP-SCREW DIN6921 M8X25 PF6921008025 (u. 2)
7	AJP-SCREW DIN912 M10X35 PF0912010035 (u. 2)
8	AJP-FRAME COVER PR4 EXTREME PLASTIC 00MTS01A0106 (u. 1)
9	AJP-SCREW DIN7380 M6X16 INOX PF73806016INOX (u. 3)
12	AJP-SPRING FOR FAN PR5 2013 00MTS01A0123 (u. 2)
13	AJP-SCREW DIN7991 M6X16 PF7991006016 (u. 1)
14	AJP-SPACER FOR GUIDE SEAT ASSEMBLY (22X6.5X6) SPR250 + 310 00DES05A0001 (u. 1)
15	AJP-SCREW DIN69FS2 6X16 PR7 PF069FS26016 (u. 2)
16	AJP-SUPPORT GUIDE SEAT SPR125 AND 240CC 00BAS01A0217 (u. 1)
17	AJP-FRAME REINFORCEMENT PR4 EXTREME 2013 00QUS04A0063 (u. 1)
18	AJP-SCREW DIN6921 M8X50 PF6921008050 (u. 1)

19	AJP-NUT DIN985 M10 PC0985010000 (u. 1)
20	AJP-WASHER DIN127B M8 AN127B008000 (u. 4)
21	AJP-SCREW DIN933 M8X20 PF0933008020 (u. 2)
22	AJP-SCREW DIN931 M10X25 PF0933010025 (u. 2)
23	AJP-REAR ENGINE MOUNT 00QUS07B0021 (u. 1)
24	AJP-NUT DIN985 M10 PC0985010000 (u. 1)
26	AJP-CHAIN ROLLER (40MM) 00QUS01A0022 (u. 1)
27	AJP-SCREW DIN6921 M8X50 PF6921008050 (u. 1)
28	AJP-SCREW DIN931 M10X100 PF0931010100 (u. 2)
29	AJP-FRONT ENGINE MOUNT 00QUS07A0020 (u. 2)
30	AJP-SCREW DIN933 M8X20 PF0933008020 (u. 4)
32	AJP-SCREW DIN933 M8X16 PF0933008016 (u. 2)
33	AJP-WASHER DIN6798 M8X14X0.8 AN67980801408 (u. 2)
34	AJP-STICKER FOR FRAME COVER EXTREME PLASTIC 00BAS01A0131 (u. 1)
35	AJP-WASHER DIN127B M10 FOR SCRE OF ENGINE PR5 2013 AN127B001000 (u. 2)

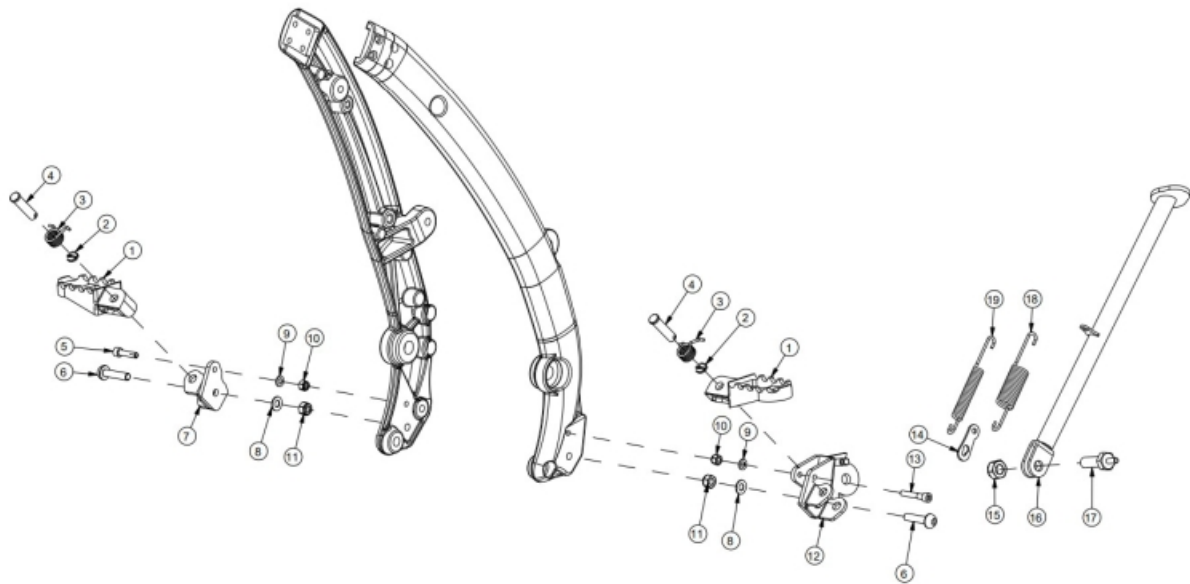FOOT RESTS AND SIDE STAND


1	AJP-FRONT FOOTPEG LH/RH IN ALLOY EXTREME 00QUS03A0037 (u. 1)
2	AJP-SCREW 2.5X20 DIN 94 FOR FOOTPEG EXTREME 00QUS07A0065 (u. 2)
3	AJP-FRONT FOOTPEG SPRING RH EXTREME PR4 /PR5 2013 00QUS07A0062 (u. 2)
4	AJP-DOWEL FOR FOOTPEG RED EXTREME 2013 00QUS07A0064 (u. 2)
5	AJP-SCREW DIN912 M6X25 PF0912006025 (u. 1)
6	AJP-SCREW DIN7380 M8X35 PF7380008035 (u. 2)
7	AJP-FRONT FOOTPEG HOLDER LH SPR 125 AND 240CC 00QUS07A0078 (u. 1)
8	AJP-WASHER 5/16 00MTS01A0072 (u. 2)
9	AJP-WASHER DIN125A M6 AN125A06INOX (u. 2)
10	AJP-NUT DIN985 M6 PC0985006000 (u. 2)
11	AJP-NUT DIN985 M8 PC0985008000 (u. 2)
12	AJP-FRONT FOOTPEG HOLDER LH SPR125 AND 240 00QUS07A0079 (u. 1)
13	AJP-SCREW DIN912 M6X35 PF0912006035 (u. 1)
14	AJP-SPRING HOLDER 00QUS01A0017 (u. 1)
16	AJP-SIDE STAND SPR250; 310CC E 510CC 00QUS04A0080 (u. 1)
17	AJP-STUD 00QUS04A0016 (u. 1)
18	AJP-RESSORT BEQUILLE EXT. 00QUS01A0013 (u. 1)
19	AJP-INNER SPRING 00QUS01A0014 (u. 1)


FUEL TANK

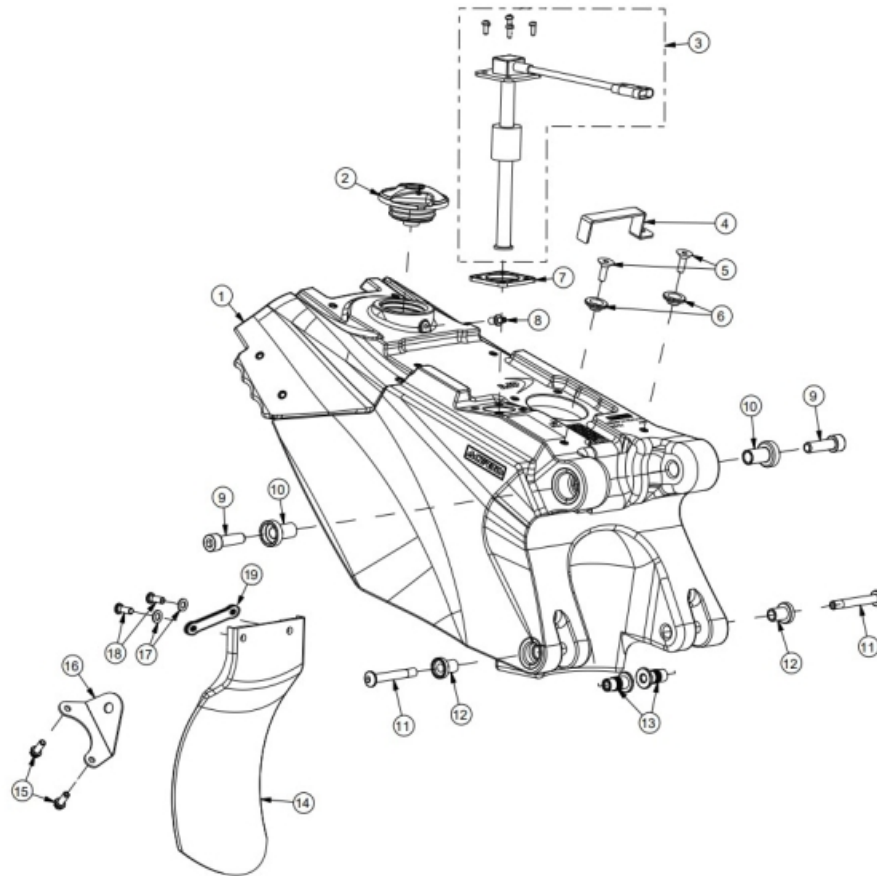


1	AJP-FUEL TANK P310/P510 AND PR5 2020 00DES01A0118 (u. 1)
2	AJP-FUEL CAP ACERBIS AFTER SPR 125/240/310/510 00DES02B0040 (u. 1)
3	AJP-FUEL LEVEL SENSOR PR7 00DES01A0085 (u. 1)
4	AJP-PLATE THREADS FUEL TANK SPR250 + 310 +510 2020 00ELS01A0128 (u. 1)
5	AJP-SCREW DIN7991 M6X16 PF7991006016 (u. 2)
6	AJP-SPACER FOR GUIDE SEAT ASSEMBLY (22X6.5X6) SPR250 + 310 00DES05A0001 (u. 2)
7	AJP-SEAL FUEL LEVEL SENSOR NBR 3MM PR7 00DES01A0042 (u. 1)
8	AJP-SPACER FUEL SPR250 + 310 +510 2020 00DES02A0042 (u. 1)
9	AJP-SCREW DIN912 M10X65 PF0912010065 (u. 2)
10	AJP-UP SPACER FOR FUEL TANK SPR250 + 310 +510CC 2020 00DES01A0124 (u. 2)
11	AJP-SCREW DIN7380 M8X50 PF7380008050 (u. 2)
12	AJP-LOWER SPACER FOR FUEL TANKS EXTERNAL SPR250 + 310 +510CC 00DES05A0002 (u. 2)
13	AJP-LOWER SPACER FOR FUEL TANKS INTERNAL SPR250 + 310 +510CC 00DES05A0003 (u. 2)
14	AJP-MUD GARD SPR 125-240 00PLS01B0013 (u. 1)

16	AJP-REINFORCEMENT FUEL TANK FOR EXHAUST SPR250 2020 00MTS06A0068 (u. 1)
17	AJP-WASHER DIN125A M6 AN125A06INOX (u. 2)
19	AJP-FIXING PLATE DEPOSIT PAD SPR 125-240 00DES01A0147 (u. 1)

FUEL PUMP

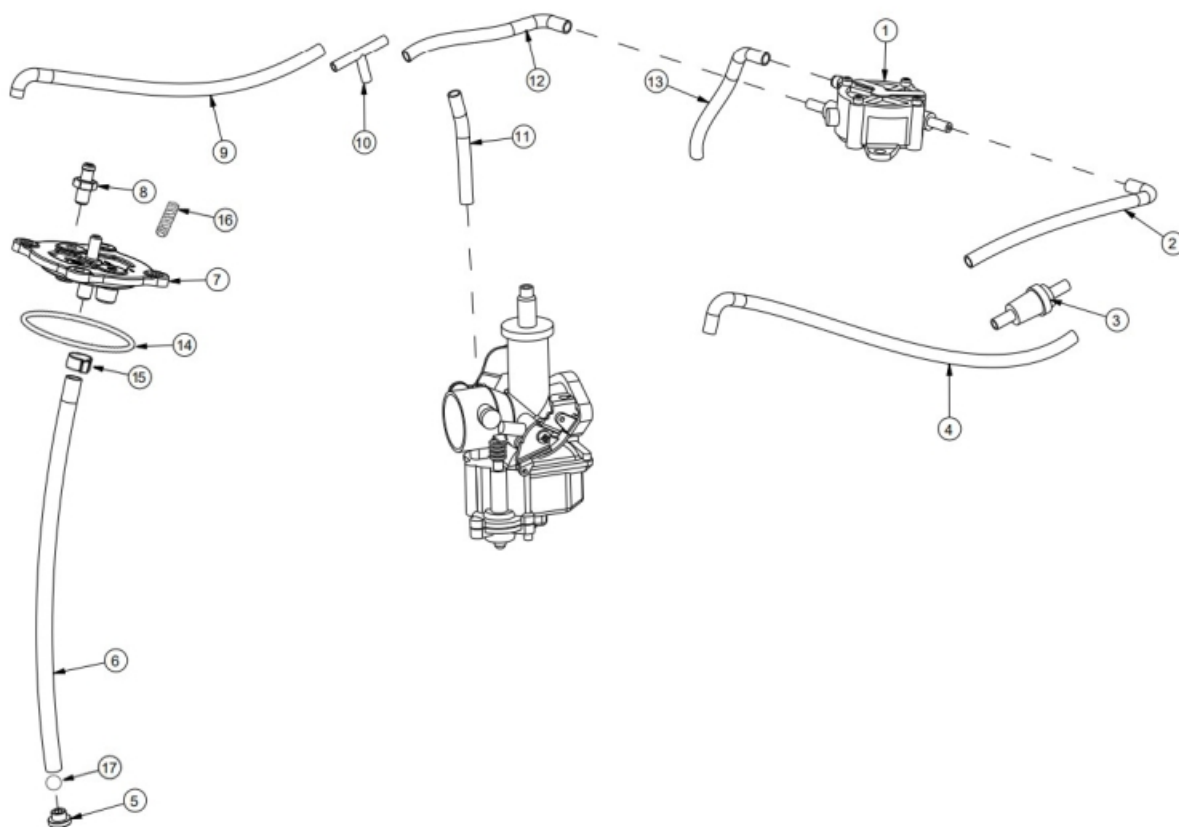


1	AJP-FUEL PUMP SPR125 AND SPR240 00DES01A0013 (u. 1)
2	AJP-HOSE(200MM) SPR 125-240 00DES01A0140 (u. 1)
3	AJP-FUEL FILTER 00DES01A0007 (u. 1)
4	AJP-FUEL HOSE (280MM) SPR 125-240 00DES01A0141 (u. 1)
5	AJP-SAPACER FOR MAXIMUM AND MINIMUM HEADLIGHT PR7 00ELS01A0102 (u. 1)
6	AJP-HOSE FISHING (250MM) SPR 125-240 00DES01A0142 (u. 1)
9	AJP-FUEL HOSE (250MM) SPR 125-240 00DES01A0143 (u. 1)
10	AJP-CONNECTOR 00DES01A0008 (u. 1)
11	AJP-FUEL HOSE (85MM) SPR125-240 00DES01A0144 (u. 1)
12	AJP-FUEL HOSE (160MM) SPR 125-240 00DES01A0145 (u. 1)
13	AJP-FUEL HOSE (210MM) SPR 125-240 00DES01A0146 (u. 1)
14	AJP-O-RING 65X3 NBR 70 FOR FUEL PIMP AFTER 10 APRIL 2015 00DES01A0070 (u. 1)
15	AJP-CLAMP 00DES01A0045 (u. 1)

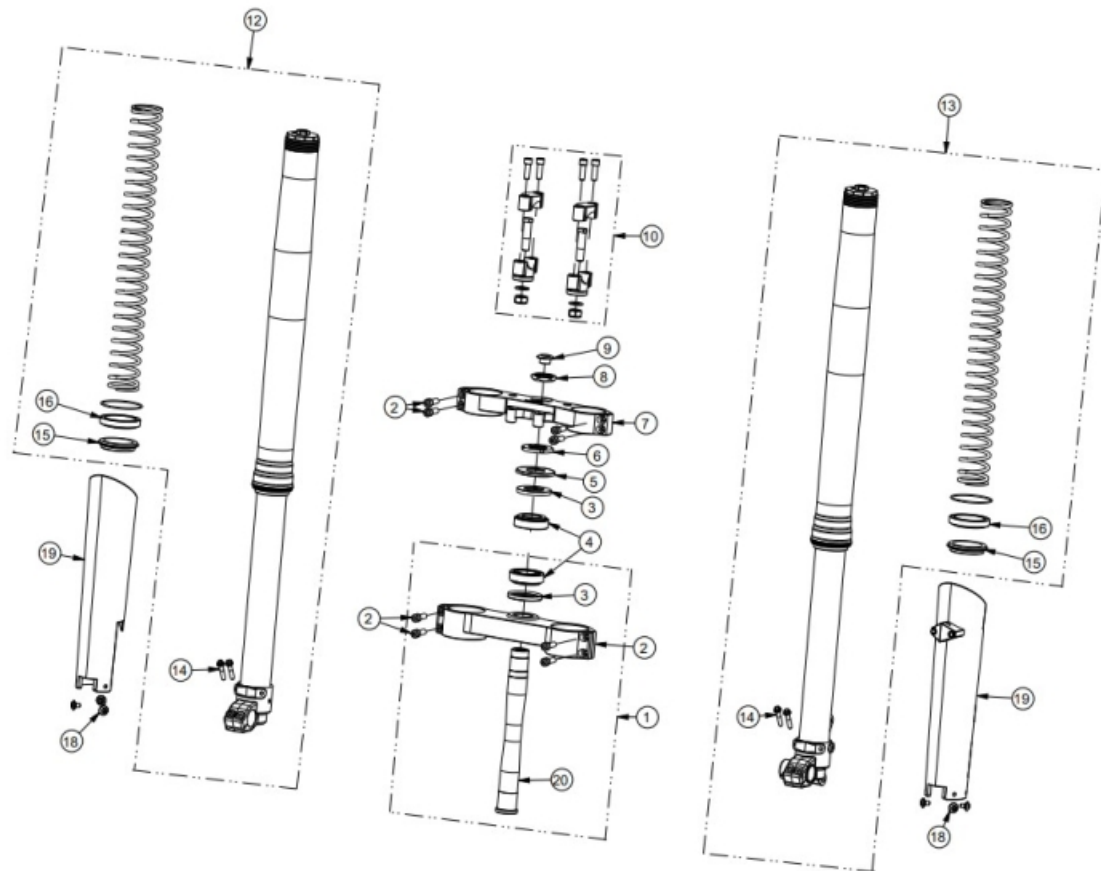FRONT FORKS AND STEERING COLUMN


3	AJP-UPPER/LOWER STEER SEAL 00SFS01A0065 (u. 2)
4	AJP-BEARING 32006JR PR5 RL00032006JR (u. 2)
5	AJP-SEAL COVER 00SFS01A0064 (u. 1)
6	AJP-STEERING NUT 49X28X8 00SFS01A0104 (u. 1)
7	AJP-UPPER BRACKET 00SFS01A0062 (u. 1)
8	AJP-NUT M28X1 00SFS07A0071 (u. 1)
9	AJP-PLUG FOR STEERING STEM FASTACE 2012 00SFS01A0088 (u. 1)
10	AJP-BAR MOUNT PR5 00SFS01A0061 (u. 1)
12	AJP-FRONT FORK RH DOUBLE CIRCUIT 2019 00SFC01A0084 (u. 1)
13	AJP-FRONT FORK LH DOUBLE CIRCUIT 2019 00SFC01A0085 (u. 1)
14	AJP-SCREW DIN6921 M6X30 PF6921006030 (u. 4)
15	AJP-DUST SEAL 00SFS01A0069 (u. 2)
16	AJP-OIL SEAL 00SFS01A0070 (u. 2)
18	AJP-SCREW FOR SET PROTECTOR FOR PR5 00PLS01A0093 (u. 6)

19	AJP-FORK PROTECTOR SET 00PLS01A0077 (u. 1)
20	AJP-STEERING STEM PR5/PR7 00SFS01A0066 (u. 1)


REAR SUSPENSION LINKAGE

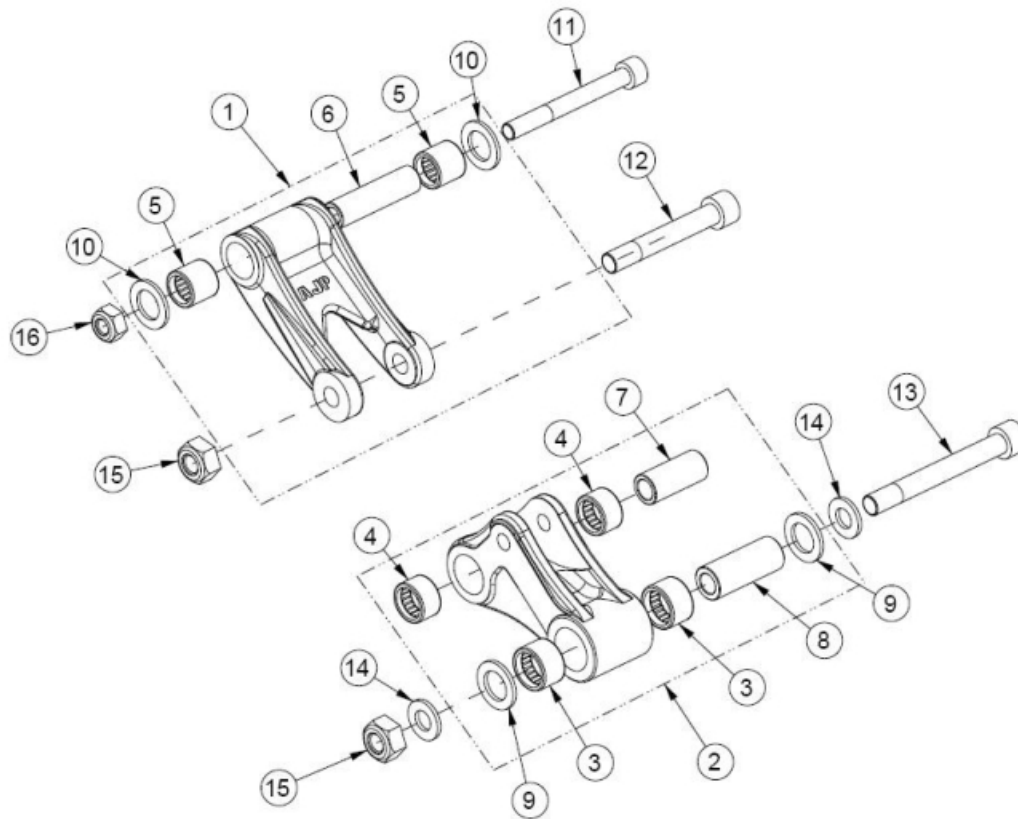


1	AJP-FRAME LINK ASSEMBLY 00STC07A0004 (u. 1)
2	AJP-REAR ARM LINK ASSEMBLY 00STC07A0005 (u. 1)
3	AJP-BEARING HK2020 RS RL00HK2020RS (u. 2)
4	AJP-BEARING HK1814 RS RL00HK1814RS (u. 2)
5	AJP-BEARING HK1620 RS RL00HK1620RS (u. 2)
6	AJP-SPACER 10X16X65 00STS07A0025 (u. 1)
7	AJP-SPACER 12X18X41 00STS07A0022 (u. 1)
8	AJP-SPACER 12X20X50 00STS07A0021 (u. 1)
9	AJP-WASHER 30X16X2 00STS01B0020 (u. 2)
10	AJP-WASHER FOR FRAME LINK PR3/PR4 00STS01A0020 (u. 2)
11	AJP-SCREW DIN912 M10X90 PF0912010090 (u. 1)
12	AJP-SCREW DIN912 M12X80 PF0912012080 (u. 1)
13	AJP-SCREW DIN912 M12X100 PF0912012100 (u. 1)
14	AJP-WASHER DIN125 M12 AN0125012000 (u. 2)

15	AJP-NUT DIN985 M12 PC0985012000 (u. 2)
16	AJP-NUT DIN985 M10 PC0985010000 (u. 1)

REAR SHOCK ABSORBER

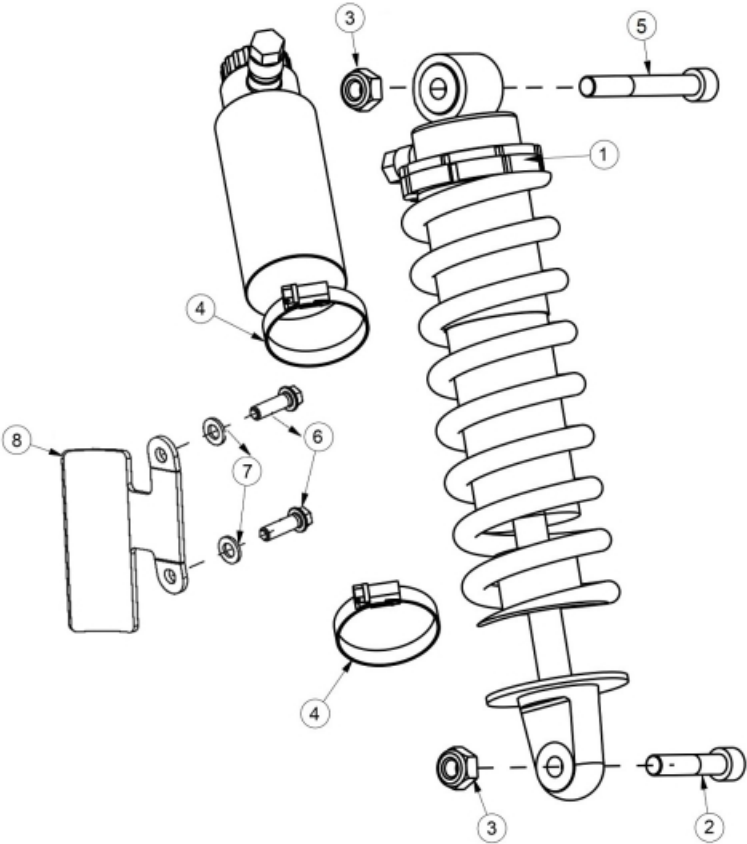


1	AJP-REAR SHOCK ABSORBER PR3 PRO SACHS 00STC01A0028 (u. 1)
2	AJP-SCREW DIN912 M10X50 PF0912010050 (u. 1)
3	AJP-NUT DIN985 M10 PC0985010000 (u. 2)
4	AJP-CLAMP 32-50 00DES01A0018 (u. 2)
6	AJP-SCREW DIN933 M6X12 PF0933006012 (u. 2)
7	AJP-WASHER DIN125A M6 AN125A006000 (u. 2)
8	AJP-RESERVOIR BRACKET 00QUS07A0080 (u. 1)

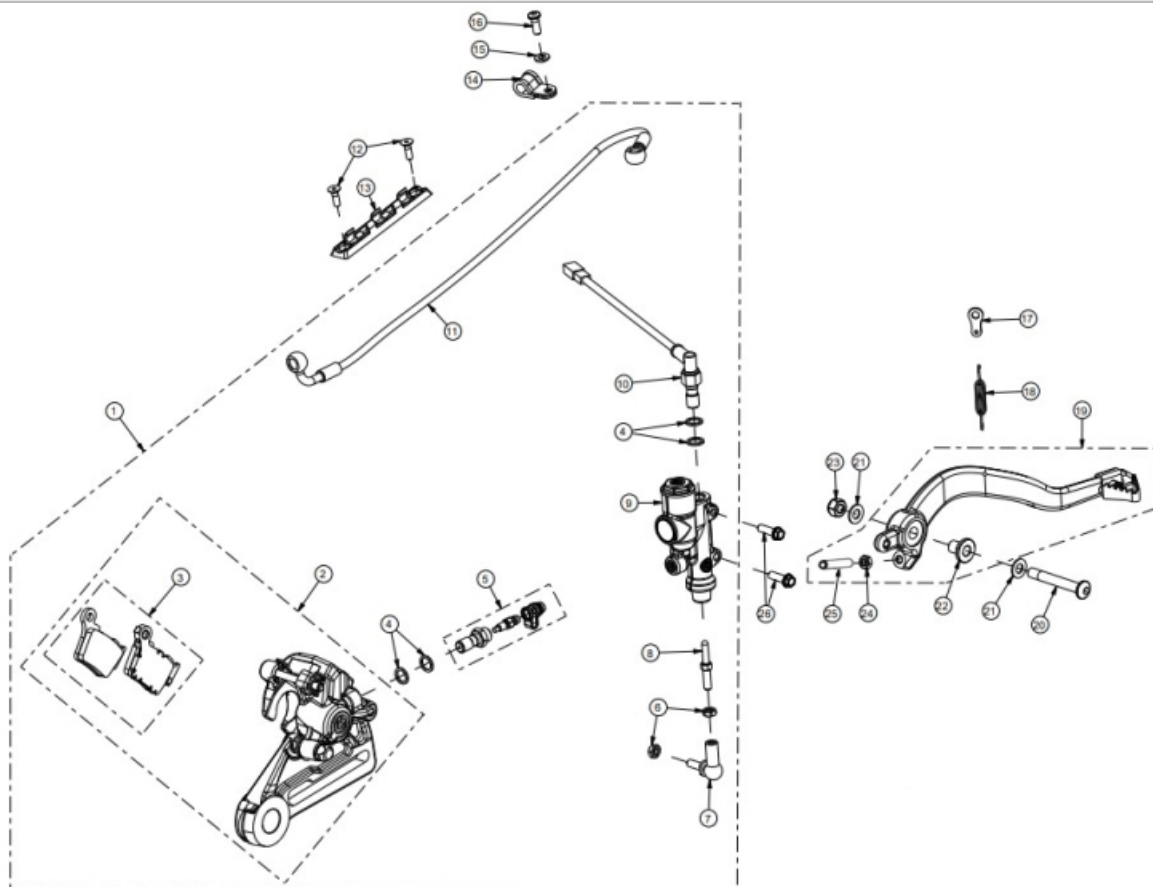REAR BRAKE SYSTEM BREMBO


3	AJP-REAR PAD KIT SPR 00TRS01A0163 (u. 1)
4	AJP-WASHER 00TRS01A0103 (u. 2)
5	AJP-SCREW FOR REAR MASTER CYLINDER. BREMBO SPR310/510 2021 00TRS01A0156 (u. 1)
6	AJP-NUT DIN934 M6 PC0934006000 (u. 2)
7	AJP-PUSH ROD PA7340 M6 FOR REAR BRAKE PEDAL 00TRS06A0006 (u. 1)
8	AJP-SCREW FOR REAR BRAKE PEDAL 310 AND 510CC 00TRS07A0109 (u. 1)
9	AJP-REAR MASTER CYLINDER. BREMBO SPR310/510 2021 00TRS01A0155 (u. 1)
10	AJP-STOP VALVE 00TRS01A0039 (u. 1)
11	AJP-REAR BRAKE HOSE SPR125 AND 240CC 00TRS01A0167 (u. 1)
13	AJP-GUIDE OF BRAKE HOSE PR7 + GUIDE HOSE FUEL PR7 00TRS01A0124 (u. 1)
14	AJP-HOLDER 00TRS01A0037 (u. 1)
15	AJP-WASHER DIN125A M6 AN125A06INOX (u. 1)
16	AJP-SCREW DIN7380 M6X12 PF73806012INOX (u. 1)
17	AJP-SUPPORT SPRING REAR BRAKE PEDAL SPR 125-240 00TRS07A0112 (u. 1)


18	AJP-SUPPORT SPRING REAR BRAKE PEDAL PR5 2013 END/EXTREME 00TRS07A0094 (u. 1)
19	AJP-PEDAL. REAR BRKE SPR 240 EXTREME 00TRS07A0114 (u. 1)
20	AJP-SCREW DIN7380 M8X50 PF7380008050 (u. 1)
21	AJP-WASHER 5/16 00MTS01A0072 (u. 2)
22	AJP-SPACER REAR BRAKE PEDAL RED 17X10X8 PR7 00TRS07A0100 (u. 1)
23	AJP-NUT DIN985 M8 PC0985008000 (u. 1)
24	AJP-NUT DIN934 M6 PC0934006000 (u. 1)
26	AJP-SCREW DIN69FS2 6X20 PR7 PF069FS26020 (u. 2)

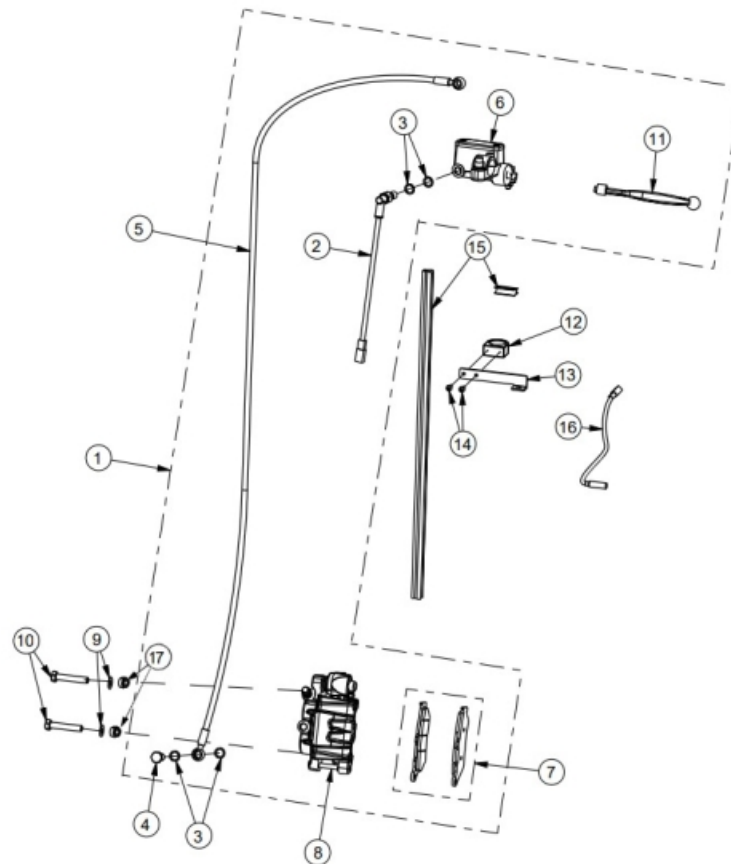FRONT BRAKE SYSTEM BREMBO


-	(u. 0)
2	AJP-STOP VALVE 00TRS01A0039 (u. 1)
3	AJP-WASHER 00TRS01A0103 (u. 4)
4	AJP-SCREW M10X1 PR3/PR4/PR5 2012 00TRS01A0025 (u. 1)
5	AJP-FRONT BRAKE HOSE SPR310 AND 510CC 00TRS01A0168 (u. 1)
6	AJP-FRONT MASTER CYLINDER. BREMBO SPR310/510CC 2020 00TRS01A0153 (u. 1)
7	AJP-FRONT PAD KIT SPR 00TRS01A0162 (u. 1)
8	AJP-FRONT CALIPER ASSY. BREMBO SPR310/510 2021 00TRS01A0152 (u. 1)
9	AJP-WASHER DIN6798 M8X14X0.8 AN67980801408 (u. 2)
10	AJP-SCREW DIN933 M8X35 PF0933008035 (u. 2)
11	AJP-BRAKE LEVER SPR 310/510 00TRS01A0164 (u. 1)
12	AJP-HOLDER 00PLS01A0042 (u. 1)
14	AJP-SCREW 3.5 PF7981003513 (u. 2)
15	AJP-SENSOR CABLE HOSE KIT 466MM/30MM PR7 00TRS01A0132 (u. 1)

16	AJP-SPEEDOMETER SENSOR BREMBOPR7 AFTER MAY (1400MM) 2019 00ELS01B0088 (u. 1)
----	---

FRONT WHEEL

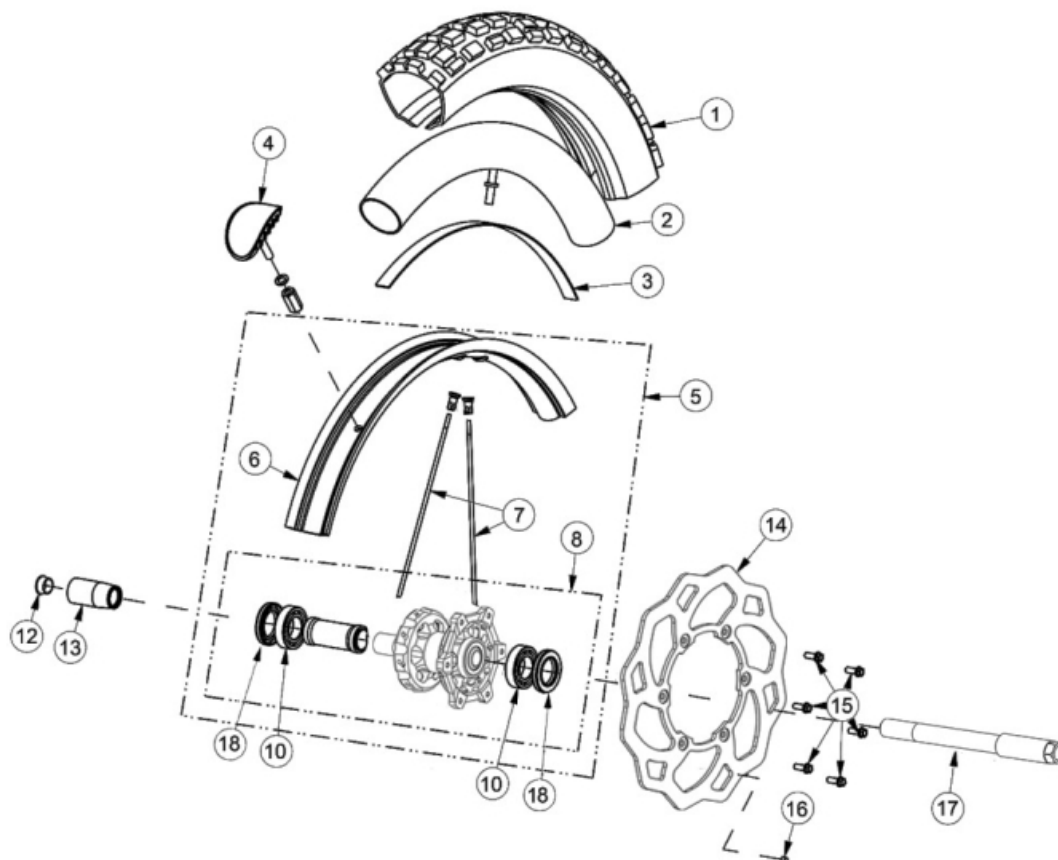

- (u. 0)

1 AJP-TIRE MICHELIN EN 90/90-21"
 00RFS01A0002 (u. 1)

2 AJP-INNER TUBE EN
 00RFS01A0005 (u. 1)

3 AJP-WHEEL RIM TAPE 21"
 00RFS01A0023 (u. 1)

4 AJP-FRONT TIRE FIXATION 1.60
 00RFS01A0061 (u. 1)

5 AJP-FRONT WHEEL BLACK RIM 1.60X21 PR4/PR5 EXTREME 2012
 00RFC01A0061 (u. 1)

6 AJP-RIM EN BLACK 1.60"X21" EXTREME
 00RFS01A0056 (u. 1)

7 AJP-SPOKE + NIPPLES EN 250X 4.00 PR4/PR5 FEBRUARY 2020
 00RFS01C0082 (u. 36)

8 AJP-HUB RED PR4/PR5 2013
 00RFS07A0053 (u. 1)

10 AJP-BEARING 6004-2RS
 RL00060042RS (u. 2)

12 AJP-PLASTIC PLUG. AXLE (20 MM) PR7
 00RFS01A0139 (u. 1)


13 AJP-FRONT AXLE RH
 00RFS05A0054 (u. 1)

14 AJP-FRONT DISC 260MM FOR 310/P510 2020
 00RFS01A0143 (u. 1)

15 AJP-SCREW DIN69FS2 6X16 PR7
 PF069FS26016 (u. 6)

16	AJP-FRONT DISC MAGNET 00RFS01A0042 (u. 1)
17	AJP-FRONT AXLE LH 00RFS05A0055 (u. 1)
18	AJP-DUST SEAL 25X42X7 00RFS01A0057 (u. 2)


REAR WHEEL

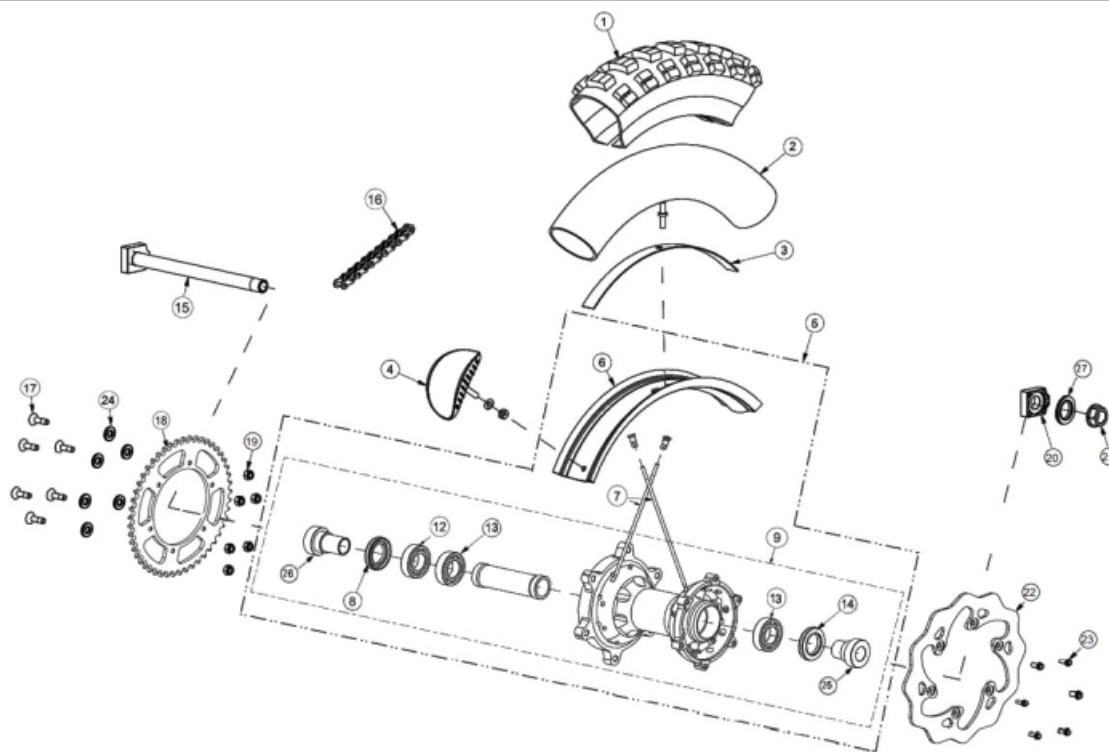

1	AJP-TYRE MICHELIN 120/90-18 00RTS01A0002 (u. 1)
2	AJP-INNER TUBE TR 120/90-18 00RTS01A0005 (u. 1)
3	AJP-WHEEL RIM TAPE 1.60/2.00X 18/19 00RTS01A0025 (u. 1)
4	AJP-RIM LOCK 2.15 00RTS01A0052 (u. 1)
5	AJP-REAR WHEEL RIM BLACK 2.15X18 PR4 EN EXTREME 2012 00RTC01A0079 (u. 1)
6	AJP-WHEEL RIM BLACK EN 2.15X18 EXTREME 00RTS01A0074 (u. 1)
7	AJP-SPOKE EN RH 192X4 PR4/PR5 EXTREME AFTER OCTOBER 2015 00RTS01B0079 (u. 36)
8	AJP-DUST SEAL 47X7X30 00RTS01A0022 (u. 1)
9	AJP-REAR HUB RED FOR EXTREME PR4 2013 00RTS01A0156 (u. 1)
12	AJP-BEARING 6005 2RS RL00060052RS (u. 1)
13	AJP-BEARING 6004-2RS RL00060042RS (u. 2)
14	AJP-DUST SEAL 30X42X7 00RTS01B0024 (u. 1)
15	AJP-REAR SHAFT 00RTS07A0040 (u. 1)
16	AJP-CHAIN 520H - 110 ORMX GOLD 00RTS01A0152 (u. 1)
17	AJP-VIS DIN79914 M8X30 PF7991008030 (u. 6)

18	AJP-SPROCKET JTR822-48 PR4 BRASIL MORAD 00RTS01A0122 (u. 1)
19	AJP-NUT DIN985 M8 PC0985008000 (u. 6)
20	AJP-CHAIN ADJUSTER RH 00RTS02A0042 (u. 1)
21	AJP-NUT DIN934 M14 PC0934014000 (u. 1)
22	AJP-REAR BRAKE DISC FOR SPR310 + P510 00RTS01A0163 (u. 1)
23	AJP-SCREW DIN69FS2 6X16 PR7 PF069FS26016 (u. 6)
25	AJP-SPACER REAR WHEEL RH 14.5MM RH. SPR 240 EXTREME 00RTS07B0081 (u. 1)
26	AJP-SPACER REAR WHEEL RH PR4 EXTREME 00RTS07A0082 (u. 1)
27	AJP-WASHER DIN125A M14 AN125A014000 (u. 1)


HANDLEBAR, CONTROLS AND SWITCHES

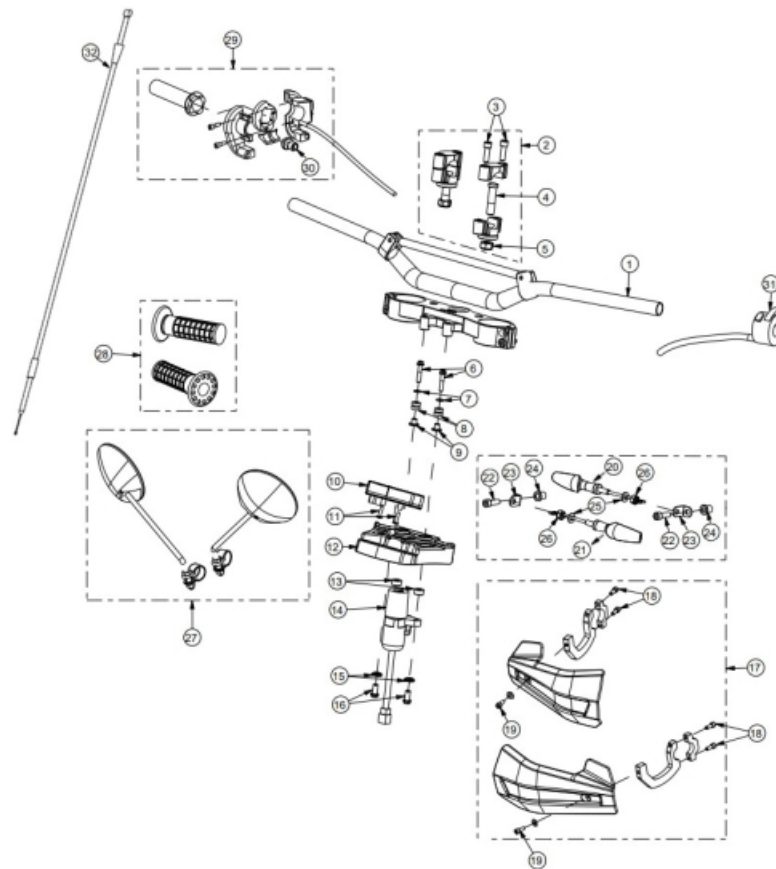

1	AJP-HANDLEBAR PR5 + P310 + P510 2020 (JOBA R9012BK) 00COS01A0059 (u. 1)
2	AJP-BAR MOUNT PR5 00SFS01A0061 (u. 1)
3	AJP-SCREW DIN912 M8X20 PF0912008020 (u. 2)
6	AJP-SCREW DIN69FS2 6X16 PR7 PF069FS26016 (u. 2)
8	AJP-CUSHION 00COS01A0016 (u. 2)
9	AJP-SPACER 00COS07A0030 (u. 2)
10	AJP-SPEEDOMETER SPR250 + P310 E P510 2020 00ELS01A0113 (u. 1)
12	AJP-SPEEDOMETER COVER PR5 +310 +510CC 2020 00ELS01A0114 (u. 1)
13	AJP-SPACER IGNITION SPR 250 + 310 + 510CC (8X15X6.5) 2020 00ELS07A0051 (u. 2)
14	AJP-IGNITION SWITCH ASSEMBLY SPR MODELS 125/ 240 00COS01A0065 (u. 2)
15	AJP-SPACER 16X4.4X6 00COS07A0015 (u. 2)
16	AJP-SCREW DIN6921 M6X30 PF6921006030 (u. 2)
17	AJP-HAND GARDS WHITE 00PLS01A0073 (u. 1)
20	AJP-TURN LAMP ASSEMBLY LH PR7 AFTER MAY 2019 00ELC01A0013 (u. 1)


21	AJP-TURN LAMP ASSEMBLY RH PR7 AFTER MAY 2019 00ELC01A0012 (u. 1)
25	AJP-WASHER DIN9021 M8 AN9021008000 (u. 2)
26	AJP-NUT DIN934 M8 PC0934008000 (u. 2)
27	AJP-REAR VIEW MIRROR 00COS01A0021 (u. 1)
29	AJP-THROTTLE CONTROL ASSEMBLY RED/BLACKSPR240 EXTREME +310CC + 5 00COC01B0002 (u. 1)
30	AJP-THROTTLE CABLE TUNNER 00COS01A0037 (u. 1)
31	AJP-LIGHTS SWITCH SPR250/310 AND 510 00ELC01A0058 (u. 1)
32	AJP-THROTTLE CABLE PR3 125 TRAIL 2013 00COS01C0005 (u. 1)

CLUTCH CONTROLS

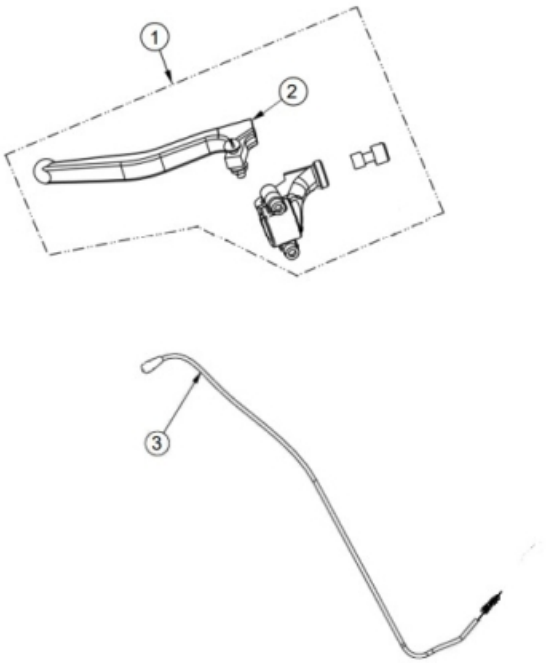


1	AJP-CLUTCH LEVER ASSEMBLY REIKON 00COC01A0027 (u. 1)
2	AJP-CLUTCH LEVER SPECIAL REIKON 00COC01A0028 (u. 1)
3	AJP-CLUTCH CABLE PR3/PR4 00COS01C0007 (u. 1)

ELECTRIC HARNESS

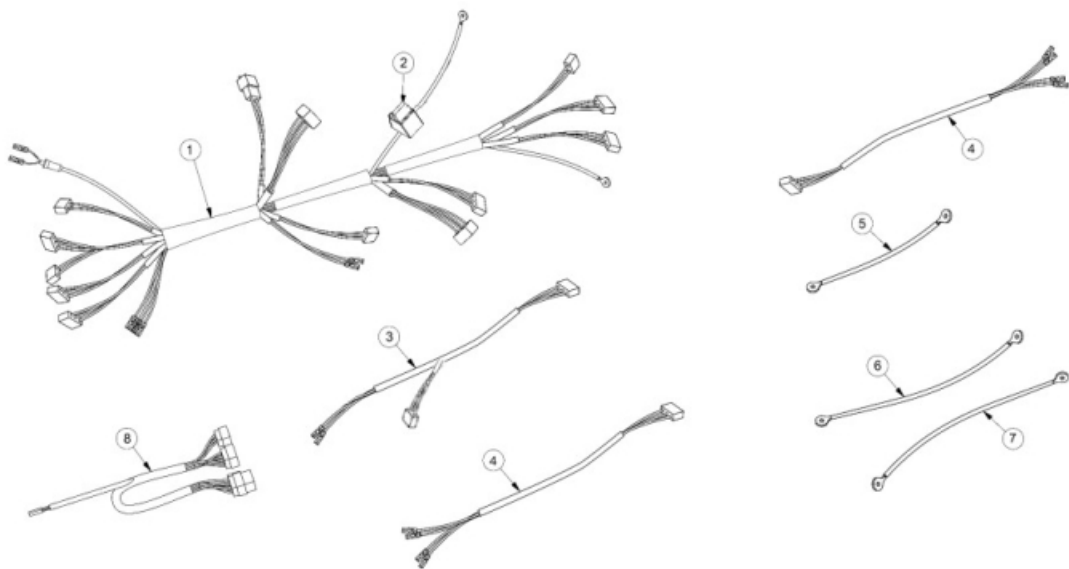


1	AJP-WIRING HARNESS SPR125/SPR240 00ELC01B0038 (u. 1)
2	AJP-FUSE 00ELS01A0017 (u. 1)
6	AJP-GROUND CONNECTION CABLE (250MM) 00ELS01A0051 (u. 1)
7	AJP-STARTING MOTOR CABLE 8223110490000 (u. 1)
8	AJP-SPEEDOMETER WIRING SPR250 + 310 +510 2020 00ELS01A0126 (u. 1)

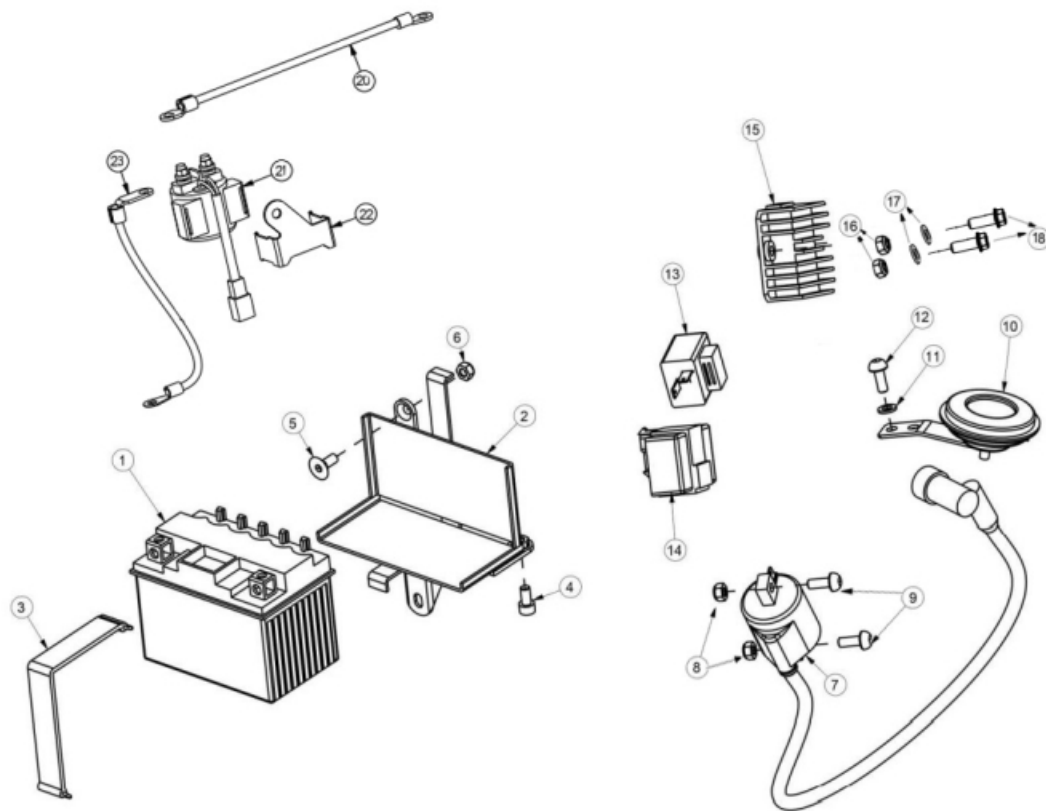BATTERY-ELECTRIC SYSTEM


1	AJP-BATTERY YTZ7-S (12V 6AH) 00ELS01A0039 (u. 1)
2	AJP-BATTERY HOLDER 00ELS04A0003 (u. 1)
3	AJP-BAND 00ELS01A0004 (u. 1)
4	AJP-SCREW DIN912 M6X12 PF0912006012 (u. 1)
5	AJP-SCREW DIN7991 M6X16 PF7991006016 (u. 1)
6	AJP-NUT DIN985 M6 PC0985006000 (u. 1)
7	AJP-IGNITION COIL ASSEMBLY 91A231400000 (u. 1)
8	AJP-NUT DIN985 M6 PC0985006000 (u. 2)
9	AJP-SCREW DIN912 M6X12 PF0912006012 (u. 2)
10	AJP-HORN 12V CC 00ELS01A0005 (u. 1)
11	AJP-WASHER DIN125A M6 AN125A06INOX (u. 1)
12	AJP-SCREW DIN7380 M6X16 INOX PF73806016INOX (u. 1)
13	AJP-TURN LIGHTS RELAY LEDS AFTER MAY 2019 00ELS01A0112 (u. 1)
14	AJP-CDI 93A231000000 (u. 1)

15	AJP-REGULATEUR 94A231100000 (u. 1)
16	AJP-NUT DIN985 M6 PC0985006000 (u. 2)
17	AJP-WASHER DIN125A M6 AN125A06INOX (u. 2)
18	AJP-SCREW DIN7380 M6X16 INOX PF73806016INOX (u. 1)
21	AJP-STARTER RELAY 93A283100000 (u. 1)
22	AJP-SUPPORT FOR STARTER RELAY PR3/PR4 E PR5 00ELS07A0046 (u. 1)
23	AJP-STARTING MOTOR CABLE 82231I0490000 (u. 1)

FRONT FENDER

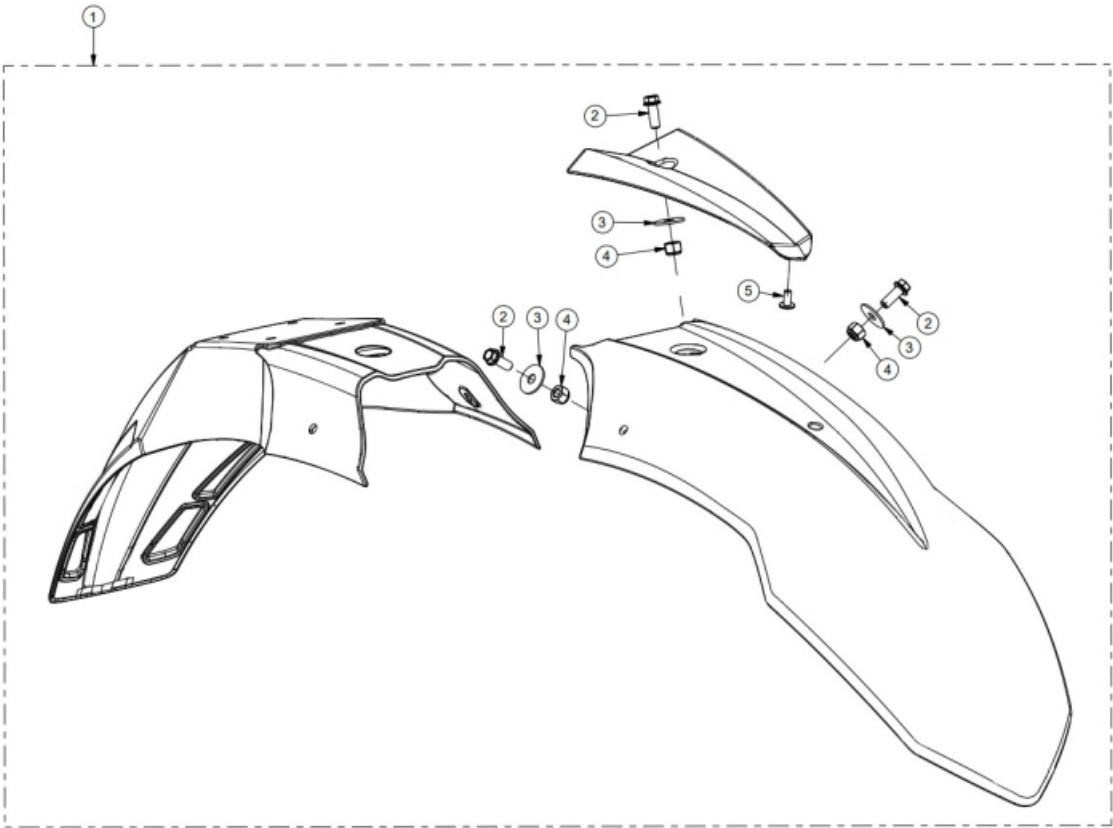

AJP-FRONT FENDER SM WHITE
00PLS01A0072 (u. 1)

1 AJP-FRONT FENDER SPR250/310/510 BLACK
00PLS01B0130 (u. 1)


AJP-FRONT FENDER SPR125 +240 +250 P310/P510
00PLS01A0130 (u. 1)

3 AJP-WASHER DIN9021 M6
AN902106INOX (u. 3)

4 AJP-NUT DIN985 M6
PC0985006000 (u. 3)

5 AJP-SCREW 3.5
PF7981003513 (u. 1)


REAR FENDER

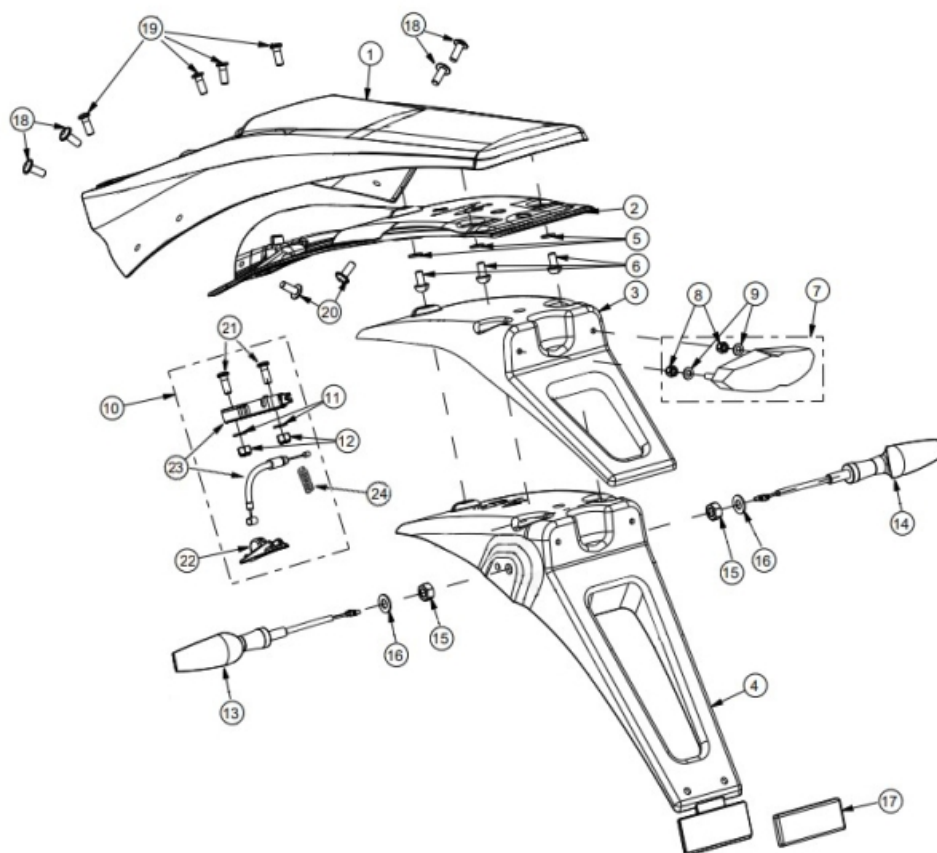

1	AJP-REAR FENDER SPR 250 E P310/P510 BLACK 00PLS01B0129 (u. 1)
2	AJP-REAR FENDER SPR125 + 240 + 250 E P310/P510 00PLS01A0129 (u. 1)
3	AJP-SUPPORT MORE SHORT FOR PLATE PR7 00PLS01A0125 (u. 1)
4	AJP-SUPPORT FOR PLATE SPR 00PLS01B0107 (u. 1)
5	AJP-WASHER DIN9021 M6 AN902106INOX (u. 3)
6	AJP-SCREW DIN7380 M6X16 INOX PF73806016INOX (u. 3)
7	AJP-REAR TAIL LIGHT PR7 00ELS01A0090 (u. 1)
9	AJP-WASHER DIN125A M6 AN125A005000 (u. 2)
10	AJP-SEAT LOCK SET 00COS01A0066 (u. 1)
12	AJP-NUT DIN985 M6 PC0985006000 (u. 2)
13	AJP-TURN LAMP ASSEMBLY LH PR7 AFTER MAY 2019 00ELC01A0013 (u. 1)
14	AJP-TURN LAMP ASSEMBLY RH PR7 AFTER MAY 2019 00ELC01A0012 (u. 1)
15	AJP-NUT DIN934 M8 PC0934008000 (u. 2)

16	AJP-WASHER DIN9021 M8 AN9021008000 (u. 2)
17	AJP-REFLECTOR SIM IAE902.0079 RED PR3/PR4/PR5 E PR7 00ELS01A0101 (u. 1)
19	AJP-SCREW DIN7380 M6X12 PF73806012INOX (u. 4)
20	AJP-SCREW DIN7380 M6X12 PF73806012INOX (u. 2)
21	AJP-SCREW DIN7380 M6X20 PF73806020INOX (u. 2)
22	AJP-HANDLE. SEAT LOCK 00COS01A0067 (u. 1)
23	AJP-CLOSE + CABLE SPR 125 +240 +250 + 310 + 510CC 2020 00COS01A0062 (u. 1)
24	AJP-SPRING FOR SEAT SPR250+ 310 E 510 2020 00BAS01A0211 (u. 1)


SIDE FENDERS AND SEAT

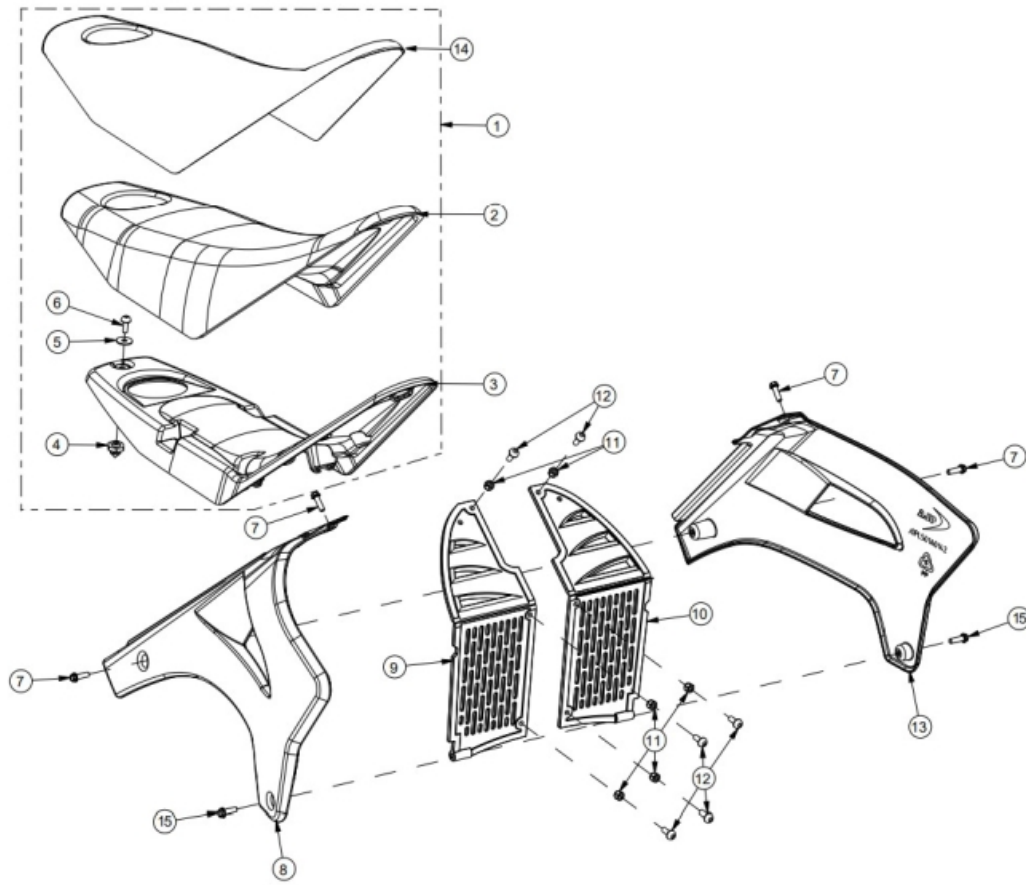

1	AJP-SEAT ASSEMBLY SPR310 SINCE APRIL 2021 00BAC01A0089 (u. 1)
2	AJP-FOAM SADDLE SPR 5 310 AND 510 2020 00BAS01A0209 (u. 1)
3	AJP-SEAT BASE P310/P510 00BAS01A0197 (u. 1)
4	AJP-BANK CLOSING PIN SPR250 +310 AND 510 2020 00BAS01A0210 (u. 1)
5	AJP-WASHER DIN9021 M6 AN9021006000 (u. 1)
6	AJP-SCREW ISO7380 M6X8 PF07380006008 (u. 1)
7	AJP-SCREW DIN69FS2 6X16 PR7 PF069FS26016 (u. 4)
8	AJP-FRONT COVER RH SPR125/240CC 00PLS01A0143 (u. 1)
9	AJP-FRONT FRAME COVER RH. 00PLS01A0055 (u. 1)
10	AJP-FRONT FRAME COVER RH. 00PLS01A0055 (u. 1)
11	AJP-NUT DIN985 M6 PC0985006000 (u. 6)
12	AJP-SCREW DIN7380 M6X16 PF7380006016P (u. 6)
13	AJP-FRONT COVER LH SPR125/240CC 00PLS01A0142 (u. 1)
14	AJP-SEAT COVER SPR 125/240/250 00BAS01B0094 (u. 1)


15	AJP-SCREW DIN69FS2 6X20 PR7 PF069FS26020 (u. 2)
----	--

HEAD LIGHT

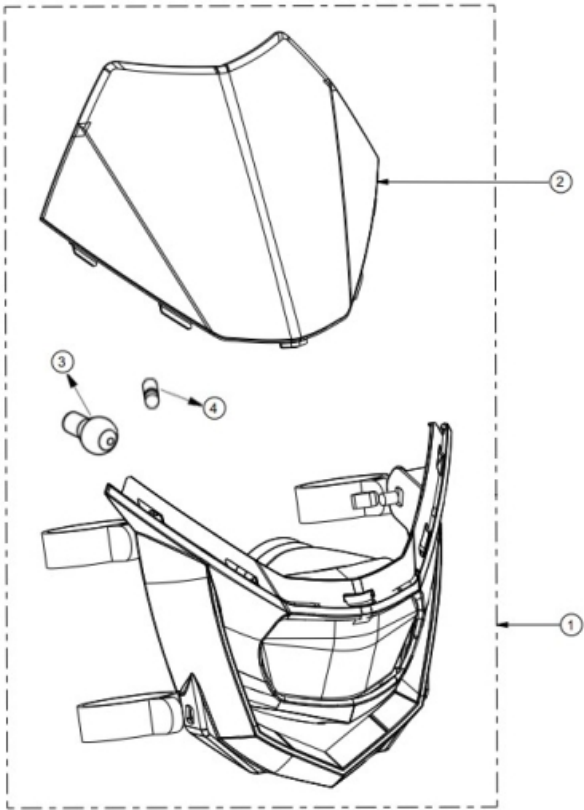

1	AJP-HEADLAMP COVER SPR125 + 240 + 250+ P310/P510 2020 00PLC01A0076 (u. 1)
2	AJP-PLATE BLACK FOR HEADLAMP SPR250/310/510 00PLS01A0141 (u. 1)
3	AJP-LAMP HS1 12V 35/35W 00ELS01A0129 (u. 1)
4	AJP-LAMP 12V 5W 00ELS01A0139 (u. 1)

DECALS

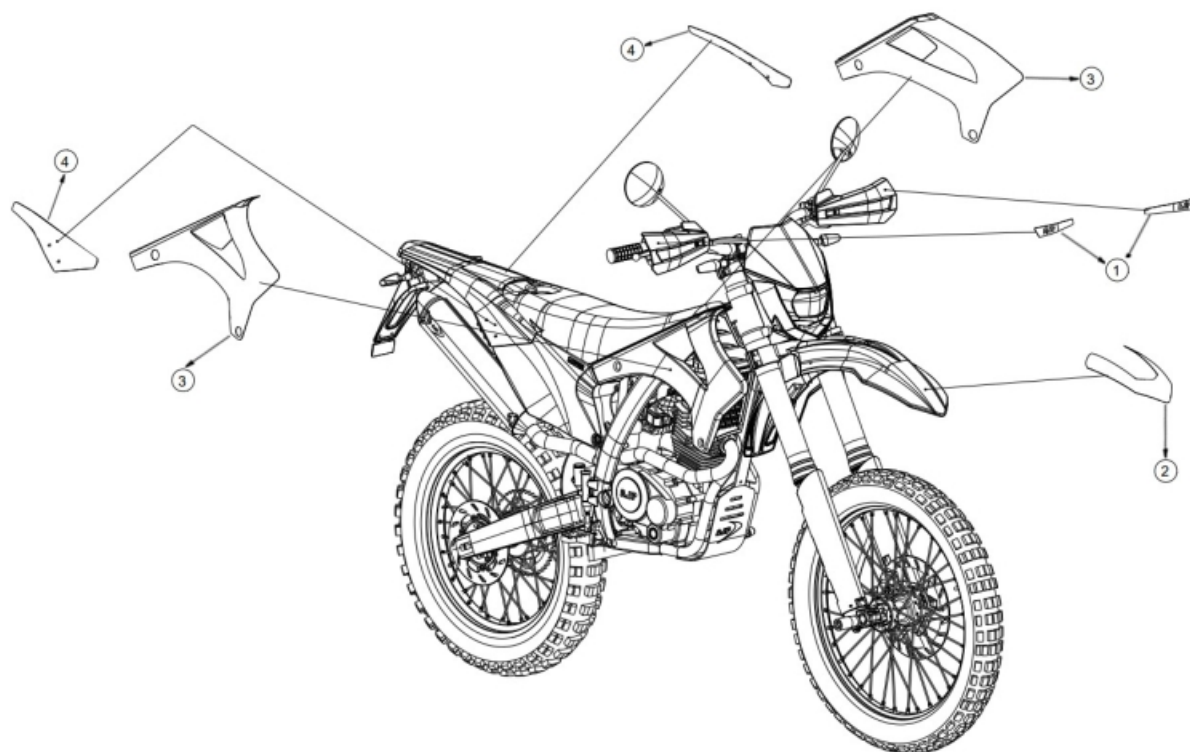

-	AJP-KIT STICKER FRONT PANELS SPR125+240 2023 00BAS01A0225 (u. 1)
1	AJP-HAND PROTECTION STICKERS KIT AJP 2021 00BAS01A0216 (u. 1)
2	AJP-STICKER FOR FRONT FENDER SPR125+240+250+310+510 2023 00BAS01A0233 (u. 1)
	AJP-STICKER FOR FRONT FENDER SPR125/240 MARCH 2022 00BAS01A0221 (u. 1)
	AJP-STICKER FRONT FENDER SM SPR 125+240+250+310+510 2023 00BAS01A0231 (u. 1)
	AJP-STICKER FOR FRONT FENDER SM SPR 2021 00BAS01A0215 (u. 1)
3	AJP-KIT STICKER FRONT SPR240 MARCH 2022 00BAS01A0220 (u. 1)
4	AJP-KIT STICKER FOR REAR FENDER SPR240 MARCH 2022 00BAS01A0218 (u. 1)
	AJP-KIT STICKER REAR FENDER SPR240 2023 00BAS01A0227 (u. 1)
	AJP-KIT STICKER FOR REAR FENDER SPR125 MARCH 2022 00BAS01A0219 (u. 1)
	AJP-KIT STICKER REAR FENDER SPR125 2023 00BAS01A0226 (u. 1)